
This owner's manual applies to the JIMNY series.

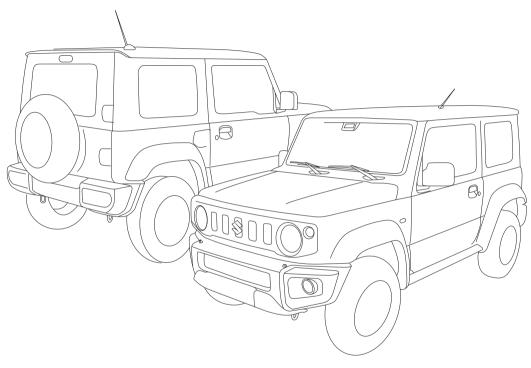

78RB01012

NOTE: The illustrated model is one of the JIMNY series.

Copyright © **SUZUKI MOTOR CORPORATION** 2022 All Rights Reserved No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the express written permission of Suzuki Motor Corporation.

FOREWORD

This manual should be considered as a permanent part of the vehicle and should remain with the vehicle when resold or otherwise transferred to a new owner or operator. Please read this manual carefully before operating your new SUZUKI vehicle and review the manual from time to time. It contains important information on safety, operation and maintenance.

SUZUKI MOTOR CORPORATION

All information in this manual is based on the latest product information available at the time of publication. Due to improvements or other changes, there may be discrepancies between information in this manual and your vehicle. SUZUKI MOTOR CORPORATION reserves the right to make production changes at any time, without notice and without incurring any obligation to make the same or similar changes to vehicles previously built or sold.

This vehicle may not comply with standards or regulations of other countries. Before attempting to register this vehicle in any other country, check all applicable regulations and make any necessary modifications.

IMPORTANT

WARNING A CAUTION NOTICE NOTE

Please read this manual and follow its instructions carefully. To emphasize special information, the symbol **A** and the words **WARNING**, **CAUTION**, **NOTICE** and **NOTE** have special meanings. Pay particular attention to messages highlighted by these signal words:

WARNING

Indicates a potential hazard that could result in death or serious injury.

Indicates a potential hazard that could result in minor or moderate injury.

NOTICE

Indicates a potential hazard that could result in vehicle damage.

NOTE:

Indicates special information to make maintenance easier or instructions clearer.



75F135

The circle with a slash in this manual means "Do not do this" or "Do not let this happen".

MODIFICATION WARNING

WARNING

Do not modify this vehicle. Modification could adversely affect safety, handling, performance, or durability and may violate governmental regulations. In addition, damage or performance problems resulting from modification may not be covered under warranty.

NOTICE

Improper installation of mobile communication equipment such as cellular telephones, CB (Citizen's Band) radios or any other wireless transmitters may cause electronic interference with your vehicle's ignition system or any other electrical systems, resulting in vehicle performance problems. Consult a SUZUKI dealer or qualified service technician for advice.

NOTICE

The diagnostic connector of your vehicle is prepared only for the specific diagnostic tool for inspection and service purpose. Connecting any other tool or device may interfere with electronic parts operations and cause running out of batteries.

INTRODUCTION

Thank you for choosing SUZUKI product and welcome to our growing family. Your choice was a wise one; SUZUKI products have great value that will give you driving pleasure for years.

This owner's manual was prepared to give you a safe, enjoyable, and trouble-free experience with your SUZUKI vehicle. In this manual, you will learn about the vehicle's operation, its safety features and maintenance requirements. Please read the manual carefully before operating your vehicle. Afterwards, keep this manual in the glove box for further reference.

Should you resell the vehicle, please leave this manual with it for the next owner.

In addition to the owner's manual, the other booklets provided with your SUZUKI vehicle explain the vehicle's warranties. We recommend you read them as well to familiarize yourself with this important information.

When planning the regular scheduled maintenance of your SUZUKI vehicle, we recommend you visit your local SUZUKI dealer. Their factory-trained technicians will provide the best possible service and use only genuine SUZUKI parts and accessories or their equivalents.

NOTE:

- "SUZUKI dealer" means an Authorized Suzuki Dealer and an Authorized Suzuki Service Workshop.
- The illustrations in this manual represent a typical variation, which may differ from your vehicle.

RECOMMENDATION OF GENUINE SUZUKI PARTS AND ACCESSORIES USE

SUZUKI strongly recommends the use of genuine SUZUKI parts* and accessories. Genuine SUZUKI parts and accessories are built to the highest standards of quality and performance, and are designed to fit your vehicle's exact specifications.

A wide variety of non-genuine replacement parts and accessories for SUZUKI vehicles are currently available in the market. Using these parts and accessories can affect the vehicle performance and shorten its useful life. Therefore, installation of non-genuine SUZUKI parts and accessories is not covered under warranty.

Non-genuine SUZUKI parts and accessories

Some parts and accessories may be approved by certain authorities in your country.

Some parts and accessories are sold as SUZUKI-authorized replacement parts and accessories. Some genuine SUZUKI parts and accessories are sold as re-use parts and accessories. These parts and accessories are non-genuine SUZUKI parts and accessories and use of these parts is not covered under warranty.

Re-use of genuine SUZUKI parts and accessories

The resale or re-use of the following items which could cause hazards for users is expressly forbidden:

- Airbag components and all other pyrotechnic items, including their components (e.g. cushion, control devices and sensors)
- · Seat belt system, including their components (e.g. webbing, buckles and retractors)

The airbag and seat belt pretensioner components contain explosive chemicals. These components should be removed and disposed of properly by SUZUKI-authorized service shop or scrap yard to avoid unintended explosion before scrapping.

*The parts remanufactured under SUZUKI's approval can be used as genuine SUZUKI parts in Europe.

Vehicle Data Recordings

There are certain components of your vehicle (the "Vehicle") incorporating data storage modules or memories, which temporarily or permanently store the technical data below listed. These data are exclusively technical and serve for (i) identifying and correcting faults occurred in the Vehicle and/or (ii) optimizing functions of the Vehicle.

Recorded data (the "Recorded Data")

- Malfunctions, faults, and errors in important system components. (e.g. lights, brakes)
- · Reactions of the Vehicle in certain situations (e.g. inflation of SRS airbags, activation of stability control system).
- Operating conditions of system components (e.g. filling levels).
- Status messages of the Vehicle and its individual components (e.g. vehicle speed, acceleration, deceleration, lateral acceleration).
- · Ambient conditions (e.g. outside temperature).

Recorded data vary depending on vehicle model or grade.

(For EU countries)

Parties who can read out the technical data using specific diagnostic devices (the "Parties");

- · Authorized distributors, dealers and repairers/service workshops of SUZUKI vehicles, and independent repairers/service workshops
- · Manufacturer of SUZUKI vehicles (e.g. SUZUKI MOTOR CORPORATION ("SUZUKI"), Magyar Suzuki Corporation Ltd.,
- Maruti Suzuki India Limited, Suzuki Motor (Thailand) Co., Ltd., Thai Suzuki Motor Co., Ltd.)
- · Suppliers of SUZUKI vehicle parts, components and accessories (the "Suppliers")

Data usage (the "Data Usage")

SUZUKI and the Parties may use the Recorded Data in the modules or memories for the purpose of;

- · Diagnostic, service, repair and warranty processes
- · Research and further vehicle developments
- · Implementation of or investigation for field actions including recall and service campaign
- · Quality improvements, etc.

After an error has been corrected, data related to such error are basically deleted from error storage module or memory, while certain data are overwritten or kept further.

Conditions under which SUZUKI and the Parties can disclose or provide any of the Recorded Data to a third party

SUZUKI and the Parties may disclose or provide any of the Recorded Data to a third party under any of the following conditions:

- A consent from the Vehicle owner/user(s), or from lessee of the Vehicle (in case of lease) is obtained.
- It is officially requested by police, prosecutor, court, or other authorities.
- It is provided to a research institute for statistical study after processing in such a manner that owner/user(s) of the Vehicle cannot be identified.
- It is used by SUZUKI or the Parties or their directors, officers or employees for the purposes described in the Data Usage.
- It is used by SUZUKI or the Parties in a lawsuit.
- Any other cases allowed by applicable laws and regulations.

If required, you may receive further information from each of the Parties other than the Suppliers.

NOTE:

- The data cannot be used to detect the Vehicle's movements.
- The data stored in data storage modules or memories differ according to the Vehicle's grade or model.
- · No conversation nor noise/sound will be recorded in any event.
- The data may not be recorded in some situations.


If these technical data are combined with other information (e.g. accident or witness report, damage on the Vehicle, etc.), there may be cases that such data may identify a specific person.

e-Call / ERA-GLONASS

Functions added based on agreement with the customer may transmit certain vehicle data (e.g. vehicle location in emergency cases) from the Vehicle to police or emergency service official for the purpose of rescue or response to traffic accident.

SERVICE STATION GUIDE

- 1. Engine hood release handle (see section 5)
- 2. Engine coolant (see section 6)
- 3. Windshield washer fluid/ Headlight washer fluid (see section 6)
- 4. Èngine oil dipstick (see section 6)
- 5. Lead-acid battery (see section 6)
- 6. Fuel lid release lever (see section 5 / see section 9)
- 7. Tyre pressure (see tyre information label on driver's door lock pillar)
- 8. Tyre/wheel replacement tools (see section 7)
- 9. Spare tyre (see section 6)

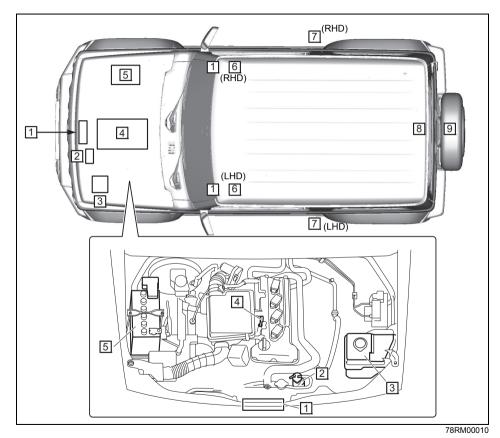

LHD: Left Hand Drive RHD: Right Hand Drive


MEMO

TABLE OF CONTENTS	FOR SAFE DRIVING	1
	BEFORE DRIVING	2
	OPERATING YOUR VEHICLE	3
	DRIVING TIPS	4
	OTHER CONTROLS AND EQUIPMENT	5
	INSPECTION AND MAINTENANCE	6
	EMERGENCY SERVICE	7
	APPEARANCE CARE	8
	SPECIFICATION	9
	SUPPLEMENT	10
	INDEX	11

ILLUSTRATED TABLE OF CONTENTS

EXTERIOR, FRONT


- 1. Engine hood (P.5-2) 2. Windshield wipers (P.2-69)
- 3. Dual sensor (if equipped) (P.3-27)
- 4. Headlight washer (if equipped) (P.2-67, 6-48)
- 5. Headlights (P.2-57, 6-49)
- 6. Frame (towing) hook (P.5-14)
- 7. Front fog lights (if equipped) (P.2-62, 6-52)/ Daytime running lights (D.R.L.) (if equipped) (P.2-57, 2-60)
- 8. Outside rearview mirrors (P.2-14)
- 9. Door locks (P.2-2)
- 10. Front turn signal (P.2-68, 6-50) 11. Side turn signal (P.2-68, 6-52)

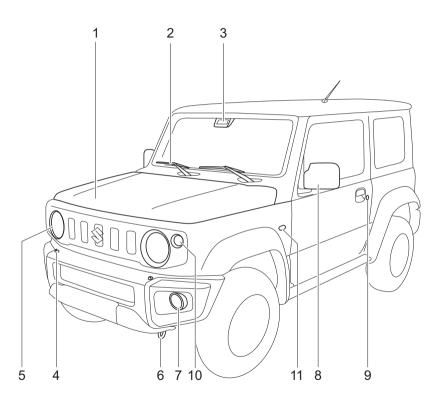

EXTERIOR, REAR

- 1. Tailgate (P.2-3)
- 2. High-mount stop light (P.9-6)
- Radio antenna (P.5-30)
 Rear combination lights (Tail light/ Turn signal light/ Reversing light/ Rear fog light (if equipped)) (P.6-54) 5. License plate lights (P.6-55) 6. Fuel filler cap (P.5-1)

- 7. Spare tyre (P.6-41) 8. Rear window wiper (P.2-71)

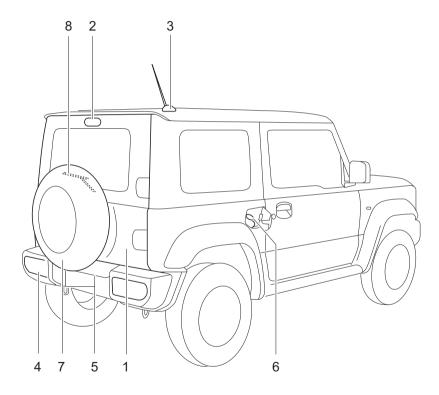


ILLUSTRATED TABLE OF CONTENTS

2

INTERIOR, FRONT

- 1. Front passenger's front airbag (P.1-44)

- Front seats (P.1-2)
 Side airbags (P.1-48)
 Parking brake lever (P.3-5)
 Front seat heater switches (if equipped) (P.1-4) 6. Glove box (P.5-9)

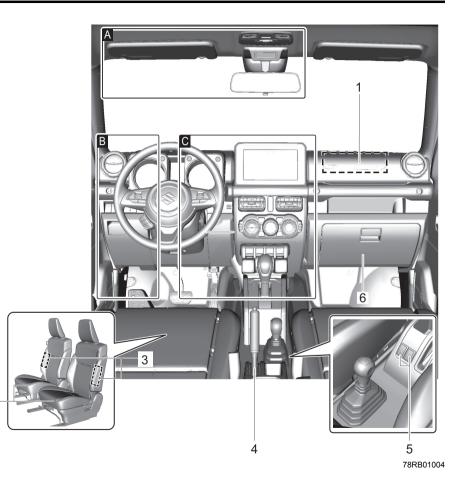

- 1. Sun visor (P.5-4)
- 2. Front interior light (P.5-5, 6-56)
- 3. Hands-free microphone (if equipped) (P.5-62)
- 4. Inside rearview mirror (P.2-13)


AIRBAG

- 5. Front passenger airbag deactivation indicator (if equipped) (P.1-54)
- 6. Warning label for front passenger's front air bag (P.1-43) ^{*1, *2}
 - *1 Be sure to read the detailed information in the target page before using a child restraint system.
 - *2 NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur.

li

圈



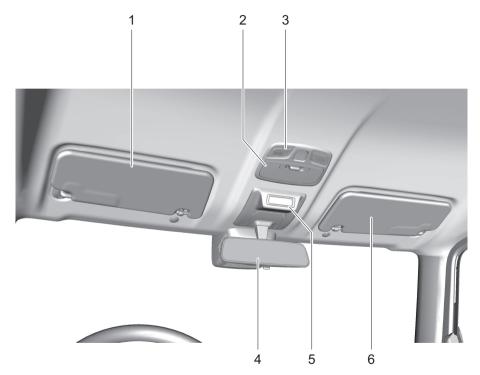



ILLUSTRATED TABLE OF CONTENTS

- 1. Fuses (P.6-44)
- 2. Lighting control lever (P.2-57)/ Turn signal control lever (P.2-68)/ Front fog light switch (if equipped) (P.2-62)/Rear fog light switch (if equipped) (P.2-62)
- 3. Remote audio controls (if equipped) (P.5-74)
- 4. Driver's front airbag (P.1-44)
- Cruise control switches (if equipped) (P.3-22)/ Speed limiter switches (if equipped) (P.3-25)
- 6. Dual sensor brake support OFF switch (if equipped) (P.3-37)
- 7. Lane departure warning OFF switch (if equipped) (P.3-38)
- Headlight washer switch (if equipped) (P.2-67)
- 9. Headlight leveling switch (if equipped) (P.2-67)
- 10. Èngine hood release handle (P.5-2)
- 11. Fuel lid release lever (P.5-1)
- 12. Tilt steering column lock lever (P.2-71)
- 13. Hands-free switches (if equipped) (P.5-62)
- 14. Electric mirror control switch (if equipped) (P.2-15)





9

8

7

6

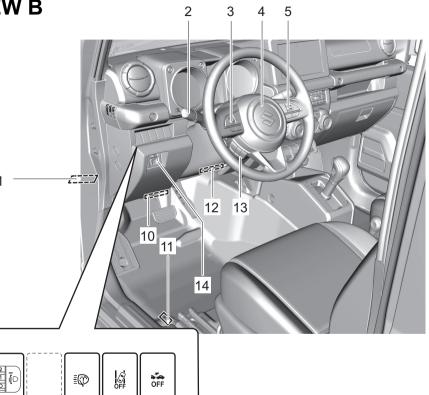

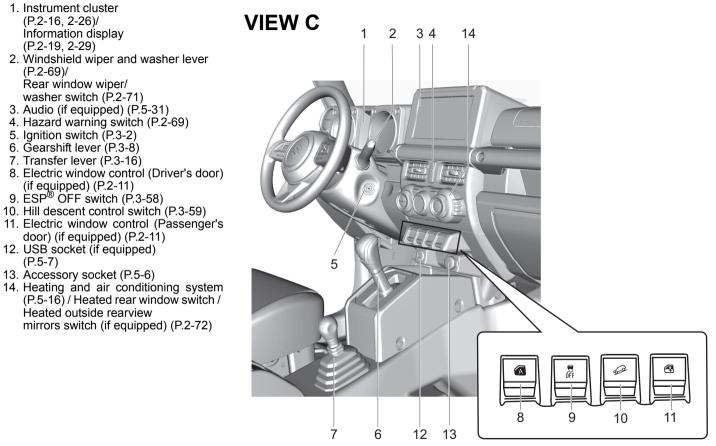


78RB01007

ILLUSTRATED TABLE OF CONTENTS


INTERIOR, REAR


- 1. Seat belts (for passenger vehicles) (P.1-7)
- Assist grips (P.5-8)
 Side curtain airbags (if equipped) (P.1-48)
- 4. Rear seats (for passenger vehicles) (P.1-5) 5. Accessory socket
- (if equipped) (P.5-6) 6. Rear interior light (if equipped) (P.5-5, 6-56)

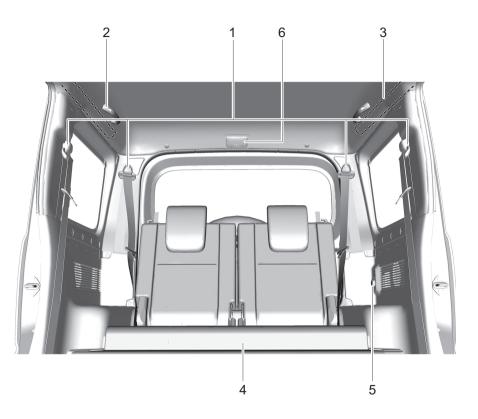

LUGGAGE COMPARTMENT (For the passenger vehicle)

- 1. Luggage compartment carpet (P.5-13)
- 2. Jack handle (P.7-1)
- 3. Wheel wrench (P.7-1)
- 4. Jack (P.7-1) 5. Luggage box (if equipped) (P.5-12)

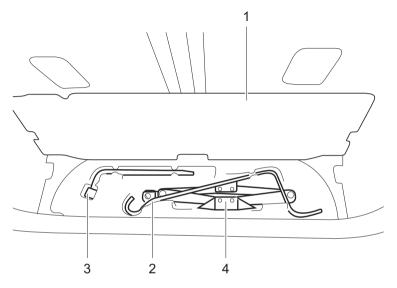


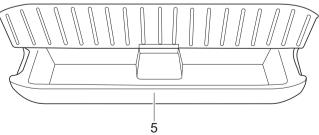


ILLUSTRATED TABLE OF CONTENTS

LUGGAGE COMPARTMENT (For the light commercial vehicle)

- 1. Luggage compartment carpet (P.5-13)
- 2. Jack handle (P.7-1) 3. Wheel wrench (P.7-1)
- 4. Jack (P.7-1)

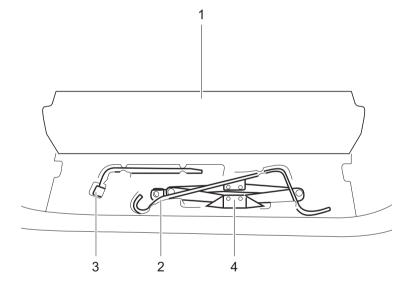

1

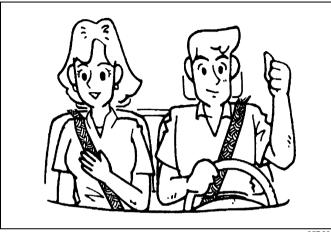


FOR SAFE DRIVING

Floor mats (if equipped)	. 1-1
Front seats	
Rear seats (if equipped)	. 1-5
Seat belts and child restraint systems	. 1-7
Child restraint system for countries applied	
for UN Regulation No.16	. 1-21
Supplemental restraint system (airbags)	
Exhaust gas warning	. 1-56

65D231S

Floor mats (if equipped)

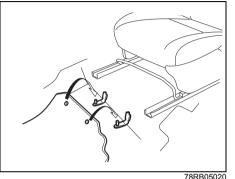

To prevent the driver's side floor mat from sliding forward and possibly interfering with the operation of the pedals, genuine SUZUKI floor mats are recommended.

Whenever you put the driver's side floor mat back in the vehicle after it has been removed, hook the floor mat grommets to the fasteners and position the floor mat properly in the footwell.

When you replace the floor mats in your vehicle with a different type such as allweather floor mats, we highly recommend to use genuine SUZUKI floor mats for proper fitting.

WARNING

Failure to take the following precautions may result in the driver's side floor mat interfering with the pedals and causing a loss of vehicle control or an accident.

accident.

ers.

Description of warning label





 Never stack floor mats because it may prevent from securing to the fasteners and cause sliding forward.

• Slid forward floor mat could interfere with the operation of the pedals and lead to unexpected

 Check that the floor mat grommets are

hooked to the fasten-



- For more details, read this owner's manual.
- Never use a floor mat which does not fit the floor contours.

Front seats

WARNING

Failure to take the following precautions may result in the driver's side floor mat interfering with the pedals and causing a loss of vehicle control or an accident.

- Check that the floor mat grommets are hooked to the fasteners.
- Never place additional floor mats on top of the existing floor mat.

Seat adjustment

A WARNING

Never attempt to adjust the driver's seat or seatback while driving. The seat or seatback could move unexpectedly, causing loss of control. Check that the driver's seat and seatback are properly adjusted before you start driving.

WARNING

To avoid excessive seat belt slack, which reduces the effectiveness of the seat belts as a safety device, check that the seats are adjusted before the seat belts are fastened.

WARNING

All seatbacks should always be in an upright position when driving, or seat belt effectiveness may be reduced. Seat belts are designed to offer maximum protection when seatbacks are in the upright position.


WARNING

Do not place any object under the front seat. If an object becomes caught under the front seat, the following may occur.

• The seat will not be latched.

MARNING

Do not leave cigarette lighters or spray cans on the floor. If a cigarette lighter or spray can is on the floor, it may light accidentally when luggage is loaded or the seat is adjusted, causing a fire.

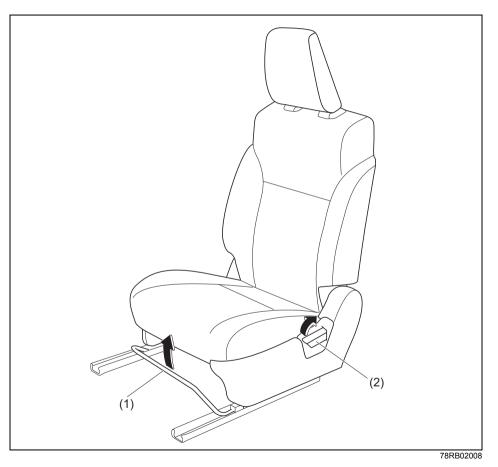


Seat position adjustment lever (1) Pull the lever up and slide the seat.

Seatback angle adjustment lever (2) Pull the lever up and move the seatback.

For the light commercial vehicle, if the seat is touched to the partition behind the seat, adjust the seat position in order not to touch the partitions.

After adjustment, move the seat and seatback back and forth to check if it is securely latched.

Head restraints (Adjustable type)

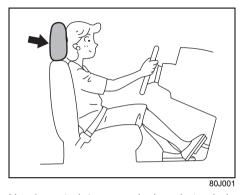


Head restraints are designed to help reduce the risk of neck injuries in the case of an accident. Adjust the head restraint to the position which places the center of the head restraint closest to the top of your ears. If this is not possible for very tall passengers, adjust the head restraint as high as possible.

- Never drive the vehicle with the head restraints removed.
- Do not attempt to adjust the head restraint while driving.

NOTE:

It may be necessary to recline the seatback to provide enough overhead clearance to remove the head restraint.


Front

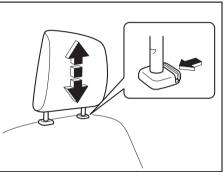


75RM004

To raise the front head restraint, pull upward the head restraint until it clicks. To lower the head restraint, push down the head restraint while holding in the lock lever. If a head restraint must be removed (for cleaning, replacement, etc.), push in the lock lever and pull the head restraint all the way out.

Front seat heater (if equipped)

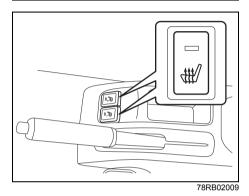

With the ignition switch is in "ON" position, push in one or both of the seat heater switch(es) to warm the corresponding seat(s). The indicator light in the switch will also come on. To turn off the seat heater, push in the switch again. The indicator light in the switch will go off.

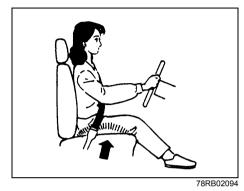

NOTICE

To avoid damaging the heater element:

- Do not subject the front seats to heavy impacts, such as children jumping on them.
- Do not cover the seat with any insulating materials such as blankets or cushions.

Rear seats (if equipped)

Head restraints (if equipped)

Head restraints are designed to help reduce the risk of neck injuries in the case of an accident.

- Never drive the vehicle with the head restraints removed.
- Do not attempt to adjust the head restraint while driving.

NOTE:


It may be necessary to fold forward the seatback to provide enough overhead clearance to remove the head restraint.

Adjust the head restraint to the position which places the center of the head restraint closest to the top of your ears. If this is not possible for very tall passengers, adjust the head restraint as high as possible.

Improperly using the seat heater can be hazardous. An occupant can suffer burns even if the heating temperature is fairly low, if the occupant is wearing thin pants, a thin skirt or shorts and leaves the heater on for long periods.

Avoid using the seat heater for these occupants:

- People who have reduced feeling in their legs, including the elderly or those with certain disabilities.
- Small children, or anyone with sensitive skin.
- People who are asleep or under the influence of alcohol or other drugs which make them tired.

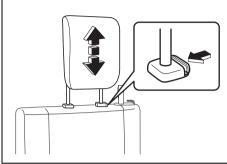

78RB02010

To raise the rear head restraint, pull upward the head restraint until it clicks. To lower the head restraint, push down the head restraint while holding in the lock lever. If a head restraint must be removed (for cleaning, replacement, etc.), push in the lock lever and pull the head restraint all the way out.

When installing a child restraint system, adjust the height of the head restraint or remove it for fitting the child restraint, as necessary.


Folding rear seats

Remove objects from the rear seats before folding the rear seats. There may be a case that the rear seat belt reminder (if equipped) will not be activated, if objects are remained on the rear seats.

The rear seats of your vehicle can be folded forward to provide additional cargo space.

To fold the rear seats forward:


1) Lower the head restraint (if equipped) fully.

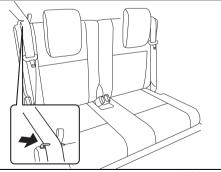

- 78RB02011
- 2) Hook the webbing of the outboard lapshoulder belts in the belt hangers.

NOTICE

- Make sure the belt webbing is not twisted.
- When you move a seatback, make sure the belt webbing is hooked in the seat belt hangers so the seat belts are not caught by the seatback, seat hinge, or seat latch. This helps prevent damage to the belt system.

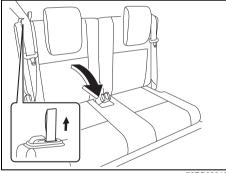

78RB02012

 For the split seat, pull the release strap on the top of each split seat, and fold the seatbacks forward.

For the bench seat, pull the both release straps on the top of the bench seat together, and fold the seatback forward.


A WARNING

If you need to carry cargo in the passenger compartment with the rear seatback folded forward, secure the cargo or it may be thrown about, causing injury. Never pile cargo higher than the seatbacks.

To return the seat to the normal position, follow the procedure below.

NOTICE

When returning the rear seatback to the normal position, check that there is nothing around the striker. Any foreign materials prevent the seatback from being locked securely.

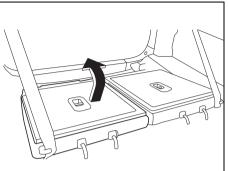

78RB02013


Raise the seatback until it locks into place.

After returning the seat, move the seatback back and forth to check if it is securely latched.

NOTICE

When returning the rear seatback to the normal position, handle it carefully by hand to avoid any damage to the lock itself. Do not push it by using some material or by applying excessive force.

Seat belts and child restraint systems

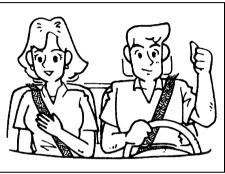

65D231S

A WARNING

Wear your seat belts at all times.


A WARNING

An airbag supplements or adds to the frontal collision protection offered by seat belts. The driver and all passengers must be properly restrained by wearing seat belts at all times, whether or not an airbag is mounted at their seating position, to minimize the risk of severe injury or death in the event of a collision.

FOR SAFE DRIVING


WARNING

Do not modify, remove, disassemble seat belts. Doing so may prevent them from functioning properly and cause the risk of severe injury or death in the event of a collision.

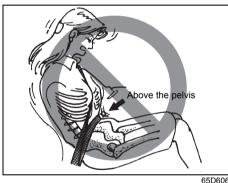

WARNING

- Never allow persons to ride in the cargo area of a vehicle. In the event of an accident, there is a much greater risk of injury for persons who are not riding in a seat with their seat belt securely fastened.
- Seat belts should always be adjusted as follows:
 - the lap portion of the belt should be worn low across the pelvis, not across the waist.
 - the shoulder straps should be worn on the outside shoulder only, and never under the arm.
 - the shoulder straps should be away from your face and neck, but not falling off your shoulder. (Continued)

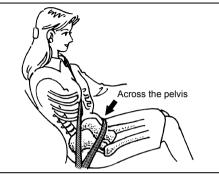


65D201

WARNING

(Continued)

- Seat belts should never be worn with the straps twisted and should be adjusted as tightly as is comfortable to provide the protection for which they have been designed. A slack belt will provide less protection than a snug belt.
- Check that each seat belt latch plate (tongue) is inserted into the proper buckle catch. It is possible to cross the buckles in the rear seat.

(Continued)

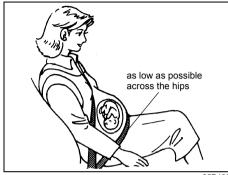



WARNING

(Continued)

- Pregnant women should use seat belts, although specific recommendations about driving should be made by the woman's medical advisor. Remember that the lap portion of the belt should be worn as low as possible across the hips, as shown in the illustration.
- Do not fasten your seat belt over hard or breakable objects in your pockets or on your clothing. If an accident occurs, objects such as glasses, pens, etc. under the seat belt can cause injury.

(Continued)



65D609

WARNING

(Continued)

- Do not hold a child on a passenger's lap. Even if the passenger holds the child tightly, he/she would not be supported enough in the event of an accident and it could result in a serious injury of the child.
- Never use the same seat belt for more than one occupant and never attach a seat belt over an infant or child being held on an occupant's lap. Such seat belt use could cause serious injury in the event of an accident.

(Continued)

WARNING

(Continued)

- Periodically inspect seat belt assemblies for excessive wear and damage. Seat belts should be replaced if webbing becomes frayed, contaminated or damaged in any way. It is essential to replace the entire seat belt assembly after it has been worn in a severe impact, even if damage to the assembly is not obvious.
- Children aged 12 and under should ride properly restrained in the rear seat.
- Infants and small children should never be transported unless they are properly restrained. Restraint systems for infants and small children can be purchased locally and should be used. Check that the system you purchase meets applicable safety standards. Read and follow all the directions provided by the manufacturer.
- For child, if the seat belt irritates the neck or face, use a child restraint system appropriately for the child. The seat belts of your vehicle are principally designed for persons of adult size.

(Continued)

A WARNING

(Continued)


- Avoid contamination of seat belt webbing by polishes, oils, chemicals, and particularly battery acid. Cleaning may safely be carried out using mild soap and water.
- Do not insert any items such as coins and clips into the seat belt buckles, and be careful not to spill liquids into these parts. If foreign materials get into a seat belt buckle, the seat belt may not work properly.
- All seafbacks should always be in an upright position when driving, or seat belt effectiveness may be reduced. Seat belts are designed to offer maximum protection when seatbacks are in the upright position.


Lap-shoulder belt

Emergency locking retractor (ELR)

The seat belt has an emergency locking retractor (ELR), which is designed to lock the seat belt only during a sudden stop or impact. It also may lock if you pull the belt across your body very quickly. If this happens, let the belt go back to unlock it, and then pull the belt across your body more slowly.


Safety reminder

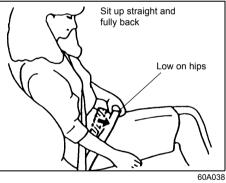

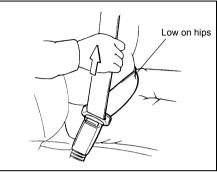


60A040

To reduce the risk of sliding under the belt during a collision, position the lap portion of the belt across your lap as low on your hips as possible and adjust it to a snug fit by pulling the shoulder portion of the belt upward through the latch plate. The length of the diagonal shoulder strap adjusts itself to allow freedom of movement.

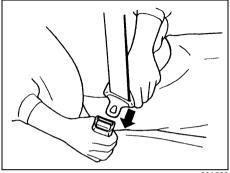


60A036

To fasten the seat belt, sit up straight and far back into the seat, pull the latch plate attached to the seat belt across your body and press it straight into the buckle until you hear a click. After pressing the latch plate into the buckle, pull the seat belt to make sure it is securely latched.

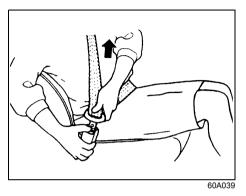


To unfasten the seat belt, push the red "PRESS" button on the buckle and retract the belt slowly while holding the belt or/and the latch plate.

Lap-shoulder belt with detachable connector (if equipped)

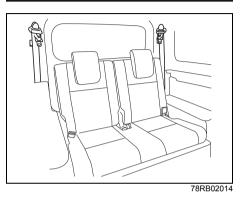

The rear lap-shoulder belt has a buckle, a latch plate and a detachable connector. The rear seat belt buckle and the connector are designed so as not to allow a wrong latch plate to be inserted.

When the rear seatback is in the upright position, keep the detachable connector latched. Only when the rear seatback is folded down, unlatch the detachable connector. To latch and unlatch the connector, refer to "Unlatching and latching detachable connector" in this section.

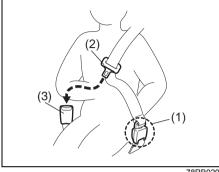




Fastening

Before fastening the rear lap-shoulder belt, check the following precautions.

- The detachable connector (1) is securely latched.
- The webbing is not twisted.
- The rear lap-shoulder belt is not put through the seat belt hanger.


To fasten the belt, sit up straight and far back into the seat, pull the latch plate (2) across your body and press it straight into the buckle (3) until you hear a click. After pressing the latch plate into the buckle, pull the seat belt to make sure it is securely latched.

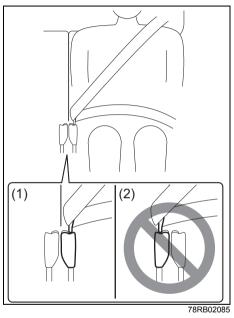

(1) Correct(2) Wrong

A WARNING

When fastening the rear seat belt, always use the closest buckle to you. If you use the buckle for your next rear seat position by mistake, the rear seat belt may not function properly.

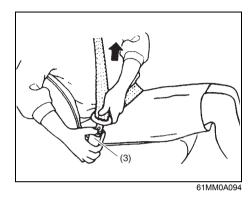

Unfastening

To unfasten the seat belt, push the button on the buckle (3) and retract the belt slowly while attaching a hand to the belt or/and the latch plate.








WARNING

To minimize risk of severe injury or death in the event of a collision, always fasten seat belt with both latches buckled.

Unlatching and latching detachable connector

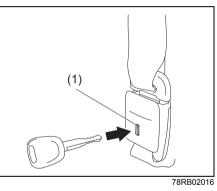


Unlatching

To unlatch the connector:

- 1) Insert a key into the slot (1) on the connector and allow the belt to retract.
- 2) Once the belt has completely retracted, stow the belt in the holder. Refer to "Stowing rear lap-shoulder belt" for details in this section.

Latching

To latch the connector: 1) Pull the belt out from the holder.

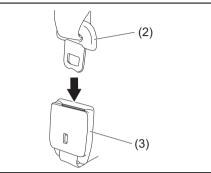

78RB02017


2) Insert the connector latch plate (2) into the connector (3).

A WARNING

Check that the detachable connector is securely latched and the webbing is not twisted.


61MM0A062

Stowing rear lap-shoulder belt Stow the belt after it is retracted completely.

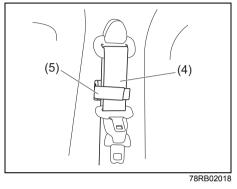

Bind the seat belt (4) with band (5).

Seat belt reminder

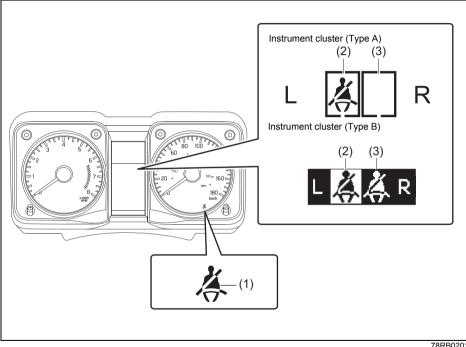

- (1) Driver's seat belt reminder light / front passenger's seat belt reminder light (if equipped)
- (2) Rear passenger's seat belt reminder light (rear left)*1(if equipped)
- (3) Rear passenger's seat belt reminder light (rear right)*2(if equipped)
 - *1 This symbol represents that the seat belt is unfastened.
 - *2 This symbol represents that the seat belt is fastened.

When the driver and/or passenger(s) do not fasten their seat belts, the seat belt reminder lights will come on or blink and a buzzer will sound to remind the driver and/ or passenger(s) to fasten their seat belts. For more details, refer to the explanation below

WARNING

It is absolutely essential that the driver and passengers fasten their seat belts at all times. Persons who are not fastening seat belts have a much greater risk of injury if an accident occurs. Make a regular habit of buckling your seat belt before putting the key in the ignition.

78RB02019

Driver's seat belt reminder

If the driver's seat belt remains unbuckled when the ignition switch is turned to "ON" position, the reminder works as follows:

- The driver's seat belt reminder light will come on. The front passenger's seat belt reminder light will also come on if a front passenger does not fasten his/her seat belt.
- After the vehicle's speed has reached about 15 km/h, the driver's seat belt reminder light will blink and a buzzer will sound for about 95 seconds.
- 3) The reminder light will remain on until the driver's seat belt is buckled.

If the driver has buckled his or her seat belt and later unbuckles the seat belt, the reminder system will be activated from Step 1) or 2) according to the vehicle's speed. When the vehicle's speed is less than 15 km/h, the reminder will start from Step 1). When the vehicle's speed is more than 15 km/h, the reminder will start from Step 2).

The reminder will be automatically canceled when the driver's seat belt is buckled or the ignition switch is turned off.

Front passenger's seat belt reminder (if equipped)

If there is a person sitting in the front passenger seat and the front passenger seat belt is unbuckled when the ignition switch is turned to "ON" position, the front passenger's seat belt reminder will activate. The front passenger's seat belt reminder works in the same manner as the driver's seat belt reminder.

NOTICE

The sensor of the front passenger's seat belt reminder is located in the seat cushion. Therefore, if you spill liquid such as liquid aromatics, soft drinks or juice on the front passenger's seat cushion, immediately wipe it dry with a soft cloth. Otherwise, the sensor of the front passenger's seat belt reminder can be damaged.

NOTE:

- If you put an object on the passenger's seat, the weight of the object will be sensed by the sensor and the front passenger's seat belt reminder light (if equipped) will come on and then the interior buzzer may beep.
- If a child or a small sized person sit on the front passenger's seat or the cushion is put on the front passenger's seat, the weight will not be sensed by the sensor and the interior buzzer may not beep.

Rear passenger's seat belt reminder (if equipped)

If there is a person sitting in the rear passenger seat and the rear passenger seat belt is unbuckled when the ignition switch is turned to "ON" position, the rear passenger's seat belt reminder will activate. The rear passenger's seat belt reminder works in the same manner as the driver's seat belt reminder.


NOTICE

The sensor of the rear passenger's seat belt reminder is located in the seat cushion. Therefore, if you spill liquid such as liquid aromatics, soft drinks or juice on the rear passenger's seat cushion, immediately wipe it dry with a soft cloth. Otherwise, the sensor of the rear passenger's seat belt reminder can be damaged.

NOTE:

- If you put an object on the rear passenger's seat, the weight of the object will be sensed by the sensor and the rear passenger's seat belt reminder light (if equipped) will come on and then the interior buzzer may beep.
- If a child or a small sized person sit on the rear passenger's seat or the cushion is put on the rear passenger's seat, the weight will not be sensed by the sensor and the interior buzzer may not beep.

Seat belt hanger

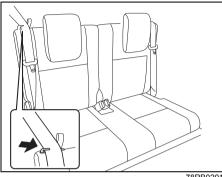


78RB02011

NOTICE

When you move a seatback, make sure the belt webbing is hooked in the seat belt hangers so the seat belts are not caught by the seatback, seat hinge, or seat latch. This helps prevent damage to the belt system.

Seat belt inspection

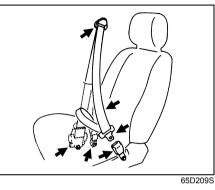


Periodically check if the seat belts work properly and are not damaged. Check the webbing, buckles, latch plates, retractors, anchorages and guide loops. Replace any seat belts which do not work properly or are damaged.

WARNING

Inspect all seat belt assemblies after any collision. Any seat belt assembly which was in use during a collision (other than a very minor one) should be replaced, even if damage to the assembly is not obvious. Any seat belt assembly which was not in use during a collision must be replaced if the airbags and the seat belt pretensioners activated. The airbags, the pretensioners and the load limitter will only function once. In case they did not activate, consult with Suzuki dealer.

Seat belt pretensioner system

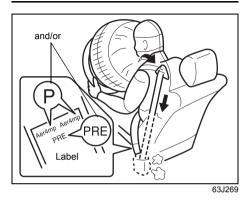

WARNING

This section describes your SUZUKI vehicle's seat belt pretensioner system. Read and follow all these instructions carefully to minimize your risk of severe injury or death.

To determine if your vehicle is equipped with a seat belt pretensioner system at the front or rear seating positions, check the label on the seat belt at the bottom part. If the letters "p" and/or "PRE" appear as illustrated, your vehicle is equipped with the seat belt pretensioner system. You can use the pretensioner seat belts in the same manner as ordinary seat belts.

Read this section and "Supplemental restraint system (airbags)" section to learn more about the pretensioner system.

The seat belt pretensioner system works with the supplemental restraint system (airbags). The crash sensors and the electronic controller of the airbag system also control the seat belt pretensioners. The pretensioners are triggered only when there is a frontal or side collision severe enough to trigger the airbags and the seat belts are fastened. For precautions and general information including servicing the pretensioner system, refer to "Supplemental restraint system (airbags)" section in addition to this "Seat belt pretensioner system" section, and follow all those precautions.

The pretensioner is located in each front seat belt retractor and each rear seat belt retractor in outboard seating position. The pretensioner tightens the seat belt so the belt fits the occupant's body more snugly in the event of a frontal or side collision. The retractors will remain locked after the pretensioners are activated. Upon activation, some noise will occur and some smoke may be released. These conditions are not harmful and do not indicate a fire in the vehicle.

The driver and all passengers must be properly restrained by fastening seat belts at all times, whether or not a pretensioner is equipped at their seating position, to minimize the risk of severe injury or death in the event of a collision.

Sit fully back in the seat; sit up straight; do not lean forward or sideways. Adjust the belt so the lap portion of the belt is worn low across the pelvis, not across the waist. Please refer to "Seat adjustment" section and the instructions and precautions about the seat belts in this "Seat belts and child restraint systems" section for details on proper seat and seat belt adjustments.

Please note that the pretensioners along with the airbags will activate in severe frontal or side collisions. They are not designed to activate in rear impacts, rollovers, or minor frontal side collisions. The pretensioners can be activated only once. If the pretensioners are activated (that is, if the airbags are activated), have the pretensioner system serviced by a SUZUKI dealer as soon as possible.

If AIRBAG light on the instrument cluster does not blink or come on briefly when the


FOR SAFE DRIVING

ignition switch is turned to "ON" position, stays on for more than 10 seconds, or comes on while driving, the pretensioner system or the airbag system may not work properly. Have both systems inspected by a SUZUKI dealer as soon as possible.

Service on or around the pretensioner system components or wiring must be performed only by a SUZUKI dealer who is specially trained. Improper service could result in unintended activation of pretensioners or could render the pretensioner inoperative. Either of these two conditions may result in personal injury.


To prevent damage or unintended activation of the pretensioners, check that the lead-acid battery is disconnected and the ignition switch has been in "LOCK" position for at least 90 seconds before performing any electrical service work on your SUZUKI vehicle.

Do not touch pretensioner system components or wiring. The wires are wrapped with yellow tape or yellow tubing, and the couplers are yellow. When scrapping your SUZUKI vehicle, ask a SUZUKI dealer, body repair shop, or scrap yard for assistance.

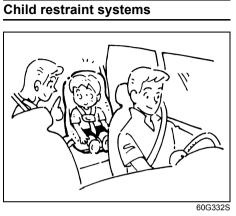


The following types of child restraint system are available generally.

Infant restraint

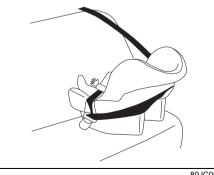

Child restraint

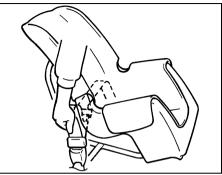

80JC016

Booster seat



80JC007

SUZUKI highly recommends that you use a child restraint system to restrain infants and small children. Many different types of child restraint systems are available; check that the restraint system you select meets applicable safety standards.

All child restraint systems are designed to be secured in vehicle seats either by seat belts (lap belts or the lap portion of lapshoulder belts) or by special rigid lower anchor bars built onto the floor. Whenever possible, SUZUKI recommends that child restraint systems be installed on the rear seat. According to accident statistics, children are safer when properly restrained in rear seating positions than in front seating positions.

(For countries applied for UN Regulation No.16)

When purchasing a child restraint and install it to your SUZUKI vehicle, refer to the information about suitability for child restraints shown in "Child restraint system for countries applied for UN Regulation No.16" in this section.

NOTE:

Observe any statutory regulation about child restraints.

WARNING

(Vehicle without the front passenger airbag deactivation system)

Do not install a rear-facing child restraint in the front passenger's seat. If the passenger's front airbag inflates, a child in a rear-facing child restraint could be killed or severely injured. The back of a rear-facing child restraint would be too close to the inflating airbag.

WARNING

(Vehicle with the front passenger airbag deactivation system)

When using a child restraint system on the front passenger's seat, the front passenger's airbag system must be deactivated; otherwise deployment of the front passenger's airbag could result in the death or serious injury of the child.

WARNING

If you install a child restraint system in the rear seat, slide the front seat far enough forward so that the child's feet do not touch the front seatback. This will help avoid injury to the child in the event of an accident.


Children could be endangered in a collision if their child restraint systems are not properly secured in the vehicle. When installing a child restraint system, follow the instructions below. Secure the child in the restraint system according to the manufacturer's instructions.

Child restraint system for countries applied for UN Regulation No.16

Adjust the height of the head restraint or remove it for fitting the child restraint, as necessary. However. if a booster cushion not equipped with the head restraint is fitted, the head restraint should not be removed. If the head restraint is removed for fitting the child restraint, you need to install it again after removing the child restraint. If the child restraint is fitted improperly, a child sitting in it could be injured in a collision. (Refer to "Installation with lap-shoulder seat belts" section. "Installation with ISO-FIX type anchorages" section and "Installation of child restraint with top tether" section in this section for details.)

Child restraint

The suitability of each passenger's seat position for carriage of children and fitting of child restraint system is shown in the table. Child restraint systems suitability for each seat position (for the passenger vehicle with airbag deactivation switch)

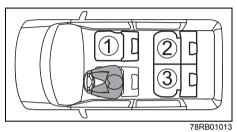

The above illustration shows Left handle drive vehicle.


NOTE:

Seat position number of ①, ② and ③ is same as Left handle drive vehicle for Right handle drive vehicle.

① Front passenger's seat

2 Rear seat right side

③ Rear seat left side

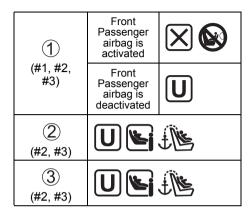



It is suitable for universal category of child restraint system fixed with the vehicle seat belt.



It is suitable for i-Size and ISOFIX child restraint system.

Ű.

This seat is equipped with Top tether anchorage point.



Never use a rear-facing child restraint system on the front passenger's seat when the front passenger airbag is activated.



It is not suitable for child restraint system.

- #1: Move the front seat fully rearward.
- #2: When you install a front-facing child restraint, if there is a gap or space between the child restraint and the seatback, adjust the seatback angle in order to install the child restraint system properly.#3: If the head restraint interferes with
- #3: If the head restraint interferes with the child restraint system, adjust the height of the head restraint or remove it, as necessary.

NOTE:

For the Installation suitability of child restraint systems of Taiwan models, refer to "For Taiwan" in the "SUPPLEMENT" section.

Detailed information for child restraint system (for the passenger vehicle with airbag deactivation switch)

	Seating position			
	1			
Seat position number	Front Passenger airbag is activated	Front Passenger airbag is deactivated	2	3
Seating position suitable for universal belted (YES/NO)	NO	YES	YES	YES
i-Size seating position (YES/NO)	NO	NO	YES	YES
Seating position suitable for lateral fixture (L1/L2)	NO	NO	х	х
Suitable rear-facing fixture (R1/R2X/R2/R3)	NO	NO	R1, R2	R1, R2
Suitable front-facing fixture (F2X/F2/F3)	NO	NO	F2X, F2, F3	F2X, F2, F3
Suitable booster fixture (B2/B3)	NO	B2, B3	B2, B3	B2, B3

Key of letters to be inserted in the above table

YES = Suitable for this seating position

NO = Not suitable for this seating position

X = ISOFIX position is not suitable for ISOFIX child restraint systems in this fixture.

The child restraint system can be used in the seating positions for fixture shown in the above table. For child restraint system fixtures, confirm the table of next page.

NOTE:

For the Installation suitability of child restraint systems of Taiwan models, refer to "For Taiwan" in the "SUPPLEMENT" section.

If your child restraint system has no size class (or if you cannot find information in the following table), refer to the child restraint system suitability information for the vehicle or ask the retailer of your child seat.

ISOFIX child restraint systems are shown as follows;

ISOFIX child restraint systems are divided into different mass group, size class and fixture.

Mass group	Size class	Fixture	Description
	F	L1	Left Lateral facing position Child Restraint Systems (carry-cot)
0 (up to 10kg)	G	L2	Right Lateral facing position Child Restraint Systems (carry-cot)
	E	R1	Rear-facing seat
	E	R1	Rear-facing seat
0+	D	R2	Reduced-Size rear-facing toddler Child Restraint Systems
(up to 13kg)	-	R2X	Reduced-Size rear-facing toddler Child Restraint Systems
	С	R3	Full-Size rear-facing toddler Child Restraint Systems
	D	R2	Reduced-Size rear-facing toddler Child Restraint Systems
	_	R2X	Reduced-Size rear-facing toddler Child Restraint Systems
I	С	R3	Full-Size rear-facing toddler Child Restraint Systems
(9kg to 18kg)	В	F2	Reduced-Height front-facing toddler Child Restraint Systems
	B1	F2X	Reduced-Height front-facing toddler Child Restraint Systems
	А	F3	Full-Height front-facing toddler Child Restraint Systems

Mass group	Size class	Fixture	Description
ll (15kg to 25kg)	Х	Х	_
III (22kg to 36kg)	Х	Х	_

Key of letters to be inserted in the above table X = There is no fixture for this mass group.

Booster seat fixtures are shown as follows;

Fixture	Description	
B2	Booster seat, reduced width 440 mm	
B3	Booster seat, full width 520 mm	

NOTE:

For the Installation suitability of child restraint systems of Taiwan models, refer to "For Taiwan" in the "SUPPLEMENT" section.

Installation suitability of SUZUKI recommendation child restraint systems (for the passenger vehicle with airbag deactivation switch)

		Seating position				
Mass group	Recommendation of Child restraint system (#A)	1				
		Front Passenger airbag is activated	Front Passenger airbag is deactivated	2	3	
0, 0+ (up to 13kg)	Britax Römer Baby-Safe i-Size	NO	YES (#1)	YES (#1)	YES (#1)	
l (9kg to 18kg)	Britax Römer Duo Plus	NO	YES (#1)	YES	YES	
II, III (15kg to 36kg)	Britax Römer KidFix XP	NO	YES (#1)	YES	YES	

Key of letters to be inserted in the above table YES =It is suitable for this seating position

NO = It is not suitable for this seating position

#1: Only belted.

#A: These child restraint systems are SUZUKI Genuine Accessory which comply with the UN R44 or R129, refer to the genuine accessories catalog.


However, there are cases that some or all of these child restraint systems are not sold because of nonconformity to the law of your country or other reason.


NOTE:

For the child restraint systems of Australia models, refer to "For Australia" in the "SUPPLEMENT" section.

FOR SAFE DRIVING

Child restraint systems suitability for each seat position (for the passenger vehicle without airbag deactivation switch)

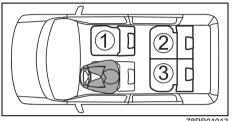

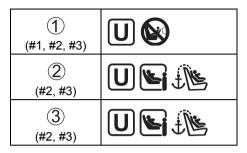

78RB01013

The above illustration shows Left handle drive vehicle.

NOTE:

Seat position number of (1), (2) and (3) is same as Left handle drive vehicle for Right handle drive vehicle.

- 1 Front passenger's seat
- 2 Rear seat right side
- (3) Rear seat left side



It is suitable for universal category of child restraint system fixed with the vehicle seat belt.

It is suitable for i-Size and ISOFIX child restraint system.



Ľ

This seat is equipped with Top tether anchorage point.

Never use a rear-facing child restraint system on the front passenger's seat when the front passenger airbag is activated. #1: Move the front seat fully rearward.

- #2: When you install a front-facing child restraint, if there is a gap or space between the child restraint and the seatback, adjust the seatback angle in order to install the child restraint system properly.
- #3: If the head restraint interferes with the child restraint system, adjust the height of the head restraint or remove it, as necessary.

Detailed information for child restraint system (for the passenger vehicle without airbag deactivation switch)

		Seating position			
Seat position number	1	2	3		
Seating position suitable for universal belted (YES/NO)	YES (#1)	YES	YES		
i-Size seating position (YES/NO)	NO	YES	YES		
Seating position suitable for lateral fixture (L1/L2)	NO	х	х		
Suitable rear-facing fixture (R1/R2X/R2/R3)	NO	R1, R2	R1, R2		
Suitable front-facing fixture (F2X/F2/F3)	NO	F2X, F2, F3	F2X, F2, F3		
Suitable booster fixture (B2/B3)	B2, B3 (#1)	B2, B3	B2, B3		

Key of letters to be inserted in the above table YES =Suitable for this seating position NO = Not suitable for this seating position X =ISOFIX position is not suitable for ISOFIX child restraint systems in this fixture.

The child restraint system can be used in the seating positions for fixture shown in the above table. For child restraint system fixtures, confirm the table of next page.

#1: When installing the child restraint systems, only a front-facing child restraint is suitable.

If your child restraint system has no size class (or if you cannot find information in the following table), refer to the child restraint system suitability information for the vehicle or ask the retailer of your child seat.

ISOFIX child restraint systems are shown as follows;

ISOFIX child restraint systems are divided into different mass group, size class and fixture.

Mass group	Size class	Fixture	Description
	F	L1	Left Lateral facing position Child Restraint Systems (carry-cot)
0 (up to 10kg)	G	L2	Right Lateral facing position Child Restraint Systems (carry-cot)
	E	R1	Rear-facing seat
	E	R1	Rear-facing seat
0+	D	R2	Reduced-Size rear-facing toddler Child Restraint Systems
(up to 13kg)	_	R2X	Reduced-Size rear-facing toddler Child Restraint Systems
	С	R3	Full-Size rear-facing toddler Child Restraint Systems
	D	R2	Reduced-Size rear-facing toddler Child Restraint Systems
	_	R2X	Reduced-Size rear-facing toddler Child Restraint Systems
1	С	R3	Full-Size rear-facing toddler Child Restraint Systems
(9kg to 18kg)	В	F2	Reduced-Height front-facing toddler Child Restraint Systems
	B1	F2X	Reduced-Height front-facing toddler Child Restraint Systems
	A	F3	Full-Height front-facing toddler Child Restraint Systems

Mass group	Size class	Fixture	Description
II (15kg to 25kg)	Х	Х	_
III (22kg to 36kg)	Х	Х	_

Key of letters to be inserted in the above table X = There is no fixture for this mass group.

Booster seat fixtures are shown as follows;

Fixture	Description	
B2	Booster seat, reduced width 440 mm	
B3	Booster seat, full width 520 mm	

Installation suitability of SUZUKI recommendation child restraint systems (for the passenger vehicle without airbag deactivation switch)

Mass group	Recommendation of	Seating position			
	Child restraint system (#A)	1	2	3	
0, 0+ (up to 13kg)	Britax Römer Baby-Safe i-Size	NO	YES (#1)	YES (#1)	
l (9kg to 18kg)	Britax Römer Duo Plus	YES (#1)	YES	YES	
II, III (15kg to 36kg)	Britax Römer KidFix XP	YES (#1)	YES	YES	

Key of letters to be inserted in the above table

YES =It is suitable for this seating position

NO = It is not suitable for this seating position

#1: Only belted.


#A: These child restraint systems are SUZUKI Genuine Accessory which comply with the UN R44 or R129, refer to the genuine accessories catalog.

However, there are cases that some or all of these child restraint systems are not sold because of nonconformity to the law of your country or other reason.

NOTE:

For the child restraint systems of Australia models, refer to "For Australia" in the "SUPPLEMENT" section.

Child restraint systems suitability for each seat position (for the light commercial vehicle)

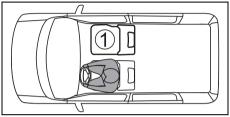


78RB01016

The above illustration shows Left handle drive vehicle.

NOTE:

Seat position number of is same as Left handle drive vehicle for Right handle drive vehicle.

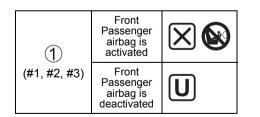





It is suitable for universal category of child restraint system fixed with the vehicle seat belt.

Never use a rear-facing child restraint system on the front passenger's seat when the front passenger airbag is activated.



It is not suitable for child restraint system.

- #1: Move the front seat fully rearward.
- #2: When you install a front-facing child restraint, if there is a gap or space between the child restraint and the seatback, adjust the seatback angle and the seatslide position in order to install the child restraint system properly.
- #3: If the head restraint interferes with the child restraint system, adjust the height of the head restraint or remove it, as necessary.

Detailed information for child restraint system (for the light commercial vehicle)

	Seating position		
	1		
Seat position number	Front Passenger air- bag is activated	Front Passenger air- bag is deactivated	
Seating position suitable for universal belted (YES/NO)	NO	YES	
i-Size seating position (YES/NO)	NO	NO	
Seating position suitable for lateral fixture (L1/L2)	NO	NO	
Suitable rear-facing fixture (R1/R2X/R2/R3)	NO	NO	
Suitable front-facing fixture (F2X/F2/F3)	NO	NO	
Suitable booster fixture (B2/B3)	NO	B2, B3	

Key of letters to be inserted in the above table

YES = Suitable for this seating position NO = Not suitable for this seating position

X = ISOFIX position is not suitable for ISOFIX child restraint systems in this fixture.

The child restraint system can be used in the seating positions for fixture shown in the above table. For child restraint system fixtures, confirm the table of next page.

If your child restraint system has no size class (or if you cannot find information in the following table), refer to the child restraint system suitability information for the vehicle or ask the retailer of your child seat.

ISOFIX child restraint systems are shown as follows;

ISOFIX child restraint systems are divided into different mass group, size class and fixture.

Mass group	Size class	Fixture	Description
	F	L1	Left Lateral facing position Child Restraint Systems (carry-cot)
0 (up to 10kg)	G	L2	Right Lateral facing position Child Restraint Systems (carry-cot)
	E	R1	Rear-facing seat
	E	R1	Rear-facing seat
0+	D	R2	Reduced-Size rear-facing toddler Child Restraint Systems
(up to 13kg)	-	R2X	Reduced-Size rear-facing toddler Child Restraint Systems
	С	R3	Full-Size rear-facing toddler Child Restraint Systems
	D	R2	Reduced-Size rear-facing toddler Child Restraint Systems
	_	R2X	Reduced-Size rear-facing toddler Child Restraint Systems
1	С	R3	Full-Size rear-facing toddler Child Restraint Systems
(9kg to 18kg)	В	F2	Reduced-Height front-facing toddler Child Restraint Systems
	B1	F2X	Reduced-Height front-facing toddler Child Restraint Systems
	A	F3	Full-Height front-facing toddler Child Restraint Systems

Mass group	Size class	Fixture	Description
II (15kg to 25kg)	Х	Х	_
III (22kg to 36kg)	Х	Х	_

Key of letters to be inserted in the above table X = There is no fixture for this mass group.

Booster seat fixtures are shown as follows;

Fixture	Description
B2	Booster seat, reduced width 440 mm
B3	Booster seat, full width 520 mm

Installation suitability of SUZUKI recommendation child restraint systems (for the light commercial vehicle)

	Recommendation of	Seating position	
		1	
Mass group	Child restraint system (#A)	Front Passenger airbag is activated	Front Passenger airbag is deactivated
0, 0+ (up to 13kg)	Britax Römer Baby-Safe i-Size	NO	YES (#1)
l (9kg to 18kg)	Britax Römer Duo Plus	NO	YES (#1)
II, III (15kg to 36kg)	Britax Römer KidFix XP	NO	YES (#1)

Key of letters to be inserted in the above table YES = It is suitable for this seating position NO = It is not suitable for this seating position


#1: Only belted.

#A: These child restraint systems are SUZUKI Genuine Accessory which comply with the UN R44 or R129, refer to the genuine accessories catalog.

However, there are cases that some or all of these child restraint systems are not sold because of nonconformity to the law of your country or other reason.

Approval mark to meet child restraint system regulation for UN R44 / R129 regulation

The following mark is shown on the child restraint system to meet the regulation of UN R44 / R129 for the child restraint system.

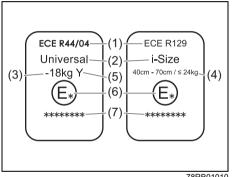

78RB01010

- (1) Regulation number
- (2) Suitability for child restraint system category
- (3) Weight range of the applicable child who is applicable for this approval mark as shown in the mark
- (4) Height range and weight range of the applicable child who is applicable for this approval mark in the mark
- (5) Specification of appliance
- (6) Country code which approved child restraint system

(7) Approval number of child restraint seat

This approval mark is a representative example.

NOTE:

- UN R44 / R129 means the international regulation for the child restraint system.
- "ECE" is shown on the mark in the illustration for the child restraint system. This "ECE" mark is the same as "UN".

Installation with lap-shoulder seat belts (if equipped)


If your vehicle is equipped with the head restraint, adjust the height of the head restraint or remove it for fitting the child restraint, as necessary. However, if a booster cushion not equipped with the head restraint is fitted, the head restraint should not be removed. If the head restraint is removed for fitting the child restraint, you need to install it again after removing the child restraint. If the child restraint is fitted improperly, a child sitting in it could be

NOTE:

injured in a collision.

Stow the removed head restraint in the luggage compartment so it will not cause inconvenience to the occupants.

ELR type belt

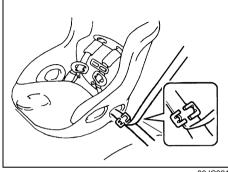

80JC021

(For models with front passenger airbag deactivation system)

Whenever possible, SUZUKI recommends that child restraint systems be installed on the rear seat. According to accident statistics, children are safer when properly restrained in rear seating positions than in front seating positions.

- If you must install the child restraint system on the front passenger's seat, follow instructions below.
 - Deactivate the front passenger's front airbag by the front passenger airbag deactivation system (if equipped).
 - Slide the seat to the most rear position by the seat position adjustment lever.
 - If there is a gap or space between the child restraint and the seatback, adjust the seatback angle in order to install the child restraint system properly.


Install your child restraint system according to the instructions provided by the child restraint system manufacturer.

Check that the seat belt is securely latched.

Move the child restraint system in all directions to check that it is securely installed.

When you put your child in the child restraint system, appropriately slide the front seat forward not to touch a part of your child's body.

Installation with ISOFIX type anchorages (if equipped)

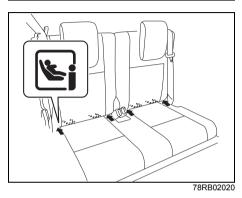


Your vehicle is equipped with the lower anchorages in the rear seat outboard seating positions for securing a ISOFIX type of child restraints with the connecting bars. The lower anchorages are located where the rear of the seat cushion meets the bottom of the seatback.

WARNING

Install the ISOFIX type of child restraint(s) in the only outboard seating positions, not in the central position for the rear seat.

FOR SAFE DRIVING

Install the ISOFIX type child restraint system according to the instructions provided by the child restraint system manufacturer. After installation, try moving the child restraint system in all directions especially forward to check that connecting bars are securely latched to the anchorages.

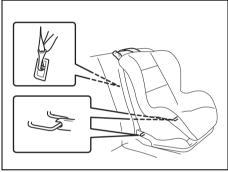

84MM00252

Your vehicle is equipped with the top tether anchorages. Use the top tether strap of the child restraint according to the instructions provided by the child restraint system manufacturer. Here is a general instruction:


A CAUTION

If your vehicle is equipped with the head restraint, adjust the height of the rear head restraint or remove it for fitting the child restraint, as necessary. However, if a booster cushion not equipped with the head restraint is fitted, the head restraint should not be removed. If the head restraint is removed for fitting the child restraint, you need to install it again after removing the child restraint. If the child restraint is fitted improperly, a child sitting in it could be


NOTE:


injured in a collision.

Stow the removed head restraint in the luggage compartment so it will not cause inconvenience to the occupants.

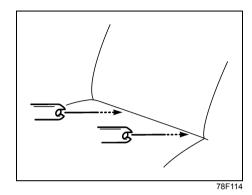


 Place the child restraint in the rear seat, inserting the connecting bars to the anchorages between the seat cushion and the seatback.

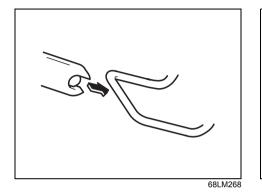

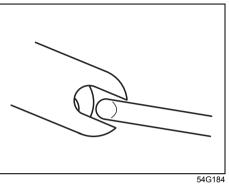

- Use your hands to carefully align the connecting bar tips with the anchorages. Take care not to pinch your fingers.
- Push the child restraint toward the anchorages so that the connecting bar tips are partially hooked to the anchorages. Use your hands to confirm the position.

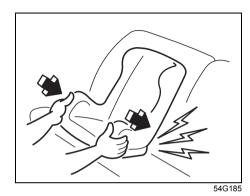


- 4) Grasp the front of the child restraint and push the child restraint forcefully to latch the connecting bars. Check that they are securely latched by trying to move the child restraint system in all directions, especially forward.
- 5) Attach the top tether strap referring to "Installation of child restraint with top tether" section.

When you put your child in the child restraint system, appropriately slide the front seat forward not to touch a part of your child's body.

NOTICE

When installing a child restraint system to the rear seat, adjust the front seat position so that the front seat does not interfere with the child restraint system.

Installation of child restraint with top tether (if equipped)

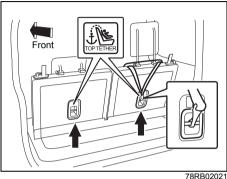

Some child restraint systems require the use of a top tether strap. Top tether anchorage brackets are provided in your vehicle at the locations shown in the illustrations.


The number of the top tether anchorage brackets provided in your vehicle depends on the vehicle specification. Install the child restraint system as follows:

- 1) Secure the child restraint on the rear seat using the procedure described above for securing a restraint system that does not require a top tether strap.
- 2) Hook the top tether strap to the top tether anchorage bracket and tighten the top tether strap according to the instructions provided by the child

restraint system manufacturer. Attach the top tether strap to the corresponding top tether anchorage bracket located directly behind the child restraint. Do not attach the top tether strap to the luggage restraint loops (if equipped).

WARNING

Do not attach the child restraint top tether strap to the luggage restraint loops (if equipped). Incorrectly attached top tether strap will reduce the intended effectiveness of the child restraint system.

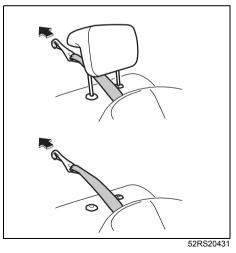

- 3) When routing the top tether strap, pass the top tether strap as shown in the illustration. (Refer to "Head restraints" section for details on how to adjust the height of head restraint or remove it.)
- 4) Check that cargo does not interfere with routing of the top tether strap.

NOTICE

When installing a child restraint svstem to the rear seat, adjust the front seat position so that the front seat does not interfere with the child restraint system.

NOTE:

For Australian models. refer to "For Australia" in the "SUPPLEMENT" section.

FOR SAFE DRIVING


Supplemental restraint system (airbags)

WARNING

This section describes the protection provided by your SUZUKI vehicle's supplemental restraint system (airbags). Read and follow all instructions carefully to minimize your risk of severe injury or death in the event of a collision.

Your vehicle is equipped with a supplemental restraint system consisting of the following components in addition to a lapshoulder belt at each seating position.

- (1) Forward crash sensor
- (2) Side crash sensor (if equipped)
- (3) Driver's front airbag module
- (4) Side curtain airbag module (if equipped)
- (5) Front passenger's front airbag module
- (6) Side airbag module (if equipped)
- (7) Front seat belt pretensioners (if equipped)
- (8) Rear seat belt pretensioners (if equipped)
- (9) Airbag controller

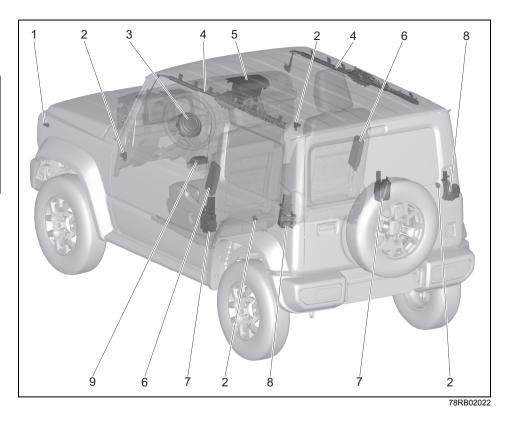

WARNING

An airbag supplements or adds to the collision protection offered by seat belts. The driver and all passengers must be properly restrained by fastening seat belts at all times, whether or not an airbag is mounted at their seating position, to minimize the risk of severe injury or death in the event of a collision.

AIRBAG light



63J030

If AIRBAG light on the instrument cluster does not blink or come on when the ignition switch is first turned to "ON" position, or AIRBAG light stays on, or comes on while driving, the airbag system (or the seat belt pretensioner system) may not work properly. Have the airbag system inspected by a SUZUKI dealer as soon as possible. Warning label for front passenger's front airbag



72M00150

You may find this label on the sun visor.

A WARNING

NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur.

NOTE:

- For the label of Australia models, refer to "For Australia" in the "SUPPLEMENT" section.
- For the label of GCC Countries' models, refer to "For GCC countries" in the "SUP-PLEMENT" section.
- For the label of Taiwan models, refer to "For Taiwan" in the "SUPPLEMENT" section.


Description of warning label

Symbol	Symbol meaning	
	Do not install a rear-facing child restraint system to the front passen- ger's seat equipped with an airbag.	
	If the front passen- ger's seat airbag were to be deployed, a major impact could be applied to a rear- facing child restraint system and the child.	

FOR SAFE DRIVING

Symbol	Symbol meaning
	For more details, read this owner's manual.

Front airbags

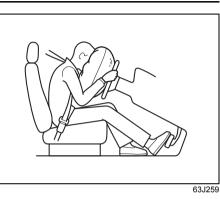


Front airbags are designed to inflate in severe frontal collisions when the ignition switch is in "ON" position.

NOTE:

In a frontal angle collision, the side airbags and side curtain airbags may inflate.


Front airbags are not designed to inflate in rear impacts, side impacts, rollovers or minor frontal collisions, since they would offer no protection in those types of accidents. Since an airbag deploys only one time during an accident, seat belts are needed to restrain occupants from further movements during the accident. Therefore, an airbag is not a substitute for seat belts. To maximize your protection, always fasten your seat belts. Be aware that no system can prevent all possible injuries that may occur in an accident.

Driver's front airbag

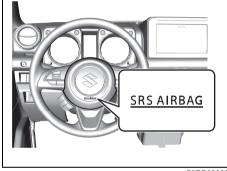

78RB02023

Front passenger's front airbag

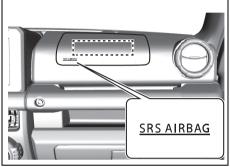

78RB02024

The driver's front airbag is located behind the center pad of the steering wheel and the front passenger's front airbag is located behind the passenger's side of the dashboard.

The words "SRS AIRBAG" are molded into the airbag covers to identify the location of the airbags.

A WARNING

If the airbag stored place is damaged or cracked, the airbag system may not work properly, which could result in serious injury in the event of a collision. Have your vehicle inspected by a SUZUKI dealer.

WARNING

(Vehicle without the front passenger airbag deactivation system)

Do not install a rear-facing child restraint in the front passenger's seat. If the passenger's front airbag inflates, a child in a rear-facing child restraint could be killed or severely injured. The back of a rear-facing child restraint would be too close to the inflating airbag.


A WARNING

(Vehicle with the front passenger airbag deactivation system)

When using child restraint system on the front passenger's seat, the front passenger's airbag system must be deactivated; otherwise deployment of the front passenger's airbag could result in the death or serious injury of the child.


Refer to "Seat belts and child restraint systems" section for details on securing your child.

Conditions of front airbags deployment (inflation)

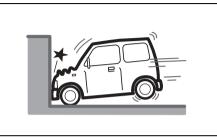

80J097

 Frontal collision with a fixed wall that does not move or deform at more than about 25 km/h (15 mph)

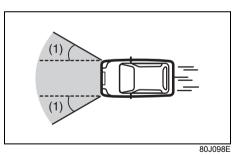

• Strong impact equivalent to frontal collision such as above at left and right angles of about 30 degrees (1) or less from the front of your vehicle

Conditions of front airbags may inflate

Receiving a strong impact to the lower body of your vehicle, the front airbags may inflate.






- 80J101
- Landing hard or falling


Front airbags may not inflate

The front airbags may not inflate when a strong impact has not occurred since the collision object was easy to be deformed or moved, or the crashed portion of your vehicle was easy to be deformed.

Also, front airbags may not inflate in many cases when the collision angle is greater than about 30 degrees at left and right angles from the front of your vehicle.

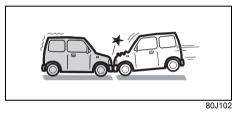



 Frontal collision to a stopped vehicle at less than about 50 km/h (30 mph)

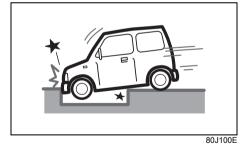


· Falling into a deep hole or ditch

· Hitting a curb or medial strip

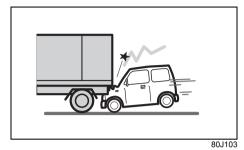

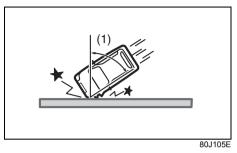

· Collision that the front of your vehicle goes under the bed of a truck etc.

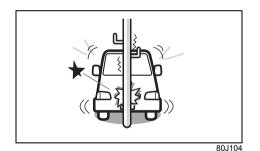


· Collision with a utility pole or stumpage

· Collision with a fixed wall or guardrail at left and right angles of greater than about 30 degrees (1) from the front of your vehicle


Front airbags do not inflate

Front airbags do not inflate in rear impacts, side impacts or rollovers, etc. However, these might inflate in a strong impact.

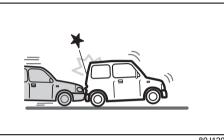


80J120

· Impact from the rear

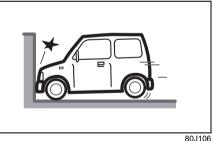


- · Frontal collision with a fixed wall that does not move or deform at less than about 25 km/h (15 mph)

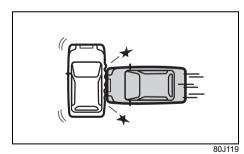

· Impact from the side

FOR SAFE DRIVING

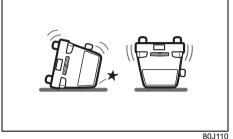


Vehicle rollover

NOTE

For vehicle equipped with the "Emergency road assistance - global navigation satellite system (ERA-GLONASS)", refer to "Emergency Road Assistance - Global Navigation Satellite System (ERA-GLONASS)" in "For Russia and other countries adopting ERA-GLONASS" in the "SUPPLEMENT" section for further information.

Side airbags and side curtain airbags (if equipped)

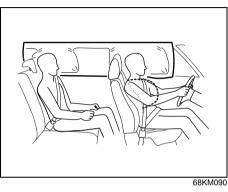


Side airbags and side curtain airbags are designed to inflate in severe side impact collisions when the ignition switch is in "ON" position.

Side airbags and side curtain airbags are not designed to inflate in frontal or rear collisions, rollovers or minor side collisions, since they would offer no protection in those types of accidents. Only the side airbag and side curtain airbag on the side of the vehicle that is struck will inflate. However, in a frontal angle collision, the side airbags and side curtain airbags may inflate. Since an airbag deploys only one time during an accident, seat belts are needed to restrain occupants from further movements during the accident.

Therefore, an airbag is not a substitute for seat belts. To maximize your protection, always fasten your seat belts. Be aware that no system can prevent all possible injuries that may occur in an accident.


Side airbags

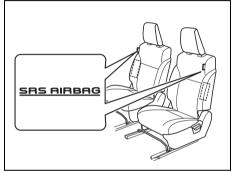



Side airbags are located in the part of the front seatbacks closest to the doors. The "SRS AIRBAG" labels are attached to the seatbacks to identify the location of the side airbags.


Side curtain airbags

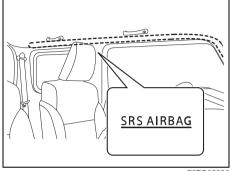


78RB02026

Side curtain airbags are located in the roof lining. The words "SRS AIRBAG" are molded into the pillar to identify the location of the side curtain airbags.

If the airbag stored place is damaged or cracked, the airbag system may not work properly, which could result in serious injury in the event of a collision. Have your vehicle inspected by a SUZUKI dealer. Conditions of side airbags and side curtain airbags deployment (inflation)

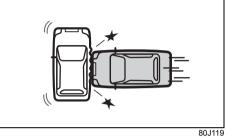

- 52BM20730
- Hitting a curb or bump

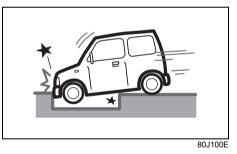


· Falling into a deep hole or ditch

 Impacts from the side at about a right angle by a general passenger car to your vehicle at more than about 30 km/h (19 mph) or in a greater impact


Side airbags and side curtain airbags may inflate in a strong impact

Side airbags and side curtain airbags may inflate even in a frontal collision, if there is a strong impact to the lateral direction.

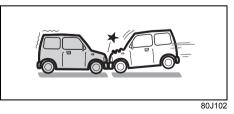


· Frontal collision

FOR SAFE DRIVING

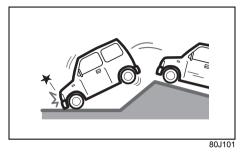

· Landing hard or falling

Side airbags and side curtain airbags may not inflate

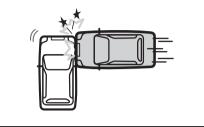


80J121




80J123


• Impact from the side at an oblique angle

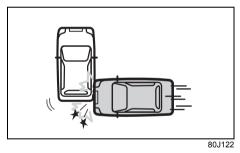

• Impact from the side to the vehicle body other than the passenger compartment

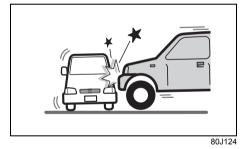


• Impact from the side by a high hood vehicle

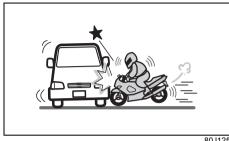


80J125

 Impact from the side by a motorcycle or bicycle Side airbags and side curtain airbags do not inflate

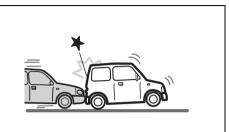


80J120

· Impact from the rear

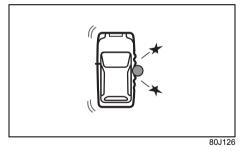

· Collision with a utility pole or stumpage

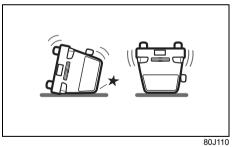

Vehicle rollover

How the system works


In a frontal collision, the crash sensors will detect rapid deceleration, and if the controller judges that the deceleration represents a severe frontal collision, the controller will trigger the inflators. If your vehicle is equipped with side airbags and side curtain airbags, crash sensors will detect a side collision, and if the controller judges that the side collision is severe enough, it will trigger the side airbag and side curtain airbag inflators. The inflators inflate the appropriate airbags with nitrogen or argon gas. The inflated airbags provide a cushion for your head (front airbags and side curtain airbags only) and upper body. The airbag inflates and deflates so quickly that you may not even realize that it has activated. The airbag will neither hinder vour view nor make it harder to exit the vehicle

Airbags must inflate quickly and forcefully in order to reduce the chance of serious or fatal injuries. However, an unavoidable consequence of the quick inflation is that the airbag may irritate bare skin, such as the facial area against a front airbag. Wash off any residue as soon as possible to prevent skin irritation. Also, upon inflation, a loud noise will occur and some powder and smoke will be released. These conditions are not harmful and do not indicate a fire in the vehicle. Be aware, however, that some airbag components may be hot for a while after inflation. A seat belt helps keep you in the proper position for maximum protection when an airbag inflates. Adjust your seat as far back as possible while still maintaining control of the vehicle. Sit fully back in your seat; sit up straight; do not lean over the steering wheel or dashboard. Front occupants should not lean on or sleep against the door. Refer to "Seat adjustment" section and "Seat belts and child restraint systems" section in this section for details on proper seat and seat belt adjustments.





65D608

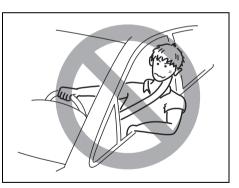

54G582

WARNING

- The driver should not lean over the steering wheel. The front passenger should not rest his or her body against the dashboard where a front airbag is mounted or a child should not stand in front of the dashboard. Otherwise, he or she will get too close to the dashboard. For vehicles with side airbags and side curtain airbag, occupants should not lean on or sleep against the door. In these situations, the out-of-position occupant would be too close to an inflating airbag, and may suffer severe injury.
- Do not attach any objects to, or place any objects over, the steering wheel or dashboard. Do not place any objects between the airbag and the driver or front passenger. These objects may interfere with airbag operation or may be propelled by the airbag in the event of a collision. Also, these objects may move when you start moving vehicle or while vehicle is moving, they may interfere with driver's view or safe driving. In each conditions may cause severe injury.

(Continued)

WARNING

(Continued)

- For vehicles with side airbags, do not use non-genuine seat covers on the front seats, because nongenuine seat covers may obstruct the inflation of side airbags. recommends SUZUKI hiahlv SUZUKI genuine seat covers to be used when covering the front seats of such vehicles with side airbags. Also, near the door, do not place cup holders, hangers or any other objects and do not lean an umbrella, as these objects could be propelled by the airbag in the event of a collision. Either of these conditions may cause severe injury.
- Do not strike or apply significant levels of impact to the airbag component areas. It can cause the airbags to malfunction.
- Even though your vehicle is moderately damaged by a collision, it may not be severe enough to trigger front, side or side curtain airbags to inflate. If your vehicle sustains any front-end or side damage, have the airbag system inspected by a SUZUKI dealer to ensure that it works properly. If the original function of airbag system is damaged, airbag may not function effectively and fully in case of an emergency.

Your vehicle is equipped with a diagnostic module which records information about the airbag system if the airbags deploy in a collision. The module records information about overall system status, and which sensors activated the deployment, and for a certain vehicle only, whether the driver's seat belt was in use.

Servicing the airbag system

If the airbags inflate, have the airbags and related components replaced by a SUZUKI dealer as soon as possible.

If your vehicle ever gets in deep water and the driver's floor is submerged, the airbag controller could be damaged. If this happens, ask a SUZUKI dealer to check the airbag system as soon as possible.

Special procedures are required for servicing or replacing an airbag. For that reason, only a SUZUKI dealer should be allowed to service or replace your airbags. Remind anyone who services your SUZUKI vehicle that it has airbags.


Service on or around airbag components or wiring must be performed only by a SUZUKI dealer. Improper service could result in unintended airbag deployment or could render the airbag inoperative. Either of these two conditions may result in severe injury.

To prevent damage or unintended inflation of the airbag system, check that the lead-

acid battery is disconnected and the ignition switch has been in "LOCK" position for at least 90 seconds before performing any electrical service work on your SUZUKI vehicle. Do not touch airbag system components or wires. The wires are wrapped with yellow tape or yellow tubing, and the couplers are yellow for easy identification.

Scrapping a vehicle that has an uninflated airbag can be hazardous. Ask a SUZUKI dealer, body repair shop or scrap yard for help with disposal.

Front passenger airbag deactivation system (if equipped)

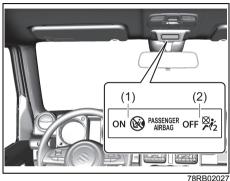

The front passenger's front airbag system must be deactivated if a child restraint system is to be installed on the front passender's seat.

When the ignition switch is turned to "ON" position. "PASSENGER AIRBAG ON" indicator (1) or "PASSENGER AIRBAG OFF" indicator (2) shows whether the front passenger's airbag system is activated or deactivated.

When the front passenger's airbag system is activated, both "PASSENGER AIRBAG ON" indicator (1) and "PASSENGER AIR-BAG OFF" indicator (2) come on for a few seconds and then go out. After that, only "PASSENGER AIRBAG

ON" indicator (1) comes on for about 1 minute and then does out.

When the front passenger's airbag system is deactivated, both "PASSENGER AIR-BAG ON" indicator (1) and "PASSENGER AIRBAG OFF" indicator (2) come on for a few seconds and then go out. After that, only "PASSENGER AIRBAG OFF" indicator (2) comes on.

When you activate or deactivate the front passenger's airbag system, check which indicator is on before starting the engine.

Side airbags, side curtain airbags and seat belt pretensioners are not connected to the airbag deactivation system. Even if the front passenger's airbag system is deactivated, side airbags, side curtain airbags and seat belt pretensioners are still activated.

WARNING

When using child restraint system on the front passenger's seat, the front passenger's airbag system must be deactivated; otherwise deployment of the front passenger's airbag could result in the death or serious injury of the child.


WARNING

Check that the front passenger's airbag system is activated and "PAS-SENGER AIRBAG ON" indicator (1) is on whenever there is no child restraint installed on the front passenger's seat.

FOR SAFE DRIVING

According to accident statistics, children are safer when properly restrained in rear seating positions than front seating positions. Whenever possible, SUZUKI recommends that child restraint systems be installed on the rear seat.

Airbag deactivation switch

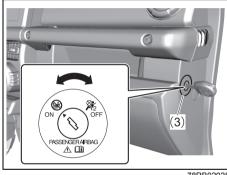

78RB02028

The airbag deactivation switch (3) is installed only for use when a rear-facing child restraint system or infant restraint system is installed in the front passenger's seat. The switch is located on the lateral face of the passenger's side of the instrument panel. To deactivate the front passenger's airbag system, follow the instructions below before starting the engine.


- 1) Check that the ignition switch is in "LOCK" position.
- Insert the key into the airbag deactivation switch (3), then push and turn the key to "OFF" (airbag off) position, and pull out the key.
- Turn the ignition switch to "ON" position. Both indicators come on for a few seconds and then go out.

After that, only "PASSENGER AIRBAG OFF" indicator (2) comes on to remind you that the front passenger's airbag system is deactivated. To activate the front passenger's airbag system, follow the instructions below before starting the engine.

- 1) Check that the ignition switch is in "LOCK" position.
- Insert the key into the airbag deactivation switch (3), then push and turn the key to "ON" (airbag on) position, and pull out the key.
- Turn the ignition switch to "ON" position. Both indicators come on for a few seconds and then go out.

After that, only "PASSENGER AIRBAG ON" indicator (1) comes on for about 1 minute and then goes out to remind you that the front passenger's airbag system is activated.

Exhaust gas warning

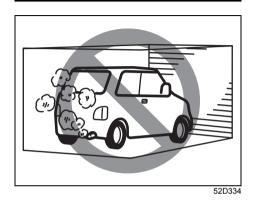

WARNING

Avoid breathing exhaust gases. Exhaust gases contain carbon monoxide, a potentially lethal gas that is colorless and odorless. Since carbon monoxide is difficult to detect by itself, take the following precautions to help prevent carbon monoxide from entering your vehicle.

 Do not leave the engine running in garages or other confined areas. (Continued)

WARNING

(Continued)

- Do not park with the engine running for a long period of time, even in an open area. If it is necessary to sit for a short time in a parked vehicle with the engine running, check that the air intake selector is set to "FRESH AIR" and the blower is at high speed.
- Avoid operating the vehicle with the tailgate or trunk open. If it is necessary to do so, check that the sunroof (if equipped) and all windows are closed, and the blower is at high speed with the air intake selector set to "FRESH AIR".
- To allow proper operation of your vehicle's ventilation system, keep the air inlet grill in front of the windshield clear of snow, leaves or other obstructions at all times.
- Keep the exhaust tailpipe area clear of snow and other material to help reduce the buildup of exhaust gases under the vehicle. This is particularly important when parked in blizzard conditions.
- Have the exhaust system inspected periodically for damage and leakage. Any damage or leakage should be repaired immediately.

FOR SAFE DRIVING

MEMO

 	 	 	 	 · -	 	· -	-	 	· -	-	 	-		 -	 	 	-	 		-	 • -		
 	 	 	 	 · _	 	· _	-	 	· _	_	 	_	_ ·	 -	 	 	-	 		-	 	_ /	
 	 	 	 	 	 		_	 		_	 	_		 	 	 	_	 			 		
 	 	 	 	 	 		_	 		_	 			 	 	 	_	 			 	_	
 	 	 	 	 	 		_	 		_	 	_		 	 	 	_	 		_	 	_	
 	 	 	 	 	 		_	 		_	 	_		 	 	 	_	 		_	 	_	
 	 	 	 	 	 		_	 		_	 			 	 	 	_	 		_ 1	 	_	
 	 	 	 	 	 		_	 		_	 			 	 	 	_	 		_ 1	 	_	
 	 	 	 	 	 	. –	-	 	. –	-	 	_		 . –	 	 	-	 	. –		 . –		
 	 	 	 	 	 		-	 		-	 	-		 -	 	 	-	 		-	 • -		 · -
 	 	 	 	 · -	 	· –	-	 		-	 	-		 -	 	 	-	 		-	 • –		 · -
 	 	 	 	 · –	 	· _	-	 		-	 	-		 · –	 	 	-	 		-	 · –	_ /	


BEFORE DRIVING

60G4	404

Keys	2-1
Door locks	2-2
Keyless entry system transmitter (if equipped)	2-6
Theft deterrent alarm system (if equipped)	2-9
Theft deterrent light (if equipped)	2-11
Windows	2-11
Mirrors	2-13

Instrument cluster (Type A) (if equipped)	
Speedometer	2-17 2
Tachometer	2-17
Fuel gauge	2-17
Brightness control	
Information display	2-19
Instrument cluster (Type B) (if equipped)	2-26
Speedometer	2-27
Tachometer	
Fuel gauge	2-27
Brightness control	2-27
Information switch (if equipped)	2-28
Information display	2-29
Warning and indicator lights	2-41
Lighting control lever	2-57
Headlight leveling switch (if equipped)	2-67
Headlight washer switch (if equipped)	2-67
Turn signal control lever	2-68
Hazard warning switch	2-69
Windshield wiper and washer lever	2-69
Tilt steering lock lever	2-71
Horn	2-72
Heated rear window switch /	
heated outside rearview mirror switch (if equipped)	2-72
Vehicle loading	
Trailer towing	2-74

Keys

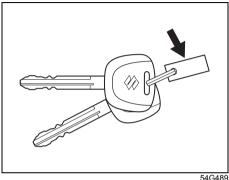

Your vehicle comes with a pair of identical keys. Keep one of the keys as a spare key in a safe place. One key can open all of the locks on the vehicle.

The key identification number is stamped on a metal tag provided with the keys or on the keys. Keep the tag in a safe place. If you lose your keys, you will need this number to have new keys made. Write the number below for your future reference.

KEY NUMBER:

Immobilizer system

This system is designed to help prevent vehicle theft by electronically disabling the engine starting system.

The engine can be started only with your vehicle's original immobilizer ignition key. which has an electronic identification code programmed in it. The key communicates the identification code to the vehicle when the ignition switch is turned to "ON" position. If you need to make spare keys, see a SUZUKI dealer. The vehicle must be programmed with the correct identification code for the spare. A key made by an ordinary locksmith will not work.



80JM122

If the immobilizer warning light blinks when the ignition switch is in "ON" position, the engine will not start.

NOTICE

Do not modify or remove the immobilizer system. If modified or removed, the system cannot be properly operated.

NOTE

- · If the immobilizer system warning light blinks or comes on, a message may be shown on the information display.
- This immobilizer system is maintenancefree.

If this light blinks, turn the ignition switch to "LOCK" position, and then turn it back to "ON" position.

If the light still blinks after the ignition switch is turned back to "ON" position, there may be something wrong with your key or with the immobilizer system. Ask a SUZUKI dealer to have the system inspected.

BEFORE DRIVING

NOTE:

- If you lose your immobilizer ignition key, ask a SUZUKI dealer as soon as possible to deactivate the lost one, and to make a new key.
- If you own other vehicles with immobilizer keys, keep those keys away from the ignition switch when using your SUZUKI vehicle. Otherwise, the engine may not be started because they may interfere with your SUZUKI vehicle's immobilizer system.
- If you attach any metal objects to the immobilizer key, it may not start the engine.

NOTICE

The immobilizer key is sensitive electronic instruments. To avoid damaging them:


- Do not expose them to impacts, moisture or high temperature such as on the dashboard under direct sunlight.
- Keep them away from magnetic objects.

Ignition key reminder


A buzzer sounds intermittently to remind you to remove the ignition key if it is in the ignition keyhole when the driver's door is opened.

Door locks

Side door locks

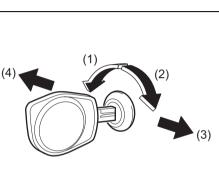

To unlock a driver's door from the outside of the vehicle, insert the key and turn the top of the key toward the rear of the vehicle.

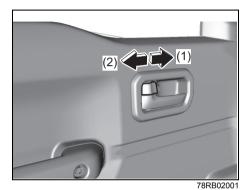

(1) LOCK (2) UNLOCK

To lock a door from the inside of the vehicle, turn the lock knob forward. Turn the lock knob backward to unlock the door.

NOTE:

Hold the door handle when you close a locked front door, or the door will not remain locked.

52RM20830

(1) LOCK (2) UNLOCK


(3) Rear

(4) Front

To lock a driver's door from the outside of the vehicle:

- Insert a key and turn the top of the key toward the front of the vehicle, or
- Turn the lock knob forward, then pull and hold the door handle as you close the door.

Central door locking system

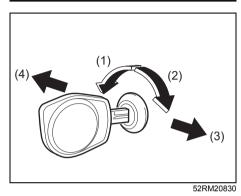

To unlock the driver's door only, insert the key in that door lock and turn the top of the key toward the rear of the vehicle once.

NOTE:

You can also lock or unlock all doors by operating the transmitter. Refer to "Keyless entry system transmitter (if equipped)" in this section.

Tailgate

A WARNING

Always check that the tailgate is closed and latched securely. Completely closing the tailgate helps prevent occupants from being thrown from the vehicle in the event of an accident. Completely closing it also helps keep exhaust gases from entering the vehicle.

If you unlock the tailgate, pull up the tailgate handle and pull the tailgate, it will continue to open to the fullyopen position by the damper stay performance. Check that no obstacle exists within the opening and closing range of the tailgate.

- (1) LOCK
- (2) UNLOCK
- (3) Rear
- (4) Front


You can lock and unlock all doors (including the tailgate) simultaneously by using the key in the driver's door lock.

To lock all doors simultaneously, insert the key in the driver's door lock and turn the top of the key toward the front of the vehicle once.

To unlock all doors simultaneously, insert the key in the driver's door lock and turn the top of the key toward the rear of the vehicle once.

BEFORE DRIVING


Vehicle without keyless entry system (if equipped)

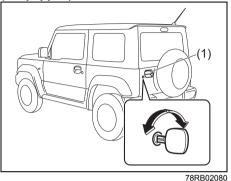

(1) Tailgate handle

You can lock and unlock the tailgate from outside by using the key in the tailgate lock (if equipped).


To open the tailgate, pull up the tailgate handle (1) and pull the tailgate.

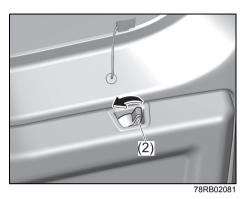

(2) Tailgate inside lever

You can unlock the tailgate from inside by moving the tailgate inside lever (2) in arrow direction.

Vehicle with keyless entry system (if equipped)

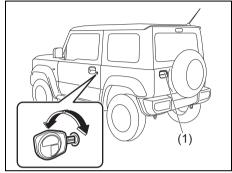

78RB02002

(1) Tailgate handle


You can lock and unlock the tailgate by using the key in the driver's door lock.


To open the tailgate, pull up the tailgate handle (1) and pull the tailgate.


If you cannot unlock the tailgate by using the key in the driver's door lock due to a discharged lead-acid battery or malfunction, follow the procedure below to unlatch the tailgate from inside the vehicle.

 Fold the rear seat forward for easier access. Refer to "Folding rear seats" in this section for details on how to fold the rear seat forward.

BEFORE DRIVING

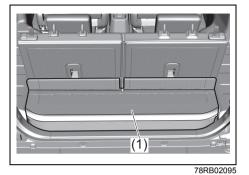


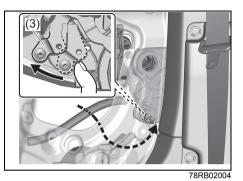

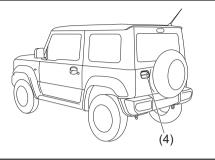

78RB02090

2) Remove the luggage box (1).

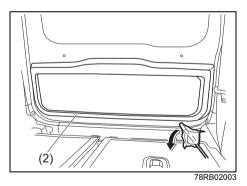

- 3) Remove the trim (2) of the tailgate.
- Insert a flat-bladed screwdriver covered with a soft cloth between the trim and the tailgate to make a space for fingers, and then pull out the trim with your fingers.


- 4) Move the lever (3) in arrow direction to unlock the tailgate.
- 5) From outside the vehicle, pull up the tailgate handle (4) and open the tailgate.


If the tailgate cannot be unlatched by pulling up the tailgate handle, have the vehicle inspected by a SUZUKI dealer.

Check that there is no one near the tailgate when pushing open the tailgate from inside the vehicle.


2-5

Inside tailgate handle (For Light commercial vehicles)

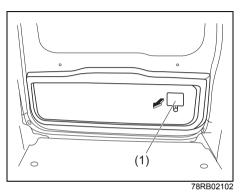

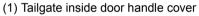

1) To open the tailgate from the luggage compartment, remove the tailgate inside door handle cover (1).

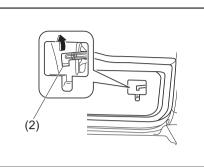


78RB02103

2) Move the lever (2) in arrow direction to open the tailgate.

WARNING

Always make sure that there is no one in the luggage compartment when closing the tailgate.

Keyless entry system transmitter (if equipped)

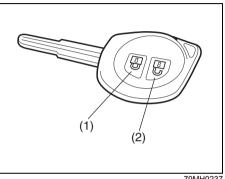

79MH0237

(1) LOCK button(2) UNLOCK button

There are two ways to lock or unlock all doors (including the tailgate) simultaneously by operating the transmitter near the vehicle.

Central door locking system

- To lock all doors, push LOCK button (1) once.
- To unlock all door, push UNLOCK button (2) once.

NOTE:

You can switch the function that unlocks all doors from requiring two pushes to requiring one push, and vice versa, via the information display setting mode. For details on how to use the information display, refer to "Information display" in this section.

The turn signal lights will flash once when the doors are locked.

When the doors are unlocked:

- The turn signal lights will flash twice.
- If the interior light switch is in DOOR position, the interior light will turn on for about 15 seconds and then fade out. If you insert the key into the ignition switch during this time, the light will start to fade out immediately.

Check that the doors are locked after you operate LOCK button (1).

NOTE:

If no door is opened within about 30 seconds after UNLOCK button (2) is operated, the doors will automatically lock again.

NOTE:

- The maximum operating distance of the keyless entry system transmitter is about 5 m (16 ft.), but this can vary depending on the surroundings, especially near other transmitting devices such as radio towers or CB (Citizen's Band) radios.
- The door locks cannot be operated with the transmitter, if the ignition key is inserted in the ignition switch.
- When any door is open, the door locks can only be unlocked with the transmitter, and the turn signal light will flash.
- If you lose one of the transmitters, ask a SUZUKI dealer as soon as possible for a replacement. Have a SUZUKI dealer program the new transmitter code in your vehicle's memory so that the old code is erased.

NOTICE


The transmitter is a sensitive electronic instrument. To avoid damaging the transmitter:

- Do not expose it to impacts, moisture or high temperature such as by leaving it on the dashboard under direct sunlight.
- Keep the transmitter away from magnetic objects such as a television.

Battery replacement


If the transmitter becomes unusable, replace the battery.

To replace the battery of the transmitter:

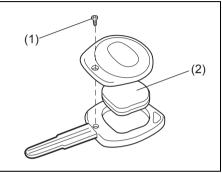

68LM248

- 1) Remove the screw (1), and open the transmitter cover.
- 2) Remove the transmitter (2).

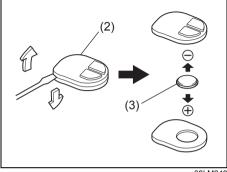

68LM249

- (3) Lithium disc type battery: CR1616 or equivalent
- Put the edge of a flat-bladed screwdriver in the slot of the transmitter (2) and pry it open.
- 4) Replace the battery (3) so its + terminal faces "+" mark of the transmitter.
- 5) Close the transmitter and install it into the transmitter holder.
- 6) Close the transmitter cover, install and tighten the screw (1).
- Check that the door locks can be operated with the transmitter.
- Dispose of the used battery properly according to applicable rules or regulations. Do not dispose of lithium batteries with ordinary household trash.


Swallowing a lithium battery may cause serious internal injury. Do not allow anyone to swallow a lithium battery. Keep lithium batteries away from children and pets. If swallowed, contact a physician immediately.

NOTICE

- The transmitter is a sensitive electronic instrument. To avoid damaging it, do not expose it to dust or moisture or tamper with internal parts.
- When replacing the battery by yourself, the transmitter controller could be damaged affected by static electricity. Discharge the static electricity built up in your body by touching metal before replacing the battery.

NOTE:

- Used batteries must be disposed of properly according to applicable rules or regulations and must not be disposed of with ordinary household trash.
- For handling the lithium battery in the country of Australia, refer to "For Australia" in the "SUPPLEMENT" section.

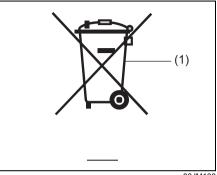

80JM133

(1) Crossed-out wheeled bin symbol

The crossed-out wheeled bin symbol (1) indicates that a used battery should be collected separately from ordinary household trash.

By ensuring the used battery is disposed of or recycled correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate battery disposal. The recycling of materials will help to conserve natural resources. For more detailed information about disposing of or recycling of the used battery, consult a SUZUKI dealer.

Theft deterrent alarm system (if equipped)

A theft deterrent alarm system is armed in about 20 seconds after you lock the doors.

Keyless entry system – Use the transmitter.

Once the system is armed, any attempt to open a door by using any other means (*) than the keyless entry system transmitter or any attempt to open the engine hood will cause the alarm to be triggered.

* These means include the following:

- The key
- The lock knob on a door

NOTICE


Do not modify or remove the theft deterrent alarm system. If modified or removed, the system cannot be properly operated. NOTE:

- The theft deterrent alarm system generates alarms when any of the predetermined conditions is met. However, the system does not have any function of blocking unauthorized entry into your vehicle.
- Always use the keyless entry system transmitter to unlock the doors when the theft deterrent alarm system has been armed. Using a key instead will trigger the alarm.
- If a person who does not know the theft deterrent alarm system is going to drive your vehicle, we recommend you explain the system and its operation to the person, or disable the system beforehand. Mistakenly triggering the alarm may cause a nuisance to others.
- Even if the theft deterrent alarm system is armed, you should still be careful to guard against theft. Do not leave money or things of value in your vehicle.
- The theft deterrent alarm system is maintenance-free.

How to arm the theft deterrent alarm system (when enabled)

Lock all doors (including the tailgate and engine hood) using the keyless entry system transmitter. The theft deterrent light (1) will start blinking, and the theft deterrent alarm system will be armed in about 20 seconds.

While the system is being armed, the indicator continues to blink at intervals of approximately 2 seconds.

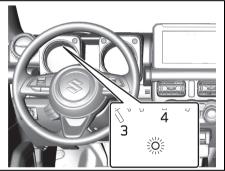

78RB02005

NOTE:

- To prevent the alarm from being accidentally triggered, avoid arming it while anyone remains inside the vehicle. The alarm will be triggered if any person inside unlocks a door by operating the lock knob.
- The theft deterrent alarm system is not armed when all doors are locked using the key from outside, or using the door lock knobs.
- If any door is not operated within approximately 30 seconds after the doors have been unlocked using the keyless entry system transmitter, the doors are automatically locked again. After the doors are locked, the theft deterrent alarm system will be armed in about 20 seconds if the system is in the enabled state.

How to disarm the theft deterrent alarm system

Simply unlock the doors using the keyless entry system transmitter. The theft deterrent light will go out, indicating that the theft deterrent alarm system is disarmed.

How to stop the alarm

Should the alarm be triggered accidentally, unlock the doors using the keyless entry system transmitter or turn the ignition switch to "ON" position. The alarm will then stop.


NOTE:

- Even after the alarm has stopped, if you lock the doors using the keyless entry system transmitter, the theft deterrent alarm system will be rearmed with a delay of about 20 seconds.
- If you disconnect the lead-acid battery while the theft deterrent alarm system is in the armed condition or the alarm is actually in operation, the alarm will be triggered or re-triggered when the battery is then reconnected, although, in the latter case, the alarm remains stopped for the period between disconnection and reconnection of the lead-acid battery.
- Even after the alarm has stopped at the end of the predetermined operation time, it will be triggered again if any door is opened without disarming the theft deterrent alarm system.

Checking whether the alarm has been triggered during parking

If the alarm was triggered due to an unauthorized entry into the vehicle and you then turn the ignition switch to "ON" position, the theft deterrent light will blink rapidly for about 8 seconds and a buzzer will beep 4 times during this period. If this happens, check whether your vehicle has been broken into while you were away from it.


Theft deterrent light (if equipped)

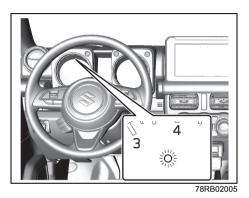

This light will blink with the ignition switch in "LOCK" or "ACC" position. The blinking light is intended to deter theft by leading others to believe that the vehicle is equipped with a security system.

Windows

Manual window control (if equipped)

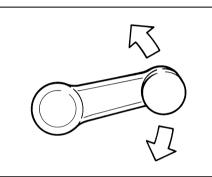


60G010A

Raise or lower the door windows by turning the handle located on the door panel.


Electric window controls (if equipped)

The electric windows can only be operated when the ignition switch is in "ON" position.

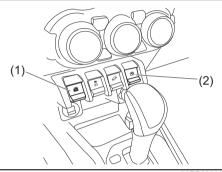

78RB02006

The center console has a switch (1) to operate the driver's window, and a switch (2) to operate the front passenger's window.

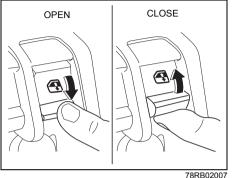

To open a window, push the switch. To close the window, lift up the switch.

The driver's window has AUTO-DOWN and AUTO-UP (if equipped) features for greater convenience (at toll booths or drive-through restaurants, for example). These features allow the driver to open or close the window without holding the window switch in DOWN or UP position. Press down or lift up the driver's window switch completely and release it. To stop the window before it reaches the FULL-DOWN or FULL-UP position, pull up or push down the switch briefly.

WARNING

- · You should always prevent children from operating the electric window switches when there are children in the vehicle. Children can be seriously injured if they get part of their body caught by the window during operation.
- To avoid injuring an occupant by window entrapment, check that no part of the occupant's body such as hands or head is in the path of the electric windows when closing them.
- Always remove the ignition key when leaving the vehicle even only for a short time. Also do not leave children alone in a parked vehicle. Unattended children could use the electric window switches and get trapped by the window.

Pinching prevention function (if equipped)

The driver's window is equipped with a pinching prevention function. This function detects a foreign object that is caught in the window as it is being closed by AUTO-UP feature, which allows you to close the window without holding the window switch in UP position, and stops the window from closing to prevent damage.

WARNING

To avoid injuring an occupant by window entrapment, check that no part of the occupant's body such as hands or head is in the path of the electric window when closing it. This function may not detect an object due to the size, hardness, or position of the object being caught in the closing window.

BEFORE DRIVING

- The pinching prevention function does not operate while you are holding the window switch in UP position.
- The pinching prevention function may not detect an object caught in the window just before the window is fully closed.

NOTE:

Even if you cannot close the window by the AUTO-UP feature because there may be something wrong with the pinching prevention function, you can close the window by holding the window switch in UP position. If you drive in extreme off-road condition, the pinching prevention function may operate accidentally because the window reacts to vehicle jolting.

Pinching prevention function initialization

When you disconnect and reconnect the lead-acid battery or replace the fuse, the function will be deactivated. In this condition, the AUTO-DOWN feature will be deactivated, while the AUTO-UP feature may remain activated. The pinching prevention function needs to be initialized.

To initialize the pinching prevention function, use the following procedure:

- 1) Turn the ignition switch to "ON" position.
- 2) Open the driver's window fully by holding the window switch in DOWN position.
- Close the driver's window by holding the switch in UP position, and keep holding the switch for 2 seconds after the window is fully closed.
- 4) Check the driver's window to see if the AUTO-DOWN/UP feature works.


A WARNING

Whenever you disconnect and reconnect the lead-acid battery or replace the fuse, the pinching prevention function needs to be initialized. The pinching prevention function will not be activated until the initialization is completed.


If the AUTO-DOWN/UP feature will not work after initialization, there might be something wrong with the pinching prevention function. Have your vehicle inspected by a SUZUKI dealer.

Mirrors

Inside rearview mirror

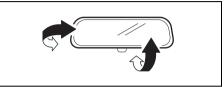

68LMT0205

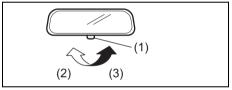

68LMT0206


(2) Day driving(3) Night driving

You can adjust the inside rearview mirror by hand to see the rear of your vehicle in the mirror. To adjust the mirror, set the selector tab (1) to the day position, and then move the mirror up, down or sideways by hand to obtain the best view. When driving at night, you can move the selector tab to the night position to reduce glare from the headlights of vehicles behind you.

WARNING

- Always adjust the mirror with the selector set to the day position.
- Only use the night position if it is necessary to reduce glare from the headlights of vehicles behind you. Be aware that in this position you may not be able to see some objects that could be seen in the day position.


Outside rearview mirrors

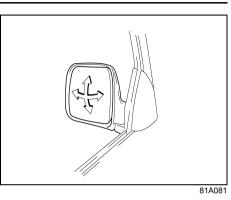

Adjust the outside rearview mirrors so you can just see the side of your vehicle in the mirrors.

Be careful when judging the size or distance of a vehicle or other object seen in the side convex mirror. Be aware that objects look smaller and appear farther away than when seen in a flat mirror.

Electric mirrors (if equipped)

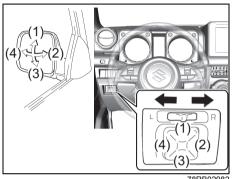

78RB02082


The switch to control the electric mirrors is located on the driver's door panel. You can adjust the mirrors when the ignition switch is in "ACC" or "ON" position. To adjust the mirrors:

- Rotate the selector switch to the left or right to select the mirror you wish to adjust.
- Push the side of the switch to the direction in which you wish to move the mirror.
- Return the selector switch to the center position to prevent unintended mirror movement.


NOTE:

If your vehicle is equipped with the heated outside rearview mirrors, refer to "Heated rear window switch / heated outside rearview mirror switch (if equipped)" in this section.

Outside rearview mirrors folding switch (if equipped)

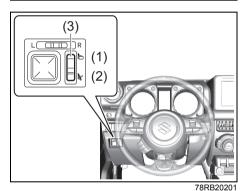

(1) Unfold (2) Fold

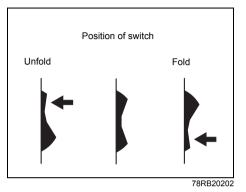


You can fold the mirrors when you park the vehicle in a narrow space. Push the folding switch (3) to fold and unfold the mirrors. Make sure the mirrors are completely unfolded before you start driving.

Moving mirrors can pinch and injure a hand. Do not allow anyone's hand to get near the mirrors when folding and unfolding the mirrors.

Instrument cluster (Type A) (if equipped)

- 1. Speedometer
- 2. Tachometer
- 3. Information display
- 4. Trip meter selector knob
- 5. Indicator selector knob
- 6. Warning and indicator lights

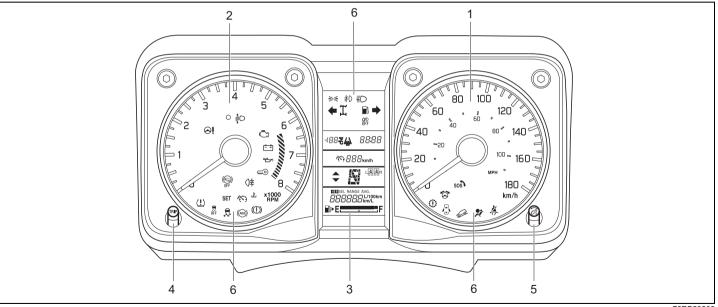

Speedometer

The speedometer indicates vehicle speed.


Tachometer

The tachometer indicates engine speed in revolutions per minute.

NOTICE

Never drive the vehicle with the engine revving in the red zone or severe engine damage can result. Keep the engine speed below the red zone even when downshifting to a lower gear position. Refer to "Downshifting maximum allowable speeds" in "OPERATING YOUR VEHICLE" section.



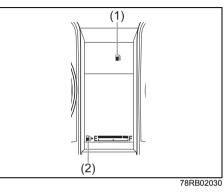


When the ignition switch is "ON", this gauge gives an approximate indication of the amount of fuel in the fuel tank. "F" stands for full and "E" stands for empty.

 If the indicator shows only one segment to "E", refill the tank as soon as possible. If the last segment blinks, it means that the fuel is almost empty. If the low fuel warning light (1) comes on, fill the fuel tank immediately. Refer to "Low fuel warning light" in "Warning and indicator lights" in this section for details. The mark (2) indicates that the fuel filler door is located on the right side of the vehicle.

Brightness control

000000

78RB02091

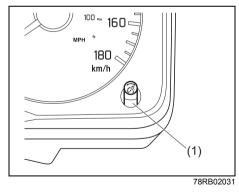

When the ignition switch is turned "ON", the instrument panel lights come on.

Your vehicle has a system to automatically dim the brightness of the instrument panel lights when the position lights or headlights are on.

When the position lights and/or head lights are turned "ON", you can adjust the brightness of the instrument cluster lights in seven levels of intensity.

To increase the brightness of the instrument panel lights, turn the indicator selector knob (1) clockwise.

To reduce the brightness of the instrument panel lights, turn the indicator selector knob (1) counterclockwise.

WARNING

Do not adjust the brightness of the instrument panel lights while driving. Otherwise, you could lose control of the vehicle.

NOTE:

- If you do not turn the knob within several seconds, the brightness control display will be canceled automatically.
- When you reconnect the lead-acid battery, the brightness of the instrument panel lights will be reinitialized. Readjust the brightness according to your preference.


NOTE:


If you adjust to the maximum brightness level when the position lights or headlights are on, the following functions will be cancelled.

- The function which automatically dims the brightness of instrument panel lights
- The function which operates with the brightness control, except maximum brightness level

Information display

Information display is shown when the ignition switch is turned to "ON" position.

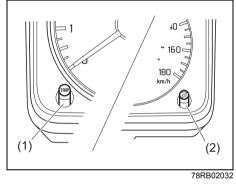

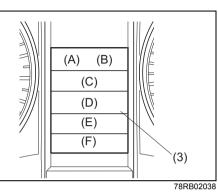

(3) Information display

The information display shows the following information.

Display (A) Temperature

Display (B) Clock

Display (C)

Speed limiter (if equipped)

Display (D)

Selector position (for Automatic transmission vehicles) / Gearshift indicator (if equipped) / Rear passenger's seat belt reminder (if equipped)

Display (E)

Trip meter / Odometer / Fuel consumption / Driving range

Display (F) Fuel gauge

(1) Trip meter selector knob

(2) Indicator selector knob

Clock

The display (B) shows the time.

To change the time indication:

- Push the trip meter selector knob (1) and the indicator selector knob (2) together.
- 2) To change the hour indication, turn the indicator selector knob (2) left or right repeatedly when the hour indication blinks. To change the hour indication quickly, turn and hold the indicator selector knob (2). To set the hour indication, push the indicator selector knob (2) and the minute indication will blink.
- 3) To change the minute indication, turn the indicator selector knob (2) left or right repeatedly when the minute indication blinks. To change the minute indication quickly, turn and hold the indicator selector knob (2). To set the minute indication, push the indicator selector knob (2).

To select 12/24H format, refer to "Setting mode" in this section.


WARNING

If you attempt to adjust the display while driving, you could lose control of the vehicle.

Do not attempt to adjust the display while driving.

Thermometer

The display (A) shows the thermometer. The thermometer indicates the outside temperature.

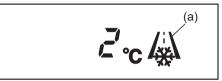

78RB02089

If the outside temperature drops to freezing condition, the mark (a) will appear on the display.

NOTE:

- The outside temperature indication is not the actual outside temperature when driving at low speed, or when stopped.
- If there is something wrong with the thermometer, or just after the ignition switch is turned to "ON" position, the display may not indicate the outside temperature.

When the display (E) shows the driving range, you can change the unit of temperature.

To change the unit of temperature, while pushing and holding the trip meter selector knob (1), turn the indicator selector knob (2).



78RB02092

Selector position (for Automatic transmission vehicles) / Gearshift indicator (if equipped) / Rear passenger's seat belt reminder (if equipped)



52RM21360

Selector position (for Automatic transmission vehicles)

When the ignition switch is turned "ON"; the display (D) indicates the gear position. For details on how to use the transmission, refer to "Using transmission" in "OPERAT-ING YOUR VEHICLE" section.

Gearshift indicator (if equipped)

Refer to "Gearshift indicator" in "ÓPERAT-ING YOUR VEHICLE" section.


Rear passenger's seat belt reminder (if equipped)

Refer to "Seat belts and child restraint systems" in the "BEFORE DRIVING" section for details.

Trip meter / Odometer / Fuel consumption / Driving range

The display (E) shows one of the following indications; trip meter A, trip meter B, odometer, instantaneous fuel consumption, average fuel consumption or driving range.

To switch the display indication (E), push the trip meter selector knob (1) or the indicator selector knob (2) quickly.

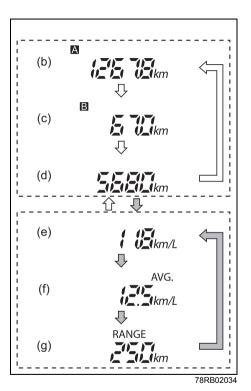

☆₽	Push the trip meter selector knob (1).									
৫₽	Push the indicator selector knob (2).									
 (b) Trip meter A (c) Trip meter B (d) Odometer (e) Instantaneous fuel consumption (f) Average fuel consumption (g) Driving range 										
If you attempt to adjust the display while driving, you could lose control of the vehicle. Do not attempt to adjust the display while driving.										
NOTE: • Indicat	tions will change when you push									

 The display shows estimated values. Indications may not be the same as actual values.

and release a knob.

Trip meter

The trip meter can be used to measure the distance traveled on short trips or between fuel stops.

You can use the trip meter A or trip meter B independently.

To reset the trip meter, push and hold the trip meter selector knob (1) until the display shows 0.0.

NOTE:

The indicated maximum value of the trip meter is 9999.9. When you run past the maximum value, the indicated value will return to 0.0.

Odometer

The odometer records the total distance the vehicle has been driven.

NOTICE

Keep track of your odometer reading and check the maintenance schedule regularly for required services. Increased wear or damage to certain parts can result from failure to perform required services at the proper mileage intervals.

Instantaneous fuel consumption

The display shows the value of instantaneous fuel consumption only when the vehicle is moving.

NOTE:

- The display does not show the value unless the vehicle is moving.
- Depending on the vehicle's specification, the fuel consumption units of initial setting are indicated as L/100km or km/L.
- For "L/100km" setting, the indicated maximum value of instantaneous fuel consumption is 30. No more than 30 will be indicated on the display even if the actual instantaneous fuel consumption is higher.
- For "km/L" setting, the indicated maximum value of instantaneous fuel consumption is 50. No more than 50 will be indicated on the display even if the actual instantaneous fuel consumption is higher.
- The indication on the display may be delayed if fuel consumption is greatly affected by driving conditions.
- The display shows estimated values. Indications may not be the same as actual values.
- For "L/100km" or "km/L" setting, you can change the units that instantaneous fuel consumption is displayed in. Refer to "Average fuel consumption" in this section.

Average fuel consumption

If you previously selected average fuel consumption setting, the display shows average fuel consumption from the last reset to the present when the ignition switch is turned "ON".


To reset the average fuel consumption, push and hold the indicator selector knob (2) for a while when the display shows the average fuel consumption.

NOTE:

When you reset the indication or reconnect the terminals to the lead-acid battery, the value of average fuel consumption will be shown after driving for a while.

(For "L/100km" or "km/L" setting)

To change the unit of average fuel consumption, while pushing and holding the trip meter selector knob (1), turn the indicator selector knob (2).

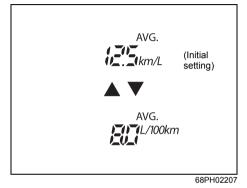

NOTE:

When you change the units that average fuel consumption is displayed in, the instantaneous fuel consumption units will be changed automatically.

Driving range

If you selected driving range the last time you drove the vehicle, the display indicates "---" for a few seconds and then indicates the current driving range when the ignition switch is turned "ON".

The driving range shown in the display is the approximate distance you can drive until the fuel gauge indicates "E", based on current driving conditions.

When the low fuel warning light comes on, the display "---" will appear.

If the low fuel warning light comes on, fill the fuel tank immediately regardless of the value of driving range shown in the display.

When you refuel, the driving range is updated. However, if you only add a small amount of fuel, the correct value will not be displayed.

NOTE:

- If you refuel when the ignition switch is in "ON", the driving range may not indicate the correct value.
- When you reconnect the terminals to the lead-acid battery, the value of driving range will be shown after driving for a while.


Fuel gauge

The display (F) shows the fuel gauge.

Refer to "Fuel gauge" in this section.

Setting mode

In the setting mode, you can set up and customize the following functions.

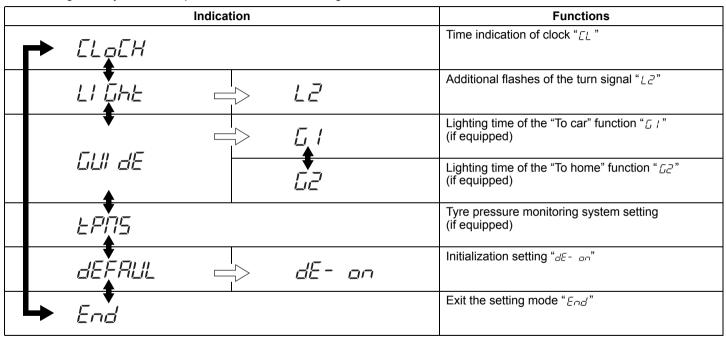

\$ Turn the indicator selector knob (2).										
Push the knob (2).	indicator	selector								

NOTE:

Depending on vehicle's specifications, some items may not be displayed.

How to use the setting mode:

- When the ignition switch is "ON" and the vehicle is stationary, push and hold the indicator selector knob (2) until the display shows "*LLaLH*".
- Turn and/or push the indicator selector knob (2) to select a function that you want to set up according to the chart in the previous page.
- Turn and/or push the indicator selector knob (2) to register settings of the following functions.

NOTE:

- As shown in the above illustration, "SEL" indicates on the display of currently setting item.
- To go back to the higher level display during operation, turn the indicator selector knob (2) to display " BREH" or "-BRE" and then push the indicator selector knob (2).

Time indication of clock "LL"

- *[]_ |]*: 12-hour format
- <u>[]</u> <u>2</u> <u>2</u>

NOTE:

Default setting for time indication of clock varies according to the specification.

Additional flashes of the turn signal "L2"

- L2-5L /: Turn signal flashes three times after the turn signal lever is returned (default setting)
- L2-5L2: Disable the additional flashes of turn signal

Lighting time of the "To car" function " \mathcal{L} /" (if equipped)

- [] /- 5/ /: Disable the "To car" function
- *Li I-5L2*: 10 seconds (default setting)
- [] /-5]]: 15 seconds
- [] /-5[4: 20 seconds
- *[]* /-525: 25 seconds

Lighting time of the "To home" function " $\mathcal{L}\mathcal{L}$ " (if equipped)

- G2-5L /: Disable the "To home" function
- *G2-5L2*: 10 seconds (default setting)
- *G2-5L3*: 15 seconds
- <u>[]-5</u>[4: 20 seconds
- 62-515: 25 seconds
- 62-565: 30 seconds

Tyre pressure monitoring system setting (if equipped)

- UnLRdn: Comfort Mode (default setting)
- LRdEn : Load Mode

Refer to "Tyre pressure monitoring system (TPMS)" in "OPERATING YOUR VEHI-CLE" section for details.

Initialization setting "dE- on"


• dE- on: Initialize all settings

How to exit the setting mode:

Switch the display to show " E_{nd} " and then push the indicator selector knob (2).

Instrument cluster (Type B) (if equipped)

- 1. Speedometer
- 2. Tachometer
- Information display
 Trip meter selector knob
- 5. Indicator selector knob
- 6. Warning and indicator lights

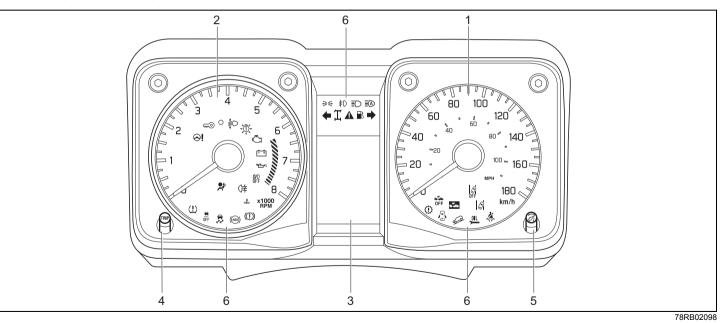

Speedometer


The speedometer indicates vehicle speed.

Tachometer

The tachometer indicates engine speed in revolutions per minute.

NOTICE

Never drive the vehicle with the engine revving in the red zone or severe engine damage can result. Keep the engine speed below the red zone even when downshifting to a lower gear position. Refer to "Downshifting maximum allowable speeds" in "OPERATING YOUR VEHICLE" section.

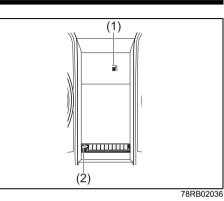


Fuel gauge


When the ignition switch is "ON", this gauge gives an approximate indication of the amount of fuel in the fuel tank. "F" stands for full and "E" stands for empty.

 If the indicator shows only one segment to "E", refill the tank as soon as possible.

If the last segment blinks, it means that the fuel is almost empty. If the low fuel warning light (1) comes on, fill the fuel tank immediately. Refer to "Low fuel warning light" in "Warning and indicator lights" in this section for details. The mark (2) indicates that the fuel filler door is located on the right side of the vehicle.

Brightness control

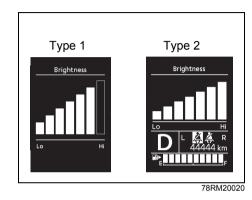

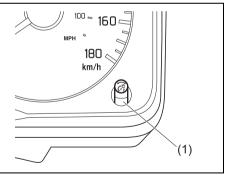

78RB02037

When the ignition switch is turned "ON", the instrument panel lights come on.

Your vehicle has a system to automatically dim the brightness of the instrument panel lights when the position lights or headlights are on.

When the position lights and/or headlights are on, you can adjust the meter illumination brightness.

To increase the brightness of the instrument panel lights, turn the indicator selector knob (1) clockwise. To reduce the brightness of the instrument panel lights, turn the indicator selector knob (1) counterclockwise.

A WARNING

Do not adjust the brightness of the instrument panel lights while driving. Otherwise, you could lose control of the vehicle.

NOTE:

- If you do not turn the knob within several seconds, the brightness control display will be canceled automatically.
- When you reconnect the lead-acid battery, the brightness of the instrument panel lights will be reinitialized. Readjust the brightness according to your preference.


NOTE:

If you adjust to the maximum brightness level when the position lights or headlights are on, the following functions will be cancelled.

- The function which automatically dims the brightness of instrument panel lights
- The function which operates with the brightness control, except maximum brightness level

Information switch (if equipped)

You can use the information switch to switch the display indication when the ignition switch is in "ON" position and the vehicle is stationary.

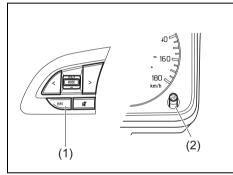

78RB02099

(1) Information switch

(2) Indicator selector knob

To switch to the setting mode

- Push and hold the information switch (1) when the vehicle is stationary.
- 2) After the display of setting mode is shown, select the setting item that you want to change by turning the indicator selector knob (2) left or right. Refer to "Setting mode" in this section for details.

NOTE:

If you switch to the setting mode while either of the following items is shown on the information display, the current value will be reset. If you do not want to reset its value, push the indicator selector knob (2) quickly beforehand and switch to the other item.

- Average fuel consumption
- Driving time
- Average speed

To exit the setting mode

- 1) To exit the setting mode, select "Back" and push the indicator selector knob (2).
- 2) Push the information switch (1) quickly.


NOTE:

You can exit the setting mode by either of the following operations:


- Turn the ignition switch to "ACC" or "LOCK" position.
- Start driving your vehicle.

Information display

The information display is shown when the ignition switch is in "ON" position.

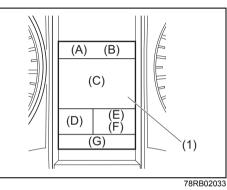

(1) Information display

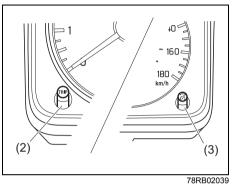

(2) Trip meter selector knob(3) Indicator selector knob

The information display shows the following information.

Display (A) Clock

Display (B) Thermometer

Display (C)

Warning and indicator messages / Fuel consumption / Driving range / Average speed / Driving time

Display (D)

Selector position (for Automatic transmission models) / Gear position (for Automatic transmission models) / Gearshift indicator (if equipped)

Display (E)


Trip meter (Type 1) Rear passenger's seat belt reminder (if equipped) (Type 2)

Display (F)

Odometer (Type 1) Trip meter / Odometer (Type 2)

Display (G)

Fuel gauge

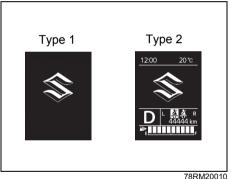

78RM2007

When the ignition switch is turned "ON", the message shown in the above illustration will appear on the display for several seconds.

Some warning and indicator messages may appear on the display when the ignition switch is in "ACC" or "LOCK".

Clock

When the ignition switch is in "ON", the display (A) shows the time.

To set the clock, follow "Setting mode" instructions in this section.

WARNING

If you attempt to adjust the display while driving, you could lose control of the vehicle.

Do not attempt to adjust the display while driving.

Thermometer

When the ignition switch is "ON", the display (B) shows the thermometer. The thermometer indicates the outside temperature.



78RB02040


If the outside temperature nears freezing condition, the mark (a) will appear on the display.

NOTE:

- The outside temperature indication is not the actual outside temperature when driving at low speed, or when stopped.
- If there is something wrong with the thermometer, or just after the ignition switch is turned "ON", the display may not indicate the outside temperature.


When the display (C) shows the driving range, you can change the unit of temperature.

To change the unit of temperature, refer to "Setting mode" in this section.

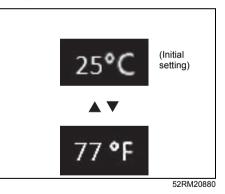

Fuel consumption / Driving range / Average speed / Driving time

When there are no warning or indicator messages on the display (C), you can select one of the following indications to appear on the display: instantaneous fuel consumption, average fuel consumption, driving range, average speed, driving time or no indication.

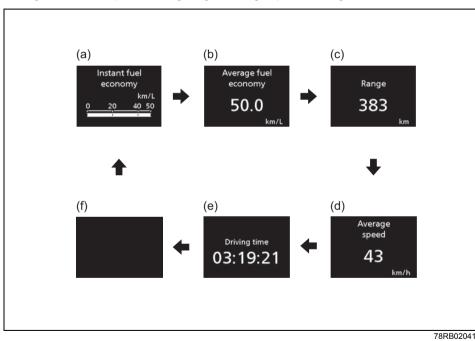

- (a) Instantaneous fuel consumption
- (b) Average fuel consumption
- (c) Driving range
- (d) Average speed
- (e) Driving time
- (f) No indication

To switch the display indication, push the indicator selector knob (3) quickly.

NOTE:

The value of fuel consumption, driving range and average speed shown on the display are affected by the following conditions;

- road condition
- · surrounding traffic condition
- driving condition
- vehicle condition
- a malfunction which causes the malfunction indicator light to come on or blink

Instantaneous fuel consumption

The display shows instantaneous fuel consumption with a bar graph only when the vehicle is moving.

NOTE:

- The display does not show the bar graph unless the vehicle is moving.
- Depending on the vehicle's specification, the fuel consumption units of initial setting are indicated as L/100km, km/L or MPG (UK).
- The indicated maximum value of instantaneous fuel consumption is one of the followings. No more than the maximum value will be indicated on the display even if the actual instantaneous fuel consumption is higher.
 - For L/100km setting: 30
 - For km/L setting: 50
 - For MPG (UK) setting: 80
- The indication on the display may be delayed if fuel consumption is greatly affected by driving conditions.
- The display shows estimated values. Indications may not be the same as actual values.

Average fuel consumption

If you previously selected average fuel consumption setting, the display shows average fuel consumption from the last reset to the present when the ignition switch is turned "ON".

NOTE:

When you reconnect the terminals to the lead-acid battery, the value of average fuel consumption will be shown after driving for a period of time.

You can select the timing to reset the value of average fuel consumption by one of the following three methods;

- Reset after refuel: the value of average fuel consumption will be reset automatically by refueling.
- Reset with trip meter A: the value of average fuel consumption will be reset automatically by resetting trip meter A.
- Reset manually: the value of average fuel consumption will be reset by pushing and holding the indicator selector knob (3) when the display indicates the average fuel consumption.

To change the timing to reset the value of average fuel consumption, refer to "Setting mode" in this section.

NOTE:

If you add only a small amount of fuel when you select "Reset after refuel", the average fuel consumption value may not be reset.

Driving range

If you selected driving range the last time you drove the vehicle, the display indicates "---" for a few seconds and then indicates the current driving range when the ignition switch is turned "ON".

The driving range shown in the display is the approximate distance you can drive until the fuel gauge indicates "E", based on current driving conditions.

When the low fuel warning light comes on, the display "---" will appear.

If the low fuel warning light comes on, fill the fuel tank immediately regardless of the value of driving range shown in the display.

When you refuel, the driving range is updated. However, if you only add a small amount of fuel, the correct value will not be displayed.

NOTE:

- If you refuel when the ignition switch is "ON", the driving range may not indicate the correct value.
- When you reconnect the terminals to the lead-acid battery, the value of driving range will be shown after driving for a period of time.

Average speed

If you selected average speed the last time you drove the vehicle, the display indicates the last value of average speed from previous driving when the ignition switch is turned "ON". Unless you reset the value of average speed, the display indicates the value of average speed which includes average speed during previous driving.

To reset the value of average speed, push and hold the indicator selector knob (3) for a while when the display indicates an average speed. The display shows "---" and then indicates a new average speed after driving for a short time.

NOTE:

When you reconnect the terminals to the lead-acid battery, the value of average speed will be shown after driving for a period of time.

Driving time

The display shows the total amount of driving time since the indication was reset.

 To reset the driving time, push and hold the indicator selector knob (3) for a while when the display shows the driving time.

NOTE:

- When you reset the indication or reconnect the terminals to the lead-acid battery, the driving time will be shown after driving for a while.
- The indicated maximum value of driving time is 99:59:59. No more than the maximum value will be indicated on the display until you reset the driving time.

Gearshift indicator

The display (D) shows the gearshift indicator.

Refer to "Gearshift indicator" in "OPERAT-ING YOUR VEHICLE" section.

Trip meter (Type 1)

The display (E) shows the trip meter.

The trip meter can be used to measure the distance traveled on short trips or between fuel stops.

You can use trip meter A or trip meter B independently.

To reset the trip meter, push and hold the trip meter selector knob (2) until the display shows 0.0.

NOTE:

The indicated maximum value of the trip meter is 9999.9. When you run past the maximum value, the indicated value will return to 0.0.

Odometer (Type 1)

The display (F) shows the odometer.

The odometer records the total distance the vehicle has been driven.


NOTICE

Keep track of your odometer reading and check the maintenance schedule regularly for required services. Increased wear or damage to certain parts can result from failure to perform required services at the proper mileage intervals.

Trip meter / Odometer (Type 2)

The display (F) shows one of the following indications; odometer, trip meter A or trip meter B.

To switch the display indication (F), push the trip meter selector knob (2).

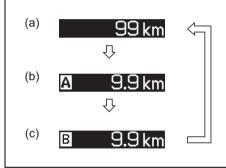

80SM02040

☆₽	Push	the	trip	meter	selector
	knob (2).				

(a) Odometer

- (b) Trip meter A
- (c) Trip meter B

WARNING

If you attempt to adjust the display while driving, you could lose control of the vehicle.

Do not attempt to adjust the display while driving.

Trip meter

The trip meter can be used to measure the distance traveled on short trips or between fuel stops.

You can use trip meter A or trip meter B independently.

To reset the trip meter, push and hold the trip meter selector knob (2) until the display shows 0.0.

NOTE:

The indicated maximum value of the trip meter is 9999.9. When you run past the maximum value, the indicated value will return to 0.0.

Odometer

The odometer records the total distance the vehicle has been driven.

NOTICE

Keep track of your odometer reading and check the maintenance schedule regularly for required services. Increased wear or damage to certain parts can result from failure to perform required services at the proper mileage intervals.

Rear passenger's seat belt reminder (if equipped) (Type 2)


Refer to "Seat belts and child restraint systems" in the "FOR SAFE DRIVING" section for details.

BEFORE DRIVING

Setting mode

When the ignition switch is "ON" and the vehicle is stationary, you can enter the setting mode of the information display by pushing and holding the indicator selector knob (3) for a while.

- To select the setting that you want to change, turn the indicator selector knob (3) left or right.
- To change the setting, push the indicator selector knob (3).
- To exit the setting mode, select "Back" and push the indicator selector knob (3).

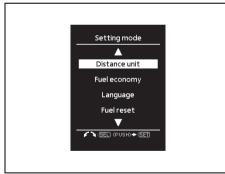

78RB02096

NOTE:

The currently selected setting item is surrounded by a frame.

NOTE:

- If you push and hold the indicator selector knob (3) to enter the setting mode when the display (C) shows average fuel consumption or average speed, driving time, the value will be reset simultaneously. If you do not want to reset the value, push the indicator selector knob quickly to switch the indication of the display.
- If you turn the ignition switch or start to move the vehicle when the display is in the setting mode, the setting mode will be canceled automatically.

Distance unit

(Odometer / trip meter / driving range / average speed distance unit setting)

You can change the units in which odometer / trip meter / driving range / average speed distance is displayed.

Fuel economy

(Fuel consumption unit setting)

You can change the units that fuel consumption is displayed in.

Language

You can change the language of the information display.

Fuel reset

(Average fuel consumption reset setting) You can change when the value of average fuel consumption is reset.

Temperature (Temperature unit setting)

You can change the units that temperature is displayed in.

 To change the temperature unit, select "Temperature" in "Setting mode". Then, select "°C" or "°F".

NOTE:

When you change the units that temperature is displayed in, the automatic heating and air conditioning system temperature display units will be changed automatically.

Clock setting

(Adjusting the clock)

- Adjust the clock by selecting "Clock setting" in "Setting mode". Then, select "Adjust clock".
- To change the hour indication, turn the indicator selector knob (3) left or right repeatedly when the hour indication appears as reversed color. To change the hour indication quickly, turn and hold indicator selector knob (3). To set the hour indication, push the indicator selector knob (3) and the minute indication appears as reversed color.
- To change the minute indication, turn the indicator selector knob (3) left or right repeatedly when the minute indication appears as reversed color. To change the minute indication quickly, turn and hold indicator selector knob (3). To set the minute indication, push the indicator selector knob (3).

(Selecting 12H/24H format)

• Switch the time indication between 12hour and 24-hour format by selecting "Clock setting" in "Setting mode". Then, select "12H" or "24H".

Door lock

(Door unlock setting)

You can choose either once or twice operation(s) to unlock all doors (including the tailgate) by turning the key or operating the keyless entry system transmitter.

You can also turn off or on the buzzer sound when the door(s) is (are) locked or unlocked.

Lights

(Lane change setting)

The turn signal and its indicator can be set whether they flash three times even if you return the turn signal control lever shortly after operating it.

- To change the lane change setting, select "Lane change" in "Setting mode". Then, select "ON" or "OFF"
- If you want to change the number of flashing, consult a SUZUKI dealer.

Guide me light setting (Light setting) (if equipped)

You can change the lighting time of "To car" function or "To home" function.

Oil change

(Oil life monitoring system reset setting) (if equipped)

The oil life monitoring system must be reset after changing the engine oil and oil filter. To reset the system, push and hold the indicator selector knob (3) for a while.

TPMS

(Tyre pressure monitoring system setting) (if equipped)

- You can check the current tyre pressure on the information display.
- You can set one of the initial values of tyre pressure below that are indicated on the tyre information label.
 - Comfort Mode
 - Load Mode

Refer to "Tyre pressure monitoring system (TPMS)" in the "OPERATING YOUR VEHI-CLE" section for details.

Traffic sign recognition (Traffic sign recognition setting)

(if equipped)

If you select "ON" the traffic sign recognition function can be activated.

Refer to "Traffic sign recognition" in the "OPERATING YOUR VEHICLE" section for details.

Default (Initialization setting)

If you select "YES" and push the indicator selector knob (3), all settings will be reinitialized.

Warning and indicator messages

The display shows warning and indicator messages to let you know about certain vehicle problems.

In some cases, the internal buzzer may also sound at the same time to alert you.

If warning and indicator messages appear on the display, follow the messages.

Master warning indicator light



80P0382

When the display shows warning and indicator messages, the master warning indicator light may also blink.

NOTE:

- When the problem that causes a message to appear is corrected, the message will disappear.
- If a message is displayed, and other problems requiring a message occur, the message for each of the problems will be alternately displayed about every 5 seconds.

 When you push and hold the indicator selector knob (3) for several seconds while a message is displayed, the message will disappear temporarily. If the problem that caused the message is not corrected, the message will appear again after several seconds.

Warning and indicator messages

All models

Warning and indicator message			Cause and remedy		
	Blinks (only while vehicle is in motion)	Beep (one time from interior buzzer; only while vehicle is in motion)	A door or tailgate is not properly closed. Stop the vehicle in a safe place and close the door or tailgate properly. (#1)		
78RB02043					
RELEASE PARKING BRAKE 78RB02044	Blinks	Continuous beep (from inte- rior buzzer)	The parking brake is not released. Stop the vehicle in a safe place and release the parking brake.		
<u>ک</u> 0 05 LIGHTS ON 78RB02045		Continuous beep (from inte- rior buzzer)	The headlights and/or the position lights are left on. Turn them off.		

(#1) This message will disappear after a while even if the problem that caused the message to appear is not corrected.

BEFORE DRIVING

	indicator light	Sound	Cause and remedy		
	Off	Beep (one time from interior buzzer)	Fuel level is low. Refill it as soon as possible. (#1)		
LOW FUEL					
78RB02046					
ICE POSSIBLE DRIVE WITH CARE 78RB02047	Off	Off	The road may be icy. Drive very carefully. (#1)		
CHANGE ENGINE OIL 78RB02048	Off	Off	Change the engine oil and oil filter as soon as possible. The oil life monitoring system must be reset after changing the engine oil and oil filter. Refer to "Oil change reminder light (if equipped)" in this section.		

(#1) This message will disappear after a while even if the problem that caused the message to appear is not corrected.

Vehicle with ESP[®] system

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
ESP SERVICE ESP SYSTEM 78RB02053		Beep (one time from interior buzzer)	There may be a problem with ESP [®] system. Have your vehicle inspected by a SUZUKI dealer.
Hill hold control system / Hill descent control system		Beep (one time from interior buzzer)	There may be a problem with hill hold control system or hill descent control system. Have your vehicle inspected by a SUZUKI dealer.
Hill hold control system ESP HILL HOLD DISABLE	Blinks	Beep (one time from interior buzzer)	When the transfer lever is in "4L" position and $ESP^{\$}$ OFF switch is pushed and turned off the $ESP^{\$}$ systems, the hill hold control system is deactivated and this message appears. This is not a malfunction and check that the hill hold control system is deactivated.
78RB02054			

Warning and indicator lights

NOTE:

- If warning and indicator lights blink or come on, the corresponding messages may be shown on the information display.
- If your vehicle is equipped with the "Emergency road assistance - global navigation satellite system (ERA-GLON-ASS)", the information display also indicates warning and indicator message related to the system. For information on this message, refer to "Emergency Road Assistance - Global Navigation Satellite System (ERA-GLONASS)" in "For Russia and other countries adopting ERA-GLONASS" in the "SUPPLEMENT" section.

Low tyre pressure warning light (if equipped)



As an added fuel efficiency feature, your vehicle is equipped with a tyre pressure monitoring system (TPMS) that uses a low tyre pressure warning light to inform you

when one or more of your tyres is significantly under-inflated.

When the ignition switch is turned "ON", this light comes on briefly so you can check that the light is working.

When the low tyre pressure warning light is lit. one or more of your tyres is significantly under-inflated. You should stop and check your tyres as soon as possible, and inflate them to the proper pressure as indicated on the vehicle's tyre information placard. Driving on a significantly under-inflated tyre causes the tyre to overheat and can lead to tyre failure. Under-inflation also reduces fuel efficiency and tyre tread life, and may affect the vehicle's handling and stopping ability. Each tyre, including the spare, should be checked at least once a month when cold and set to the recommended inflation pressure as specified in the vehicle placard.

The low tyre pressure warning light is also used to inform you of a TPMS malfunction. When the system detects a malfunction, this light will blink for about 75 seconds and then remain continuously illuminated. This sequence will be repeated after the ignition switch is turned "ON" as long as the malfunction exists.

NOTE:

The low tyre pressure warning light may not come on immediately if you have a sudden loss of air pressure.

WARNING

Failure to take corrective action when the low tyre pressure warning light is not working or when it comes on and blinks while driving can lead to an accident.

If the low tyre pressure warning light does not come on for 2 seconds after the ignition switch is turned "ON", the light or comes on and blinks while driving, have your vehicle inspected by a SUZUKI dealer. Even if the light turns off after blinking, indicating that the monitoring system has recovered, you should still have the system checked by a SUZUKI dealer.

WARNING

The load-carrying capacity of your tyres is reduced at lower inflation pressures. If your tyres are even moderately under-inflated, the load on the tyres may exceed the load-carrying capacity of the tyres, which could lead to tyre failure. The low tyre pressure warning light will not alert you to this condition, because it only comes on when one or more of your tyres becomes significantly underinflated.

Check and adjust your tyre pressure at least once a month. Refer to "Tyres" in "INSPECTION AND MAIN-TENANCE" section.

WARNING

Continuing to drive with the low tyre pressure warning light on can lead to an accident, resulting in severe injury or death.

If the low tyre pressure warning light comes on and stays on, reduce your speed and avoid abrupt steering and braking. Be aware that driving on a significantly under-inflated tyre can cause the tyre to overheat and can lead to tyre failure, and may affect steering control and brake effectiveness. Stop the vehicle in a safe place as soon as possible and check your tyres.

- If you have a flat tyre, replace it with the spare tyre (if equipped). Refer to "Jacking instructions" in "EMERGENCY SERVICE" section for the tyre replacement method. Also refer to "Replacing tyres and/ or wheels" for instructions on how to restore normal operation of the TPMS after you have had a flat tyre.
- If one or more of your tyres is under-inflated, adjust the inflation pressure of all tyres to the recommended inflation pressure as soon as possible.

Refer to "Tyre pressure monitoring system (TPMS)" in "OPERATING YOUR VEHI-CLE" section for additional details on the tyre pressure monitoring system. Refer to "Tyres" in "INSPECTION AND MAINTE-NANCE" section for information on maintaining proper tyre pressure.

Brake system warning light



Three different types of operations exist depending on the vehicle's specification.

- The light comes on briefly when the ignition switch is turned "ON".
- The light comes on when the parking brake is engaged with the ignition switch "ON".
- The light comes on under either or both of above two conditions.

The light also comes on when the fluid in the brake fluid reservoir falls below the specified level.

The light should go out after starting the engine and fully releasing the parking brake, if the fluid level in the brake fluid reservoir is adequate.

The light also comes on together with the ABS warning light when the rear brake force control function (proportioning valve function) of the ABS system fails.

If the brake system warning light comes on while you are driving the vehicle, it may mean that there is something wrong with the vehicle's brake system. If this happens:

1) Pull off the road and stop carefully.

Remember that stopping distance may be longer, you may have to push harder on the pedal, and the pedal may go down farther than normal.

- Test the brakes by carefully starting and stopping the vehicle on the shoulder of the road.
- If you determine that it is safe, drive the vehicle cautiously at low speed to the nearest a SUZUKI dealer for repairs or tow the vehicle to the nearest a SUZUKI dealer for repairs.

WARNING

If any of the following conditions occur, you should immediately ask a SUZUKI dealer to inspect the brake system.

- If the brake system warning light does not go out after the engine has been started and the parking brake has been fully released.
- If the brake system warning light does not come on when the ignition switch is turned "ON".
- If the brake system warning light comes on at any time during vehicle operation.

NOTE:

Because the brake system is self-adjusting, the fluid level will drop as the brake pads become worn. Replenishing the brake fluid reservoir is considered normal periodic maintenance.

NOTE:

Parking brake reminder buzzer

A buzzer sounds intermittently to remind you to release the parking brake if you start the vehicle without releasing the parking brake. Check that the parking brake is fully released and the brake system warning light turns off.

BEFORE DRIVING

Anti-lock brake system (ABS) warning light



65D529

When the ignition switch is turned "ON", this light comes on briefly so you can check that the light is working.

If the light stays on or comes on when driving, there may be something wrong with the ABS.

If this happens:

- 1) Pull off the road and stop carefully.
- Turn the ignition switch to "LOCK" and then start the engine again.

If the warning light comes on briefly and then turns off, the system is normal. If the warning light still stays on, something is wrong with the system.

If the light and the brake system warning light stay on or come on simultaneously when driving, your ABS system is equipped with the rear brake force control function (proportioning valve function) and there may be something wrong with both the rear brake force control function and the anti-lock function of the ABS system. If one of the above occurs, have the system inspected by a SUZUKI dealer.

If the ABS becomes inoperative, the brake system will function as an ordinary brake system that does not have this ABS system.

For details of ABS system, refer to "Antilock brake system (ABS)" in "OPERATING YOUR VEHICLE" section.

ESP[®] warning light



52KM133

 $\mathsf{ESP}^{\texttt{®}}$ is a registered trademark of Daimler AG.

This light blinks 5 times per second when one of the following systems is activated.

- Stability control system
- Traction control system
- · Hill descent control system

If this light blinks, drive carefully.

When the ignition switch is turned "ON", the light comes on briefly so you can check that the light is working. If the light stays on or comes on when driving, there may be something wrong with the ESP[®] systems (other than ABS). You should have the system inspected by a SUZUKI dealer.

For details of the ESP[®] systems, refer to "Electronic stability program (ESP[®])" in "OPERATING YOUR VEHICLE" section.

WARNING

The ESP[®] systems cannot prevent accidents. Always drive carefully.

ESP[®] OFF indicator light



57L30045

When the ignition switch is turned "ON", this light comes on briefly so you can check that the light is working.

When the ESP[®] QFF switch is pushed to turn off the ESP[®] systems (other than ABS), the ESP[®] OFF indicator light comes on and stays on.

For details of the ESP® systems, refer to "Electronic stability program (ESP[®])" in "OPERATING YOUR VEHICLE" section.

NOTE:

- · If the vehicle speed is greater than approximately 30 km/h (19 mph), the ESP[®] systems (other than ABS) will be activated automatically and the light will ao out.
- When the transfer lever is in "4L" (4wheel drive low range) position. the ESP[®] system (other than ABS) will be canceled automatically. The light will come on and stav on.

Hill hold control OFF indicator light

Hill descent control indicator light



79K050

When the ignition switch is turned "ON", this light comes on briefly so you can check that the light is working. When you push the hill descent control switch and the hill descent control operating conditions are fulfilled, the hill descent control indicator comes on. If the hill descent control indicator blinks, the hill descent control will not be activated.

For details of the hill descent control system, refer to "Hill descent control system" in the "OPERATING YOUR VEHICLE" section.

78RB02086

When the ignition switch is turned "ON",

this light comes on briefly so you can

This light comes on when the hill hold con-

For details of the hill hold control system,

refer to "Hill hold control system" in the

"OPERATING YOUR VEHICLE" section.

check that the light is working.

trol system is deactivated.

Oil pressure light



50G051


When the ignition switch is turned "ON", this light comes on. When the engine is started, the light goes out. The light will come on and remain on if there is insufficient oil pressure. If the light comes on when driving, pull off the road as soon as you can and stop the engine.

Check the oil level and add oil if necessary. If there is enough oil, the lubrication system should be inspected by a SUZUKI dealer before you drive the vehicle again.

NOTICE

- If you operate the engine with this light on, severe engine damage can result.
- Do not rely on the oil pressure light to indicate the need to add oil. Periodically check the engine oil level.

Charging light

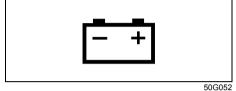

When the ignition switch is turned "ON", this light comes on. When the engine is started, the light goes out. The light will come on and remain on if there is something wrong with the battery charging system. If the light comes on when the engine is running, the charging system should be inspected immediately by a SUZUKI dealer. Driver's seat belt reminder light / Front passenger's seat belt reminder light (if equipped)



60G049

When the driver or front passenger does not buckle his or her seat belt, this light will come on and/or blink.

For details of the seat belt reminder, refer to "Seat belts and child restraint systems" in this section.

Rear passenger's seat belt reminder light (if equipped)



78RB02087

When the rear passenger does not buckle his or her seat belt, this light will come on and/or blink. For details of the seat belt reminder, refer to "Seat belts and child restraint systems" in this section.



AIRBAG light

63J030


When the ignition switch is turned "ON", this light comes on for several seconds so you can check that the light is working.

The light will come on and stay on if there is a problem in the airbag system or the seat belt pretensioner system.

WARNING

If AIRBAG light does not blink or come on briefly when the ignition switch is turned "ON", stays on for more than 10 seconds, or comes on while driving, the airbag system or the seat belt pretensioner system may not work properly, which could result in serious injury in the event of a collision. Have both systems inspected by a SUZUKI dealer.

Malfunction indicator light

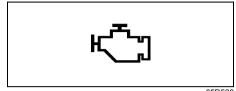

65D530

Your vehicle has a computer-controlled emission control system. A malfunction indicator light is provided on the instrument cluster to indicate when it is necessary to have the emission control system serviced. When the ignition switch is turned "ON", this light comes on. When the engine is started, the light goes out.

If the malfunction indicator light comes on or blinks when the engine is running, there is a damage in the emission control system.

Bring the vehicle to a SUZUKI dealer to have the damage fixed.

Also, if this light comes on when the engine is running, there is a problem with the automatic transmission system. Ask a SUZUKI dealer to have the system inspected.

If this light blinks, stop your vehicle immediately in a safe place to avoid catalyst's melting problem since there may be a misfire in the engine.

- Do not drive or stop over such as withered grasses.
- Drive slowly if required to move the vehicle.

NOTICE

Continuing to drive the vehicle when the malfunction indicator light is on or blinking can cause permanent damage to the vehicle's emission control system, and can affect fuel economy and driveability. Transmission warning light (if equipped)



80J219

When the ignition switch is turned "ON", this light comes on for several seconds so you can check that the light is working. If this light comes on when the engine is running, there is a problem with the automatic transmission system. Ask a SUZUKI dealer to have the system inspected. Immobilizer system warning light



80JM122

When the ignition switch is turned "ON", this light comes on briefly so you can check that the light is working. If this light blinks or stays on, there is a problem with the system. If this happens, turning the steering wheel to the right or left. If this light still blinks or stays on even if you start the engine with normal voltage of the vehicle battery, ask a SUZUKI dealer to have the system inspected.

Open door warning light




54G391

This light remains on until all doors (including the tailgate) are completely closed.

If any door (including the tailgate) is open when the vehicle is moving, a ding sounds to remind you to close all doors completely.

Low fuel warning light

54G343

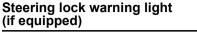



63R30550

If this light stays on, there is a problem with the system or the steering lock cannot be released. If this happens, turn to the ignition switch to "ON" position, turning the steering wheel to the right or left. If this light still stays on, ask a SUZUKI dealer to have the system inspected.

If this light comes on, refuel the fuel tank as soon as possible. When this light comes on, a ding sounds once to remind you to refuel. If you do not refuel, a ding sounds every time when the ignition switch is turned "ON".

NOTE:

The activation point of this light varies depending on road conditions (for example, slope or curve) and driving conditions because of fuel movement in the tank.

Engine coolant temperature light



54G344

When the ignition switch is turned "ON", this light comes on briefly so you can check that the light is working.

This indicator has the following two functions.

Low engine coolant temperature light (blue color)

This light stays on while the engine is still cold and goes off when the engine has warmed up.

If this light blinks, there is a problem with the system. Have your vehicle inspected by a SUZUKI dealer.

High engine coolant temperature warning light (red color)

If this light blinks while driving, it means the engine is running hot. Avoid driving conditions that may lead to actual overheating. If the light stays on without blinking, then the engine is overheating. Follow the instructions in "Engine trouble: Overheating" of "EMERGENCY SERVICE" section.

NOTICE

Continuing to drive the vehicle when engine overheating is indicated can result in severe engine damage.

Dual sensor brake support indicator light (if equipped)



54P000255

When the ignition switch is turned "ON", this light comes on briefly so you can check that the light is working.

When the automatic brake system is activated, this light blinks rapidly.

In the following situations, this light will come on and the dual sensor brake support will stop functioning when the ignition switch is "ON".

When the dual sensor is faulty, the function of the dual sensor stops until the ignition switch is turned to LOCK position. Find a safe place to park and turn the ignition switch to "LOCK" position. Restart the engine, and check that the dual sensor brake support indicator light, lane departure warning indicator light and high beam assist warning light go off.

BEFORE DRIVING

 If the dual sensor brake support indicator light, lane departure warning indicator light and high beam assist warning light stay on after restarting the engine, there may be a failure of the dual sensor. Ask a SUZUKI dealer to have the dual sensor inspected.

Under the following situations, the function of the dual sensor stops temporarily. When the situations are improved, the temporary stop of the function will be canceled.

- When the visibility of the dual sensor is poor.
- When the temperature of the body of dual sensor is high.
- When the systems related to the dual sensor brake support stop temporarily.
- When the battery has a voltage abnormality.

For details, refer to "Dual sensor brake support (if equipped)" in "OPERATING YOUR VEHICLE" section. Dual sensor brake support OFF indicator light (if equipped)



54P000254

When the ignition switch is turned "ON", this light comes on briefly so you can check that the light is working.

In the following situations, this light will come on and the dual sensor brake support will stop functioning when the ignition switch is "ON".

- When the dual sensor brake support OFF switch is pushed and held to turn off the dual sensor brake support.
- When the ESP[®] OFF switch is pushed to turn off the ESP[®] systems (other than ABS), the ESP[®] OFF indicator light will also come on.

For details, refer to "Dual sensor brake support (if equipped)" in "OPERATING YOUR VEHICLE" section.

Lane departure warning indicator light (if equipped)



81M31080

When the ignition switch is turned "ON", this light comes on briefly so you can check that the light is working.

When the lane departure warning is activated, this light blinks.

When the dual sensor is faulty, the function of the dual sensor stops until the ignition switch is turned to LOCK position. Find a safe place to park and turn the ignition switch to "LOCK" position. Restart the engine, and check that the dual sensor brake support indicator light, lane departure warning indicator light and high beam assist warning light go off.

 If the dual sensor brake support indicator light, lane departure warning indicator light and high beam assist warning light stay on after restarting the engine, there may be a failure of the dual sensor. Ask a SUZUKI dealer to have the dual sensor inspected. Under the following situations, the function of the dual sensor stops temporarily. When the situations are improved, the temporary stop of the function will be canceled.

- When the visibility of the dual sensor is poor.
- When the temperature of the body of dual sensor is high.
- When the systems related to the dual sensor brake support stops temporarily.
- When the battery has a voltage abnormality.

For details, refer to "Dual sensor brake support (if equipped)" in the "OPERATING YOUR VEHICLE" section. Lane departure warning OFF indicator light (if equipped)



62R0317


When the ignition switch is turned "ON", this light comes on briefly so you can check that the light is working.

In the following situations, this light will come on and the lane departure warning and the vehicle swaying warning will stop functioning when the ignition switch is turned "ON".

- When the lane departure warning OFF switch is pushed to turn off the lane departure warning.
- When the ESP[®] ŎFF switch is pushed to turn off the ESP[®] systems (other than ABS), the ESP[®] OFF indicator light will also come on.

For details, refer to "Dual sensor brake support (if equipped)" in "OPERATING YOUR VEHICLE" section.

Automatic headlight leveling system warning light (if equipped)

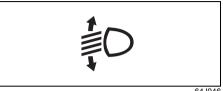

64J046

When the ignition switch is turned "ON", this light comes on briefly so you can check that the light is working.

If this light comes on, there is a problem with the automatic headlight leveling system. Bring the vehicle to a SUZUKI dealer to have the problem corrected. LED headlight warning light (if equipped)



54P000234

When the ignition switch is turned "ON", this light comes on briefly so you can check that the light is working.

If this light comes on, there is a problem with the LED headlight. Park the vehicle in a safe place and consult a SUZUKI dealer to have the problem corrected. High beam assist warning light (orange) (if equipped)



52RM20690

When the ignition switch is turned "ON", this light comes on by orange briefly so you can check that the light is working.

For details, refer to "Dual sensor brake support (if equipped)" in "OPERATING YOUR VEHICLE" section.

In the following situations, this light will come on by orange and the dual sensor brake support will stop functioning when the ignition switch is "ON".

When the dual sensor is faulty, the function of the dual sensor stops until the ignition switch is turned to LOCK position. Find a safe place to park and turn the ignition switch to "LOCK" position. Restart the engine, and check that the dual sensor brake support indicator light, lane departure warning indicator light and high beam assist warning light go off. If the dual sensor brake support indicator light, lane departure warning indicator light and high beam assist warning light stay on after restarting the engine, there may be a failure of the dual sensor. Ask a SUZUKI dealer to have the dual sensor inspected.

Under the following situations, the function of the dual sensor stops temporarily. When the situations are improved, the temporary stop of the function will be canceled.

- When the visibility of the dual sensor is poor.
- When the temperature of the body of dual sensor is high.
- When the systems related to the dual sensor brake support stops temporarily.
- When the battery has a voltage abnormality.

NOTE:


If the function of the dual sensor stops temporarily, high beam assist also stops temporarily. High beam assist indicator light (green) (if equipped)



52RM20690

When the high beam assist is working, this light comes on by green.

For details, refer to "Dual sensor brake support (if equipped)" in "OPERATING YOUR VEHICLE" section.

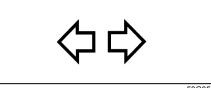

Turn signal indicators

50G055

When you turn on the left or right turn signals, the corresponding green arrow on the instrument cluster will flash along with the respective turn signal lights. When you turn on the hazard warning switch, both arrows will flash along with all of the turn signal lights.


Main beam (high beam) indicator light



50G056

This indicator comes on when headlight main beams (high beams) are turned on.

Illumination indicator light

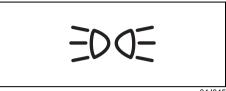

64J045

This indicator light comes on while the position lights, tail light and/or the head-lights are on.

Front fog light indicator light (if equipped)



68PM00268

The front fog light indicator light comes on when the front fog light operates.

Rear fog light indicator light (if equipped)



The rear fog light indicator light comes on when the rear fog light operates.

Oil change reminder light (if equipped)



Your vehicle has the oil life monitoring system and related oil change reminder light that alerts you to change the engine oil and oil filter

When this light comes on, change engine oil and oil filter immediately.

For details on how to change the engine oil and oil filter, refer to "Changing engine oil and filter" in "INSPECTION AND MAINTE-NANCF" section.

This light comes on for several seconds when the ignition switch is turned "ON" so you can check that light is working.

If either of odometer reading or time is reached to the value which is set by the system, this light comes on when the ignition switch is in "ON" position. In addition. the message is shown on the information display to tell you it is necessary to change the engine oil and oil filter. When the engine oil and oil filter are changed and the oil life monitoring system is reset, this light will go out. For details of the maintenance schedule, refer to "Periodic maintenance schedule" in "INSPECTION AND MAINTE-NANCF" section.

Whenever the engine oil and oil filter are changed, the light must be reset to monitor the next oil change timing properly. The light will go out after the reset. For the resetting procedure, refer to "Information display" in this section.

NOTICE

Severe engine damage will result, if you keep operating the engine after this light comes on.

Change the engine oil and oil filter immediately when the light blinks.

NOTE

- This light is used to facilitate the oil and oil filter change according to the maintenance schedule.
- Even though the oil is replaced before this light comes on, reset of the oil life monitoring system is necessary. Consult a SUZUKI dealer about the reset method. If you reset it by yourself, refer to "Setting mode" in this section.
- Consult a SUZUKI dealer for changing the setting of oil life monitoring system in one of the following cases:
 - If you replace ACEA Standards or SUZUKI aenuine engine oil by the engine oil other than ACEA Standards or SUZUKI genuine engine oil, or vice versa
 - By the change of your driving condition, if you need to apply the schedule of "Maintenance recommended under severe driving conditions" instead of "Periodic maintenance schedule" in "INSPECTION AND MAINTENANCE" section. or vice versa

Master warning indicator light (if equipped)



68PM00278

When the ignition switch is turned "ON", this light comes on briefly so you can check that the light is working.

When the information display shows warning and indicator messages, this indicator light may also blink.

For details, refer to "Information display" in this section.

юл Мон

4WD indicator light

78RB02078

This indicator light comes on when the transfer gear and the air locking hubs are switched to 4-wheel drive condition ("4H" or "4L").

When the ignition switch is turned "ON", this 4WD indicator light will come on for a while and then this light will turned on or off according to the drive condition.

If 4WD indicator light continues to blink, there may be a malfunction of the system. If so, have the system inspected by your SUZUKI dealer.

When you shift the transfer lever from "2H" position to "4H" position at a speed of 100 km/h (60 mph) or more, this indicator light blinks.

When you shift transfer lever again while changing the drive condition, this indicator blinks.

NOTE:

When the drive condition is 4-wheel drive condition and the engine is not running with the ignition switch turned "ON", this 4WD indicator light will come on for a while and then blink. In this situation, when you start the engine and this indicator light comes on, the system does not indicate a malfunction.

Cruise indicator light (if equipped)



81P40090


When the cruise control system is activated, this light comes on.

"SET" indicator light (if equipped)



65D474


When a cruising speed of the cruise control is set, this light comes on. Theft deterrent light (if equipped) / Theft deterrent alarm system (if equipped)

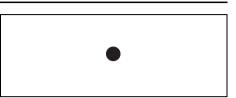

82K269

For details about the theft deterrent light system (if equipped) or the theft deterrent alarm system (if equipped), refer to "Theft deterrent light (if equipped)" or "Theft deterrent alarm system" in this section.

Lighting control lever

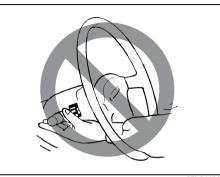


57L21128


WARNING

To avoid possible injury, do not operate controls by reaching through the steering wheel.

Automatic light operation (if equipped)

Your vehicle's lighting system is controlled by two main systems: the lighting switch and the auto-on headlight system (when the lighting switch is in "AUTO" position). The two systems work together to operate your lights as shown in the following chart:

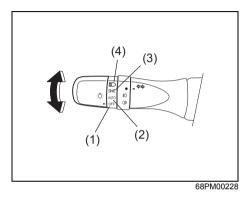

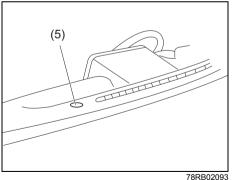

ON: Lights ON LIGHT: When it is light around the light sensor (5). DARK: When it is dark around the light sensor (5).

Lighting switch posi- tion	Main lights to be operated	"LOCK"	vitch in the or "ACC" ition	Ignition switch in the "ON" position	
lion		LIGHT	DARK	LIGHT	DARK
(1) OFF	Position lights, Tail lights	-	_	_	_
	Headlights	-	-	-	_
(2) AUTO	Position lights, Tail lights	-	-	-	ON
	Headlights	_	-	_	ON
(3) ∋00∈	Position lights, Tail lights	ON	ON	ON	ON
	Headlights	-	-	-	_
(4) ≣D	Position lights, Tail lights	ON	ON	ON	ON
	Headlights	ON	ON	ON	ON

To turn the lights on or off, twist the knob on the end of the lever. There are four positions:

OFF (1)

All lights are off.

AUTO (2)

This function works when the ignition switch is turned "ON". The headlights and position lights are turned on and off automatically according to the amount of outside light detected by the sensor. They go out automatically when you turn the ignition switch to "ACC" or "LOCK" position.

The light sensor (5) for sensing the amount of outside light is installed on the passenger's seat side instrument panel.

When headlights are turned on and the lighting control lever is in "AUTO" position, you can use the high beam assist (if equipped). For details, refer to "High beam assist" in "OPERATING YOUR VEHICLE" section.

If the light sensor area of the windshield is covered with mud, ice, or other similar substances, the headlights and position lights may be turned on even when it is still light outside.

NOTE:


- Avoid covering the light sensor area of the windshield with a sticker. The sticker may impair the performance of the sensor and make the system unable to control operation of the lights correctly.
- If you turned the ignition switch to "ON" position and "AUTO" position remains selected, the headlights and position lights come on automatically as it gets dark outside, even with the engine not running. Leaving the lights lit for a long time may lead to a completely discharged battery.

<u>-00∈ (3)</u>

Front position lights, tail lights, license plate lights and instrument lights are on, but headlights are off.

≣D **(4)**


Front position lights, tail lights, license plate lights, instrument lights and head-lights are on.

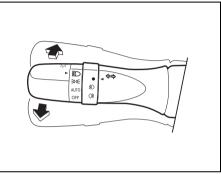

68PM00230

With the headlights on, push the lever forward to switch to the high beams (main beams) and pull the lever toward you to switch to the low beams. When the high beams (main beams) are on, a light on the instrument cluster will come on. To momentarily activate the high beams (main beams) as a passing signal, pull the lever slightly toward you and release it when you have completed the signal.

Auto-on headlight system

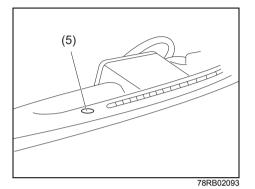

WARNING

It takes about 5 seconds for the light sensor to react to a change in lighting conditions. To help avoid an accident due to reduced visibility, turn on your headlights before driving into a tunnel, parking structure, etc.

NOTE:

The light sensor reacts even to infrared rays, so it may operate incorrectly when there are strong infrared rays.

Light reminder buzzer

The interior buzzer continuously beeps if you open the driver's door without turning off the headlights and position lights. This function is triggered under the following condition:

The headlights and/or position lights are on even after the ignition switch is turned off.

The buzzer stops sounding when you turn off the headlights and position lights.

NOTE:

A message is indicated on the information display in the instrument cluster while the buzzer is sounding.

Daytime running light (D.R.L.) system

When the engine is started, the daytime running lights are turned on by this system.

Conditions for D.R.L. system operation

- 1) The engine is running.
- 2) Headlights and front fog light (if equipped) are off.

NOTE:

Brightness of the daytime running lights is different from the brightness of the position lights, but it is not a malfunction.

The auto-on headlight system automatically turns on all lights that are operated by the lighting control lever on the steering column, when the following three conditions are all met.

Conditions for auto-on headlight system operation:

- 1) It is dark around the light sensor (5).
- The lighting control lever is in "ÀÚTO" position.
- The ignition switch is in the "ON" position.

This system is activated by a signal from the light sensor (5) on the passenger side of instrument panel. Do not cover the sensor (5). Otherwise, the system will not work correctly.

Guide me light (if equipped)

Guide me light has two functions of "To home" and "To car" for improving your visibility in the dark.

"To home" function

Even after you leave the car, the ground will be illuminated for a short while with this function. You can turn on the front position lights and the headlights in the low beam setting for about 10 seconds after the ignition switch is turned "LOCK".

To set the function:

- 1) Turn the lighting switch to "AUTO" position.
- 2) Turn the ignition switch to "LOCK" position.
- 3) Pull the lighting control lever toward you once and open the driver's side door within 60 seconds. Or pull the lighting control lever toward you once while the driver's side door is open.

To cancel the function:

Perform any of the following operations.

- If your vehicle is equipped with the keyless entry system (if equipped), it is necessary to insert the ignition key in the ignition switch.
- Pull the lighting control lever toward you once.
- Turn the ignition switch to "ACC" or "ON" position.
- Turn the lighting switch to any other position than "AUTO" position.

NOTE:

- When the "To home" is functioning, the front fog lights (if equipped), rear fog light and the headlights (high beam) are not turned on.
- Lighting time of the "To home" function can be changed on the information display. Refer to "Information display" in this section.

"To car" function

Before you get in the vehicle, the ground will be illuminated for a short while to easily lead the driver to the vehicle. If "UNLOCK" button of the keyless entry system transmitter (if equipped) is pressed while the lighting switch is positioned in "AUTO", the front position lights and the headlights in the low beam are turned on for 10 seconds.

This function will operate only when it is dark outside the vehicle.

To cancel the function:


Perform any of the following operations.

- If your vehicle is equipped with the keyless entry system (if equipped), it is necessary to insert the ignition key in the ignition switch.
- Lock the doors by using the keyless entry system transmitter, or the key in the driver's door lock.
- Turn the ignition switch to "ACC" or "ON" position.
- Turn the lighting switch to any other position than "AUTO" position.

NOTE:

- When the "To car" is functioning, the front fog lights (if equipped), rear fog light and the headlights (high beam) are not turned on.
- Lighting time of the "To car" function can be changed on the information display. Refer to "Information display" in this section.

Front fog light switch (if equipped)

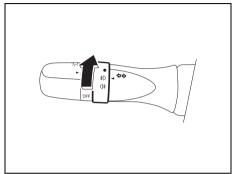


68PM00232

To turn the front fog light on, twist the knob as shown in the illustration with the position lights, tail lights and/or the headlights are on. When the front fog light is on, an indicator light on the instrument cluster will come on.

NOTE:


In some countries the lighting operation may be different from the above description according to local regulations.

Rear fog light switch (if equipped)

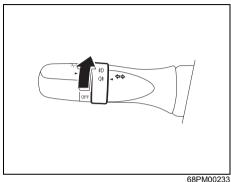


Adjusting headlight pattern

Headlight pattern, left hand traffic

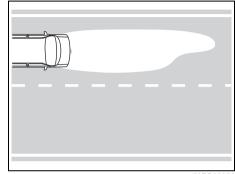



Headlight pattern, right hand traffic

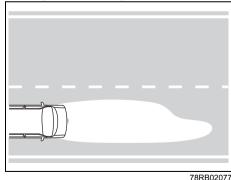

To turn the rear fog light on, twist the knob as shown in the illustration with the headlights on. When the rear fog light is on, an indicator light on the instrument cluster will come on.

If you twist the knob to the mark of rear fog light with the front fog light on, the rear fog light will turn on and an indicator light on the instrument cluster will come on.

BEFORE DRIVING

The headlight pattern must be adjusted to avoid dazzling oncoming motorists and can be set for right or left hand traffic.

LED headlights (if equipped)

You do not need to adjust the light pattern.

Halogen headlights (if equipped)


The light pattern may not be as good. You should readjust the light pattern by masking the headlight lens.

Left hand drive vehicle

To readjust the light pattern by masking the headlight lens:

- 1) Copy the A and B templates as shown in the illustrations.
- 2) Transfer the template to a self-adhesive waterproof material and cut it out.
- 3) Position the self-adhesive templates at the right distance from the center mark of the headlight lens.

Refer to the dimensions in the following list:

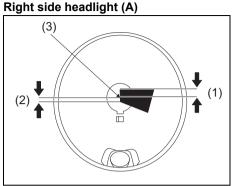


78RB02067

- (1) Vertical line: approximately 10.0 mm
- (2) Vertical line: approximately 5.0 mm

(3) Center mark

Left side headlight (B)

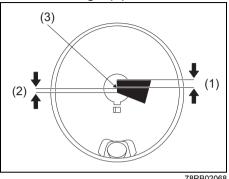

78RB02068

(1) Vertical line: approximately 10.0 mm

- (2) Vertical line: approximately 5.0 mm
- (3) Center mark


BEFORE DRIVING

Right hand drive vehicle


To readjust the light pattern by masking the headlight lens:

- 1) Copy the C and D templates as shown in the illustrations.
- 2) Transfer the template to a self-adhesive waterproof material and cut it out.
- 3) Position the self-adhesive templates at the left distance from the center mark of the headlight lens.

Refer to the dimensions in the following list:

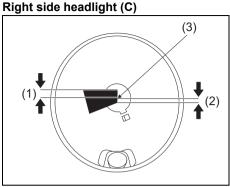

Left side headlight (D)

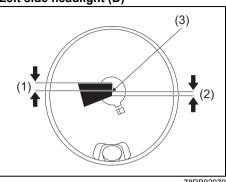

78RB02070


78RB02069

- (1) Vertical line: approximately 10.0 mm
- (2) Vertical line: approximately 5.0 mm
- (3) Center mark


(1) Vertical line: approximately 10.0 mm

- (2) Vertical line: approximately 5.0 mm
- (3) Center mark


Templates for halogen headlights

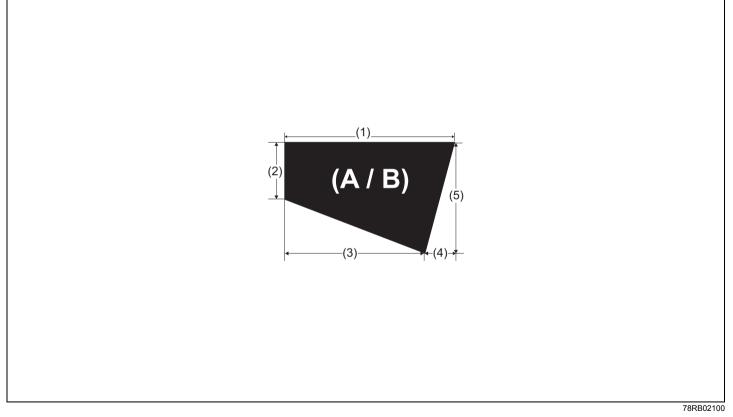

(1) 45 mm (1.8 in.) (2) 15mm (0.6 in.)

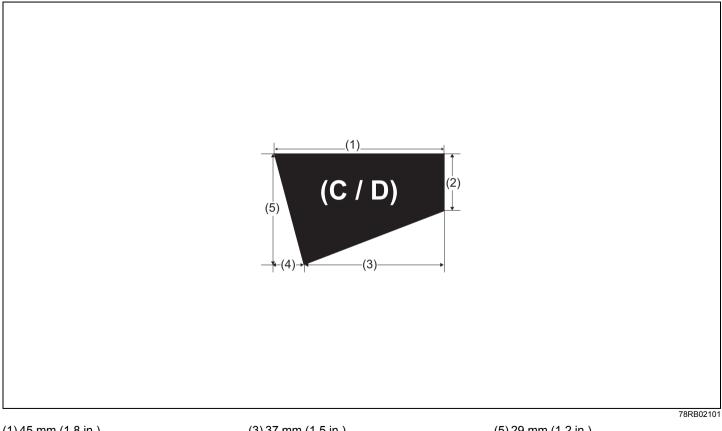

Headlight leveling switch (if equipped)

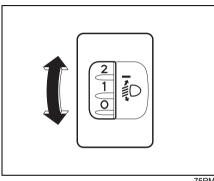


i of passenger vehicles		
Vehicle Load Condition	Switch Position	
Driver only	0	
Driver + 1 passenger (in front seat)	0.5	
Driver + 3 passengers, no cargo	2	
Driver + 3 passengers, cargo added	3	
Driver + full cargo	4.5	

For light commercial vehicles

For passonger vehicles

Vehicle Load Condition	Switch Position
Driver only	0
Driver + full cargo	3.5

Headlight washer switch (if equipped)

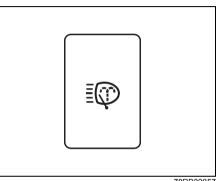

78RB02057


With the ignition switch in the "ON" position and the headlights are turned on, push the headlight washer switch to wash the headlight lenses. Washer fluid is sprayed for half a second. If necessary, push the switch again.

Under the same conditions, if you operate the windshield washer two or more times successively at short intervals, the headlight washers also operate automatically but only once at the same time as the first windshield washer operation.

75RM008

Level the headlight beam according to the load condition of your vehicle by turning this switch. The chart shows the appropriate switch position for different vehicle load conditions.

Turn signal control lever

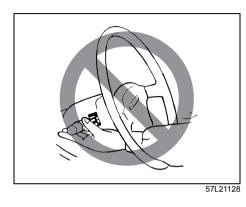


WARNING

To avoid possible injury, do not operate controls by reaching through the steering wheel.

Turn signal operation

With the ignition switch in "ON" position, move the lever upward or downward to activate the right or left turn signals.


Normal turn signal

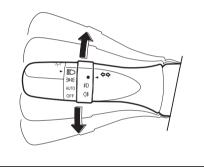

68PM00234

Move the lever all the way upward or downward to signal. When the turn is completed, the signal will cancel and the lever will return to its normal position.

Lane change signal

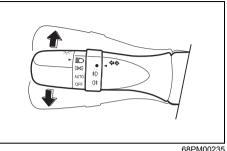

68PM00235

Move the lever partially upward or downward to turn right or left and hold the lever in the moved position.

- The turn signal and its indicator flash while the lever is held at the moved position.
- The turn signal and its indicator flash 3 times even if you returned the lever immediately after the activation.


NOTE:

The turn signal and its indicator can be set whether they flash 3 times after the turn signal lever is returned via the information display. Refer to "Information display" in this section.

NOTE

You can customize the setting for the number of flashing times of the turn signal and its indicator (1 to 4 times). Ask a SUZUKI dealer for the customization.


Hazard warning switch

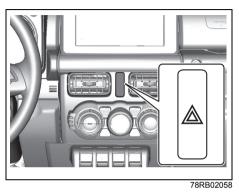

Push the hazard warning switch to activate the hazard warning lights. All turn signal lights and both turn signal indicators will flash simultaneously. To turn off the lights, push the switch again.

Use the hazard warning lights to warn other drivers of possible risk of traffic hazard when you park your vehicle in case of emergency.

Windshield wiper and washer lever

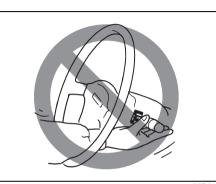

65D611

A WARNING

To avoid possible injury, do not operate controls by reaching through the steering wheel.

Wiper and washer operation

When the ignition switch is in "ON" position, you can use the wiper/washer lever.


When the wipers are under heavy load such as covered by snow, the breaker will be activated and the wipers will stop operating to protect the wiper motor from overheating.

If the wiper stops during operation, do the following methods.

- 1) Stop the vehicle in a safe place, and turn the engine off.
- 2) Move the wiper lever and switch to "OFF" position.
- 3) Remove obstacles such as snow on the wipers.
- 4) After a while, when the temperature of the wiper motor becomes low enough, the breaker will be reset automatically and the wipers will be able to use.

If you cannot use the wipers after a while, there may be another problem. Ask a SUZUKI dealer to have the wipers inspected.


Windshield wipers

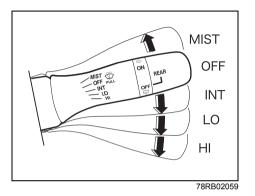

To turn the windshield wipers on, move the lever down to one of the three operating positions. In "INT" position, the wipers operate intermittently. The "INT" position is very convenient for driving in mist or light rain. In "LO" position, the wipers operate at a steady low speed. In "HI" position, the wipers operate at a steady high speed. To turn off the wipers, move the lever back to "OFF" position.

Move the lever up and hold it to "MIST" position, the windshield wipers will turn on continuously at low speed.

Windshield washer

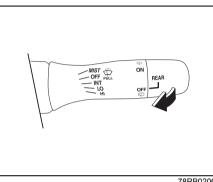

78RB02060

To spray windshield washer fluid, pull the lever toward you. The windshield wipers will automatically turn on at low speed if they are not already on and your vehicle is equipped with "INT" position.

WARNING


- To prevent windshield icing in cold weather, turn on the defroster to heat the windshield before and during windshield washer use.
- Do not use radiator antifreeze in the windshield washer reservoir. It can severely impair visibility when sprayed on the windshield, and can also damage your vehicle's paint.

NOTICE

To help prevent damage to the windshield wiper and washer system components, you should take the following precautions:

- Do not continue to hold in the lever when there is no windshield washer fluid being sprayed or the washer motor can be damaged.
- Do not attempt to remove dirt from a dry windshield with the wipers or you can damage the windshield and the wiper blades. Always wet the windshield with washer fluid before operating the wipers.
- Clear ice or packed snow from the wiper blades before using the wipers.
- Check the washer fluid level regularly. Check it often when the weather is bad.
- Fill a reservoir to 3/4 level with washer fluid for its expansion, if temperature falls low enough to freeze the fluid.

Rear window wiper/washer switch

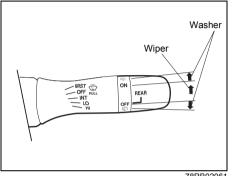

78RB02061


To turn the rear wiper on, twist the rear wiper switch on the end of the lever forward to "ON" position. To turn the rear wiper off, twist the switch rearward to "OFF" position.

With the rear wiper in "OFF" position, twist the switch rearward and hold it there to spray window washer fluid.

With the rear wiper in "ON" position, turn the switch forward and hold it there to spray window washer fluid. NOTICE

Clear ice or snow from the rear window and rear wiper blade before using the rear wiper. Accumulated ice or snow could prevent the wiper blade from moving, causing damage to the wiper motor.

Tilt steering lock lever

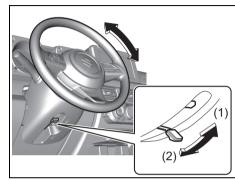



(1) LOCK (2) UNLOCK


The lock lever is located under the steering column. To adjust the steering wheel height:

- 1) Push down the lock lever to unlock the steering column.
- Adjust the steering wheel to the desired height and lock the steering column by pulling up the lock lever.
- 3) Try moving the steering wheel up and down to check that it is securely locked in position.


BEFORE DRIVING

A WARNING


Never attempt to adjust the steering wheel while the vehicle is moving or you could lose control of the vehicle. Heated rear window switch / heated outside rearview mirror switch (if equipped)

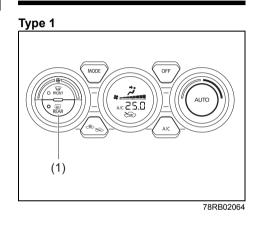

Horn

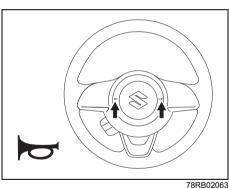


Press the horn button of the steering wheel to sound the horn. The horn will sound with the ignition switch in any position. Type 2

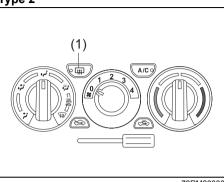

78RM20030

When the rear window is misted, push this switch (1) to clear the window.

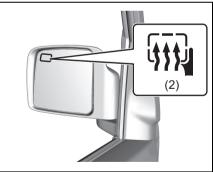

78RB02066

If the outside rearview mirror has the mark (2), it is also equipped with the heated outside rearview mirrors. When you push the switch (1), both the heated outside rearview mirrors and the heated rear window will operate simultaneously.

An indicator light will come on when the defogger is on. The defogger will work only when the engine is running. To turn off the defogger, push the switch (1) again.

NOTICE

The heated rear window and the heated outside rearview mirrors (if equipped) use a large amount of electricity. Turn off the switch after the window and mirrors have become clear.

NOTE:

- The defogger will work only when the engine is running.
- The defogger will automatically turn off after the defogger remains on for 15 minutes to prevent discharging of the leadacid battery.

Vehicle loading

Your vehicle is designed for specific weight capacities. The weight capacities of your vehicle are indicated by the Gross Vehicle Weight Rating (GVWR) and the Permissible maximum Axle Weight (PAW, front and rear). The GVWR and PAW (front and rear) are listed in "SPECIFICATIONS" section.

GVWR – Maximum permissible overall weight of the fully loaded vehicle (including all the occupants, accessories and cargo plus the trailer nose weight if towing a trailer).

PAW (front and rear) – Maximum permissible weight on an individual axle.

Actual weight of the loaded vehicle and actual loads at the front and rear axles can only be determined by weighing the vehicle. Compare these weights to the GVWR and PAW (front and rear). If the gross vehicle weight or the load on either axle exceeds these ratings, you must remove enough weight to bring the load down to the rated capacity.

WARNING


Never overload your vehicle. The gross vehicle weight (sum of the weights of the vehicle, all the occupants, accessories, cargo plus trailer nose weight if towing a trailer) must never exceed the Gross Vehicle Weight Rating (GVWR). In addition, never distribute a load so that the weight on either the front or rear axle exceeds the Permissible maximum Axle Weight (PAW).

WARNING

Always distribute cargo evenly. To avoid personal injury or damage to your vehicle, always secure cargo to prevent it from shifting if the vehicle moves suddenly. Place heavier objects on the floor and as far forward in the cargo area as possible. Never pile cargo higher than the top of the seat backs.

Trailer towing


Observe any country-specific regulations when towing a trailer and using a tow bar.

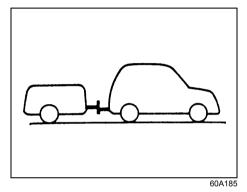

Your vehicle is primarily designed for transporting passengers and luggage. Towing a trailer can adversely affect vehicle handling, durability and fuel economy. Nevertheless, if suitably equipped, your vehicle can be used to tow a trailer which does not exceed the towing capacity specified below: Maximum towing capacity (gross trailer weight; trailer with integrated drawbar, and cargo)

Braked trailer: 1300 kg (2866 lbs) Unbraked trailer: 350 kg (772 lbs)

To load your vehicle and trailer properly, you must know how to measure gross trailer weight and trailer nose weight.

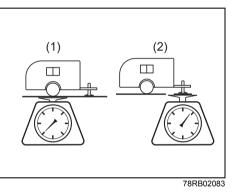

(1) Gross trailer weight

Gross trailer weight is the weight of the trailer with integrated drawbar plus all the cargo in it. You can measure gross trailer weight by putting the fully loaded trailer on a vehicle scale. (2) Permissible nose weight

Nose weight is the downward force applied on the towing hitch ball by the trailer coupler, with the trailer fully loaded and the coupler at its normal towing height. This weight can also be measured using a bathroom scale.

The maximum towing capacity listed above(1300kg) is only applicable up to 1000m above sea level. In high altitude regions above 1000m, combined weight of the maximum towing capacity (gross trailer weight) and permissible gross vehicle weight (GVWR) must be reduced by 10% for every extra 1000m.

WARNING

For vehicles equipped with the dual sensor brake support, if your vehicle is used to tow a trailer, press the dual sensor brake support OFF switch to turn off the dual sensor brake support. If not, accidents related to the system being turned on may occur.

BEFORE DRIVING

When towing by your vehicle equipped with automatic transmission on a long steep uphill, try to take some rest on the way at a safe place to prevent overheat or damage of the engine or transmission.

NOTICE

Trailer towing puts additional stress on the engine, transmission and brakes of your vehicle. Never tow a trailer during the first 1000 km (600 miles) of vehicle operation.

Tow bars

Only use a tow bar that is designed to attach to the chassis of your vehicle, and a hitch that is designed to bolt to this tow bar. We recommend that you use a genuine SUZUKI tow bar kit (available as an option), or equivalent.

WARNING

Never use a tow bar which attaches to the axle or the bumper of your vehicle.

For vehicles where the towing device blocks any of the lights or license plate, observe the following points:

- Do not use the towing devices that cannot be easily removed or repositioned.
- The towing devices must be removed or repositioned when not in use.

Safety chains

Always attach safety chains between your vehicle and the trailer. Cross safety chains under the nose of the trailer so that the nose will not drop to the road if the trailer becomes separated from the tow bar. Follow the manufacturer's recommendation for attaching safety chains. Always leave just enough slack to permit full turning. Never allow safety chains to drag on the road.

WARNING

Never attach safety chains to the bumper of your vehicle. Secure connections so that they cannot come loose.

Trailer lights

Check that your trailer is equipped with lights which meet local requirements. Always check for the proper operation of all trailer lights before you start to tow.

WARNING

Never connect trailer lights directly into your vehicle's electrical system, or electrical system damage may occur.

Brakes

A WARNING

If the trailer is equipped with the brakes, follow all instructions provided by the manufacturer. Never connect to the brake system of your vehicle and never take an electrical supply directly from the wiring harness. Tyres

WARNING

When towing a trailer, it is very important for your vehicle and trailer to have properly inflated tyres. Your vehicle's tyres should be inflated to the pressures listed on your vehicle's tyre information label. The tyres should be inflated to the laden pressures. Inflate trailer tyres according to the specifications provided by the trailer manufacturer.

Mirrors

Check if your vehicle's mirrors meet local requirements for mirrors used on towing vehicles. If they do not, you must install the required mirrors before you tow.

Vehicle/trailer loading

The weight of your loaded trailer (gross trailer weight) should never exceed the towing capacity.

Distribute cargo in your trailer so that the nose weight is about 10% of gross trailer weight, but does not exceed "Maximum vertical load" of 75 kg (165 lbs), and does not fall below 25 kg (55 lbs) or 4%, whichever is heavier, on trailer hitch point. You should measure gross trailer weight and nose weight before towing to check that your load is properly distributed.

WARNING

Improper weight distribution of your trailer may result in poor vehicle handling and swaying of the trailer. Always check that the trailer nose weight is about 10% of gross trailer weight, but does not exceed "Maximum vertical load" of 75 kg (165 lbs), and does not fall below 25 kg (55 lbs) or 4%, whichever is heavier, on trailer hitch point. Also check that the cargo is properly secured. Failure to observe this requirement may result in an accident.

WARNING

- · Never overload cargo on your trailer and your vehicle. Gross trailer weight must never exceed towing capacity. Gross vehicle weight (sum of the weights of the vehicle, all the occupants, accessories including tow bars and a trailer hitch, cargo and trailer nose weight) must never exceed the Gross Vehicle Weight Rating (GVWR) listed in "SPECIFICA-TIONS" section. except as described in NOTE below.
- It is dangerous and may be illegal to transport people in a trailer.

NOTE:

Only in the case of towing a trailer, GVW can be exceeded by not more than 40 kg (88 lbs), if road traffic legislation allows it.

Additional trailer towing warnings

WARNING

Connect trailer lights and hook up safety chains every time you tow.

NOTICE

- Because towing a trailer puts additional stress on your vehicle, more frequent maintenance will be required than under normal driving conditions. Follow the schedule in "Maintenance recommended under severe driving conditions".
- The additional load will affect fuel consumption, durability and performance of the vehicle as well.

WARNING

Your vehicle should be handled in a different way when towing a trailer. For the safety of yourself and others, observe the following precautions:

- Practice turning, stopping, and reversing before you begin towing a trailer in traffic. Do not tow a trailer in traffic until you are confident that you can handle the vehicle and trailer safely.
- Never exceed local towing speed limits or 80 km/h (50 mph), which-ever is lower.
- Never drive at a speed that causes shaking or swaying of the trailer. If you notice even the slightest sign of shaking or swaying, slow down.
- When roads are wet, slippery or rough, drive at a slower speed than you would on dry or smooth roads. Failure to slow down when road conditions are bad can result in loss of control.
- Always have someone guide you when reversing.

(Continued)

M WARNING

(Continued)

- Always admit greater stopping distance. Stopping distance is increased when you tow a trailer. For each 16 km/h (10 mph) of speed, allow at least one vehicle and trailer length between you and the vehicle ahead. Allow a greater stopping distance if roads are wet or slippery.
- If the trailer has over-run brakes, apply the brakes gradually to avoid snatching caused by the trailer wheels locking.
- Slow down before corners and maintain a steady speed while cornering. Deceleration or acceleration while cornering can result in loss of control. Remember that a larger than normal turning radius is needed because the trailer wheels will go inside than vehicle's wheels.
- Avoid sudden acceleration and stopping of the vehicle. Do not make quick maneuvers unless they are necessary.
- Slow down in cross winds and be prepared for gusts of wind from large passing vehicles.

(Continued)

WARNING

(Continued)

- Be careful when overtaking other vehicles. Allow enough room for your trailer before changing lanes, and use turn signal lights properly in advance.
- Slow down and shift into a lower gear for better engine braking before you reach long or steep downhill grades. It is hazardous to attempt downshifting while you are descending a hill.
- Do not step on the brake pedal excessively. This could cause the brakes to over-heat resulting in reduced braking efficiency. Use engine braking as much as possible.
- Because of the added trailer weight, your engine may overheat on hot days when going up long or steep hills. Pay attention to your engine coolant temperature. If it indicates overheating, pull off the road and stop the vehicle in a safe place. Refer to "Engine trouble: Overheating" in "EMERGENCY SERVICE" section.



60A186

A WARNING

When parking your vehicle and connected trailer, always use the following procedure:

- 1) Apply the vehicle's brakes firmly.
- Have another person place wheel chocks under the wheels of the vehicle and the trailer while you are holding the brakes.
- 3) Slowly release the brakes until the wheel chocks absorb the load.
- 4) Fully engage the parking brake.
- Manual transmission turn off the engine, then shift into reverse or first gear.

Automatic transmission – shift into "P" (Park) and turn off the engine.

(Continued)

A WARNING


(Continued)

When starting out after parking:

- 1) Depress the clutch and start the engine.
- 2) Have another person remove the chocks.
- 3) Shift into gear, release the parking brake, and slowly pull away from the chocks.
- 4) Stop, apply the brakes firmly and hold them.

Trailer hitch (tow bar) installation points

Each arrow shows fixing points for Suzuki's genuine tow bar kit. For details, follow the instruction provided with the tow bar kit.

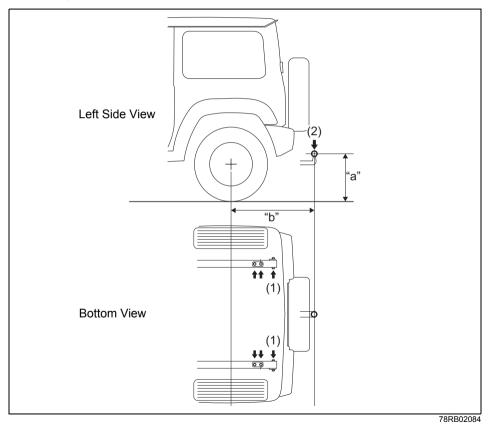

- (1) Fixing points on vertical (side) surfaces
- (2) Maximum vertical load on trailer hitch point

(EU): 75 kg (165 lbs)

Trailer hitch ball height "a" 450 - 490 mm (17.7 - 19.3 in.) Maximum permissible overhang "b" 787 mm (31.0 in.)

3

OPERATING YOUR VEHICLE

60G408
60(-408

Daily inspection checklist	3-1
Engine oil consumption	3-2
Ignition switch	3-2
Parking brake lever	
Pedal	
Starting engine	3-7
Using transmission	3-8
Gearshift indicator (if equipped)	3-13
Transfer lever	
Cruise control (if equipped)	
Speed limiter (if equipped)	
SUZUKI SAFETY SUPPORT (if equipped)	3-27
Emergency stop signal (ESS) (if equipped)	3-52
Braking	
Electronic stability program (ESP®)	3-55
Tyre pressure monitoring system	
(TPMS) (if equipped)	3-63
eCall (For Light Commercial Vehicles) (if equipped)	

Daily inspection checklist

Before driving



- 1) Check that windows, mirrors, lights and reflectors are clean and unobstructed.
- 2) Visually check the tyres for the following points:
 - the depth of the tread groove
 - abnormal wear, cracks and damage
 - loose wheel nuts
 - existence of foreign material such as nails, stones, etc.

Refer to "Tyres" in "INSPECTION AND MAINTENANCE" section for details.

3) Look for fluid and oil leakage.

NOTE

It is normal for water to drip from the air conditioning system while and after use.

- 4) Check that the hood is fully closed and latched.
- 5) Check the headlights, turn signal lights, brake lights and horn for proper operation.
- 6) Adjust the seat and head restraint.
- 7) Check the brake pedal and the parking brake lever.
- 8) Adjust the mirrors.
- 9) Check that you and all passengers have properly fastened by the seat belts.
- 10)Check that all warning lights come on as the ignition switch is turned to "ON" position.
- 11) Check all gauges.
- 12)Check that the brake system warning light turns off when the parking brake is released.

Once a week, or each time you fill your fuel tank, perform the following under-hood checks:

- 1) Engine oil level
- 2) Coolant level
- 3) Brake fluid level
- 4) Battery fluid (acid) level
- 5) Windshield washer fluid level

6) Hood latch operation

Pull the hood release handle inside the vehicle. Check that you cannot open the hood further without releasing the secondary latch. Close the hood securely after checking for proper latch operation. See the item "All latches, hinges and locks" of "Chassis, body and others" in "Maintenance schedule" "INSPECTION AND in MAINTE-NANCE" section for lubrication schedule.

Â WARNING

Check that the hood is fully closed and latched before driving. If it is not. it can fly up unexpectedly during driving, obstructing your view and resulting in an accident.

Once a month, or each time you fill your fuel tank, check the tyre pressure using a tyre pressure gauge. Also check the tyre pressure of the spare tyre.

Engine oil consumption

It is normal for the engine to consume some engine oil during normal vehicle operation.

The amount of engine oil consumption depends on viscosity and quality of the oil and your driving conditions.

More oil is consumed during high-speed driving and when there is frequent acceleration and deceleration. Under high loads, your engine also will consume more oil. A new engine also consumes more oil, since its pistons, piston rings and cylinder walls have not yet become conditioned. New engines reach the normal level of oil consumption only after approximately 5000 km (3000 miles) driving.

Oil consumption: Max. 1.0 L per 1000 km (1 Qt. per 600 miles)


When judging the amount of oil consumption, note that the oil may become diluted and it is difficult to judge the accurate oil level.

As an example, if a vehicle is used for repeated short trips, and consumes a normal amount of oil, the dipstick may not show any drop in the oil level at all, even after 1000 km (600 miles) or more of driving. This is because the oil gradually becomes diluted with fuel or moisture,

making it appear that the oil level has not changed.

You should also be aware that the diluting ingredients evaporate out when the vehicle is subsequently driven at high speeds, such as on an expressway, making it appear that oil is excessively consumed after high-speed driving.


Ignition switch

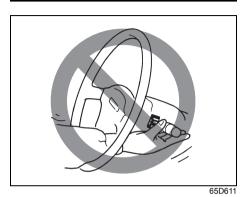

A WARNING

To avoid possible injury, do not operate controls by reaching through the steering wheel.

OPERATING YOUR VEHICLE

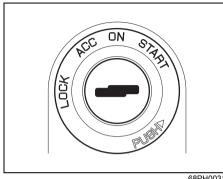


68PH00310

The ignition switch has the following four positions:

LOCK

This is the normal parking position. It is the only position in which the key can be removed.

Manual transmission

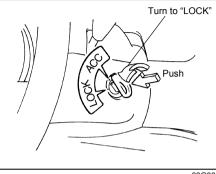

60G033

Manual transmission vehicles
 You must push in the key to turn it to
 "LOCK" position. It locks the ignition, and
 prevents normal use of the steering
 wheel after the key is removed.

Automatic transmission vehicles

The gearshift lever must be in "P" (Park) position to turn the key to "LOCK" position. It locks the ignition and prevents normal use of the steering wheel and gearshift lever.

To release the steering lock, insert the key and turn it clockwise to one of the other positions. If you have trouble turning the key to unlock the steering wheel, try turning the steering wheel slightly to the right or left while turning the key.

ACC

Accessories such as the radio can operate, but the engine is off.

ON

This is the normal operating position. All electrical systems are on.

START

This is the position for starting the engine using the starter motor. The key should be released from this position as soon as the engine starts.

Ignition key reminder

A buzzer sounds intermittently to remind you to remove the ignition key if it is in the ignition switch when the driver's door is opened.



81A297S

WARNING

• Never return the ignition switch to "LOCK" position and remove the ignition key while the vehicle is moving. The steering wheel will lock and you will not be able to steer the vehicle.

(Continued)


WARNING

- (Continued)
- Always return the ignition switch to "LOCK" position and remove the ignition key when leaving the vehicle even only for a short time. Also do not leave children alone in a parked vehicle. Unattended children may be able to start the vehicle or shift the transmission into neutral, which could result in an accident. There is also a danger that children may injure themselves by playing with the power windows or other moving features of the vehicle. In addition, heat build-up or extremely cold temperatures inside the vehicle can be fatal to children.

NOTICE

- For protection of a lead-acid battery and a starter motor, do not use the starter motor by turning the key to "START" for more than 12 seconds at a time. If the engine dose not start, turn the key to "LOCK" position and wait for more than 30 seconds before trying again. If the engine does not start after several attempts, consult a SUZUKI dealer or a qualified workshop.
- Do not leave the ignition switch in "ON" position if the engine is not running as the lead-acid battery will discharge.

Parking brake lever

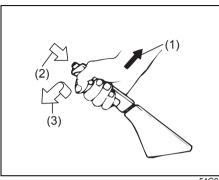



- (1) To set
- (2) To release
- (3) To release

The parking brake lever is located between the front seats. To set the parking brake, depress the brake pedal and pull the parking brake lever all the way up. To release the parking brake, depress the brake pedal and pull up slightly on the parking brake lever, push the button on the end of the lever with your thumb, and lower the lever to its original position. For automatic transmission vehicles, always set the parking brake before moving the gearshift lever to "P" (PARK) position. If you park on an incline and shift into "P" before setting the parking brake, the weight of the vehicle may make it difficult to shift out of "P" when you are ready to drive the vehicle.

When preparing to drive the vehicle, move the gearshift lever out of "P" position before releasing the parking brake.

WARNING

- Whenever parking, make sure the gearshift lever for manual transmission vehicles is in 1st gear or "R" (Reverse) and the gearshift lever for automatic transmission or automatic transmission vehicles is in "P" (Park). Remember, even though the transmission is in gear or in Park, you must set the parking brake fully.
- When parking on an uphill, turn the steering wheel so that the front wheels point to the center of the road.
- When parking on a downhill, turn the steering wheel so that the front wheels point to the curb.
- Never drive your vehicle with the parking brake on: rear brake effectiveness can be reduced from overheating, brake life may be shortened, or permanent brake damage may result.
- If the parking brake does not hold the vehicle securely or does not fully release, have your vehicle inspected immediately by a SUZUKI dealer.

WARNING

Always set the parking brake fully before leaving your vehicle or it may move, causing injury or damage. When parking, make sure the gearshift lever for manual transmission vehicles is in 1st gear or "R" (Reverse) and the gearshift lever for automatic transmission vehicles is in "P" (Park). Remember, even though the transmission is in gear or in Park, you must set the parking brake fully.

WARNING

When parking the vehicle in extremely cold weather, the following procedure should be used:

- 1) Set the parking brake.
- Manual transmission turn off the engine, then shift into reverse or first gear. Automatic transmission – shift into "P" (Park) and turn off the engine.
- 3) Get out of the vehicle and put chocks under the wheels.
- 4) Release the parking brake. When you return to your vehicle, first set the parking brake, and then remove the wheel chocks.

WARNING


Do not leave cigarette lighters, spray cans, soft drink cans or plastic articles (such as glasses, CD case, etc.) in sun-heated vehicle. The temperature inside the vehicle may cause as follows:

- Gas may leak from a cigarette lighter or spray can and may lead to a fire.
- The glasses, plastic cards or CD cases, etc. may deform or crack.
- Soft drink cans may fracture.


Parking brake reminder buzzer

A buzzer sounds intermittently to remind you to release the parking brake if you start the vehicle without fully releasing the parking brake. Check that the parking brake is fully released and the brake system warning light turns off.

Pedal

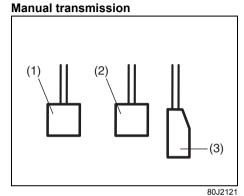

Automatic transmission

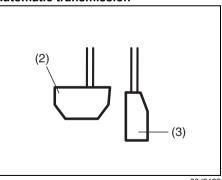

80J2122

Clutch pedal (1)

A clutch pedal is used to disengage the driving force to the wheels when starting the engine, stopping, or shifting the gear-shift lever. Depressing the pedal disengages the clutch.

A WARNING

Do not drive with your foot resting on the clutch pedal. It could result in excessive clutch wear, clutch damage, or unexpected loss of engine braking.

Brake pedal (2)

Your vehicle is equipped with either front and rear disc brakes or front disc brakes and rear drum brakes. Depressing a brake pedal applies both sets of brakes.

You may hear occasional brake squeal when you apply the brakes. This is a normal condition caused by environmental factors such as temperature, humidity or dust, etc.

WARNING

If brake squeal is excessive and occurs each time the brakes are applied, you should have the brakes checked by a SUZUKI dealer.

WARNING

Do not apply brakes continuously or rest your foot on the brake pedal. This will result in overheating of the brakes which could cause unpredictable braking action, longer stopping distances, or permanent brake damage.

Accelerator pedal (3)


An accelerator pedal controls the speed of the engine. Depressing the accelerator pedal increases power output and speed.

NOTE:

Your vehicle is equipped with Brake Override System. If you depress both the accelerator pedal and the brake pedal simultaneously, the engine power output may be suppressed.

Starting engine

Before starting engine

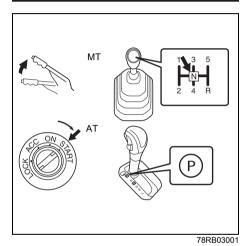

- 1) Check that the parking brake is set fully.
- Manual transmission Shift into "Ň" (Neutral). Hold the clutch pedal and brake pedal fully depressed.

Automatic transmission – If the gearshift lever is not in "P" (Park) position, shift into "P" (Park). (If you need to restart the engine while the vehicle is moving, shift into "N".)

NOTE:

Automatic transmission vehicles have a starter interlock device which is designed to keep the starter from operating if the transmission is in any of the drive positions.

WARNING

Check that the parking brake is set fully and the transmission is in Neutral (or Park for vehicles with an automatic transmission) before attempting to start the engine.

Starting a cold and warm engine

With your foot taken off the accelerator pedal, crank the engine by turning the ignition key to "START". Release the key when the engine starts.

NOTICE

- Stop turning the starter immediately after the engine has started or the starter system can be damaged.
- For protection of a lead-acid battery and a starter motor, do not use the starter motor by turning the key to "START" for more than 12 seconds at a time. If the engine dose not start, turn the key to "LOCK" position and wait for more than 30 seconds before trying again. If the engine does not start after several attempts, consult a SUZUKI dealer or a qualified workshop.

If the engine does not start after 12 seconds of cranking, wait about 30 seconds, and then press down the accelerator pedal to 1/3 of its stroke and try cranking the engine again. Release the key and accelerator pedal when the engine starts.


If the engine still does not start, depress the accelerator pedal all the way to the floor while cranking.

Using transmission

A WARNING

Do not hang any items on the gearshift lever and do not use the gearshift lever as a handrest. Otherwise, it could prevent proper operation of the gearshift lever and cause its malfunction, resulting in an accident.

Manual transmission

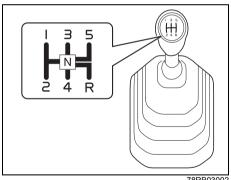

78RB03002

Starting off

To start off, depress the clutch pedal all the way to the floor and shift into 1st gear. After releasing the parking brake, gradually release the clutch. When you hear a change in the engine's sound, slowly press the accelerator while continuing to gradually release the clutch.

Shifting

All forward gears are synchronized and provide quiet and easy shifting. Always depress the clutch pedal all the way to the floor before shifting gears. Keep the engine speed from rising into the red zone of the tachometer.

Downshifting maximum allowable speeds

Transfer lever in "2H" or "4H" position

Downshifting	km/h (mph)
2nd to 1st	20 (12)
3rd to 2nd	80 (49)
4th to 3rd	115 (71)
5th to 4th	160 (99)*

Transfer lever in "4L" position

Downshifting	km/h (mph)
2nd to 1st	10 (6)
3rd to 2nd	20 (12)
4th to 3rd	25 (15)
5th to 4th	40 (24)*

*NOTE:

You may not accelerate to the maximum allowable speed because of the driving situation and/or the vehicle condition.

NOTICE

Do not downshift to a lower gear at the speed faster than the maximum allowable speeds for the next lower speed, or severe damage to engine and transmission can result.

WARNING

- Reduce your speed and downshift to a lower gear before going down a long or steep hill. A lower gear will allow the engine to provide braking. Avoid riding the brakes or they may overheat, resulting in brake failure.
- When driving on slippery roads, slow down before downshifting. Excessive and/or sudden changes in engine speed may cause loss of traction, which could cause you to lose control.

NOTICE


Check that the vehicle is completely stationary before you shift into reverse.

NOTICE

- To help avoid clutch damage, do not use the clutch pedal as a footrest while driving or use the clutch to keep the vehicle stationary on a slope. Depress the clutch fully when shifting.
- When shifting or starting off, do not race the engine. Racing the engine can shorten engine life and cause negative effect to smooth shifting.

Automatic transmission

Gearshift lever

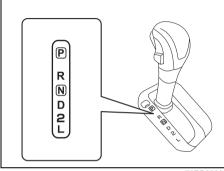

78RB03003

The gearshift lever is designed so that it cannot be shifted out of "P" position unless the ignition switch is in "ON" position and the brake pedal is depressed.

Use the gearshift lever positions as follows:

P (Park)

Use this position to lock the transmission when the vehicle is parked or when starting the engine. Shift into Park only when the vehicle is completely stationary.

R (Reverse)

Use this position to reverse the vehicle from stop. Make sure that vehicle is com-

pletely stationary before shifting into Reverse.

N (Neutral)

Use this position for starting the engine if the engine stalls and you need to restart it while the vehicle is moving. You may also shift into Neutral and depress the brake pedal to hold the vehicle stationary during idling.

D (Drive)

Use this position for all normal driving.

With the gearshift lever in "D" range you can get an automatic downshift by pressing the accelerator pedal. The higher the vehicle speed is, the more you need to press the accelerator pedal to get a downshift.

2 (Low 2)

Use this position to provide extra power when climbing hills, or to provide engine braking when going down hills.

L (Low 1)

Use this position to provide maximum power when climbing steep hills or driving through deep snow or mud, or to provide maximum engine braking when going down steep hills.

WARNING


Always depress the brake pedal before shifting from "P" (Park) (or "N" (Neutral) if the vehicle is stationary) to a forward or reverse gear, to help prevent the vehicle from moving unexpectedly when you shift.

NOTE:

When you shift the gearshift lever into "P" and stop the engine before depressing the parking brake pedal, if you try to restart the engine and shift the gearshift lever into the position other than "P", it may reduce gearshift lever capability, or unusual sound and shock may occur. However, this is not abnormal.

OPERATING YOUR VEHICLE

The gearshift lever has a lock mechanism to help prevent accidental shifting. Shift the gearshift lever as follows:

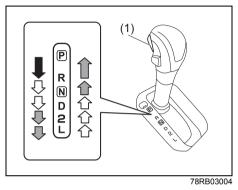

(1) knob button

₽	Shift with the knob button (1) pushed in and the brake pedal depressed.	
☆₽	Shift with the knob button (1) pushed in.	
仓夺	Shift without the knob button (1) pushed in.	


NOTICE

- Do not shift the gearshift lever into "R" while moving forward, or the transmission may be damaged. If you shift into "R" when the vehicle speed is over 10 km/h (6 mph), the transmission will not shift into reverse.
- · Be sure to take the following precautions to help avoid damage to the automatic transmission:
 - Make sure that the vehicle is completely stationary before shifting into "P" or "R".
 - Do not shift from "P" or "N" to "R". "D" or "L" when the engine is running above idle speed.
 - Do not rev the engine with the transmission in a drive position ("R", "D" or "L") and the front wheels not moving.
 - Do not use the accelerator to hold the vehicle on a hill. Use the vehicle's brakes.

NOTE

- · Always shift the gearshift lever without pushing in the knob button except when vou shift from "P" to "R". from "D" to "2". from "2" to "L". from "N" to "R" or from "R" to "P". If you always push in the knob button when shifting the gearshift lever, you could shift into "P", "R", "2" or "L" by mistake.
- If driver's or passenger's knee hits the gearshift lever while driving, the lever could move and the gear could be changed unexpectedly.

Overdrive off switch

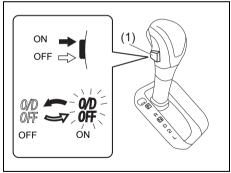

78RB03046

(1) Overdrive off switch

The transmission is a 4-speed (3-speed plus overdrive) automatic transmission. By operating the overdrive off switch, the transmission can be converted to a 3-speed automatic transmission that will not move to the overdrive position. To convert the transmission to the 3-speed mode, push in the overdrive off switch and release it.

To return the transmission to the 4-speed mode, push in the overdrive off switch again.


When the ignition switch is turned to the "ACC" position, the transmission in the 3-speed mode is converted to the 4-speed mode automatically.

The 3-speed mode is suitable for the following driving conditions:

- Driving on hilly, winding roads
 - You can drive more smoothly with less frequent gear changing
- Going down a steep hill
 - Some engine braking is provided

If you cannot shift automatic transmission gearshift lever out of "P" (PARK)

Left hand drive vehicle

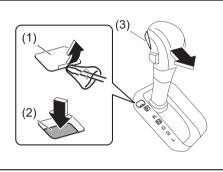


78RB03056

The automatic transmission vehicles have an electrically operated park-lock feature. If the vehicle's lead-acid battery is discharged, or there is some other electrical failure, the automatic transmission cannot be shifted out of Park in the normal way. Jump starting may correct the condition. If not, follow the procedure described below. This procedure will permit shifting the transmission out of Park.

- 1) Be sure the parking brake is firmly applied.
- 2) If the engine is running, stop the engine.
- Make sure the key is in "ON" or "ACC" position.
- Remove the cover (1) by using a flatbladed screwdriver covered with a soft cloth as shown.
- 5) With the release button (2) pushed by the key or the flat end rod, push the knob button (3) and shift the gearshift lever to the desired position.

This procedure is for emergency use only. If repeated use of this procedure is necessary, or the procedure does not work as described, take your vehicle to a SUZUKI dealer for repair.

Right hand drive vehicle

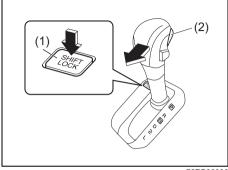

78RB03006

The automatic transmission vehicles have an electrically operated parklock feature. If the vehicle's lead-acid battery is discharged, or there is some other electrical failure, the automatic transmission cannot be shifted out of Park in the normal way. Jump starting may correct the condition. If not, follow the procedure described below. This procedure will permit shifting the transmission out of Park.

- 1) Be sure the parking brake is firmly applied.
- 2) If the engine is running, stop the engine.
- Make sure the key is in "ON" or "ACC" position.
- 4) With the release button (1) pushed, push the knob button (2) and shift the gearshift lever to the desired position.

This procedure is for emergency use only. If repeated use of this procedure is necessary, or the procedure does not work as described, take the vehicle to a SUZUKI dealer for repair.

Gearshift indicator (if equipped)



52RM30410

In the following cases, the gearshift indicator is indicated in the information display when the ignition switch is in "ON" position.

- When the gearshift lever is in a position other than "N" (Neutral).
- When the transfer lever is in "2H" or "4H" position.
- For vehicles equipped with the cruise control, when the system is not in use.

The electronic control system monitors driving condition (such as vehicle speed and/or engine revolution), and it shows which gear position is optimal for your driving with the indication on the display.

If UP/DOWN arrow is indicated in the display while driving, we recommend you to shift up or down the gear. It is the optimal gear position for a driving condition that reduces the over revolution and stress to the engine, and improves fuel consumption.

For details on how to use the transmission, refer to "Using the transmission" in this section.

WARNING

The gearshift indicator is designed to indicate optimal gear position for your driving, however, a driver will not be relieved from the duty of care of driving operation or gear change with this indicator.

To drive safe, do not gaze the gearshift indicator, pay attention to your driving situation and shift up or down if necessary. NOTE:


- The gearshift indicator is not indicated when the gear position is in "N" (Neutral).
- If you depress the clutch pedal while UP/ DOWN arrow is indicated, the indication will disappear.
- In ordinary driving, UP arrow will disappear when you release your foot from the accelerator pedal.
- The indication of gearshift indicator timing may differ depending on the vehicle condition and/or driving situation even in the same vehicle speed and engine revolution.
- If any of the electrical systems such as dual sensor brake support system, or ESP[®] system is working, the gearshift indicator will disappear temporarily.

OPERATING YOUR VEHICLE

Example of the gearshift indicator

Indication	Description		
	Lower gear position is selected for the vehicle speed and/or engine revolution. Changing to a higher gear position is recommended. • In this case, shifting up is recommended.		
	Higher gear position is selected for the vehicle speed and/or engine revolution. Changing to a lower gear position is recommended.In this case, shifting down is recommended.		


Transfer lever

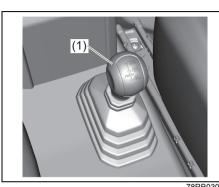





(1) Transfer lever

Your vehicle is equipped with the "ALL GRIP PRO" system that consists of a transfer case with a synchronizer (between 2WD-high and 4WD-high positions) and the air locking hubs. With this feature, you can shift the drive mode between 2-wheel drive high range and 4-wheel drive high range by shifting the "2H" or "4H" position. Stop the vehicle or reduce the speed to less than 100 km/h (60 mph) with the front wheels in the straight ahead position. Do not shift the transfer lever without depressing the accelerator pedal. Do not activate the cruise control system when shifting the transfer lever.

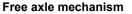

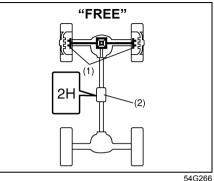

Fixed axle mechanism

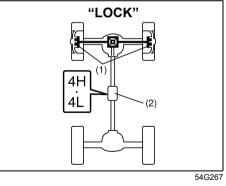


(1) Air locking hubs

(2) Transfer case

NOTE:

- The air locking hubs are activated by the vacuum of the engine and changed to shift the front wheel drive. The air locking hubs are not shifted when the engine is stopping. Several seconds are required from the operation of the transfer lever to the activation of air locking hubs.
- When the front tyres receive a big shock during running in 2-wheel drive position on the road surface of the big irregularity, etc, some noise may occur inside the air locking hubs afterwards. In this situation, stop the vehicle and then shift the transfer lever into "4H" position. After that, shift the transfer lever into "2H" position again.

Description of transfer lever positions and indicator light

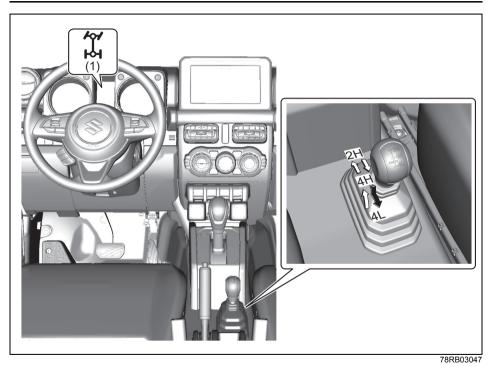

 ☆ ↓
 Shift the transfer lever without the lever pressed.

 ↓
 Shift the transfer lever with the lever pressed.

(1) 4WD indicator light

Transfer lever position Wheel drive position	Indicator light	Description	
	wheel drive position	4WD indicator light	Description
2H	2-wheel drive position	-	In this position, engine power is supplied to the rear axle only. Use this position for normal driving.
4H	4-wheel drive high range position	For Bool 78RB03024	In this position, engine power is supplied to the front and rear axles at normal speed, providing greater traction than 2-wheel drive. Use this position for off-road driving, or for driving on slippery roads (icy, snow-covered, muddy, etc.)
4L	4-wheel drive low range position	407 101 78RB03024	In this position, engine power is supplied to the front and rear axles at reduced speed. Use this position for off-road driving on soft or slippery surfaces, or for climbing or descending steep, slippery hills.

NOTICE

- Never operate your vehicle in "4H" or "4L" on dry pavement and, as much as possible, avoid using "4H" or "4L" on wet pavement, as this may seriously damage the drive train.
- If the transfer lever is returned to the original position while shifting the transfer lever, the drive train may be damaged.
- When you turn suddenly on a sharp curve, a side road, or a parking space in "4H" or "4L" position, the turning strength of the steering wheel will be growing big and tight corner braking phenomenon* may occur and result in accidents. 4-wheel drive system damage could also result.

*Tight corner braking phenomenon is the similar situation to depress the brake when the drive train is in 4-wheel drive position ("4H" or "4L") and the steering wheel is turned suddenly and then the revolution difference between the front wheels and the rear wheels could not absorb.

NOTE:

 When you select the "4L" position, the ESP[®] systems (other than ABS) will be canceled to provide improved vehicle traction, and the ESP[®] OFF indicator light, dual sensor brake support OFF indicator light and lane departure warning OFF indicator light will come on.

When you select the "4L" position, braketraction control can be activated. Braketraction control brakes the spinning wheel to distribute drive power to the other wheels for increased climbing ability or for better performance on a rolling hill or a slippery surface.

 If dual sensor brake support OFF indicator light and lane departure warning OFF indicator light come on or go off, the interior buzzer beeps. This is not a malfunction. Transfer lever operation

NOTICE

- Unevenly worn tyres can cause problems in the operation of the transfer lever. Be sure to rotate the tyres according to the maintenance schedule. Refer to "Tyres" and "Maintenance Schedule" in the "INSPECTION AND MAINTE-NANCE" section for proper tyre rotation procedures.
- If a problem exists during the shifting function, all lights of the 4WD indicator will blink continuously and the transfer lever operation will not work.


If the shift function does not work after trying the shifting operation several times, it may be the result of a system failure. Have the system inspected by a SUZUKI dealer.

NOTE:

- When the temperature of 4-wheel drive system or the transmission is not warm under the low temperature, you may feel it hard to shift the transfer lever or gear noise may occur.
- Unless you can shift the transfer lever, drive your vehicle for a while and then shift the transfer lever again.

Operate the transfer lever according to the appropriate procedure described below:

From "2H" position to "4H" position From "4H" position to "2H" position

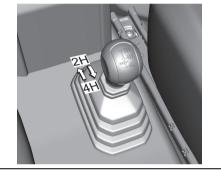

78RB03026

The transfer lever can be shifted when the vehicle is either stopped or moving.

Position the front wheels straight ahead and shift the transfer lever from "2H" to "4H" or "4H" to "2H". If the vehicle is moving, the speed must be less than 100 km/h (60 mph) during this operation.

WARNING

Do not shift the transfer lever while the rear tyre is spinning. Your vehicle may move to the unexpected direction. 4-wheel drive system may be also damaged.

NOTICE

Pay attention to shifting the transfer lever safely when driving your vehicle.

NOTE:

- After shifting the transfer lever from "2H" to "4H", check that the 4WD indicator light comes on.
- After shifting the transfer lever from "4H" to "2H", check that the 4WD indicator goes off.
- When 4WD indicator light is blinking after shifting the transfer lever to "4H" position, accelerate, slow down your vehicle or stop and reverse your vehicle a little to shift the transfer lever. Pay attention to the vehicles and the circumference toward or backward your vehicle when shifting the transfer lever.
- When you shift the transfer lever while turning the steering wheel or depressing the accelerator pedal, shifting the transfer lever may be difficult.
- Operate the transfer lever while driving at low speed if it may be difficult to shift the transfer lever from "2H" position to "4H" position when the vehicle is stopped.

- Shift the transfer lever again after decelerating or stopping the vehicle if it may be difficult to shift the transfer lever from "2H" position to "4H" position while driving or when the gear noise occurs.
- There may be a case to operate the transfer lever heavily when shifting the transfer lever from "4H" position to "2H" position while driving. In this case, position the front wheels straight ahead and drive for a while and then operate shifting the transfer lever again.
- When the transfer lever is shifted from 2H" position to "4H" position or from "4H" position to 2H" position and the air locking hubs are activated, the air conditioning system may not be operated for several seconds. This is not a malfunction.
- When the ignition switch is turned "ON" after the transfer lever is shifted from 2H" position to "4H" position or from "4H" position to 2H" position while stopping the engine, 4WD indicator light may blink. This is not a malfunction.

From "4H" position to "4L" position



78RB03027

Stop the vehicle completely, place the transmission in "N" (Neutral) or depress the clutch pedal fully (if equipped), then shift the transfer lever from "4H" position to "4L" position by pressing the transfer lever.

WARNING

When you turn off the engine while the transfer is not finished to shift into "4L" position, follow instructions below.

- 1) Depress the brake pedal* fully.
- 2) Turn the ignition switch to "OFF" position.
- * Depress the brake pedal until the engine is started again.
- Even though the gearshift lever is shifted into 1st gear or "R" (Reverse) gear for manual transmission vehicles or shifted into "P" (Park) position for automatic transmission vehicles, there may be a case that the wheels of the vehicle is not stationary.

When you turn off the engine in this situation, start the engine again and move the vehicle forward or backward slowly.


- Do not operate the transfer lever while driving.
- Do not operate the transfer lever while making a left or right turn or while holding rear wheels slipped on icy, snow-covered, or muddy roads. Your vehicle may move to the unexpected direction. 4-wheel drive system may be also damaged.

NOTE:

- There may be a case that you will feel the difficulty to operate the transfer lever when shifting the transfer lever from "4H" position to "4L" position. Operate the transfer lever into "4L" position surely.
- When shifting the transfer lever from "4H" position to "4L" position, the buzzer will sound and the function of the ESP[®] system and the vehicle stability control system will be deactivated.
- There may be a case that shifting into "4L" position is not completed when the transfer system or the transmission is not warm in the cold weather. There may be a possibility of difficulty to shift especially for automatic transmission vehicles in the cold weather. Follow instructions below in this case and operate the transfer lever again.
 - Stop the vehicle completely.
 - Place the transmission in "N" (Neutral).
 - Depress the brake pedal* fully.
 - Release the parking brake.
 - Turn the ignition switch to "OFF" position.
 - Shift the transfer lever from "4H" position to "4L" position by pressing the transfer lever.
 - Check whether the vehicle can be moved by moving the vehicle forward or backward slowly.
- * Depress the brake pedal until the engine is started again.

• There may be a case that it is difficult to operate the transfer lever or the gear noise occurs after driving the vehicle for a while in the cold weather. There may be a possibility of difficulty to shift the transfer lever from "4H" position to "4L" position. In this case, shift the transfer lever into "4H" position or "2H" position and then operate the transfer lever again after driving for a while.

From "4L" position to "4H" position

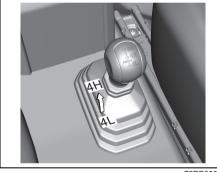

⁷⁸RB03028

Stop the vehicle completely, place the transmission in "N" (Neutral) or depress the clutch pedal fully (if equipped), then shift the transfer lever from "4L" position to "4H" position.

Cruise control (if equipped)

The cruise control system allows you to maintain a steady speed without keeping your foot on the accelerator pedal. The controls for operating the cruise control system are on the steering wheel.

You can use the cruise control system under the following conditions:


- For manual transmission vehicle, the gear position is in 3rd, 4th, 5th.
- For automatic transmission vehicle, the gearshift lever is in "D" position.
- When the transfer lever is in "2H" or "4H" position,
- When 4WD indicator light does not blink,
- The vehicle speed is about 40 km/h (25 mph) or higher.

WARNING

To help avoid loss of vehicle control, do not use the cruise control system when driving in heavy traffic, on slippery or winding roads, or on steep downhills.

Setting cruising speed


Cruise control switch

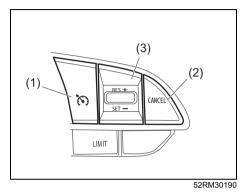



(3) "RES +/SET -- " switch


Instrument cluster (Type A)

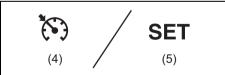

75RM329

(4) Cruise indicator light(5) "SET" indicator light

Instrument cluster (Type B)

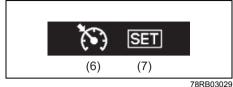

(6) Cruise indicator

- (7) Set indicator
- Turn on the cruise control system by pushing cruise switch (1). When the cruise indicator light (4) (type A) or cruise indicator (6) (type B) comes on, you can set cruising speed.
- 2) Accelerate or decelerate to the desired speed.
- Push down the "RES +/SET –" switch (3) and turn on the "SET" indicator light (5) (type A) or set indicator (7) (type B). Take your foot off the accelerator pedal and the set speed will be maintained.

WARNING

If the cruising speed is set by accident, you cannot decelerate or could loose control of the vehicle. This could lead to an accident, resulting in severe injury or death.

Turn off the cruise control system and check that cruise indicator (6) is off when the system is not in use.

NOTE:

Established cruising speed may differ a little from the speedometer indication depending on the road conditions.

Be careful of the following when operating with the cruise control

Even if your vehicle is equipped with the dual sensor brake support, it cannot automatically adjust to the speed of the vehicle in front of you. Turn off the cruise control system if you cannot operate safely at a cruising speed.

Even in the following conditions, the set indicator (7) will not go off and the cruising speed will not be canceled.

- When the frontal collision warning is working. If you depress the brake pedal, the cruise speed will be canceled temporarily.
- When the dual sensor detects dirt on the windshield and the dual sensor brake support stops functioning. For safety purposes, push the cruise switch (1) to turn off the cruise indicator light (4).

If the automatic brake system is working, the cruise indicator light (4) will turn off and the cruise control system will be canceled. Once you have determined that the conditions are once again safe, reset the cruise speed.

Changing speed temporarily

When the cruising speed is maintained, you can temporarily accelerate or decelerate.

To accelerate, depress the accelerator pedal. When you take your foot off the pedal, your vehicle will return to the set speed.

To decelerate, depress the brake pedal. The set speed will be canceled and "SET" indicator light (5) or set indicator (7) will go off.

To resume the previously set speed, push up the "RES +/SET –" switch (3) and turn on "SET" indicator light (5) or set indicator (7) again when vehicle speed is above 40 km/h (25 mph). The vehicle will accelerate to the previously set speed and maintain its speed.

Changing cruising speed

Using the accelerator pedal

To reset at a faster cruising speed, accelerate to the desired speed using the accelerator pedal and push down the "RES +/SET –" switch (3). The new speed will be maintained.

Using the brake pedal

To reset at a slower cruising speed, decelerate to the desired speed using the brake pedal and push down the "RES +/SET –" switch (3). The new speed will be maintained.

NOTE:

When the brake pedal is depressed, "SET" indicator light (5) or set indicator (7) goes off until the cruising speed is reset.

Using "RES +/SET -" switch

To reset at a faster cruising speed, press repeatedly or hold push up the "RES +/ SET –" switch (3). Vehicle speed will steadily increase. When you release the switch, the new speed will be maintained.

To reset at a slower cruising speed, press repeatedly or hold push down the "RES +/ SET –" switch (3) until the vehicle has slowed to the desired speed, and then release the switch. The new speed will be maintained.

NOTE:

You can adjust the set speed by approximately 1 km/h (1 mph) by pushing "RES +/ SET –" switch quickly.

Canceling cruise control

"SET" indicator light (5) or set indicator (7) will go off and the cruise control will be canceled temporarily with the following conditions:

- Push "CANCEL" switch (2).
- · Depress the brake pedal.
- For manual transmission vehicle, depress the clutch pedal.
- For automatic transmission vehicle, the gear position is changed to "L"
- When the transfer lever is operated,
- The vehicle speed falls more than about 20 percent from the set speed.
- Any time the vehicle speed falls below 40 km/h (25 mph).
- When the vehicle skids and ESP[®] is activated.
- · If the automatic brake system is working,
- When the transfer lever is operated.

To resume the previously set speed, push up the "RES +/SET –" switch (3) and turn on "SET" indicator light (5) or set indicator (7). The vehicle speed must be above 40 km/h (25 mph) when the vehicle is not under the above conditions. To turn off the cruise control system, push cruise switch (1) and check that the cruise indicator light (4) or cruise indicator (6) goes off.

Also, if the malfunction indicator light in the instrument cluster comes on or blinks, the cruise control system will be turned off.


NOTE:

If you turn off the cruise control system, the previously set speed in the memory is cleared. Reset your cruising speed again.


Speed limiter (if equipped)


The speed limiter allows you to choose a maximum speed that you do not wish to exceed.

Setting maximum speed

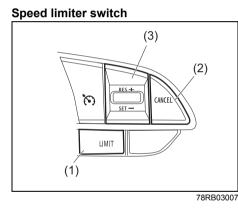

- (1) "LIMIT" switch
- (2) "CANCEL" switch
- (3) "RES +/SET -- " switch

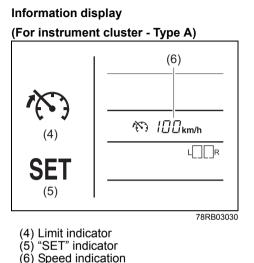

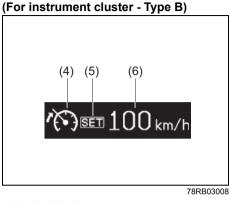

- (4) Limit indicator(5) "SET" indicator
- (6) Speed indication
- Turn on the speed limiter system by pushing "LIMIT" switch (1). When the limit indicator (4) appears in the information display, you can set the maximum speed.
- 2) Accelerate or decelerate to the desired speed.
- Pull down the "RES +/SET –" switch (3), "SET" indicator (5) appears in the information display. The current vehicle speed is set as the maximum speed.

NOTE:

If you pull down the "RES +/SET –" switch (3) when the vehicle speed is less than 30 km/h or 20 mph, the maximum speed will be set to 30 km/h or 20 mph.

Exceeding maximum speed

You can exceed the maximum speed temporarily by quickly depressing the accelerator pedal all the way down. While the vehicle speed is exceeded, the speed indication (6) on the information display will flash and the buzzer will sound briefly. If the accelerator pedal is released to return below the maximum speed, the speed indication (6) will stop flashing and then stay lit, and the function will restore.

NOTE:

- When you depress the accelerator pedal slowly, the vehicle speed may not exceed the maximum speed. If you wish to exceed the maximum speed, depress the accelerator pedal all the way down quickly or push "CANCEL" switch (2) to cancel the maximum speed temporarily.
- The speed indication (6) will also flash and the buzzer will sound if the speed limiter cannot prevent the vehicle from exceeding the maximum speed in such cases as when going down a steep hill, or under excessive acceleration. In this case, decelerate to return below the maximum speed using the brake pedal.

Changing speed setting

Setting to the current speed

- 1) Push "CANCEL" switch (2).
- 2) Accelerate or decelerate to the desired speed.
- Pull down the "RES +/SET –" switch (3), "SET" indicator (5) appear in the information display. The current vehicle speed is set as the maximum speed.

Using "RES +/SET -" switch

To change to a faster speed, press repeatedly or hold pulling up the "RES +/SET -" switch (3).

To change to a slower speed, press repeatedly or hold pulling down the "RES +/SET –" switch (3).

NOTE:

- You can adjust the set speed by 1 km/h (or 1 mph) by pulling up and down "RES +/SET –" switch (3) quickly.
- You can adjust the set speed by 5 km/h (or 5 mph) by pulling up and down and holding "RES +/SET –" switch (3).
 - (e.g. 62 Km/h (or 42 mph) > 65 Km/h (or 45 mph) > 70 Km/h (or 50 mph), etc)
- If the current vehicle speed exceeds the maximum speed when changing to the slower speed using "RES +/SET –" switch (3), the speed indication (6) will flash and the buzzer will sound.

Canceling speed limiter

- To cancel the speed limiter, push "CAN-CEL" switch (2). The set indicator (5) will disappear.
- To resume the previously set speed, pull up the "RES +/SET –" switch (3) and show "SET" indicator (5).

To turn off the speed limiter system, push "LIMIT" switch (1) and check that limit indicator (4) disappears.

Also, you can turn off the speed limiter by turning off the engine.

NOTE:

If you turn off the speed limiter system, the previously set speed in the memory is cleared. Set your speed again.

SUZUKI SAFETY SUPPORT (if equipped)

Dual sensor brake support

Dual sensor brake support is a system that detects a vehicle or a pedestrian in front of your vehicle by the dual sensor, attempts to avoid a collision by giving warning to the driver, and attempts to reduce damage in the event of a collision.

WARNING

- Dual sensor brake support has limits and may not function properly depending on the driving conditions. Do not rely excessively on the system and always drive in a safe manner.
- For safety reasons, do not check the operation of the system by yourself.
- Check that all passengers fasten their seat belts when the vehicle is being operated.


When the system is activated, there is a risk of serious injury from being thrown.

NOTE:

- While the system is working, if a vehicle in front of you moves outside the dual sensor's detection field or the vehicle can no longer be detected, the system may stop functioning.
- While the system is working, a braking sound may be heard even if you do not depress the brake pedal, but this is normal.
- As the function of the dual sensor brake support is different depending on some destinations or areas, there are type of vehicles with the function not to detect the pedestrians.


Frontal collision warning

When there is a risk of a frontal collision, a warning will be given through the information display and sound.

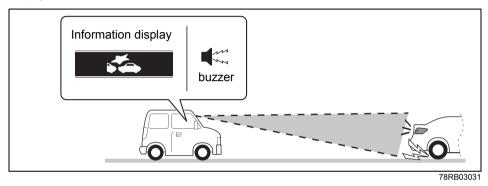


Brake assist system

When there is high probability of a frontal collision, the brake assist system provides more powerful braking when you slam down on the brake pedal. Brake assist system might work at the same time as automatic brake system.

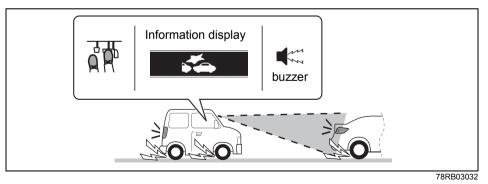

Automatic brake system

When a frontal collision is unavoidable, the brakes will powerfully operate automatically. (#1)

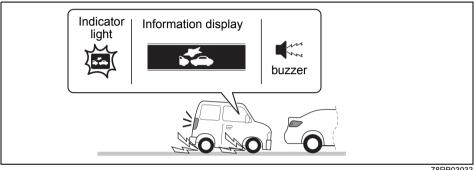



(#1) After the vehicle has been stopped by the automatic brake system, the interior buzzer will continue to beep until the automatic brake system is released. Also, the indication on the information display and the dual sensor brake support indicator light will go off 3 seconds after the automatic brake system is released.

A CAUTION

After the vehicle has been stopped by the automatic brake system, immediately depress the brake pedal. If your vehicle is equipped with the automatic transmission, and when the automatic brake system is released, the vehicle will start to move by the creeping function. This may result in an accident.

NOTE:

If you do not depress the clutch pedal when the vehicle has been stopped by the automatic brake system, the engine will stall.

Situations where the system does not activate

Under the following situations, the system does not activate.

- When the engine is off
- When dual sensor brake support indicator light and lane departure warning indicator light are initially lighting immediately after the ignition switch is turned to "ON".
- When the gearshift lever is in reverse gear
- When the ESP[®] system is activated (except the frontal collision warning)
- When the following switches are pushed and the system is turned off:
 - Dual sensor brake support OFF switch
 ESP[®] OFF switch
- When the dual sensor is temporarily stopped or malfunctioning

Situations where the system may not activate properly

Under the following situations, the system may not activate.

• When the dual sensor cannot detect a vehicle or a pedestrian in front of your vehicle

Refer to "Handling dual sensor" in the "OPERATING YOUR VEHICLE" section.

When you take evasive action with the steering wheel or accelerator pedal

Situations where the vehicle may not decelerate properly


Under the following situations, the vehicle may not decelerate properly even when the system is activated.

- When the outside temperature is low, or when the temperature of the brake is low such as right after starting
- When the brake is overheating and the brake effect is deteriorated due to continuing to travel on a downhill road
- When the brake effect is deteriorated due to passing over puddles or washing the vehicle
- When driving on the following roads
 - On sharp curves or extremely rough surfaces
 - On a steep slope
- When driving on the following slippery surfaces
 - Frozen or snow-covered surfaces
 - Over manholes or metal construction plates
 - Gravel
- When driving in a rainy day

Situations where the system may activate by chance


Under the following situations, the dual sensor may judge that there is a vehicle or a pedestrian in front of you, and the system may activate. Drive carefully and calmly.


- When passing through a toll booth with more than recommended speeds
- Before the parking lot gates or railroad crossing gates are opened fully
- When operating on hills that have varying slopes
- When you suddenly accelerate and approach the vehicle in front of you or on neighboring lane
- Front visibility is poor due to that there is water vapor, sand or smoke or when the vehicle in front of you or on oncoming lane is surrounded by exhaust gas, water or snow
- When passing through masses of water vapor or smoke
- When stopping close to an obstacle in front of you
- When passing through near a vehicle or obstacle

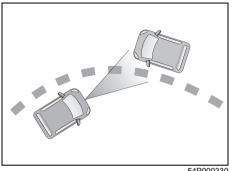

54P000330

· When you pass by an oncoming vehicle on a curvy road

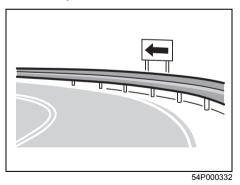

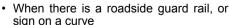

 When you pass by an oncoming vehicle that is stopped to make a right/left turn


- When you pass by an oncoming vehicle when you turn to the right / left
- When the posture of the vehicle is changing by the road surface of the undulation and uneven
- When there is objects protruding from the road's surface, manhole covers, signs and other metal objects, as well as falling objects or level changes in the road
- · When there is a parking lot gates, toll gates, railroad crossing gates or signboards in the direction of travel.
- · When driving in the field covered with arown arass
- When the posture of the vehicle is changing
- · When the mounting position of the dual sensor is shifted by strong impact
- When you pass under an object (grade separation, road sign, billboard, street lamp, etc.) at the top of an uphill road
- When there are paint or patterns on the road or the wall that may be indistinquishable from a vehicle

Frontal collision warning

There is a risk of a frontal collision and a warning will work under the following situations.

- When you are operating at speeds between approximately 15 km/h to 140 km/h (9 mph to 87 mph).(For pedestrian, operating speed is between approximately 15 km/h to 60 km/h (9 mph to 37 mph).)
- The relative speed between your vehicle and the vehicle or pedestrian ahead is approximately 15 km/h (9 mph) or more.

The interior buzzer will intermittently beep and the indication on the information display will appear.

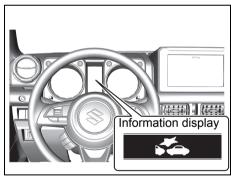

78RB03034


When the frontal collision warning sounds, depending on the distance from the vehicle in front of you and driving conditions, take evasive action with the steering wheel or brake pedal.

Brake assist system

Under the followings and there is a high probability of a frontal collision, the brake assist system provides more powerful braking when you slam down on the brake pedal.

- When you are operating at speeds between approximately 15 km/h to 80 km/h (9 mph to 50 mph).(For pedestrian, operating speed is between approximately 15 km/h to 60 km/h (9 mph to 37 mph).)
- The relative speed between your vehicle and the vehicle or pedestrian ahead is approximately 15 km/h (9 mph) or more.

When the brake assist system activates, the frontal collision warning also activates at the same time.

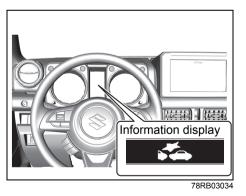


Automatic brake system

Under the followings and a frontal collision is judged to be unavoidable, the brakes will powerfully operate automatically.

- When you are operating at speeds between approximately 5 km/h to 100 km/h (3 mph to 62 mph).(For pedestrian, operating speed is between approximately 5 km/h to 60 km/h (3 mph to 37 mph).)
- The relative speed between your vehicle and the vehicle or pedestrian ahead is approximately 5 km/h (3 mph) or more.

When the automatic brake system is activated at a speed of approximately 50 km/h (31 mph) or under toward the vehicle in front of you (or toward the pedestrian, approximately 30 km/h (19 mph) or under), collisions may be avoidable.

While the automatic brake system is activating, the interior buzzer will continuously beep, the dual sensor brake support indicator light will blink rapidly, the indication on the information display will appear, and the brake lights will come on.

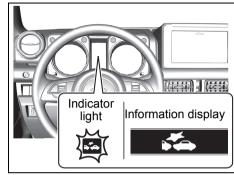

78RB03035


NOTE:

The indication on the information display and the dual sensor brake support indicator light will go off after approximately 3 seconds after the automatic brake system is released.

Lane departure warning

When you are operating at a speed of approximately 60 km/h (37 mph) or over and the dual sensor judges that your vehicle is to deviate from the running lane, the following warnings will work.

- The lane departure warning indicator light will blink
- · A message will appear on the information display
- · The steering wheel will vibrate

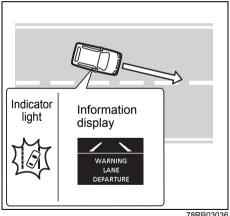

78RB03036

WARNING

- The lane departure warning may not be suitable for every situation. Also, the system is not designed to avoid the lane deviations automatically. Do not rely excessively on the system and always drive in a safe manner.
- Depending on road surface conditions, you may not feel the vibration of the steering wheel even when the lane departure warning works.
- For safety reasons, do not check the operation of the system by vourself.

Situations where the system does not activate

Under the following situations, the system does not activate.

- · When dual sensor brake support indicator light and lane departure warning indicator light are initially lighting immediately after the ignition switch is turned to "ON"
- When the following switches are pushed and the system is turned off:
 - Lane departure warning OFF switch
 - ESP[®] OFF switch
- When operated the hazard warning switch
- · When the dual sensor is temporarily stopped or malfunctioning

· When the system judges that the intentional lane change, such as during or after flashing the turn signal lights

Situations where the system may not activate properly

Under the following situations, the system may not activate.

- When you suddenly close to the partition lines
- · When driving on sharp curves
- When you do not return to inside of the lane after the lane departure warning is activated
- · When the electric power steering light comes on

If the dual sensor cannot detect partition lines except for above situations, the system may also not activate. Refer to "Situations where the dual sensor may not activate properly" in this section for details.

Situations where the system may activate by chance


Under the following situations, the system may activate.

- When there are a lot of lines in the running lane
- When there is a shadow (for example, the shadow of the guardrail) parallel to the partition line
- · When partition line is in the shadows
- When partition lines are drawn doubly
- When there is a liner paint on the road of a construction zone because the previous line has not been erased completely
- When there is repair marks on the road or a boundary between asphalt and snow
- When there is tyre marks on snow-covered or wet road
- When driving in the place without partition lines (such as a tollgate or checkpoint, or at an intersection, etc.)
- When driving on the road diverges, merges, etc.
- When driving on an unpaved or rough road

Vehicle swaying warning

When you are operating at a speed of approximately 60 km/h (37 mph) or over and the vehicle swaying warning judges that your vehicle is unsteadiness by detecting the meandering patterns or lane departure warning is activated in a short period of time in a row following warnings will work.

- The lane departure warning indicator light will blink
- A message will appear on the information display
- The interior buzzer will intermittently beep

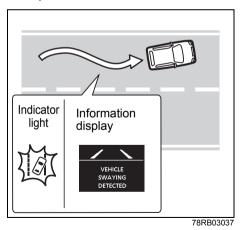

MARNING

- The vehicle swaying warning may not be suitable for every situation. Also, the system is not designed to avoid the unsteadiness of the vehicle automatically. Do not rely excessively on the system and always drive in a safe manner.
- For safety reasons, do not check the operation of the system by yourself.

NOTE:

Vehicle swaying warning by the meandering pattern of the vehicle in the lane is judged based on the driving data over the past several tens of minutes, so the system does not activate when right after swaying.

Situations where the system does not activate

Under the following situations, the system does not activate.

- When dual sensor brake support indicator light and lane departure warning indicator light are initially lighting immediately after the ignition switch is turned to "ON".
- When the following switches are pushed and the system is turned off:
 - Lane departure warning OFF switch
- ESP[®] OFF switch
- When the dual sensor is temporarily stopped or malfunctioning

Situations where the system may not activate properly

Under the following situations, the system may not activate.

Right after lane changing

If the dual sensor cannot detect partition lines except for above situations, the system may also not activate. Refer to "Situations where the dual sensor may not activate properly" in this section for details.

High beam assist

After the auto high beam switch operation, head light is turned ON with the lighting control lever on "Auto" position when the ambient becomes dark, the system is activated. When the high beam assist is activated, high beam assist indicator light (green) comes on.

Under the any of following situations, the low beam turns on.

- When vehicle speed is approximately 35 km/h (21.7 mph) or under
- When the front of the vehicle is bright
- When the vehicle in front of you turned on the lights
- · There are many street lamps in front of you

Under the all of the following conditions are met, the high beams (main beams) turns on.

- When vehicle speed is approximately 40 km/h (24.9 mph) or over
- When the front of the vehicle is dark
- · When the vehicle in front of you is driving without lights
- There is few street lamps in front of you

WARNING

• High beam assist has limits and may not function properly depending on the surrounding environment.


Always drive in a safe manner, switch manually to the low beams and high beams (main beams), if necessarv.

· Switching of the low beams and high beams (main beams) it might not match the feeling of the driver.

NOTE

- Light vehicle such as a bicvcle might not detect.
- When the sudden acceleration, high beam assist might not operate for a few seconds, even if vehicle speed exceeds 40km/h (24.9 mph).


How to use High beam assist

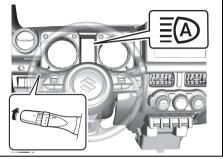

78RB03009

When the ignition switch is turned to "ON", switch the lighting control lever to "AUTO" position and then push this lever forward. High beam assist indicator light comes on in green.

To cancel the function, pull the lever toward you.

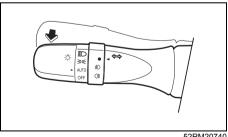

52RM20740

Situations where the system does not activate

• When the high beam assist warning light (orange) comes on by the temporary stop or malfunction of system.

NOTE:

When the function of the dual sensor brake support is temporarily stopped, high beam assist will be temporarily stopped. Refer to "Temporary stop or failure of the dual sensor" in this section for details.

 When high beam assist warning light (orange) is initially lighting immediately after the ignition switch is turned to "ON".

Under the following situations, high beam may not automatically switched to low beam.

- When you pass by an oncoming vehicle on a curvy road where the visibility is poor
- When another vehicle crosses in front of you
- When the vehicle in front of you glimpses due to continuous curves, medial strip or street trees
- When the vehicle in front of you approaches towards you from the far lane
- When the vehicle in front of you is driving without lights

For the following cause, there is case where the switching timing of the high beam and low beam is varied.

- When the lights of the vehicle in front of you is dark
- When only one side of the lights of the vehicle in front of you is turned on
- The directions and movements of the vehicle in front of you
- When the vehicle in front of you is a motorcycle
- When driving on the following roads
 - On sharp curves or extremely rough surfaces
 - On a steep slope
- When your vehicle is weighed down by heavy items in the luggage compartment or rear seat

Under the following situations, the brightness of the surrounding area can not be detected accurately, and there is a case where the high beam is a nuisance to pedestrians or the vehicle ahead, or low beam will remain to continue.

In these cases, change high beam or low beam manually.

- When lights are similar to headlights or taillights are around
- When the vehicle in front of you is driving without lights
- When the headlights of oncoming vehicle are covered in dirt or discolored
- When the optical axis of the headlight of oncoming vehicle is deviated
- When the brightness is changed extremely and continuously
- When driving on an undulated or bumpy road
- When driving on the road with a lot of curves
- When there are things that strongly reflect light, such as road signs or mirrors in front of the vehicle
- When the rear part of the preceding vehicle strongly reflects light, such as containers
- When the headlights of your car are damaged or covered in dirt
- When the vehicle is tilted due to the flat tyres or being towed

Other than the described above, the dual sensor cannot be detected the vehicle in front of you or light source, and there is a case where high beam assist may not activate properly.

Refer to "Situations where the dual sensor may not activate properly" in this section for details.

Under the following situations, switch high beam or low beam manually.

- When switching back and forth between the high beams (main beams) and low beams frequently
- When there is a problem using the high beams (main beams)
- When it is considered disturbing to other drivers or pedestrians

There is a case where high beams (main beams) is switched to low beams by the fog lights of the vehicle in front of you.


Street lights, traffic signals, and illumination of billboards or signs may cause the high beams (main beams) to switch to the low beams, or low beam to remain on.

Dual sensor brake support OFF switch

You can turn off the dual sensor brake support system.

- In the following situations, push and hold the dual sensor brake support OFF switch as unexpected dangers may be possible if it is activated.
 - When the vehicle is placed upon a tester such as when undergoing a vehicle inspection
 - When the vehicle is put up on a lift, and the tyres are idling
 - When the vehicle is being towed
 - When the vehicle is being carried on a car carrier
 - When the vehicle is being operated on a race track
 - When there is vinyl curtains or pendulous branches in front of the vehicle
 - When driving in the field covered with grown grass
 - When using an automatic car washer
 - When the vehicle is placed upon a car elevator or placed in a mechanical parking lot
 - With a spare tyre or snow chains equipped
 - When you have a temporarily repaired flat tyre
 - When you have an accident or breakdown
 - When the automatic brake system is activated frequently

- When tyres are not inflated to the recommended tyre pressure
- With worn tyres equipped
- With non-specified sized tyres or wheels equipped
- With a modified suspension equipped
- When attaching an item which interferes with the visibility of the dual sensor
- When the vehicle is being weighed down by heavy items
- When the vehicle is used to tow a trailer

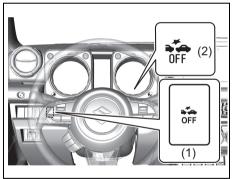

78RB03010

 When you want to turn off the system, push and hold the dual sensor brake support OFF switch (1) until the interior buzzer beeps and the dual sensor brake support OFF indicator light (2) comes on.

Perform the following method to turn the system back on.

- Push and hold the dual sensor brake support OFF switch (1) until the interior buzzer beeps and the dual sensor brake support OFF indicator light (2) goes off.
- Turn off the engine and then turn it on again.


WARNING

If you attempt to press the dual sensor brake support OFF switch while driving, you could lose control of the vehicle.

Do not press the dual sensor brake support OFF switch while driving.

Lane departure warning OFF switch

You can turn off the lane departure warning and the vehicle swaying warning.

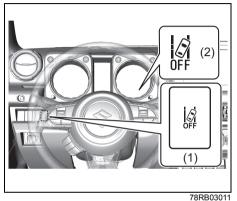

- When you want to turn off the system,
- push and hold the lane departure warning OFF switch (1) until the interior buzzer beeps and the lane departure warning OFF indicator light (2) comes on.

Perform the following method to turn the system back on.

 Push and hold the lane departure warning OFF switch (1) until the interior buzzer beeps and the lane departure warning OFF indicator light (2) goes off.

If you attempt to press the lane departure warning OFF switch while driving, you could lose control of the vehicle.


Do not press the lane departure warning OFF switch while driving.

NOTE:

Once the system is turned off, it does not turn on automatically, even if you turn off the engine and then start the engine again. To turn the system back on, push the switch again.

Traffic sign recognition (if equipped)

When the vehicle with the dual sensor passes the traffic sign, the traffic sign is shown on the information display on the cluster meter in order to notify the driver. This system may not work properly outside Europe.

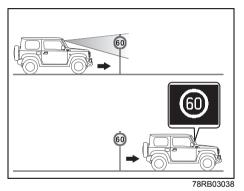

A WARNING

The function of the traffic sign recognition has limits and may not function properly depending on the driving conditions of circumstances. Do not rely excessively on this function and always drive in a safe manner. NOTE:

- The traffic sign may be shown with delay on the information display depending on the circumstances and conditions of the vehicle
- The number of the traffic sign for this function shows up to three signs on the information display
- The traffic signs are disappeared on the information display under the following situations
 - When the vehicle was run in constant distance after showing the traffic signs on the information display (except for regulation end sign),
 - When a period of time passed after the traffic signs on the information display (only for regulation end sign),
 - When turning right or left with the turn signal lights blinked,
 - For manual transmission vehicle, the gearshift lever is in "R" position, for automatic transmission vehicle, the gearshift lever is in "P" or "R" position (except for speed limit sign).
- To change the traffic sign recognition setting, select "Sign recog." in "Setting mode" on the information display. Then, select "ON" or "OFF"

- When the ignition switch was turned "OFF" with the speed limit sign shown on the information display and then the ignition switch is turned "ON" again, the information display shows the same speed limit sign the last time the ignition switch was turned "OFF"
- When you drive in the area where unit of velocity is changed, the traffic signs may not be appeared or the different traffic signs may be appeared on the information display after passing the actual traffic signs. This is not a malfunction. The display will be resumed after driving for a while.
- The speed limit sign on the information display that is higher or lower than the actual limited speed sign may be displayed for the speed limit sign

Situations where the system does not activate

Under the following situations, the system does not activate.

- When the engine is off
- When dual sensor brake support indicator light and lane departure warning indicator light are initially lighting immediately after the ignition switch is in "ON" position
- For manual transmission vehicle, the gearshift lever is in "R" position, for automatic transmission vehicle, the gearshift lever is in "P", "R", or "N" position
- When the dual sensor is temporarily stopped or malfunctioning
 When the ESP[®] OFF switch is pushed
- When the ESP[®] OFF switch is pushed and the system is turned off
- When the traffic sign recognition is turned off by operating the setting mode of information display
- · When parking brake is applied
- When you drive in the area that there are no speed limit signs and has speed limit

Types of recognized traffic signs

Information message	Type of the traffic sign	
	Speed limit begins/ends	
$\odot \mathfrak{S}$	No overtaking begins/ends	
	Supplemental mark exists	Speed limit with supplemental mark (Displayed simultaneously with speed limit)
		(Display example)
\bigcirc	All canceled (All restrictions canceled. Returns to default road regulation.)	


NOTE:

• The above traffic signs are representative examples. The traffic signs may be different in every country.


Situations where the dual sensor may not activate properly

There may be high possibility not to detect the traffic signs by the dual sensor under the following situations. Also the function of the dual sensor may be stopped temporarily. When the situations are improved, the temporary stop of the function will be canceled.

- When there is bad weather such as heavy rain, fog or a blizzard
- When the dual sensor is hit by a bright light such as sunlight or the headlight of oncoming vehicle
- When there is a sight of similar tone and color such as a snowscape
- When the vehicle runs on the road which became bright by the reflected light,
- When there are no lights or lamps as street lamps, etc around in the dark
- Front visibility is poor due to that there is water vapor, sand or smoke or when the vehicle in front of you is surrounded by exhaust gas, water or snow
- When you drive in the dawn, the dusk and the night or when you drive in a dark place as an indoor parking lot
- When the vehicle direction to go ahead or the vehicle position was largely changed (for example, the lane change, left turn, or right turn),
- When the windshield is covered in fog, snow, ice or dirt

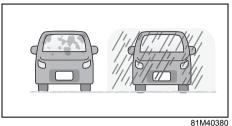

- · When raindrop, water or dirt on the windshield is not wiped up enough
- While using the windshield washer
- When a wiper blade other than SUZUKI genuine parts, including short type wiper blade is used
- · When the tyres are not inflated to the recommended type inflation pressure or when the tyres except the assignment size are equipped.

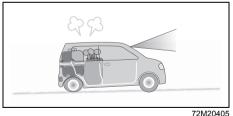



· When your vehicle is weighed down by heavy items in the luggage compartment or rear seat

- When the headlights are covered in dirt. snow, ice or mud
- · When the optical axis of the headlight is deviated
- When the brightness changes extremely (for example, passing the entrance or exit of tunnel).
- · When the vehicle is swaying on the rough roads (for example, unevenness roads or stone pavement roads) and the visibility of the monocular camera is unstable.
- · There may be a case to display the traffic sign irrelevant to the vehicle, the traffic sign that is not existed around the vehicle under the following situations.
 - When the traffic sign is existed on the branched road, the junction or the adjacent lane near the road that the vehicle is moving.
 - When there are similar things to the color and the object of the traffic sign (for example, the similar traffic sign, the signboard or the structures)
 - When the vehicle that the decal or sticker like the traffic sign is pasted on is existed in front of your vehicle, or when you overtake such a vehicle,
 - When the traffic sign is in front of the vehicle on the roundabout.

NOTE:

- The traffic sign may be continued to display on the information display under the following situations. Drive safely according to the actual traffic rules.
 - When you drive in the area where the different speed limit is established even though there is no speed limit sian.
 - When you drive in the area where the end of traffic regulation is indicated by the lane on the road even though there is no traffic sign to indicate the end of the traffic regulation,

Situations where the dual sensor cannot be detected accurately by the positions or conditions of the traffic signs

The detection of traffic sign may be done with delay or there may be a possibility to occur no detection or inaccurate detection of the traffic sign including the supplemental mark under the following situations.

- When the traffic sign is dirt and hidden by the leaves of the tree or the vehicle in front of your vehicle and then it is hard to recognize the traffic sign.
- When the circumstance of the traffic sign is complicated and it is hard to recognize the traffic sign.
- · When the traffic sign is far from the vehicle.
- · When the traffic sign is bended or deformed.
- · When the color of the traffic sign is faded.

OPERATING YOUR VEHICLE

- When the direction of traffic sign is changed,
- When the traffic sign is damaged,
- When the traffic sign is aimed diagonally to the vehicle,
- When the signboard, the poster or traffic information signboard is installed on the top or bottom of it,
- When the object as mud, snow or the ice is attached on the traffic sign,
- When there is a traffic sign on a corner or a curve,
- When there is a traffic sign where light of the headlight is hard to reach,
- When the traffic sign is hard to recognize due to the illumination on the roads or the shadow of the building,
- When the size of the traffic sign is small,
- When the traffic sign is a lighting type,
- When the traffic sign is assimilated into the building on the background and it is hard to recognize the traffic sign,
- When there is a hidden or rubbed part on the traffic sign and the traffic sign is hard to recognize,
- When the traffic sign is reflected by the strong light (for example, backlight or headlight) and the dual sensor cannot detect accurately,

NOTE:

There may be a possibility to detect the supplemental mark inaccurately or not to detect it as the traffic sign by the situations around the vehicle.

Handling dual sensor



(1) Dual sensor

WARNING

The detection performance of the dual sensor has limits and the dual sensor cannot detect all vehicles, pedestrian, object of the high beam assist (such as the lights of the vehicle in front of you, street lamps, etc.), partition lines or traffic sign. Do not rely excessively on the system and always drive in a safe manner.

- Observe the following instructions in order to keep the dual sensor functioning properly. If mishandled, the dual sensor cannot accurately detect a vehicle, a pedestrian, an object of the high beam assist (such as the lights of the vehicle in front of you, street lamps, etc.) or partition lines in front of you, the system will not function properly and accidents may occur.
 - Do not touch the lens of the dual sensor.
 - Do not clean the lens of the dual sensor by yourself.
 - Do not strike the body of, or any surrounding parts of the dual sensor.

(Continued)

WARNING

(Continued)

- Do not remove or disassemble the dual sensor.
- Do not stick or affix anything to the lens of the dual sensor, not even clear items.
- When the windshield around the dual sensor is deformed or damaged, or the windshield in front of the dual sensor is cracked because of an accident. the dual sensor cannot detect an obstacle in front of you, a pedestrian, an object of the high beam assist (such as the lights of the vehicle in front of you. street lamps, etc.), partition lines or traffic signs properly. If driving with these damaged parts, the dual sensor brake support will not function properly and accidents may occur. Operate the dual sensor brake support OFF switch to turn off the dual sensor brake support, and ask a SUZUKI dealer to have them inspected.

(Continued)

WARNING


(Continued)

• Do not apply any accessories (other than SUZUKI genuine accessories), films or stickers to the area listed below. These may affect with visibility of the dual sensor. If the area of the dual sensor is obstructed, the dual sensor cannot detect any vehicles, pedestrians, objects of the high beam assist (such as the lights of the vehicle in front of you, street lamps, etc.), partition lines or traffic signs properly and the dual sensor brake support may not function properly. Also, if applying them to an area other than the prohibited area, it may affect with the function of the dual sensor by reflection of light or an image. In this case, move them to another place.

- On windshield

A WARNING

- Do not remove or disassemble laser sensor parts of dual sensor.
- Do not look into irradiation portion of dual sensor by using the optical instrument such as magnifying glass, the objective glass, etc at distance within 10 cm (3.9 inch) from dual sensor when the ignition switch is turned to "ON". Your eyes might be damaged by laser.

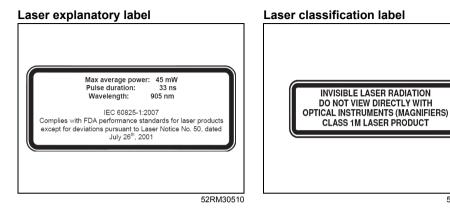

Laser emission data


Maximum average power: 45 mW Pulse duration: 33 ns Wave length: 905 nm Divergence (horizontal × vertical): 28° × 12°

NOTE:

The detection of the vehicle and an obstacle in front of you, partition lines on the road by the dual sensor is limited within the visual range. It also takes several seconds to detect and activate the alert after an object is appeared in the visual range of the dual sensor. 52RM30520

A WARNING

Do not stick a sticker or a film (including transparent thing) on the front of dual sensor of the outside windshield as shown in the below illustration.

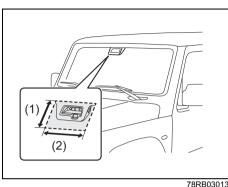

(1) (2) Prohibited area

The prohibited area (1) and (2) are shown as below.

- From top edge of windshield to dual sensor approximately 10 cm (3.9 inch) below of the bottom end of dual sensor
- (2) Approximately 20 cm (7.8 inch) from the center of dual sensor to right and left approximately 10 cm (3.9 inch)


A WARNING

Do not stick a sticker or a film (including transparent thing) below the dual sensor camera inside the windshield shown as following illustration. When there is a large temperature gap between inside of the vehicle and outside air (such as winter), windshield is easy to fog. If the front portion of dual sensor on the windshield is fogged up or covered with condensation or ice, dual sensor brake support may not activate temporarily. In this case, use the front defroster to remove the fog, etc.


When cleaning inside of the windshield, do not adhere the glass cleaner to lens.

Temporary stop or failure of the dual sensor

The following chart shows the temporary stop or failure of the dual sensor.

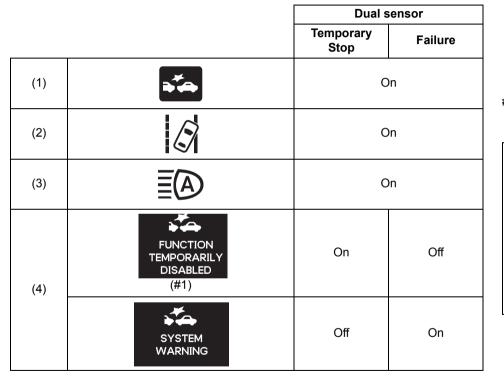

- (1) Dual sensor brake support indicator light
- (2) Lane departure warning indicator light
- (3) High beam assist warning light (orange)
- (4) Indication of information display
- #1: Depending on the cause of the temporary stop or failure, the following message may appear simultaneously.

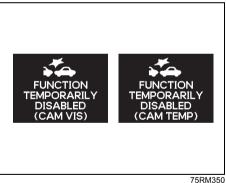

NOTE:

When the function of the dual sensor is temporarily stopped or malfunctioning, all of following functions will be turned off.

- Dual sensor brake support
- Lane departure warning
- Vehicle swaying warning
- High beam assist
- Traffic sign recognition

Temporary stop of the dual sensor

Under the following situations, the function of the dual sensor stops temporarily. When the situations are improved, the temporary stop of the function will be canceled.

• When the visibility of the dual sensor is poor

Refer to "Situations where the dual sensor may not activate properly" in this section for details.

- When the temperature of the body of dual sensor is high
- When the systems related to the dual sensor brake support are stopped temporarily
- When the battery has a voltage abnormality

Failure of the dual sensor

When the dual sensor is faulty, the function of the dual sensor is stopped until the ignition switch is turned to "LOCK".

Find a safe place to park and turn the ignition switch to "LOCK".

Restart the engine, and check that the dual sensor brake support indicator light, lane departure warning indicator light, and high beam assist warning light go off.

• If all of the indicators stay on after restarting the engine, there may be a failure of the dual sensor. Ask a SUZUKI dealer to have the dual sensor inspected.


NOTE:

- Under the following situations, the dual sensor brake support indicator light, lane departure warning indicator light, and high beam assist warning light come on after the engine has been started, it does not indicate a malfunction. Once the ignition switch to is turned to "LOCK" position and then the engine is restarted, these indicators will go off.
 - When the automatic brake system has been operating 3 times
 - When the automatic brake system has been operating for long periods

 The function of the dual sensor is stopped if the dual sensor brake support indicator light, lane departure warning indicator light, and high beam assist warning light come on and there may be a failure of the dual sensor, but it does not hinder normal driving.

Pedestrian detection

The dual sensor detects pedestrians by whose size, shape or motion.

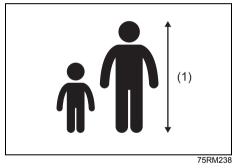

(1) About 1 – 2 m (3.3 – 6.6 ft)

WARNING

Even when the detection conditions are satisfied, not all pedestrians may be detected by the dual sensor.

In the following situations, there may be a high possibility of undetectable or delay of detection. Always drive in a safe manner.


- · A person who walks in a group
- A person who walks beside a wall or another obstacle
- A person who has an umbrella up
- A person whose color is similar to the background and who is blended into the scenery
- A person who has a big luggage
- A person who walks with a stoop or who crouches.
- A person who is lying down
- A person who is in a dark place
- A person who jumps out in front of you
- A person at night

NOTE:

As the function of the dual sensor brake support is different depending on some destinations or areas, there are type of vehicles with the function not to detect the pedestrians.

Situations where the dual sensor may not activate properly


In the following situations, there may be a high possibility that the dual sensor cannot detect a vehicle, a pedestrian, an object of the high beam assist (such as the lights of the vehicle in front of you and street lamps, etc.), partition lines or traffic sign. Also the function of the dual sensor may be stopped temporarily. When the situations are improved, the temporary stop of the function will be canceled.

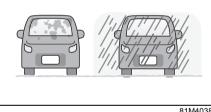

81M40380


- When there is bad weather such as heavy rain, fog or a blizzard
- When the dual sensor is hit by a bright light such as sunlight or the headlight of oncoming vehicle
- When there is a sight of similar tone and color such as a snowscape
- When there is a dark place and no landmark around
- When front visibility is poor due to that there is water vapor, sand or smoke or when the vehicle in front of you is surrounded by exhaust gas, water or snow

- When your vehicle gets close to an object in a dark place such as at dusk, at dawn or an indoor parking lot
- When the windshield is covered in fog, snow, ice or dirt
- When raindrop, water or dirt on the windshield is not wiped up enough
- · While using the windshield washer
- When a wiper blade other than SUZUKI genuine parts, including short type wiper blade is used
- When lens of dual sensor is dirty or damaged

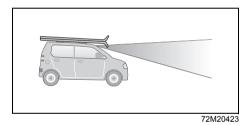

- When the vision of the dual sensor is obstructed with the followings:
 - A sticker or film on the windshield
 - An accessory on the windshield
 - A crack or scratch of the windshield
 - A long object such as a roof carrier or ski board on the roof

OPERATING YOUR VEHICLE

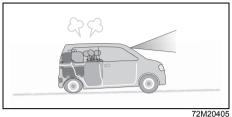




- When your vehicle is weighed down by heavy items in the luggage compartment or rear seat
- · When wheel alignment is deviated
- When the tyres are not inflated to the recommended tyre pressure or the tyres are worn
- With snow chains or non-specified sized tyres equipped
- When you have a temporarily repaired flat tyre
- With a modified suspension equipped
- When passing through the entrance or exit of the tunnel and the brightness is changed extremely
- When driving without lighting the headlights at night or in tunnels
- · When driving on the following roads
 - On sharp curves or extremely rough surfaces
 - On a steep slope
 - On seam of the road
- · When vehicle is swaying
- When the optical axis of the headlight is deviated

- With modified headlights and/or front fog lights equipped
- When the headlights are covered in dirt, snow, ice or mud


When the following types of a vehicle are in front of you, or when the following situations occur, the dual sensor may not detect a vehicle in front of you or may need more time to detect a vehicle.

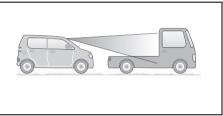

72M20407

- Vehicles in front of you have small, low, or uneven backs as shown below:
 - A track without side or back gates, and when mounting no luggage on the cargo bed
 - A vehicle with luggage protruding out from the back
 - A specially shaped vehicle such as a car carrier trailer or a motorcycle with side car
 - A low-slung vehicle
- When ground clearance of vehicle in front of you is extremely high.
- When a vehicle is oncoming or retreating vehicle

- · When a vehicle facing sideways
- When a vehicle in front of you without turning on the tail lights at night or in tunnels
- When a vehicle in front of you reflects sunlight strongly
- When there is a wall in front of the parked vehicle
- When there is another obstacle beside a vehicle

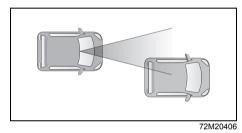

- When only a part of the vehicle in front of you is within the dual sensor detection field
- When the difference of speed between the vehicle in front of you and your vehicle is increased
- When the distance to the vehicle in front of you is short
- When the vehicle in front of you is difficult to reflect the laser beam
- · When driving on a curve
- · For a while after escaping from a curve
- When the vehicle in front of you turns, accelerates or decelerates suddenly
- · When a vehicle in front of you jumps out

 When you change the lane and approach the leading vehicle

When the following types of partition lines are in front of you, or when the following situations occur, the dual sensor may not detect the lines or may need more time to detect the lines.


- · The narrow lane width
- · When the lane is difficult to detect
 - No partition lines, or faded lines
 - The color of partition lines is similar to the road
 - The width of partition lines is narrow
 - The partition lines has blurred
 - There are road studs or stones
 - The partition lines can not be seen, or difficult to see due to sand, etc.
 - Driving on a road that is wet due to rain, after the rain, puddles, etc.
 - The partition lines drew on a curb
 - Driving on a road that is bright due to reflected light, etc.
- When the distance to the vehicle in front of you is short
- Immediately after the lane change, or immediately after passing through the intersection.

Emergency stop signal (ESS) (if equipped)

ESS stands for Emergency Stop Signal.

ESS is a feature that gives a warning to a following vehicle by flashing all turn signal lights faster than usual if all the following conditions are met. Also, within these conditions, it will flash along with your turn signal in the instrument cluster.

- When you slam down on the brakes at speeds of approximately 55 km/h (34 mph) or over.
- When the ABS is activated or when you suddenly brake similar to activating the ABS.

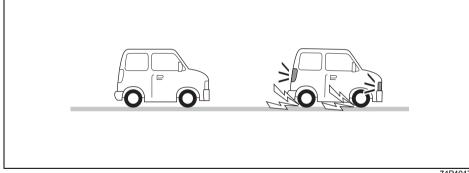

The ESS will stop functioning in the following situations:

- When you release the brake
- · When the ABS is no longer activated
- · When you turn on the hazard warning switch
- · When the car is no longer rapidly decelerating

WARNING


Although the ESS is designed to reduce the number of rear-end collisions that occur from sudden braking, by warning a following vehicle, it cannot prevent all collisions. Always make an effort to drive safely and avoid unnecessary sudden braking when stopping or decelerating.

NOTE:

- The ESS feature cannot be deactivated.
- Use of the hazard warning switch should be given preference over the ESS.
- When driving on the following surfaces and the ABS gives out momentarily, the ESS may not function.
 - When driving on slippery surfaces
 - When driving over bumps on the road such as highway joint seams

74P40170

Braking

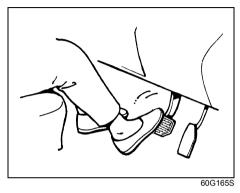

The distance needed to bring any vehicle to a halt increases with the speed of the vehicle. The braking distance needed, for example, at 60 km/h (37 mph) will be approximately 4 times greater than the braking distance needed at 30 km/h (19 mph). Start to depress the brake pedal when there is plenty of distance between your vehicle and the stopping point, and slow down gradually.

WARNING

If water gets into the brake devices, brake performance may become poor and unpredictable. After driving through water or washing the underside of the vehicle, test the brakes while driving at a slow speed to see if they have maintained their normal effectiveness. If the brakes are less effective than normal, dry them by repeatedly applying the brakes while driving slowly until the brakes have regained their normal effectiveness.

Power-assisted brakes

Your vehicle has power-assisted brakes. If power assistance is lost due to a stalled engine or other failures, the system is still fully operational on reserve power and you can bring the vehicle to a complete stop by pressing the brake pedal once and holding it down. The reserve power is partly used up when you depress the brake pedal and reduces each time the pedal is pressed. Apply smooth and even pressure to the pedal. Do not pump the pedal.

WARNING

Even without reserve power in the brake system, you can still stop the vehicle by pressing the brake pedal harder than normally required. However, the stopping distance may be longer.

Brake assist system

When you slam the brakes on, the brake assist system determines it to be an emergency stop and provides more powerful braking for a driver who cannot hold down the brake pedal firmly.

Anti-lock brake system (ABS)

ABS will help you avoid skidding by electronically controlling braking pressure. It will also help you maintain steering control when braking on slippery surfaces or when braking hard.


The ABS works automatically, so you do not need any special braking technique. Just push the brake pedal down without pumping. The ABS will operate whenever it senses that the wheels are locking up. You may feel the brake pedal move a little while the ABS is operating.

NOTE:

- The ABS will not work if vehicle speed is under about 9 km/h (6 mph).
- If the ABS system is activated, you may hear a clunking noise and/or feel pulsating in the brake pedal. This is normal and indicates that the brake fluid pressure is being controlled properly.
- You may hear an operation sound when you start the engine or after the vehicle begins to move. This means that the above systems are in the self-check mode. This sound does not indicate a malfunction.

WARNING

- On some types of loose surfaces (such as gravel, snow-covered roads, etc.), the stopping distance required for a vehicle with ABS may be slightly greater than the one required for a comparable vehicle with a conventional brake system. With a conventional brake system, skidding tyres are able to plow the gravel or snow layer, shortening the stopping distance. ABS minimizes this resistance effect. Allow for extra stopping distance when driving on loose surfaces.
- On regular paved roads, some drivers may be able to obtain slightly shorter stopping distances with conventional brake systems than with ABS.
- In both of the above conditions, ABS will still offer the advantage of helping you maintain directional control. However, remember that ABS will not compensate for bad road or weather conditions or poor driver judgment. Use good judgment and do not drive too fast.

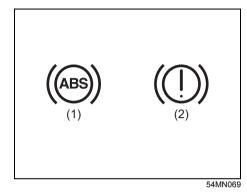

(1) ABS warning light

(2) Brake system warning light

WARNING

- If the ABS warning light (1) on the instrument cluster comes on and stays on while driving, there may be a problem with the ABS system. Ask a SUZUKI dealer to inspect the ABS system immediately. If the ABS system becomes inoperative, the brake system will function as an ordinary brake system that has no ABS.
- If the ABS warning light (1) and the brake system warning light (2) on the instrument cluster simultaneously stay on or come on while driving, both anti-lock function and rear brake force control function (proportioning valve function) of the ABS system may have failed. If so, the rear wheels may easily skid or the vehicle can even spin in the worst case when braking on a slippery road or when hard braking even on a dry paved road. Ask a SUZUKI dealer to inspect the ABS system immediately. Drive carefully, avoiding hard braking as much as possible.

How ABS works

A computer continuously monitors wheel speed. The computer compares the changes in wheel speed when braking. If the wheels slow suddenly, indicating a skidding situation, the computer will change braking pressure several times each second to prevent the wheels from locking. When you start your vehicle or when you accelerate after a hard stop, you may hear a momentary motor or clicking noise as the system resets or checks itself.

WARNING

The ABS may not work properly if tyres or wheels other than those specified in the owner's manual are used. This is because the ABS works by comparing changes in wheel speed. When replacing tyres or wheels, use only the size and type specified in this owner's manual.

Electronic stability program (ESP[®])

 $\mathsf{ESP}^{\texttt{®}}$ is a registered trademark of Daimler AG.

The Electronic Stability Program (ESP[®]) helps to control the vehicle during cornering if front wheels or rear wheels skid. It also assists you in maintaining traction while accelerating on loose or slippery road surfaces. It does this by regulating the engine's output, and by selectively applying the brakes. In addition, ESP[®] helps to avoid skidding by controlling braking pressure.

WARNING

The ESP[®] cannot enhance the vehicle's driving stability in all situations and does not control your vehicle's entire braking system. The ESP[®] cannot prevent accidents, including those resulting from excessive speed in turns, or hydroplaning. Only safe and attentive drive can prevent accidents. The capabilities of an ESP[®]equipped vehicle must never be used as a substitute for careful driving. The ESP[®] has the following three systems:

Stability control system

The vehicle stability control system helps provide integrated control of systems such as anti-lock brakes, traction control, engine control, etc. This system automatically controls the brakes and engine to help prevent the vehicle from skidding when cornering on a slippery road surface or when turning the steering wheel abruptly.

Traction control system

The traction control system automatically helps prevent the spinning of wheels when the vehicle is started or accelerated on slippery road surfaces. The system operates only if it senses that some of the wheels are spinning or beginning to lose traction. When this happens, the system operates the front or rear brakes and reduces engine power to limit wheel spin.

NOTE:

You may hear an operation sound when you start the engine or after the vehicle begins to move. This means that the above systems are in the self-check mode. This sound does not indicate a malfunction.

Anti-lock brake system (ABS)

ABS will help you avoid skidding by electronically controlling braking pressure. It will also help vou maintain steering control when braking on slippery surfaces or when braking hard. The ABS works automatically, so you do not have to use any special braking technique. Just push the brake pedal down without pumping. The ABS will operate whenever it senses that wheels are locking up. You may feel the brake pedal pulsate while the ABS is operating. (For more information on ABS, see "Braking" in this section.)

NOTE:

The ABS will not work if vehicle speed is under about 9 km/h (6 mph).

WARNING

- The ESP[®] may not work properly if tyres or wheels other than those specified in the owner's manual are used. When replacing tyres or wheels, use only the size and type specified in this owner's manual.
- The ESP[®] may not work properly if tyres are not inflated to the recommended tyre pressure.
- The ESP[®] may not work properly if tyres are fitted with snow chains.

(Continued)

WARNING

- (Continued) The ESP[®] may not work properly if the tyres are excessively worn. Replace tyres when the tread wear indicators in the grooves appear on the tread surface.
- The ESP[®] is not a substitute for winter tyres or snow chains on a snow-covered road.

WARNING

- The ESP[®] may not work properly if engine related parts such as the muffler are not equivalent to standard equipment or are extremely deteriorated.
- · Do not modify the vehicle's suspension since the ESP[®] may not work properly.

NOTE:

- If the ESP[®] system is activated, you may hear a clunking noise and/or feel pulsating in the brake pedal. This is normal and indicates that the brake fluid pressure is being controlled properly.
- You may hear an operation sound when you start the engine or after the vehicle begins to move. This means that the above systems are in the self-check mode. This sound does not indicate a malfunction.

OPERATING YOUR VEHICLE

The ESP[®] indicator lights are described below:

ESP[®] warning light



52KM133

This light blinks 5 times per second when one of the following systems is activated.

- Stability control system
- Traction control system
- Hill descent control system

If this light blinks, drive carefully.

When the ignition switch is turned to "ON" position, this light comes on briefly so you can check that the light is working.

NOTICE

If the ESP[®] warning light comes on and stays on while driving, there may be a malfunction of the ESP[®] systems (other than ABS). You should have the systems inspected by a SUZUKI dealer. NOTE:

When the ESP[®] warning light comes on and stays on while driving, indicating a malfunction of the ESP[®] systems (other than ABS), the brake system will function as an ordinary ABS with no additional ESP[®] functions.

ESP[®] OFF indicator light



57L30045


You should turn the $\mathsf{ESP}^{\mathbb{R}}$ on during your ordinary driving, so that you have the benefits of all of the $\mathsf{ESP}^{\mathbb{R}}$ systems.

It may be required to turn the ESP[®] systems (other than ABS) off if your vehicle is stuck in sand, mud, or snow, where wheel spin is necessary. NOTE:

- When the vehicle speed is greater than approximately 30 km/h (19 mph), the ESP[®] systems (other than ABS) will turn on automatically and the ESP[®] OFF indicator light will go out.
- When the transfer gear is in "4L" (4wheel drive low range) position, the ESP[®] systems (other than ABS) will be canceled to provide improved vehicle traction, and the ESP[®] OFF indicator light will come on.

When the transfer gear is in "4L" (4wheel drive low range) position, braketraction control can be activated. Braketraction control brakes the spinning wheel to distribute drive power to the other wheels for increased climbing ability or for better performance on a rolling hill or a slippery surface.

ESP[®] OFF switch

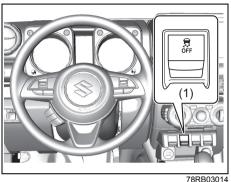

(1) ESP[®] OFF switch

activated.

When the ESP[®] OFF switch located at the instrument panel is pushed and held to turn off the $ESP^{\mathbb{R}}$ systems (other than ABS), the $ESP^{\mathbb{R}}$ OFF indicator light in the instrument cluster comes on. When you have turned the ESP[®] systems (other than ABS) off, turn them back on before resuming ordinary driving. When you push the ESP[®] OFF switch again, the ESP[®] OFF indicator light will go out and all of the ESP[®] systems will be NOTE:

When you push and hold the ESP[®] OFF switch for a while with the transfer lever in "4L" position, the hill hold control system can be deactivate.



75RM223

If the message shown in the above illustration appears on the information display, master warning indicator light blinks and the interior buzzer beeps, there may be a problem with the ESP[®] system. Have your vehicle inspected by a SUZUKI dealer.

NOTE:

The ESP[®] system will not activate while this message is displayed.

NOTE

If your vehicle is equipped with the dual sensor brake support system, when the ESP[®] system is turned off, dual sensor brake support system, lane departure system, vehicle swaying warning and traffic sign recognition will be turned off. (High beam assist does not turn off.)

ABS warning light / brake system warning light

See "Braking" in this section.


Hill descent control system

The hill descent control system is designed to reduce the driver's workload when going down steep, rough and/or slippery hills where the vehicle cannot decelerate enough by engine braking alone. The hill descent control system helps to control vehicle speed by automatically engaging the vehicle's brakes, as needed, so you can concentrate on steering the vehicle.

WARNING

Do not rely excessively on the hill descent control system. The hill descent control system may not control the vehicle speed on a hill under all load or road conditions. Always be prepared to control vehicle speed by applying the brakes. Failure to pay attention and control vehicle speed using the brakes when necessary may result in loss of control or an accident.

Hill descent control switch

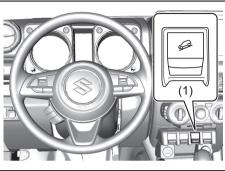

78RB03015

(1) Hill descent control switch

To activate the hill descent control system:

- Shift the transfer lever into 4-wheel drive high range position ("4H") or 4wheel drive low range position ("4L").
- 2) Shift the gearshift lever into a forward gear or reverse gear.
- 3) Push the hill descent control switch (1) when the vehicle speed is under 25 km/h (15 mph). The hill descent control indicator on the instrument cluster will come on and the hill descent control system will be activated.

4-wheel drive high range position

When the vehicle speed exceeds about 10 km/h (6 mph) without depressing the accelerator pedal, the hill descent control system applies the brakes automatically to maintain the vehicle speed at about 10 km/ h (6 mph).

4-wheel drive low range position

When the vehicle speed exceeds about 5 km/h (3 mph) without depressing the accelerator pedal, the hill descent control system applies the brakes automatically to maintain the vehicle speed at about 5 km/h (3 mph).

- When braking, the brake/tail lights come on and the ESP[®] warning light blinks.
- When the vehicle speed exceeds about 40 km/h (25 mph), the hill descent control system stops functioning and the hill descent control indicator goes off. When the vehicle slows down below about 25 km/h (16 mph), the hill descent control system will be activated again and the hill descent control indicator will come on.

WARNING

- When the hill descent control system is used continuously for a long time, the temperature of the brake system may increase and the hill descent control system may be deactivated temporarily to protect the device of the brake system. The hill descent control indicator blinks to let you know the system is deactivated. Depress the brake pedal and stop the vehicle in a safe place. When the temperature of the brake system goes down, the hill descent control indicator will come on and the system is activated again.
- The hill descent control system may be activated when the gearshift lever is in "N" (Neutral) position, but engine braking will not work. Always use the hill descent control system with the gearshift lever in a forward gear or reverse gear.
- When using the hill descent control system, push the hill descent control switch and make sure that the hill descent control indicator light comes on and no warning message are indicated on the information display.

NOTE:

You may hear a sound coming from the engine when the hill descent control system is activated. This sound is normal and does not indicate a malfunction.

To turn off the hill descent control system, push the hill descent control switch and turn off the hill descent control indicator light.

Hill descent control indicator light



When the ignition switch is in "ON" position, this light comes on briefly so you can check that the light is working.

When you push the hill descent control switch and the hill descent control operating conditions are fulfilled, the hill descent control indicator comes on. If the hill descent control indicator blinks, the hill descent control will not be activated.

If hill descent control indicator light comes on while not operating the hill descent control switch, or the indicator light does not come on after the switch is pushed, there is a problem in this system. Have your vehicle inspected by a SUZUKI dealer.

NOTE:

If the hill descent control indicator blinks when you push the hill descent control switch, check the following conditions.

- The transfer lever is in 4-wheel drive high range position ("4H") or 4-wheel drive low range position("4L")
- The gearshift lever is in a forward gear or reverse gear
- The vehicle speed is under 25 km/h (15 mph)
- The brake system is under normal operating temperature

NOTE:

If any of the following conditions occur, there may be a problem with the hill descent control system or the $\text{ESP}^{\mathbb{B}}$ system. Have your vehicle inspected by a SUZUKI dealer.

- The hill descent control indicator does not come on or blink when you push the hill descent control switch.
- The hill descent control indicator stays on when driving without pushing the hill descent control switch.



75RM224

If the message shown in the above illustration appears on the information display, master warning indicator light blinks and the interior buzzer beeps, there may be a problem with the hill descent control system and the hill hold control system. Have your vehicle inspected by a SUZUKI dealer.

NOTE:

You cannot activate the hill descent control system while this message is displayed.

Hill hold control system

The hill hold control system is designed to assist you in starting to move up hills. When you start to move up a hill, the system helps prevent the vehicle from rolling downward (for approximately 2 seconds) while you move your foot from the brake pedal to the accelerator pedal.

WARNING

- Do not rely excessively on the hill hold control system. The hill hold control system may not prevent the vehicle from rolling downward on a hill under all load or road conditions. Always be prepared to depress the brake pedal to prevent the vehicle from rolling downward. Failure to pay attention and depress the brake pedal to hold the vehicle on a hill when necessary, may result in loss of control or an accident.
- The hill hold control system is not designed to stop the vehicle on a hill.

(Continued)

A WARNING

(Continued)

- After you release your foot from the brake pedal, accelerate the vehicle to move up immediately. If you release your foot from the brake pedal over 2 seconds, the hill hold control system will be canceled. If so, the vehicle may roll downward, which can result in an accident depending on the degree of slope. And, the engine may stall and the power assist for the steering and brakes will not work so steering and braking will be much harder than usual which can result in an accident or vehicle damage.
- If you drive on the steep slope, the gravel, the snow-covered road, or the muddy road and the hill hold control system is activated, there may be a possibility that the wheels will be locked and then the vehicle may lose the control.


The hill hold control system activates for a maximum of about 2 seconds if your foot is moved from the brake pedal when the following conditions are all met.

- 1) The gearshift lever is in a forward gear or reverse gear.
- 2) The parking brake is released.
- 3) The vehicle is on an upward incline.

NOTE:

When the hill hold control system is activated, the following conditions may be found, but this is not a malfunction.

- You may hear a sound from the engine room.
- As brake pedal becomes heavy, it may be difficult for you to depress it.

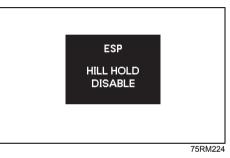

If the message shown in the above illustration appears on the information display, master warning indicator light blinks and the interior buzzer beeps, there may be a problem with the hill descent control system and the hill hold control system. Have your vehicle inspected by a SUZUKI dealer.

NOTE:

The hill hold control system will not activate while this message is displayed.

How to turn off Hill hold control system

When driving on a steep slope, or a slippery road (icy, snow-covered, muddy, etc), it is possible to deactivate the hill hold control system.


To deactivate the hill hold control system:

- Make sure that the gear shift lever is in "N" (Neutral) position for manual transmission vehicles and automatic transmission vehicles.
- 2) Shift the transfer lever from 4-wheel high range position ("4H") to 4-wheel low range position ("4L").



78RB03027

3) When the ESP[®] OFF switch is pushed and held to turn off the ESP[®] system (other than ABS), the ESP[®] OFF indicator light comes on for the vehicles with Instrument cluster (Type A) or the message is shown on the display for the vehicles with instrument cluster (Type B) and the hill hold control system is deactivated. For vehicles with instrument cluster (Type A)

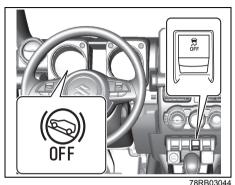

NOTE

- When the ESP[®] OFF switch is pushed again, the hill hold control system is activated again.
- When the hill hold control system is deactivated and the transfer lever is shifted from "4L" position to "4H" position, the hill hold control system is activated again.
- When the hill hold control system is deactivated, hill descent control system is also deactivated.

Tyre pressure monitoring system (TPMS) (if equipped)

The tyre pressure monitoring system is designed to alert you when one or more of the tyres on your vehicle is significantly under-inflated. The tyre pressure monitoring system (TPMS) sensor containing a unique identification code is mounted on each wheel. The TPMS sensors transmit tyre pressure signals to the receiver of the tyre pressure monitoring system controller. When the inflation pressure of one or more tyres indicates significant under-inflation, the low tyre pressure warning light shown below comes on.



78RB03045

For vehicles with instrument cluster



ESP HILL HOLD DISABLE

Low tyre pressure warning light



Each tyre should be checked monthly

when cold and inflated to the inflation pres-

sure recommended by the vehicle manu-

facturer on the vehicle placard or tyre

pressure label. (If your vehicle has tyres of

a different size than the size indicated on

the vehicle placard or tyre pressure label.

you should determine the proper tyre pres-

Please note that the TPMS is not a substitute for proper tyre maintenance, and it is the driver's responsibility to maintain correct tyre pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tyre pressure warning light.

WARNING

Relying only on the tyre pressure monitoring system to determine when it is necessary to add air to the tyres can result in loss of control or an accident.

Check tyre pressures monthly when the tyres are cold. If necessary, adjust them to the recommended inflation pressure as specified on the vehicle's tyre information placard and in this owner's manual. Refer to "Tyres" in "INSPECTION AND MAIN-TENANCE" section.

WARNING

Failure to take corrective action when the low tyre pressure warning light is not working or when it comes on and blinks while driving can lead to an accident.

If the low tyre pressure warning light does not come on for 2 seconds after the ignition switch is turned to "ON" position, or comes on and blinks while driving, have your vehicle inspected by a SUZUKI dealer. Even if the light turns off after blinking, indicating that the monitoring system has recovered, you should still have the system checked by a SUZUKI dealer.

sure for those tyres.) As an added fuel efficiency feature, your vehicle has been equipped with a tyre pressure monitoring system (TPMS) that illuminates a low tyre pressure warning light when one or more of your tyres is significantly under-inflated.

Accordingly, when the low tyre pressure warning light illuminates, you should stop and check your tyres as soon as possible, and inflate them to the proper pressure.

Driving on a significantly under-inflated tyre causes the tyre to overheat and can lead to tyre failure. Under-inflation also reduces fuel efficiency and tyre tread life, and may affect the vehicle's handling and stopping ability.

WARNING

The load-carrying capacity of your tyres is reduced at lower inflation pressures. If your tyres are even moderately under-inflated, the load on the tyres may exceed the load-carrying capacity of the tyres, which could lead to tyre failure. The low tyre pressure warning light will not alert you to this condition, because it only comes on when one or more of your tyres becomes significantly underinflated.

Check and adjust your tyre pressure at least once a month. Refer to "Tyres" in "INSPECTION AND MAIN-TENANCE" section.

WARNING

Continuing to drive with the low tyre pressure warning light on can lead to an accident, resulting in severe injury or death.

If the low tyre pressure warning light comes on and stays on, reduce your speed and avoid abrupt steering and braking. Be aware that driving on a significantly under-inflated tyre can cause the tyre to overheat and can lead to tyre failure, and may affect steering control and brake effectiveness. Stop in a safe place as soon as possible and check your tyres.

- If you have a flat tyre, replace it with the spare tyre (if equipped). Refer to "Jacking instructions" in "EMERGENCY SERVICE" section for the tyre replacement method. Also refer to "Replacing tyres and/ or wheels" for instructions on how to restore normal operation of the TPMS after you have had a flat tyre.
- If one or more of your tyres is under-inflated, adjust the inflation pressure in all of your tyres to the recommended inflation pressure as soon as possible.

The low tyre pressure warning light can come on due to normal causes such as natural air leakage and pressure changes caused by changes in temperature or atmospheric pressure. Adjusting the air pressure in the tyres to the pressure shown on the tyre information placard should cause the low tyre pressure warning light to turn off.

To make the low tyre pressure warning light go off, adjust the tyre pressures when the tyres are cold, and drive the vehicle for about 10 minutes.

When the adjusted tyre pressure is recognized, the low tyre pressure warning light will go off and the information display shows the current tyre pressure (if you select the TPMS monitor (if equipped)).

OPERATING YOUR VEHICLE

NOTICE

If the low tyre pressure warning light does not go off even when you drive for more than 10 minutes after adjusting the cold tyre pressure, there may be a problem with the TPMS. Have your vehicle inspected by a SUZUKI dealer.

If the light turns on again shortly after adjusting the pressure in your tyres, you may have a flat tyre. If you have a flat tyre, replace it with the spare tyre (if equipped). Refer to "Jacking instructions" in "EMER-GENCY SERVICE" section. Refer to "Replacing tyres and/or wheels" for instructions on how to restore normal operation of the tyre pressure monitoring system after you have had a flat tyre.



61MM0A198

NOTE:

- For a certain type of instrument cluster only, the information display shows the above warning and indicator message when this light comes on.
- When the tyre pressure is adjusted in high altitude areas, the low tyre pressure warning light may not turn off even after tyre pressure adjustment. In this case, adjust the inflation pressure to a slightly higher pressure than the one shown on the tyre information placard.
- The low tyre pressure warning light may turn off temporarily after coming on. This could be due to increase of surface temperature after long distance driving or traveling to a high temperature area. Even if the low tyre pressure warning light turns off after coming on, check the inflation pressure of all tyres.
- To reduce the chance that the low tyre pressure warning light will come on due to normal changes in temperature and atmospheric pressure, it is important to check and adjust the tyre pressures when the tyres are cold. If you check tyres after driving, they are warm. Even if the tyre pressure seems to be good in this condition. it could fall below the specified pressure when tyres cool down. Also, if tyres are inflated to the specified pressure in a warm garage, the tyre pressure could fall below the specified one when you drive the vehicle outside in verv cold temperature. If vou adjust the tyre pressure in a garage that is warmer than the outside temperature. vou should add 1 kPa to the recommended cold tyre pressure for every 0.8°C difference between garage temperature and outside temperature.

TPMS malfunction indicator

Your vehicle has also been equipped with a TPMS malfunction indicator to indicate when the system is not operating properly.

The TPMS malfunction indicator is combined with the low tyre pressure warning light. When the system detects a malfunction, the low tyre pressure warning light will flash for about 75 seconds and then remain continuously illuminated. This sequence will continue upon subsequent vehicle start-ups as long as the malfunction exists.

The TPMS malfunction indicator is not reset even after the engine is turned off; it remains in the ON state until the normal conditions are restored.

When the malfunction indicator is illuminated, the system may not be able to detect or signal low tyre pressure as intended. TPMS malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tyres or wheels on the vehicle that prevent the TPMS from functioning properly. Always check the low tyre pressure warning light after replacing one or more tyres or wheels on your vehicle to ensure the replacement or alternation of tyres and wheels to allow the TPMS to continue to function properly.

NOTICE


The tyre pressure sensors can be damaged if you do not take proper precautions.

- We highly recommend that you have tyres repaired or replaced by a SUZUKI dealer. The tyre pressure sensors can be damaged by installation or removal of tyres.
- Do not use liquid sealants for a flat tyre unless your vehicle is equipped with a flat tyre repair kit instead of a spare tyre.

NOTICE

If the low tyre pressure warning light comes on frequently, there may be something wrong with one or more of the tyres, tyre pressure sensors or the monitoring system.

If the low tyre pressure warning light comes on frequently, have your vehicle inspected by a SUZUKI dealer.

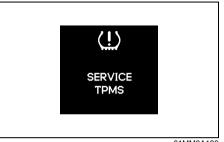

61MM0A199

NOTE:

For a certain type of instrument cluster only, the information display shows the above warning and indicator message when this light comes on.

TPMS limitations

The tyre pressure monitoring system may not function properly under certain circumstances. In the following situations, the low tyre pressure warning light may come on and remain on or may blink.

- When you replace a flat tyre with the spare tyre.
- When you include a spare tyre during a tyre rotation.
- When the TPMS sensor is damaged during a tyre replacement or liquid sealants are used to repair a flat tyre.
- When the electronic signal of TPMS sensor is disturbed in one of the following ways:
 - Électric devices or facilities using similar radio wave frequencies are nearby.
 - A metallic film that may cause radio wave interference is attached on the window.
 - A lot of snow or ice covers the vehicle, in particular, around the wheels or wheel housings.
 - Snow tyres that are not installed with genuine TPMS sensors or snow chains are used.
- When you use non-genuine SUZUKI wheels or tyres.
- When the pressure of any tyre is too high.
- When there is a problem with the receiver of the TPMS controller.

TPMS setting (For instrument cluster - Type A)

- You can set one of the initial value of tyre pressure below that is indicated on the tyre information label.
 - Comfort Mode
 - Load Mode

For details on how to set the mode, refer to "Setting mode" in "BEFORE DRIVING" section.

WARNING

If the loading weight has changed, adjust the tyre pressure according to the tyre information label and set the initial value via the information display. If the loading weight, tyre pressure and initial value do not match, the tyre pressure monitoring system will not function properly.

TPMS setting (For instrument cluster - Type B)


- You can check the current tyre pressure on the information display.
- You can set one of the initial value of tyre pressure below that is indicated on the tyre information label.
 - Comfort Mode
 - Load Mode

A WARNING

If the loading weight has changed, adjust the tyre pressure according to the tyre information label and set the initial value via the information display. If the loading weight, tyre pressure and initial value do not match, the tyre pressure monitoring system will not function properly.


OPERATING YOUR VEHICLE

To check the current tyre pressure

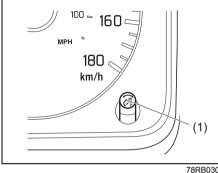




1) When the ignition switch is turned to "ON" and the vehicle is stationary, push and hold the indicator selector knob (1) on the instrument cluster for a while to change the information display to the setting mode.

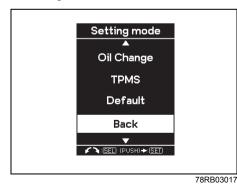

2) Turn the indicator selector knob (1) left or right to select "TPMS" and push the indicator selector knob.


NOTE

If you exit the setting mode, select "Back" and push the indicator selector knob (1).

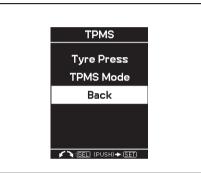

78RB03018

3) Turn the indicator selector knob (1) left or right to select "Tyre Press" and push the indicator selector knob.

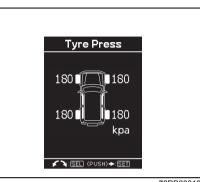


78RB03019

- 4) The display shows current tyre pressure.
- NOTE
- · If the low tyre pressure warning light comes on, the information display will be switched to "Tyre Press" display and the corresponding tyre pressure indication blinks to alert you which tyre(s) is(are) low pressure.
- The display may not show the tyre pressure for about 10 minutes after the vehicle begins to move. This is because the TPMS system learns the tyre pressure within this 10 minutes. The display will show the tyre pressure after 10 minutes pass.

OPERATING YOUR VEHICLE

If you stop the vehicle and turn the ignition switch to "LOCK" position, and leave it for 20 minutes or more, tyre pressure will be reset and will be indicated as 0 kPa when the engine is restarted. In this case, the current tyre pressure indication will recover after driving for a while. However, if any of tyre pressure before stopping the engine, the tyre pressure indication may not recover and may be indicated as "---".

To set the initial value of tyre pressure

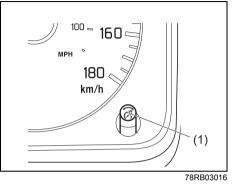


1) When the ignition switch is in "ON"

position and the vehicle is stationary,

push and hold the indicator selector knob (1) on the instrument cluster for a

while to change the information display

to the setting mode.

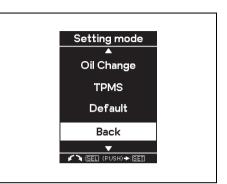


78RB03017

2) Turn the indicator selector knob (1) left or right to select "TPMS" and push the indicator selector knob.


NOTE:

If you exit the setting mode, select "Back" and push the indicator selector knob (1).

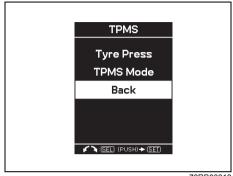


78RB03018

 Turn the indicator selector knob (1) left or right to select "TPMS Mode" and push the indicator selector knob.

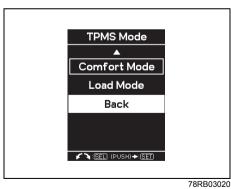

4) Turn the indicator selector knob (1) left or right to select the initial value and push the indicator selector knob.

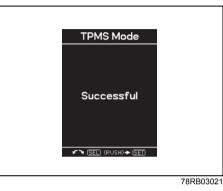

 When the display shows the message shown in the above illustration, the setting is completed.

Replacing tyres and/or wheels

If you got a flat tyre and replaced it with the spare tyre, SUZUKI recommends that you have a SUZUKI dealer mount a new tyre on the wheel that had the flat tyre. The TPMS is already set up to recognize the ID code of the original wheel, and normal TPMS operation will be restored.

If you need to replace any wheels on your vehicle, a SUZUKI dealer must check that TPMS sensors are installed in the new wheels and must set up the TPMS to recognize the new sensors.

NOTE:


A TPMS sensor is not installed in the spare tyre. You should use the spare tyre only in an emergency situation, and should replace the spare tyre as soon as possible to restore normal TPMS operation.

WARNING

Use of tyres or wheels not recommended by SUZUKI can result in failure of the TPMS.

When replacing tyres and wheels, use only tyres and wheels recommended by SUZUKI as standard or optional equipment for your vehicle. Refer to "tyres" in "INSPECTION AND MAINTENANCE" section for additional information.

eCall (For Light Commercial Vehicles) (if equipped)

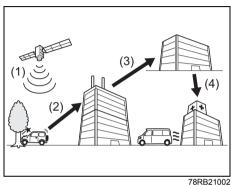

(1) Location information is received.

- (2) Vehicle information is transmitted to emergency contact center.
- (3) Emergency contact center informs regional emergency contact center (112 service) of accident conditions.
- (4) Emergency vehicle is dispatched.

The eCall is a system equipped with the vehicle. This system automatically sends the information to the emergency contact center when a crush occurs calls up an eCall operator for quick help.


NOTE:

- Vehicle eCall system's correct functioning directly depends on presence of eCall operator in country, and availability of its services.
- The responsibility of the components of the eCall system (with the exception of equipment installed on the vehicle) is borne by the operator of the eCall system.

- The eCall is only available where communication is possible using wireless mobile communication. This system cannot be used in areas with atmospheric disturbance, remote areas and areas where a signal cannot be obtained.
- If the microphone, speaker or "SOS" button is malfunctioning, eCall cannot operate properly. Have the function checked by an authorized SUZUKI dealer.
- For normal operating condition of the eCall, use SUZUKI genuine audio system.

How to use eCall

The eCall has 2 modes, automatic operation mode and manual operation mode.

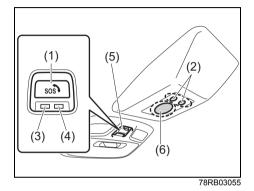

(1) "SOS" button

- (2) eCall microphone
- (3) Green indicator
- (4) Red indicator
- (5) Cover
- (6) Speaker

Automatic operation mode

The eCall system is operated when the ignition switch is turned to "ON" position. In the event of a collision from the side or an accident that an airbag is activated, signals about your vehicle's various information such as the vehicle's position are sent automatically to the emergency contact center.

The green indicator (3) will change from a blinking state to on, and you can call up an emergency contact center operator using the microphone (2).

Manual operation mode

Open the cover (5) for manual operation. When the ignition switch is turned to "ON" position, push and hold "SOS" button (1) for more than 1 second and release it. The green indicator (3) will change from a blinking state to on, and you can call up an emergency contact center operator using the microphone (2).

NOTE:

(Only for manual operation mode)

Do not perform a test operation in order to confirm the function using manual operation.

Cancel the operation if the system is accidentally operated. Refer to "Cancellation of eCall" in this section for details.

NOTE:

(For both automatic and manual operation modes)

- A tone will sound when the emergency call operates for starting, calling up and finishing.
- The vehicle information (for example, the vehicle location, direction, VIN, accident time, etc.) is sent to the emergency contact center when eCall operates. The above information will not be sent except when the emergency call is performed.
- Any conversation held during communication is not recorded by the vehicle itself, but is recorded by the emergency contact center.

- Communication from the emergency contact center operator can be heard from the speaker on the roof. If the audio system is in use, the communication from the emergency contact center operator will be prioritized and any other audio will be automatically muted.
- The eCall is equipped with a built-in battery as a backup power for the damaged onboard battery caused by an accident. The useful life of the built-in battery will be about 3 years under the temperature conditions between -40 °C and 85 °C (-40 °F and 185 °F).
- If communication to the emergency contact center by automatic operation mode is used, replace the built-in battery for the safety. Consult your SUZUKI dealer when you replace the battery.


NOTE:

 If the red indicator blinks every 1 second and the eCall warning message appears on the information display at the same time, an undercharged condition of the built-in battery or system error is estimated. Have your vehicle inspected by an authorized SUZUKI dealer soon. When the built-in battery is in the undercharged condition, replace the battery as soon as possible even though the remaining battery power is considered to last for about 10 minute call with the emergency contact center operator. This built-in battery is specified for the eCall exclusively.

Therefore when you replace the battery, consult your SUZUKI dealer.

NOTE:

Used batteries must be disposed properly according to applicable rules or regulations and must not be disposed with ordinary household trash.

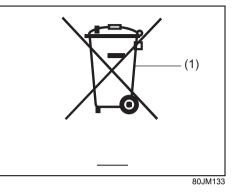

(1) Crossed-out wheeled bin symbol

The crossed-out wheeled bin symbol (1) indicates that used battery should be collected separately from ordinary household trash.

By ensuring the used battery is disposed or recycled correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate trash handling of the battery. The recycling of materials will help to conserve natural resources. For more detailed information about disposing or recycling of the used battery, consult your SUZUKI dealer.

Indicator light

The indicator light in "SOS" button operate as follows, according to the eCall operation state and communication state.

Green indicator	Red indicator	State
Off	Off	Normal operation. (#1)
On	On	For about 5 seconds when the ignition switch is turned to "ON". (#1)
Blinks (approximately every 3 seconds)	Off	There is no eCall, GPS, GALILEO connection or modem network. (#2) The "eCall" device is out of communication range.
Blinks (approximately every 1 second)	Off	The "eCall" operation begins.
On	Off	The "eCall" communication is established.
Blinks (approximately every 0.6 seconds)	Off	The minimum data (the vehicle chassis number (VIN) or the location of your vehicle) is transmitted to the emergency contact center

(#1) "eCall" system is activated 40 seconds after the ignition switch is turned to "ON" for both automatic operation mode and manual operation mode. If "SOS" button is pressed during 40 seconds after the ignition switch is turned to "ON", "eCall" system is activated 40 seconds after the ignition switch is turned to "ON".

(#2) You can customize the system to stop blinking of the green indicator. Ask an authorized SUZUKI dealer for details.

Green indicator	Red indicator	State
Blinks (approximately every 0.3 seconds)	Off	The "eCall" communication finishes normally.(#3)
Off	Blinks (approximately every 1 second)	The built-in battery in eCall is discharged or system error.
Off	Blinks (approximately every 0.3 seconds)	The "eCall" communication finishes abnormally or communication fails.

(#3) When the call is completed, either the green indicator or the red indicator could blink, depending on the emergency contact center behavior.

eCall Warning Message



78RB03048

If the message shown in the above illustration appears on the information display, there may be problem with eCall. Have your vehicle inspected by an authorized SUZUKI dealer.

eCall Controller & Red indicator

This system has the eCall controller. This controller has an expiration period. If an expiration period comes, this controller is required to replace.

When six months come before the expiration of the eCall controller, Red indicator blinks and the message of "Service eCall" also appears on the information display as shown in the above illustration. If Red indicator blinks and this message appears simultaneously, consult your SUZUKI dealer for replacing this controller.

Cancellation of eCall

The operation can be canceled only when communication is performed via manual operation. The operation can be canceled if "SOS" button is pressed before communication is established with an eCall operator.

NOTE:

- Communication cannot be canceled in automatic operation mode.
- The cancellation of the communication is available until 10 seconds after pushing the "SOS" button first.
- Communication cannot be canceled from the vehicle after communication is established with an eCall operator. Ask the emergency contact center to cancel the communication.

Implementing Regulation 2017/78 Annex 1, Part 3

	1.DESCRIPTION OF THE ECALL IN-VEHICLE SYSTEM	Conformity
1.1.	Overview of the 112-based eCall in-vehicle system, its operation and functionalities. See "eCall (For Light Commercial Vehicles) (if equipped)."	0
1.2.	The 112-based eCall service is a public service of general interest and is accessible free of charge	0
1.3.	The 112-based eCall in-vehicle system is activated by default. It is activated automatically by means of in-vehicle sensors in the event of a severe accident. See "Automatic operation mode."	0
	It will also be triggered automatically when the vehicle is equipped with a TPS system which does not function in the event of a severe accident.	N/A
1.4.	The 112-based eCall in-vehicle system can also be triggered manually, if needed. Instructions for manual activation of the system. See "Manual operation mode."	0
1.5.	In the event of a critical system failure that would disable the 112-based eCall in-vehicle system, the following warning will be given to the occupants of the vehicle See "eCall Warning Message."	Ο

O = This description is applied to the regulation and is equipped with your vehicle. N/A = This description is not equipped with your vehicle.

	2.INFORMATION ON DATA PROCESSING	Conformity
2.1.	Any processing of personal data through the 112-based eCall in-vehicle system shall comply with the personal data protection rules provided for in Directives 95/46/EC and 2002/58/EC, and in particular, shall be based on the necessity to protect the vital interests of the individuals in accordance with Article 7(d) of Directive 95/46/EC.	Ο
2.2.	Processing of such data is strictly limited to the purpose of handling the emergency eCall to the single European emergency number 112.	0
2.3.	Types of data and its recipients	
2.3.1.	The 112-based eCall in-vehicle system may collect and process only the following data: Vehicle Identification Number, Vehicle type (passenger vehicle or light commercial vehicle), Vehicle propulsion storage type (gasoline/diesel/CNG/LPG/electric/hydrogen), Vehicle last three locations and direction of travel, Log file of the automatic activation of the system and its timestamp	0
2.3.2.	Recipients of data processed by the 112-based eCall in-vehicle system are the relevant public safety answering points designated by the respective public authorities of the country on which territory they are located, to first receive and handle eCalls to the single European emergency number 112.	0

O = This description is applied to the regulation and is equipped with your vehicle.

	2.INFORMATION ON DATA PROCESSING	Conformity
2.4.	Arrangements for data processing	
2.4.1.	The 112-based eCall in-vehicle system is designed in such a way as to ensure that the data contained in the system memory is not available outside the system before an eCall is triggered.	0
2.4.2.	The 112-based eCall in-vehicle system is designed in such a way as to ensure that it is not traceable and not subject to any constant tracking in its normal operation status.	0
2.4.3.	The 112-based eCall in-vehicle system is designed in such a way as to ensure that data in the system internal memory is automatically and con- tinuously removed.	0
2.4.3.1.	The vehicle location data is constantly overwritten in the internal memory of the system so as always to keep maximum of the last three up-to-date locations of the vehicle necessary for the normal functioning of the system.	0
2.4.3.2.	The log of activity data in the 112-based eCall in-vehicle system is kept for no longer than necessary for attaining the purpose of handling the emergency eCall and in any case not beyond 13 hours from the moment an emergency eCall was initiated.	Ο

O = This description is applied to the regulation and is equipped with your vehicle.

	2.INFORMATION ON DATA PROCESSING	Conformity
2.5.	Modalities for exercising data subject's rights	
2.5.1.	The data subject (the vehicle's owner) has a right of access to data and as appropriate to request the rectification, erasure or blocking of data, concerning him or her, the processing of which does not comply with the provisions of Directive 95/46/EC. Any third parties to whom the data have been disclosed have to be notified of such rectification, erasure or blocking carried out in compliance with this Directive, unless it proves impossible or involves a disproportionate effort.	0
2.5.2.	The data subject has a right to complain to the competent data protection authority if he or she considers that his or her rights have been infringed as a result of the processing of his or her personal data.	0
2.5.3.	Contact service responsible for handling access requests (if any):	N/A

O = This description is applied to the regulation and is equipped with your vehicle. N/A = This description is not equipped with your vehicle.

3.INFORMATION ON THIRD PARTY SERVICES AND OTHER ADDED VALUE SERVICES (IF FITTED)		Conformity
3.1.	Description of the operation and the functionalities of the TPS system/ added value service:	N/A
3.2.	Any processing of personal data through the TPS system/other added value service shall comply with the personal data protection rules provided for in Directives 95/46/EC and 2002/58/EC.	N/A
3.2.1.	Legal basis for the use of TPS system and/or added value services and for processing data through them:	N/A
3.3.	The TPS system and/or other added value services shall process per- sonal data only on the base of the explicit consent of the data subject (the vehicle's owner or owners).	N/A
3.4.	Modalities for data processing through TPS system and/or other added value services, including any necessary additional information regarding traceability, tracking and processing of personal data:	N/A
3.5.	The owner of a vehicle equipped with a TPS eCall system and/or other added value service in addition to the 112-based eCall in-vehicle system has the right to choose to use the 112-based eCall in-vehicle system rather than the TPS eCall system and the other added value service.	N/A
3.5.1.	Contact details for handling TPS eCall system deactivation requests:	N/A


N/A = This description is not equipped with your vehicle.

HOT PARTS! EXPLOSION!

Erroneous handling of built-in battery contained in eCall equipment may result in heat generation, explosion or fire possibly leading to burn injury or physical damage. To ensure safety and to avoid any possibilities of any accidents, please observe the following precautions.

- Do not heat in high extreme temperature during use, storage or transportation. Heating batteries in high extreme temperature damages resign components like a gasket, a separator and so on. The damages cause ignition, rupture and the leakage of flammable liquid or gas. Moreover, if the batteries are dropped into fire or a hot oven for disposal, it may burst and burn fiercely.
- Do not disassemble nor deform. If Batteries are disassembled, irritant gases may be released, and exposed lithium alloy may react leading to fire. If Batteries are deformed by pressure or impact, sealing may be damaged leading to leakage or internal insulation may be damaged leading to internal short circuit. Internal short circuit will result in heat generation that may lead to rupture or fire.

DRIVING TIPS

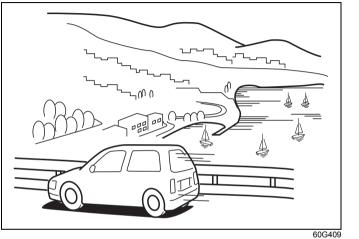

Important Vehicle Design Features to Know	. 4-1	
On-Paved Road Driving	. 4-2	
Off-Road Driving	. 4-4	
Running-in	. 4-8	
Catalytic converter	. 4-9	
Improving fuel economy	. 4-10	4
Highway driving	. 4-10	
Driving on hills		
•		



52D078

WARNING

- Fasten your seat belts at all times. Even though airbags are equipped at the front seating positions, the driver and all passengers should be properly restrained at all times, using the seat belts provided. Refer to "Seat belts and child restraint systems" section for instructions on proper use of the seat belts.
- Never drive under the influence of alcohol or other drugs. Alcohol and drugs can seriously impair your ability to drive safely, greatly increasing the risk of injury to yourself and others. You should also avoid driving when you are tyred, sick, irritated or under stress.

Important Vehicle Design Features to Know

WARNING

Your multipurpose vehicle has handling characteristics that differ from those of a conventional passenger car. For the safety of you and your passengers, please read the following section very carefully.

Multipurpose vehicles such as your new SUZUKI have higher ground clearance and a narrower track than conventional passenger cars, to make them capable of performing in a wide variety of off-road applications. Specific design characteristics give them a higher center of gravity than ordinary cars. An advantage of the higher ground clearance is a better view of the road allowing you to anticipate problems. They are not designed for cornering at the same speed as conventional passenger cars any more than low-slung sports cars are designed to perform satisfactorily under off-road conditions. If at all possible, avoid sharp turns or abrupt maneuvers. As with other vehicles of this type, failure to operate this vehicle correctly may result in loss of control or vehicle rollover. Multipurpose vehicles have a significantly higher rollover rate than other types of vehicles. In a rollover collision, an

unbelted person is significantly more likely to die than a person wearing a seat belt.

Important Differences Between Your Multipurpose Vehicle and Ordinary Passenger Cars

Higher Ground Clearance

The higher ground clearance of your vehicle enables it to clear off-road obstacles, such as rocks and tree stumps, that ordinary passenger cars cannot drive over. An unavoidable result of this higher ground clearance is that the vehicle also has a higher center of gravity. Consequently, your vehicle will handle differently than a vehicle with a lower center of gravity.

Shorter Wheelbase

Along with its higher ground clearance, your vehicle has a shorter wheelbase and shorter front and rear overhangs than the typical passenger car. These features combine to allow you to drive your vehicle over hillcrests without hanging up on them or damaging the frame and chassis components. The shorter wheelbase also makes the steering of your vehicle more responsive than that of vehicles with longer wheelbases.

Narrower Body Width and Track

Your vehicle is narrower than the average passenger car so that it can pass through tight spaces. Without the essential characteristics described above: higher ground clearance, shorter wheelbase, and narrower body width and track -your vehicle could not provide you with excellent offroad driving performance. However, it is also true that on-road driving, handling, and steering will be different from what drivers experience with a conventional passenger car.

On-Paved Road Driving

The data of accidents show that most rollover accidents for multi-purpose vehicles are caused when a driver loses control of the vehicle and leaves the paved portion of the roadway striking a ditch, curb or other off-road object that causes the vehicle to overturn. The following driving practices may reduce the risk of rollover.

Vehicle Slides Off-Road

You can reduce the risk of this kind of rollover accident by always keeping the vehicle under control. Typically, drivers lose control of vehicles, often resulting in rollover accidents, when the driver is impaired because of alcohol or other drugs, falls asleep at the wheel or is otherwise inattentive, or is driving too fast for the road conditions.

Rollovers On the Roadway

If, for any reason, your vehicle slides sideways or spins out of control at highway speeds, while on the paved portion of the roadway, the risk of rollover is greatly increased. This condition can be created when two or more wheels drop off onto the shoulder and you steer sharply in an attempt to reenter the roadway. To reduce the risk of rollover in these circumstances, if conditions permit, you should hold the steering wheel firmly and slow down before pulling back into the travel lanes with controlled steering movements.

All Types of Rollover Accidents

As with many kinds of automobile accidents, rollovers can be greatly reduced by doing what all prudent drivers should do, i.e., don't drink and drive, don't drive when tired and don't do anything behind the wheel that could cause a loss of attention to the driving task.

Additional guidelines are set out below for your on-road driving.

Know Your Vehicle

Take time to familiarize yourself with the unique handling characteristics of your vehicle by first driving around in an area away from traffic. Practice turning the vehicle at a variety of speeds and in different directions. Get a feel for the greater steering response that your vehicle has over a conventional car.

Wear Your Seat Belts at All Times

The driver and all passengers should be properly restrained at all times, using the seat belts provided. Refer to the "SEAT BELTS" section for instructions on proper use of the seat belts.


Don't Make Sharp Turns

As mentioned before, small multipurpose vehicles have specific design characteristics that allow them to perform in a wide variety of applications. These characteristics also change the cornering behavior relative to conventional passenger cars. Remember, small multipurpose vehicles have more responsive steering and a higher center of gravity than conventional passenger cars. If at all possible, avoid making sharp turns in your vehicle.

Slow Down on Curves

Learn to approach curves cautiously and at a conservative speed. Do not attempt to take curves at the same speeds that you would in a vehicle with a lower center of gravity. Just as you would not drive a sports car on a trail, you should not attempt to drive your vehicle around curves like a sports car.

Slow Down and Use Caution on Slippery Roads

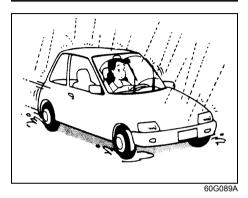

Under wet road conditions you should drive at a lower speed than on dry roads due to possible slippage of tyres during braking. When driving on icy, snow-covered, or muddy roads, reduce your speed and avoid sudden acceleration, abrupt braking, or sharp steering movements. Use 4-wheel drive high range (4H) for better traction.

NOTICE

Never operate your vehicle in "4H" or "4L" on dry pavement and, as much as possible, avoid using "4H" or "4L" on wet pavement, as this puts severe stress on the drive train, especially during tight cornering, and can damage it. Also, you may have some difficulty in steering.

Off-Road Driving

Your vehicle has specific design characteristics for off-road driving. When you leave the paved road, you will encounter driving surfaces of all kinds which may change continually as you drive. In most cases, offroad driving requires the use of 4-wheel drive.

Use Caution on Steep Inclines

Always inspect hills before you attempt to drive up them. Know what is on the other side and how you will get back down. If you have any doubt that it is safe, do not attempt to drive over a hill. Never drive your vehicle up an extremely steep incline. Coming down a steep hill can be trickier than getting up one. Keep the vehicle heading straight down the hill and use low gear. Do not lock the brakes. If the vehicle begins to slide, accelerate slightly to regain steering control.

Do not Drive Across the Side of Hills

Driving across the side of a hill can be extremely hazardous. Most of the vehicle's weight will be transferred to the downhill tyres, which could result in the vehicle rolling sideways. Whenever possible, avoid this potential hazard. Also, if you have to exit your vehicle on a side-hill, always get out on the uphill side.

Wear Your Seat Belts at All Times

You and your passengers should use the seat belts at all times when driving offroad. For proper seat belt use, refer to the "Seat Belts" section in this manual.

Avoid Sudden Reactions in Mud, Ice, or Snow

Be careful when off-road conditions are slippery. Reduce your speed and avoid sudden movements of the vehicle. Be aware that driving in deep snow or mud can cause a loss of traction and an increase in the resistance to the vehicle's forward motion. Use 4WD low gear (4L) and maintain a steady but moderate speed with a light touch on the steering wheel and brakes.

Snow chains

Snow chains should only be used if they are needed to increase traction or are required by law. Check that the chains you use are the correct size for your vehicle's tyres.

Also check that there is enough clearance between the fenders and the chains as installed on the tyres.

Install the chains on the rear tyres tightly, according to the chain manufacturer's instructions. Retighten the chains after driving about 1.0 km (1/2 mile) if necessary. With the chains installed, drive slowly.

NOTICE

If you hear the chains hitting against the vehicle body while driving, stop and tighten them.

Do not drive in the field covered with grown grass

If you drive in the field covered with grass, it may cause accident or vehicle damage by getting caught in grown grass.

If Your Vehicle Gets Stuck

If your vehicle gets stuck in snow, mud, or sand, follow the directions below:

- Shift the transfer shift lever into the "4L" position.
- 2) Shift the transmission back and forth between a forward range (or first gear for manual transmission) and reverse. This will create a rocking motion which may give you enough momentum to free the vehicle. Press gently on the accelerator to keep wheel spin to a minimum. Remove your foot from the accelerator while shifting.

Do not race the engine. Excessive wheel spin will cause the tyres to dig deeper, making it more difficult to free the vehicle.


 If your vehicle remains stuck after a few minutes of rocking, get another vehicle to pull you out.

WARNING

Do not allow anyone to stand near the vehicle when you are rocking it, and do not spin the wheels faster than an indicated 40 km/h (25 mph) on the speedometer. Personal injury and/or vehicle damage may result from spinning the wheels too fast.

NOTICE

- Release the accelerator pedal when operating the gearshift lever or the transfer lever. Operating the gearshift lever or the transfer lever with the engine racing can damage the gears and the free axle mechanism.
- Do not continue rocking the vehicle for more than a few minutes. Prolonged rocking can cause engine overheating, transmission, transfer case, axles, propeller shaft or differential damage, or tyre damage.

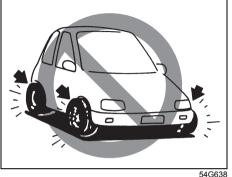

WARNING

In addition to following the driving tips in this section, it is important to observe the following precautions.

 Check that your tyres are in good condition and always maintain the specified tyre pressure. Refer to "Tyres" in "INSPECTION AND MAINTENANCE" for section details.

(Continued)

WARNING

(Continued)

- Do not use tyres other than those specified by SUZUKI. Never use different sizes or types of tyres on the front and rear wheels. For information regarding the specified tyres, refer to the tyre information label located on the driver's door lock pillar.
- Never use oversized tyres or special shock absorbers and springs to raise (iack up) your vehicle. This will change the handling characteristics. Oversized tyres may also rub against the fender over bumps. causing vehicle damage, drive train damage or tyre failure.
- After driving through water, test the brakes while driving at a slow speed to see if they have maintained their normal effectiveness. If the brakes are less effective than normal, dry them by repeatedly applying the brakes while driving slowly until the brakes have regained their normal effectiveness.

When encountering a flooded area



61M0075

Avoid driving in a flooded area or a deep puddle. If driving in a flooded area is unavoidable, go slowly in the lowest gear. In case that you have driven in a flooded area, stop the vehicle in a safe place while checking the brake effectiveness. Then, ask a SUZUKI dealer or a qualified workshop to check the following inspection items.

- Function of brake
- Function of electrical components
- · Changes of oil level and guality for engine, transmission and differential. In case that the oil is turbid whitely, water has been mixed in the oil and an oil change is required.
- · Lubricant condition of the bearings. suspension joints, etc.

NOTICE

Avoid driving in a flooded area or a deep puddle. It may cause an engine stall, short in electrical components, engine and transmission damages, etc.

Do not drive through deep or rushing water

Driving in deep or rushing water can be hazardous. You could lose control of the vehicle and the occupants could drown. Also, your vehicle could be seriously damaged. To avoid these risks, observe the following instructions and precautions.

 Do not drive through deep or rushing water. Deep or rushing water, such as fast-moving streams or floodwaters, could carry your vehicle away from your intended path. The water is too deep if it covers your wheel hubs, axles, or exhaust tailpipe. Know the depth of the water before you attempt to drive through it.

If the vehicle goes across the river unavoidably, follow the instructions below before going across the river.

- 1) Confirm the depth of the river and the terrain.
- 2) Select the place which is less than 30cm (11.8 inch) in depth of water. Go across the river to a right angle for the river or lower part of the river
- Drive slowly at less than 5 km/h (3.1 mph) not to raise the wave and go across the river immediately to avoid operating the gearshift lever.

If the vehicle goes across the river that is more than 30 cm (11.8 inch) in depth of water unavoidably, stop the vehicle in a safe place while checking the brake effectiveness. Then, ask a SUZUKI dealer or a qualified workshop to check the following inspection items.

- · Function of brake
- Function of electrical components
- Changes of oil level and quality for engine, transmission and differential. In case that the oil is turbid whitely, water has been mixed in the oil and an oil change is required.
- Lubricant condition of the bearings, suspension joints, etc.
- If water blocks the tailpipe, the engine may not start or run. If the water is deep enough to get drawn into the engine intake system, the engine will be badly damaged.
- Submerged brakes will have poor braking performance. Drive slowly and carefully. Driving slowly will also help avoid water splashing onto the ignition system, which could cause the engine to stall.
- Even when driving through shallow or still waters, drive carefully since the water may be hiding ground hazards such as holes, ditches, or bumps.

WARNING

In addition to following the driving tips in this section, it is important to observe the following precautions for on-road and off-road driving.

- Driver and passengers should wear seat belts at all times.
- Do not let anyone else drive your vehicle unless they are also aware of the vehicle characteristics and handling differences described in this section.
- Avoid loaning your vehicle to anyone unless you accompany them.
- Make sure your tyres are in good condition and always maintain the specified tyre pressure. Refer to "Tyres" in the "INSPECTION AND MAINTENANCE" section for details.
- Do not use tyres other than those specified by SUZUKI. Never use different sizes or types of tyres on the front and rear wheels. For information regarding the specified tyres, refer to the "SPECIFICATIONS" section.
- Never use oversized tyres or special shock absorbers and springs to raise (jack up) your vehicle. This will raise the center of gravity of the vehicle and change its handling characteristics.

(Continued)

WARNING

(Continued)

- After driving through water, mud, or sandy ground, test the brakes while driving at a slow speed to see if they have maintained their normal effectiveness. If the brakes are less effective than normal, dry them by repeatedly applying the brakes while driving slowly until the brakes have regained their normal effectiveness.
- After extended operation in mud, sand, or water, have the brakes, bearings and joint parts etc. inspected by a SUZUKI dealer as soon as possible.


Running-in

NOTICE

The future performance and reliability of the engine depends on the care and restraint exercised during its early life. It is especially important to observe the following precautions during the first 960 km (600 miles) of vehicle operation.

- After starting, do not race the engine. Warm it up gradually.
- Avoid prolonged vehicle operation at a constant speed. Moving parts will break in better if you vary your speed.
- Start off from a stop slowly. Avoid full throttle starts.
- Avoid hard braking, especially during the first 320 km (200 miles) of driving.
- Do not drive slowly with the transmission in a high gear.
- Drive the vehicle at moderate engine speeds.
- Do not tow a trailer during the first 960 km (600 miles) of vehicle operation.

Catalytic converter

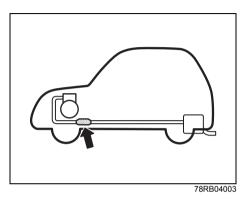

The purpose of the catalytic converter is to minimize the amount of harmful pollutants in your vehicle's exhaust. Use of leaded fuel in vehicles equipped with catalytic converters is prohibited, because lead deactivates the pollutant-reducing components of the catalyst system.

The converter is designed to last the life of the vehicle under normal usage and when unleaded fuel is used. No special maintenance is required on the converter. However, it is very important to keep the engine properly tuned. Engine misfiring, which can result from an improperly tuned engine, may cause overheating of the catalytic converter. This may result in permanent heat damage to the catalytic converter and other vehicle components.

NOTICE

To minimize the possibility of catalytic converter or other vehicle damage:

- Maintain the engine in the proper operating condition.
- In the event of an engine malfunction, particularly one involving engine misfire or other apparent loss of performance, have the vehicle serviced promptly.
- Do not turn off the engine or interrupt the ignition when the transmission is in gear and the vehicle is in motion.
- Do not try to start the engine by pushing or towing the vehicle, or coasting down a hill.
- Do not idle the engine with any spark plug wires disconnected or removed, such as during diagnostic testing.
- Do not idle the vehicle for prolonged periods if idling seems rough or there are other malfunctions.
- Do not allow the fuel tank to get near the empty level.



WARNING

Be careful where you park and drive; the catalytic converter and other exhaust components can get very hot. As with any vehicle, do not park or operate this vehicle in areas where combustible materials such as dry grass or leaves can come in contact with a hot exhaust system.

Improving fuel economy

The following instructions will help you improve fuel economy.

Avoid excessive idling

If you park your vehicle for more than one minute, stop the engine and start it again later. When warming up a cold engine, do not allow the engine to idle or apply full throttle until the engine has reached operating temperature. Allow the engine to warm up by driving.

Avoid fast starts

Fast starts away from lights or stop signs will consume fuel unnecessarily and shorten engine life. Start off slowly.


Avoid unnecessary stops

Avoid unnecessary deceleration and stopping. Try to maintain a moderate, steady speed whenever possible. Slowing down and then accelerating again uses more fuel.

Keep a steady cruising speed

Drive at a constant speed that road and traffic conditions will permit.

Keep the air cleaner clean

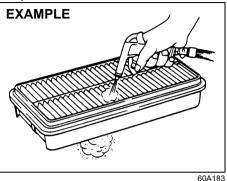

If the air cleaner is clogged with dust, there will be greater intake resistance, resulting in decreased power output and increased fuel consumption.

Keep weight to a minimum

The heavier the load is, the more fuel the vehicle consumes. Unload any unnecessary luggage or cargo.

Keep tyre pressures correct

Under-inflation of the tyres can waste fuel due to increased rolling resistance of the tyres. Keep your tyres inflated to the correct pressure shown in the label on driver's door lock pillar.


Highway driving

When driving at highway speeds, pay attention to the following:

- Stopping distance progressively increases with vehicle speed. Apply the brakes far enough ahead of the stopping point to allow for the extra stopping distance.
- On rainy days, hydroplaning can occur. Hydroplaning is the loss of direct contact between the road surface and the vehicle's tyres due to a water film forming between them. Steering or braking the vehicle during hydroplaning can be very difficult, and loss of control can occur. Keep speed down when the road surface is wet.
- At high speeds, the vehicle may be affected by side winds. Therefore, reduce speed and be prepared for unexpected buffeting, which can occur at the exits of tunnels, when passing by a cut of a hill, or when being overtaken by large vehicles, etc.

Driving on hills

Manual transmission

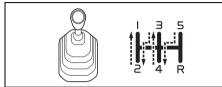

78RB04002

Automatic transmission



78RB04001


- When driving on steep hills, the vehicle may begin to slow down and show a lack of power. If this happens, you should shift to a lower gear so that the engine will again be operating in its higher power range. Shift rapidly to prevent the vehicle from losing momentum.
- When driving down a hill, the engine should be used for braking by shifting to the next lower gear.

A WARNING

Do not hold the brake pedal down too long or too often while going down a steep or long hill. This could cause the brakes to overheat, resulting in reduced braking efficiency. Failure to take this precaution could result in loss of vehicle control.

NOTICE


When descending a downhill, Never turn the ignition key to "LOCK" position. Emission control system and automatic transmission damage may result.

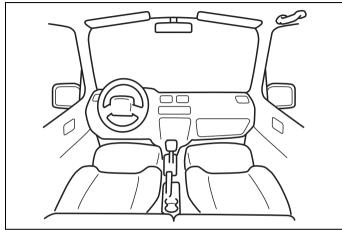


60G407

Fuel filler cap	5-1
Engine hood	
Sun visor	
Interior light	5-5
Accessory socket	
USB socket (if equipped)	
Assist grips	
Ride-in assist grip	
Glove box	
Cup holder and storage area	
Footrest (if equipped)	
Luggage compartment carpet	
Frame hooks	
Heating and air conditioning system	
Manual heating and air conditioning system	
Automatic heating and air conditioning system	
(climate control)	5-23
Radio antenna	
Installation of radio frequency transmitters	5-30
Audio system (Type A / Type B / Type C) (if equipped)	


Fuel filler cap

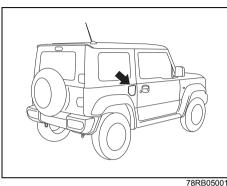

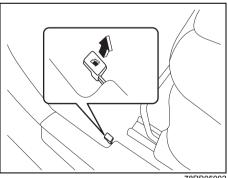

78RB05002

A fuel filler cap is located on the right rear side of the vehicle. The fuel filler door can be unlocked by pulling up the opener lever located on the outboard lower side of the driver's seat and locked by simply closing the door.

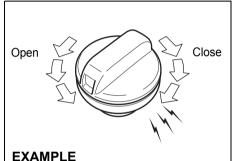


57L51093

To remove the fuel filler cap:

- 1) Stop the engine and close all the doors and windows while refueling.
- 2) Open the fuel filler door.
- 3) Remove the cap by turning it counterclockwise.

A CAUTION

Remove the fuel filler cap slowly. The fuel may be under pressure and may spray out, causing injury.

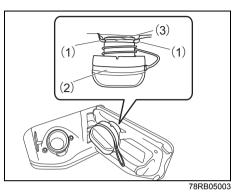

NOTE:

The cap holder (1) holds the fuel filler cap (2) by hooking the groove (3) when refueling.

To reinstall the fuel filler cap:

- 1) Turn the cap clockwise until you hear several clicks.
- 2) Close the fuel filler door.


WARNING

Fuel is extremely flammable. Do not smoke when refueling, and check that there are no open flames or sparks in the area.

WARNING

If you need to replace the fuel cap, use a genuine SUZUKI cap. Use of an improper cap can result in a malfunction of the fuel system or emission control system. It may also result in fuel leakage while driving and in the event of an accident.

Engine hood

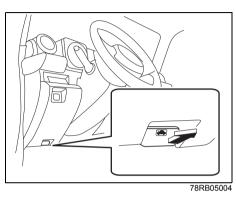

To open the engine hood:

 Pull the hood release handle located under the driver's side instrument panel in the outboard position. This will disengage the engine hood lock halfway.




78RB05005

 Push the under-hood release lever sideways with your finger, as shown in the illustration. While pushing the lever, lift up the engine hood.

The release lever and its peripheral, or engine food can be hot enough to burn your finger right after driving. Touch after those becomes cool enough.

NOTICE

Check that the wiper arms are not raised before you lift up the engine hood to avoid damaging the wiper arms and the engine hood.

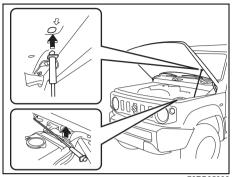


78RB05006

 While holding the hood, pull the prop rod out from the holding clip, and then insert the end of the rod into the designated hole.

- The prop rod can be hot enough to burn your finger right after driving. Touch the rod after it becomes cool enough.
- Insert the end of the rod into the hole securely. If the rod slips out, you may get caught in the closing hood.
- The rod may slip out when the hood is blown by wind. Be careful on windy days.

To close the engine hood:

 Lift the hood up slightly and remove the prop rod from the hole. Put the prop rod back into the holding clip.

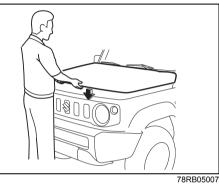

 Lower the hood to about 20 cm above the hood latch, and then let it drop down. Check that the hood is securely latched after closing.


WARNING

Check that the hood is fully closed and latched before driving. If it is not, it can fly up unexpectedly during driving, obstructing your view and resulting in an accident. To avoid injury, check that no part of the occupant's body such as hands or head is in the path of the hood when closing it.

NOTICE

Pushing on the hood from the top may damage it.

Sun visor

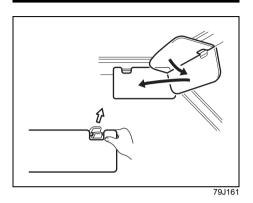


The sun visors can be pulled down to block glare coming through the windshield, or they can be unhooked and turned to the side to block glare coming through the side window.

NOTICE

When unhooking and hooking a sun visor, handle it by the hard plastic parts or the sun visor can be damaged.

Card holder (if equipped)

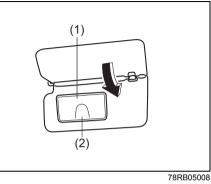


(1) Mirror cover(2) Card holder

You can put a card in the card holder (2) on the back of the sun visor.

NOTICE

When you park your vehicle outdoors in direct sunlight or in hot weather, do not leave plastic cards in the holder. The heat may distort or crack them.

Vanity mirror (if equipped)

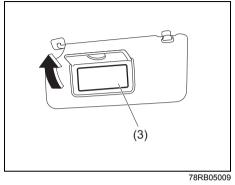

(3) Vanity mirror


To use the vanity mirror (3) on the back of the sun visor, pull up the mirror cover (1).

WARNING

- Do not use the mirror while driving your vehicle or you lose control of the vehicle.
- When using the vanity mirror, do not move too close to a front airbag location or lean against it. If the front airbag is accidentally inflated, it could hit you hard.

Interior light

Front

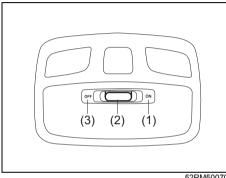

52RM50070

This light switch has three positions which function as described below:

ON (1)

The light comes on and stays on regardless of whether the door is open or closed.

NOTE:

The light will automatically be turned off to prevent the lead-acid battery from discharging when the following conditions are simultaneously met:

- The ignition switch is in "LOCK" position.
- The hazard warning lights, the position lights and the headlights are off.

 15 minutes passed after the light is turned on

DOOR (2)

The light comes on when the door is opened. After closing all doors, the light will remain on for about 15 seconds and then fade out. If you insert the key to change the ignition mode to "ACC" or "ON" during this time, the light will start to fade out immediately. After removing the key from the ignition switch, the light will turn on for about 15 seconds and then fade out.

NOTE:


The light will automatically be turned off to prevent the lead-acid battery from discharging when the following conditions are simultaneously met:

- The ignition switch is in "LOCK" position.
- About 15 minutes passed after the light is turned on.

OFF (3)

The light remains off even when the door is opened.

Luggage compartment (if equipped)

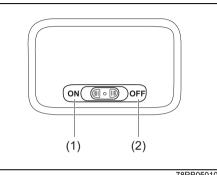

78RB05010

This light switch has three positions which function as described below:

ON (1)

The light comes on and stays on regardless of whether the tailgate is open or closed.

NOTE:

The light will automatically be turned off to prevent the lead-acid battery from discharging when the following conditions are simultaneously met:

- The ignition switch is in "LOCK" position.
- The hazard warning lights, the position lights and the headlights are off.
- 15 minutes passed after the light is turned on.

DOOR (2)

The light comes on when the tailgate is opened. After closing the tailgate, the light will remain on for about 15 seconds and then fade out. If you insert the key to change the ignition mode to "ACC" or "ON" during this time, the light will start to fade out immediately. After removing the key from the ignition switch, the light will turn on for about 15 seconds and then fade out.

NOTE:

The light will automatically be turned off to prevent the lead-acid battery from discharging when the following conditions are simultaneously met:

- The ignition switch is in "LOCK" position.
- About 15 minutes passed after the light is turned on.

OFF (3)


The light remains off even when the tailgate is opened.

NOTICE

Do not leave the tailgate open with the luggage compartment light switch in ON position for a long time, or the lead-acid battery will discharge.

NOTE:

The light will automatically be turned off to prevent the lead-acid battery from discharging when 15 minutes passed after the tailgate is opened.

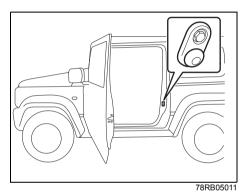


NOTE:

The number of doors involved in the lighting operation of the interior light depends on the vehicle specification. If there is a switch (rubber protrusion) at the door opening as shown, the door is involved in the lighting operation. The tailgate is also involved in this operation even without the rubber protrusion.


Accessory socket

Center console (if equipped)

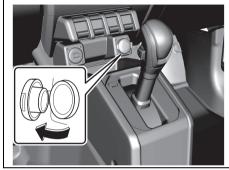

⁷⁸RB05012

Luggage compartment (if equipped)

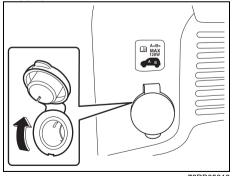

78RB05013

The accessory socket will work when the ignition switch is in "ACC" or "ON" position. This socket can be used to provide 12 volt/ 120 watt/10 ampere power for electrical accessories. Check that the rubber cap remains on the socket when the socket is not in use.


NOTICE

- To prevent the fuse from being blown, when using sockets at the same time, do not exceed the total combined power capacity of 12 volt/120 watt/10 ampere.
- Use of inappropriate electrical accessories can cause damage to your vehicle's electrical system. Check that any electrical accessories you use are designed to plug into this type of socket.
- Check that the cap remains on the socket when the socket is not in use.
- When the ignition switch is in "LOCK" position during using the accessory socket, the following accidents may occur;
 - the audio or navigation system does not turn off.
 - the keyless entry system does not work, etc.

If they occur, disconnect the item from the accessory socket and check whether the electrical equipments work properly.

If the problem persists, ask a SUZUKI dealer to have the system inspected.

USB socket (if equipped)

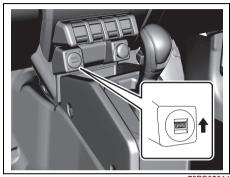


78RB05014

Connect your portable digital music player, etc. to this socket to enjoy music through the vehicle's audio system. Refer to "Audio system (Type A / Type B) (if equipped)" in this section.

NOTICE

Always close the cover when not in use, since entry of foreign material, dust, water, conductive liquids may damage the audio system or USB device.

Assist grips (if equipped)

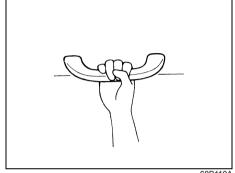


60B110A

Assist grips are provided for convenience.

NOTICE

To avoid damaging the assist grip and the molded headlining, do not hang down the assist grip.

Ride-in assist grip

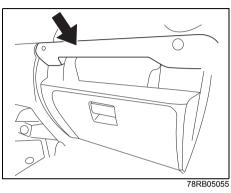


Ride-in assist grip provides solid support for the front passenger when entering or exiting the vehicle.

A WARNING

- Do not put any objects between the passenger side of the dashboard and the ride-in assist grip. When the passenger's airbag is inflated, objects may be flown toward the passenger and may cause serious injury.
- Front passenger should not grip the ride-in assist grip while seating. In this situation, the passenger would be too close to the the inflating airbag, and may suffer severe injury.

Glove box

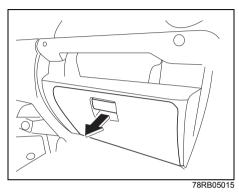

To open the glove box, pull the latch lever. To close it, push the lid until it latches securely.


WARNING

Never drive with the glove box lid open. It could cause injury if an accident occurs.

WARNING

Do not leave cigarette lighters or spray cans in the glove box. If a cigarette lighter or spray can is in a place such as the glove box, it may light accidentally when luggage is loaded, causing a fire.

Cup holder and storage area

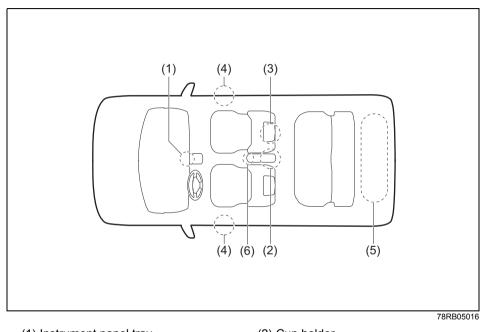

Instrument panel tray(1)

Do not place any objects which may fall out from the tray when the vehicle is moving.


Failure to take the precaution may result in an object interfering with the pedals and causing a loss of vehicle control or an accident.

- (1) Instrument panel tray
- (3) Front seat back pocket
- (5) Luggage box (if equipped)

- (2) Cup holder
- (4) Front door pocket
- (6) Center console pocket

Cup holder (2)

Use the rear cup holder to put a cup with a lid or a bottle with a cap. Also, you can put small articles in the rear cup holder.

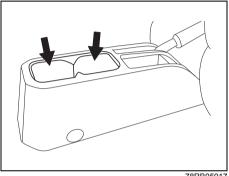


78RB05017

WARNING

Failure to take the precautions listed below could cause personal injury or vehicle damage.

- Be careful when you are using the cup holders to hold a cup containing hot liquid. Spilling out hot liguid can cause burn iniury.
- Do not use the cup holders to hold sharp-edged, hard or breakable objects. Objects in the cup holders may be thrown about during a sudden stop or impact, and could cause personal injury.
- Be careful not to spill liquid or insert any foreign materials into the moving part of the gearshift lever, or any electrical components. Liquid or foreign materials may damage these parts.
- · If you spill, or drop liquid accidentally, have your vehicle inspected by a SUZUKI dealer.

Front seat back pocket (3)

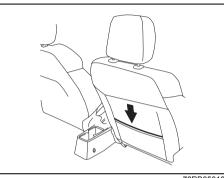


78RB05018

This pocket is provided for holding light and soft things such as gloves, newspapers or magazines.

A CAUTION

Do not put hard or breakable objects in the pocket. If an accident occurs, objects such as bottles, cans, etc. can injure the occupants in the rear seat.

Front door pocket (4)

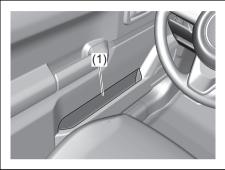


78RB05068

This pocket is provided for holding light and soft things such as gloves, newspapers or magazines.


A CAUTION

Do not put hard or breakable objects in the pocket. If an accident occurs, objects such as bottles, cans, etc. can injure the occupants in the door pocket.

Luggage box (5) (if equipped)

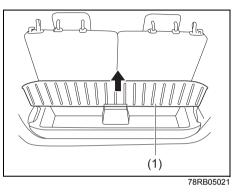


The luggage box (1) is equipped in the luggage compartment. You can place luggage or other cargos under the board.

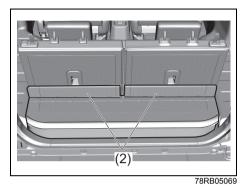

NOTICE

If the rear seatback is raised with heavy objects on the flap (2) of the luggage box, the luggage box may be damaged. Remove heavy objects before raising the rear seatback.

Center console pocket (6)

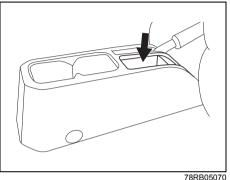


78RB050

Use the pocket to put small articles in the center console pocket.

WARNING

Do not place any objects which may fall out from the pocket when the vehicle is moving. Failure to take the precaution may result in objects interfering with the pedals and causing a loss of vehicle control or an accident.


Footrest (if equipped)

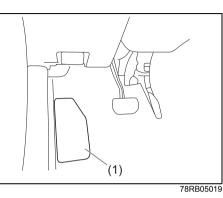


Use the footrest (1) as a support for your left foot and body.

Luggage compartment carpet

For passenger vehicles

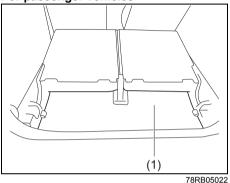

For light commercial vehicles

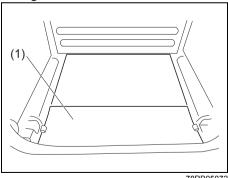

78RB05072

There is a tool box under the luggage compartment carpet (1) in the luggage compartment. You can place luggage or other cargos on the board.

WARNING

The luggage areas do not feature a structure that can accommodate people. Do not allow a child to ride in such areas. Otherwise, there is the danger of accidents due to sudden braking, etc. Do not let a child play in luggage areas even while the vehicle is stopped on the road.

Frame hooks

It is not recommended that you use the frame hooks for towing another vehicle. They were originally designed to tow your vehicle in emergency situation.

If your vehicle needs to be towed in an emergency, refer to "Towing your vehicle (recreational vehicle)" in "EMERGENCY SERVICE" section.


WARNING

Observe the following instructions when using frame hooks. The frame hook or vehicle body may break and cause serious injury or damage:

- Do not use the frame hooks for towing another vehicle.
- Avoid pulling the vehicle to get out of severe snowy, muddy or sandy conditions, sudden starts or erratic driving maneuvers which could cause excessive stress on the frame hook.


In such case, we recommend that you contact a professional service.

Front

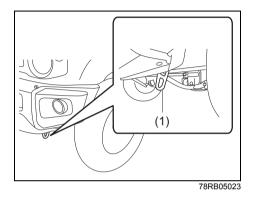

NOTICE

When you use the frame hook (1), avoid the driving that gives significant physical shock on hook. Such operation can damage the hook, or the vehicle body. Do not sudden accelerate.

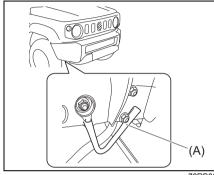


78RB05054

The hook (A) is provided for trailer/train/ sea shipping purposes only.

NOTICE

Do not use the hook (A) in emergency situation. If you use this hook (A), the hook or the vehicle may be damaged.

Rear

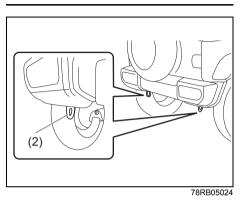

NOTICE

When you use the frame hook (2), avoid the driving that gives significant physical shock on hook. Such operation can damage the hook, the vehicle body or the drive system.Do not sudden accelerate.


- Do not tow the vehicle heavier than your vehicle.

Heating and air conditioning system

There are two types of heating and air conditioning systems as follows:


- Manual heating and air conditioning system
- Automatic heating and air conditioning system (climate control)

Air outlet

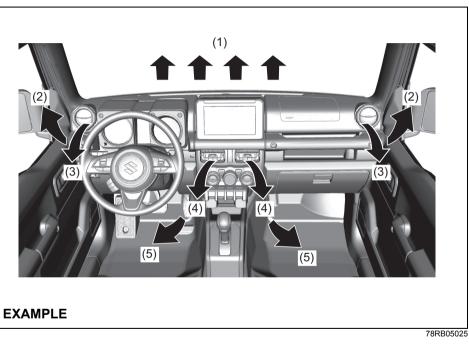

- 1. Windshield defroster outlet
- 2. Side defroster outlet
- 3. Side outlet
- 4. Center outlet
- 5. Floor outlet

Center outlet

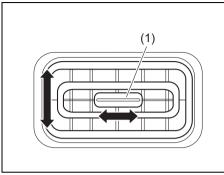

78RB05027

Move the knob (1) vertically or horizontally, to adjust the direction of airflow as desired.

Side outlet


78RB05026

When open, air comes out regardless of the air flow selector position.

Prolonged exposure to hot air from the heater or air conditioner could result in low temperature burns. All vehicle occupants, particularly children, the elderly, those with special needs, individuals with delicate skin, and sleeping individuals, should maintain sufficient distance from the air outlets to prevent prolonged exposure to hot airflow.

Manual heating and air conditioning system

Description of controls

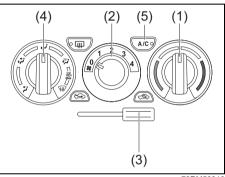

78RM50010


Temperature selector (1)

This is used to adjust the temperature.

Blower speed selector (2)

This is used to turn on the blower and to select blower speed.

Air intake selector (3)

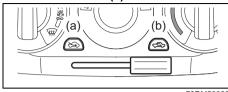

78RM50020

This selector is used to select the following modes.

FRESH AIR (a)


When this mode is selected by moving the lever to the position of (a) in the above illustration, outside air comes in.

RECIRCULATED AIR (b)

When this mode is selected by moving the lever to the position of (b) in the above illustration, inside air is recirculated. This mode is suitable when driving through dusty or polluted air such as in a tunnel, or when attempting to guickly cool down or warm up the interior.

NOTE

If you select RECIRCULATED AIR for an extended period of time, the air in the vehicle may become contaminated. Therefore, you should occasionally select FRESH AIR.

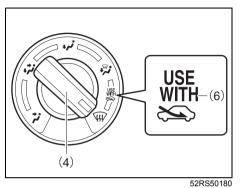


NOTE:

The mark of "USE WITH" (6)

To clear fog on the windshield and/or the side windows quickly, set the air flow selector (4) to "HEAT & DEFROST" or "DEFROST" and air intake selector (3) to "FRESH AIR". These positioning will clear the fogged windshield and/or the side windows faster than the "RECIRCULATED AIR".


Air flow selector (4)

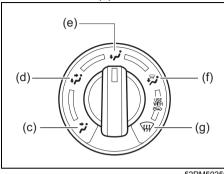

52RM50250

This is used to select one of the following functions.


VENTILATION (c)

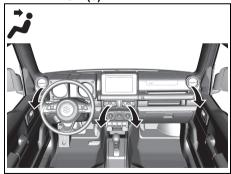

78RB05030


Temperature-controlled air comes out of the center and side air outlets.

BI-LEVEL (d)

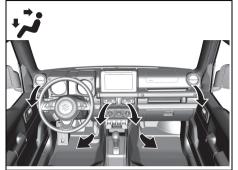


78RB05031

Temperature-controlled air comes out of the floor outlets and cooler air comes out of the center and side outlets. When the temperature selector (1) is in the fully cold position or fully hot position, however, the air from the floor outlets and the air from the center and side outlets will be the same temperature.

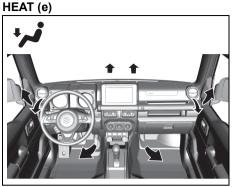


HEAT & DEFROST (f)

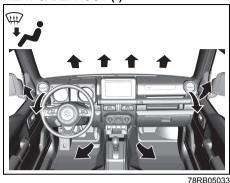

78RB05032

Temperature-controlled air comes out of the floor outlets and the side outlets, also comes out of the windshield defroster outlets and also comes slightly out of the side defroster outlets. Temperature-controlled air comes out of the floor outlets, the windshield defroster outlets, the side defroster outlets and the side outlets.

DEFROST (g)

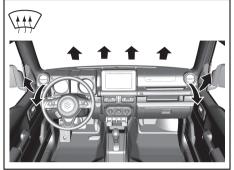

78RB05034

Temperature-controlled air comes out of the windshield defroster outlets, the side defroster outlets and the side outlets.

Air conditioning switch (5)

To turn on the air conditioning system, set the blower speed selector to a position other than off and push in "A/C" switch. With this "A/C" switch operation, a indicator light will come on when the air conditioning system is working. To turn off the air conditioning system, push "A/C" switch again.

During operation of the air conditioner, you may notice slight changes in engine speed. These changes are normal, the system is designed so that the compressor turns on or off to maintain the desired temperature.

Less operation of the compressor results in better fuel economy.

System operating instructions

Natural ventilation

Select VENTILATION and FRESH AIR, the temperature selector to the desired temperature position, and the blower speed selector to off. Fresh air will flow through the vehicle during driving.

Forced ventilation

The base settings are the same as for natural ventilation except you set the blower speed selector to a position other than off.

Normal heating (using outside air)

Select HEAT and FRESH AIR, the temperature selector to the desired temperature position and the blower speed selector to the desired blower speed position. Setting the blower speed selector to a higher blower speed position increases heating efficiency.

Quick heating (using recirculated air)

The base settings are the same as for normal heating except you select RECIRCU-LATED AIR. If you use this heating method for an extended period of time, the air in the vehicle can become contaminated and the windows can become misty. Therefore, use this method only for quick heating and change to the normal heating method as soon as possible.

Head cooled/Feet warmed heating

Select BI-LEVEL and FRESH AIR, the temperature selector to the desired temperature position, and the blower speed selector to the desired blower speed position. Unless the temperature selector is in the fully cold position or fully hot position, the air that comes out of the center and side outlets will be cooler than the air that comes out of the floor outlets.

Normal cooling

Set the air flow selector to VENTILATION, the temperature selector to the desired temperature position and the blower speed selector to the desired blower speed position, and turn on "A/C" switch. Setting the blower speed selector to a higher blower speed position increases cooling efficiency.

You can switch the air intake selector to either FRESH AIR or RECIRCULATED AIR as you desire. Choosing RECIRCU-LATED AIR increases cooling efficiency.

Quick cooling (using recirculated air)

The base settings are the same as for normal cooling except you select RECIRCU-LATED AIR and the highest blower speed.

NOTE:


 If you select RECIRCULATED AIR for an extended period of time, the air in the vehicle can become contaminated and the windows tend to get misted. Therefore, you should select FRESH AIR whenever possible. If your vehicle has been left in the sun with the windows closed, it will cool faster if you open the windows briefly while you operate the air conditioner with the air intake selector at FRESH AIR and the blower at high speed.

Dehumidifying

Set the air flow selector to a desired air flow selector position, the temperature selector to the desired temperature position and the blower speed selector to the desired blower speed position. Also select FRESH AIR and turn on "A/C" switch.

NOTE:

Because the air conditioner dehumidifies the air, turning it on will help keep the windows clear, even when blowing heated air using DEFROST or HEAT & DEFROST functions.

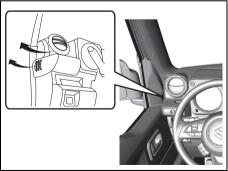

NOTE:

If you need maximum defrosting:

- select DEFROST and FRESH AIR,
- set the blower speed selector to high,
- adjust the temperature selector to the hot end,
- turn on "A/C" switch, and
- adjust the side outlets so the air blows on the side windows.

78RB05035

Maintenance

If you do not use the air conditioner for a long period, such as during winter, it may not give the best performance when you start using it again. To help maintain optimum performance and durability of your air conditioner, it needs to be run periodically. Operate the air conditioner at least once a month for one minute with the engine idling. This circulates the refrigerant and oil and helps protect the internal components.

If your air conditioner is equipped with air filters, clean or replace them as specified in "Maintenance schedule" in "INSPEC-TION AND MAINTENANCE" section.

(For models with air conditioner refrigerant R-1234yf) NOTE:

 Your vehicle uses the air conditioning refrigerant HFO-1234yf, commonly called R-1234yf. R-1234yf replaced R-134a for automotive applications. Other refrigerants are available, but only R-1234yf should be used in your vehicle.

(For the country of Singapore)

• For repair and parts replacement, have your vehicle repaired or replaced parts by an authorized SUZUKI dealer that has the mechanic qualified with SAE J2845 for air conditioner of R-1234yf. NOTICE

Using the wrong refrigerant may damage your air conditioning system. Use R-1234yf only. Do not mix or replace the R-1234yf with other refrigerants.

(For models with air conditioner refrigerant R-134a)

NOTE:


Your vehicle uses the air conditioning refrigerant HFC-134a, commonly called R-134a. R-134a replaced R-12 around 1993 for automotive applications. Other refrigerants are available, including recycled R-12, but only R-134a should be used in your vehicle.

NOTICE

Using the wrong refrigerant may damage your air conditioning system. Use R-134a only. Do not mix or replace the R-134a with other refrigerants.


Automatic heating and air conditioning system (climate control)

Description of controls

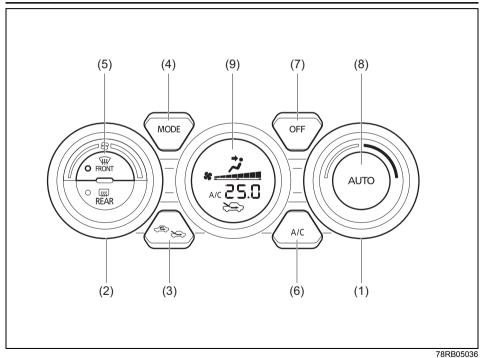

- (1) Temperature selector
- (2) Blower speed selector
- (3) Air intake selector
- (4) Air flow selector
- (5) Defrost switch
- (6) Air conditioning switch(7) "OFF" switch
- (8) "AUTO" switch
- (9) Display

Temperature selector (1)

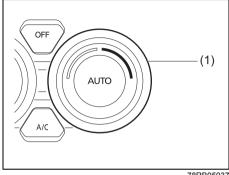

78RB05037


Turn the temperature selector (1) to adjust the temperature.

NOTE:

If you turn the temperature selector (1) until "HI" or "LO" appears on the display. the climate control system will operate at maximum heating or cooling. The temperature of the air from the outlets may change suddenly while "LO" or "HI" is displayed. but this is normal.

NOTE:


When you change the unit of temperature in the information display, the unit of temperature in the air conditioning system will be changed. Refer to "Information display" in the "BEFORE DRIVING" section for details.

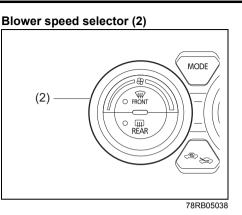

The blower speed selector (2) is used to turn on the blower and to select blower speed.

If "AUTO" switch (8) is pushed, the blower speed will vary automatically as the climate control system maintains the selected temperature.

Air intake selector (3)

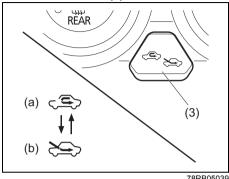



Push the air intake selector (3) to change between the recirculated air and fresh air mode.

If "AUTO" switch (8) is pushed, the air intake will vary automatically as the climate control system maintains the selected temperature.

NOTE:

When the recirculated air mode is selected, the automatic operation system is deactivated even if you push "AUTO" switch (8).

RECIRCULATED AIR (a)

When this mode is selected, inside air is recirculated. This mode is suitable when driving through dusty or polluted air such as a tunnel, or when attempting to guickly cool down or warm up the interior.

FRESH AIR (b)


When this mode is selected, outside air is introduced.

FRESH AIR and RECIRCULATED AIR are selected alternately each time the air intake selector is pushed.


NOTE:

If you select RECIRCULATED AIR for an extended period of time, the air in the vehicle may become contaminated.

Therefore, you should occasionally select FRESH AIR

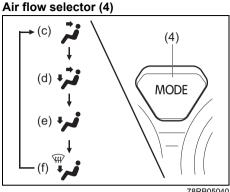

VENTILATION (c)

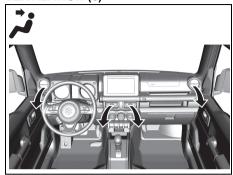

78RB05041


78RB05040

Push the air flow selector (4) to change among the following functions. The indication of the selected mode appears in the display.

If "AUTO" switch (8) is pushed, the air flow will vary automatically as the climate control system maintains the selected temperature.


Temperature-controlled air comes out of the center and side outlets.

BI-LEVEL (d)

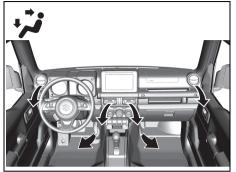

78RB05042


Temperature-controlled air comes out of the floor outlets and cooler air comes out of the center and side outlets. When the temperature selector (1) is in the fully cold position or fully hot position, however, the air from the floor outlets and the air from the center and side outlets will be the same temperature.

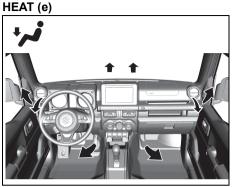

78RB05043

Temperature-controlled air comes out of the floor outlets and the side outlets, a small amount of air comes out of the windshield defroster outlets and also comes slightly out of the side defroster outlets.


HEAT & DEFROST (f)

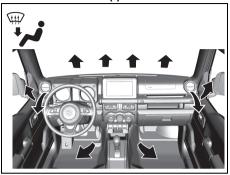

78RB05044


Temperature-controlled air comes out of the floor outlets, the windshield defroster outlets, the side defroster outlets and the side outlets.

Defrost switch (5)

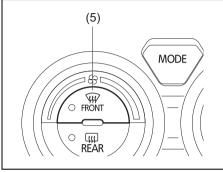

78RB05045

Push the defrost switch (5) to turn on the defroster.

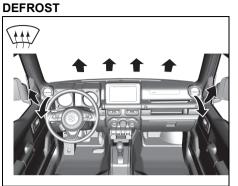


78RB05046

Temperature-controlled air comes out of the windshield defroster outlets, the side defroster outlets and the side outlets.

NOTE:

When the defrost switch (5) is pushed to turn on the defroster, the air conditioning system will operate and FRESH AIR mode will be selected automatically. In very cold weather, however, the air conditioning system will not operate.

Air conditioning switch (6)

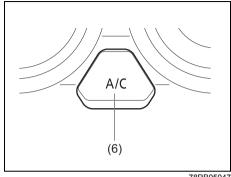


78RB05047

The air conditioning switch (6) is used to turn on and off the air conditioning system only when the blower is on. To turn on the air conditioning system, push in the switch and "A/C" will appear in the display. To turn off the air conditioning system, push in the switch again and "A/C" will go off.

System operating instructions

Automatic operation

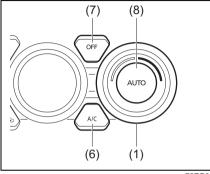

78RB05048

You can let the climate control system work automatically. To set the system for fully-automatic operation, follow the procedure below.

- 1) Start the engine.
- 2) Push "AUTO" switch (8).
- Set the desired temperature by turning the temperature selector (1).

The blower speed, air intake and air flow are controlled automatically to maintain the set temperature. However, the air flow is not changed to DEFROST position automatically.

NOTE:

When the recirculated air mode is selected, the automatic operation system is deactivated even if you push "AUTO" switch (8). You can use the air conditioning switch (6) to manually turn the air conditioner on or off according to your preference. When you turn the air conditioning switch off, the climate control system cannot lower the inside temperature below outside temperature.

To turn the climate control system off, push "OFF" switch (7).

NOTE:


If "AUTO" in the display blinks, there is a problem in the heating system and/or air conditioning system. You should have the system inspected by a SUZUKI dealer.

NOTE:

- To find the temperature at which you are most comfortable, start with the 22°C (72°F) or 25°C (75°F) setting. (the temperature vary depending on vehicle specifications.).
- If you turn the temperature selector (1) until "HI" or "LO" appears on the display, the climate control system will operate at maximum heating or cooling and the blower will run at full speed.
- To avoid blowing cold air in cold weather or hot air in hot weather, the system will delay turning on the blower until warmed or cooled air is available.
- If your vehicle has been left in the sun with the windows closed, it will cool faster if you open the windows briefly.
- Even under the automatic operation, you can set individual selectors to the manual mode. The manually selected functions

are maintained, and the other functions remain under automatic operation.

- If the windshield and/or the front door windows are fogged, push the defrost switch (5) to turn on the defroster, or push the air flow selector (4) to change the air flow to HEAT & DEFROST position to defog the windows.
- To return the blower speed selector (2), air intake selector (3), and air flow selector (4) to automatic operation, push "AUTO" switch (8).

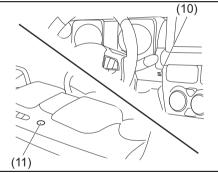


78RB05049

Be careful not to cover the interior temperature sensor (10) located between the steering wheel and the climate control panel, or the solar sensor (11) located at the top of the passenger's side dashboard. These sensors are used by the automatic system to regulate temperature.

Manual operation

You can manually control the climate control system. Set the selectors to the desired positions.

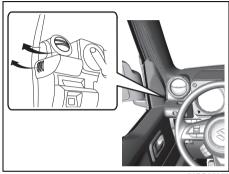

78RB05050

NOTE:

If you need maximum defrosting:

- push the defrost switch (5) to turn on the defroster (the air conditioning system will operate and FRESH AIR mode will be selected automatically),
- set the blower speed selector to high,
- adjust the temperature selector to "HI" indication on the display, and
- adjust the side outlets so the air blows on the side windows.

Maintenance

If you do not use the air conditioner for a long period, such as during winter, it may not give the best performance when you start using it again. To help maintain optimum performance and durability of your air conditioner, it needs to be run periodically. Operate the air conditioner at least once a month for one minute with the engine idling. This circulates the refrigerant and oil and helps protect the internal components.

If your air conditioner is equipped with air filters, clean or replace them as specified in "Maintenance schedule" in "INSPEC-TION AND MAINTENANCE" section. Have this job done by a SUZUKI dealer as the lower glove box must be lowered for this job.

(For models with air conditioner refrigerant R-1234yf)

NOTE:

 Your vehicle uses the air conditioning refrigerant HFO-1234yf, commonly called R-1234yf. R-1234yf replaced R-134a for automotive applications. Other refrigerants are available, but only R-1234yf should be used in your vehicle.

(For the country of Singapore)

 For repair and parts replacement, have your vehicle repaired or replaced parts by an authorized SUZUKI dealer that has the mechanic qualified with SAE J2845 for air conditioner of R-1234yf. NOTICE

Using the wrong refrigerant may damage your air conditioning system. Use R-1234yf only. Do not mix or replace the R-1234yf with other refrigerants.

(For models with air conditioner refrigerant R-134a)


NOTE:


Your vehicle uses the air conditioning refrigerant HFC-134a, commonly called R-134a. R-134a replaced R-12 around 1993 for automotive applications. Other refrigerants are available, including recycled R-12, but only R-134a should be used in your vehicle.

NOTICE

Using the wrong refrigerant may damage your air conditioning system. Use R-134a only. Do not mix or replace the R-134a with other refrigerants.

Radio antenna

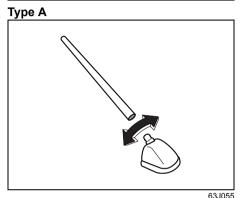

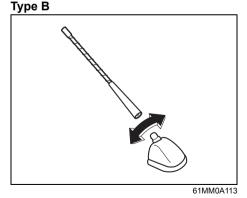

The radio antenna on the roof is removable. To remove the antenna, turn it counterclockwise. To reinstall the antenna, turn it clockwise firmly by hand.

NOTE:

Adjust the antenna angle to maximum for optimum radio reception.

NOTICE

- To avoid damage to the radio antenna:
- Remove the antenna when using an automatic car wash.
- Remove the antenna when the antenna hits anything such as a low ceiling in a parking garage or putting a car cover over your vehicle.

Installation of radio frequency transmitters


NOTE:

When you intend to use Radio Frequency (RF) transmitting equipment in your vehicle, refer to "Installation of Radio Frequency (RF) Transmitting Equipment" in the end of this book.

NOTICE

Improper installation of mobile communication equipment such as cellular telephones, CB (Citizen's Band) radios or any other wireless transmitters may cause electronic interference with your vehicle's ignition system or any other electrical systems resulting in vehicle performance problems. Consult a SUZUKI dealer or qualified service technician for advice.

Audio system (Type A / Type B / Type C) (if equipped)

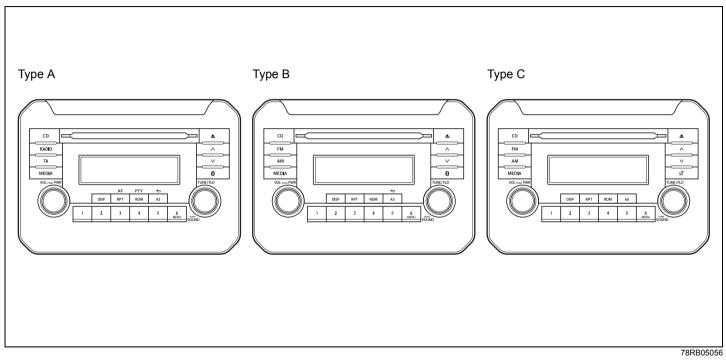

Type A: AM/FM/DAB CD player with Bluetooth[®] function Type B: AM/FM CD player with Bluetooth[®] function Type C: AM/FM CD player without Bluetooth[®] function

Safety information

WARNING

If you pay too much attention to operating the audio system or viewing the audio system display while driving, an accident can occur. If you set the sound volume too loud, it could prevent you from being aware of road and traffic conditions.

- Keep your eyes on the road and your mind on the drive. Avoid paying too much attention to operating the audio system or viewing the audio system display.
- Familiarize yourself with the audio system controls and operation of the audio system before driving.
- Preset your favorite radio stations before driving so that you can quickly tune to them using the presets.
- Set the sound volume to a level that will allow you to continue to be aware of road and traffic conditions while driving.

Notes on discs

Precautions

- When the inside of the vehicle is very cold and the player is used soon after switching on the heater, condensation may form on the disc or the optical parts of the player and proper playback may not be possible. If condensation forms on the disc, wipe it off with a soft cloth. If condensation forms on the optical parts of the player, do not use the player for about one hour. This will allow the condensation to disappear normally.
- Driving on extremely bumpy roads which cause severe vibrations may cause sound to skip.
- This unit uses a precision mechanism. Even in the event that trouble arises, never open the case, disassemble the unit, or lubricate the rotating parts. Bring the unit to a SUZUKI dealer.


Cautions on handling



52D274

This unit has been designed specifically for playback of compact discs bearing mark (A) shown above.

No other discs can be played.

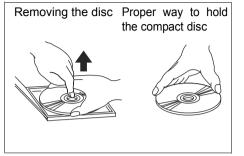


52D275

To remove the compact disc from its storage case, press down on the center of the case and lift the disc out, holding it carefully by the edges.

Always handle the compact disc by the edges.


Never touch the surface.

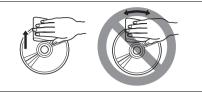

52D347

To remove fingermarks and dust, use a soft cloth, and wipe in a straight line from the center of the compact disc to the circumference.

(C)

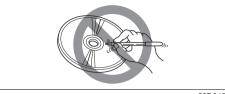

52D348

Never stick labels on the surface of the compact disc or write on the surface with a pencil or pen.



Do not use any solvents such as commercially available cleaners, anti-static spray, or thinner to clean compact discs.


52D277

New discs may have some roughness around the edges. The unit may not work or the sound may skip if such discs are used. Use a ball-point pen (B), etc. to remove the roughness (C) from edges of the disc before inserting it into the unit.



52D350

Do not use compact discs that have large scratches, are misshaped, or cracked, etc. Use of such discs will cause damage or prevent the system from operating properly.

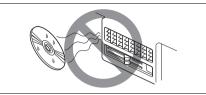

52D351

Do not expose compact discs to direct sunlight or any heat source.

NOTE:

 Do not use commercially available CD protection sheets or discs equipped with stabilizers, etc.

These may get caught in the internal mechanism and damage the disc.

- It may be impossible to play CD-R discs with this unit due to the recording conditions.
- CD-RW discs cannot be played with this unit.

A WARNING

This is a class I laser product. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Do not open covers and do not attempt to repair this unit by your-self.

Ask an authorized dealer for the repair.

Bluetooth®

The Bluetooth $^{\mbox{\scriptsize B}}$ word mark and logo are registered trademarks and are owned by the Bluetooth SIG, Ink.

Stop using this unit and a Bluetooth $\ensuremath{^{\ensuremath{\mathbb{R}}}}$ ready device whenever requested.

This unit shares the communication frequency with other private or public wireless communication equipment such as a wireless LAN and other wireless communication radios.

You should stop using this unit whenever you are notified that your unit disturbs other wireless communication immediately.

CE

Access to <u>http://www.ptc.panasonic.eu/,</u> enter the below Model No. into the keyword search box, you can download the latest "DECLARA-TION of CONFORMITY" (DoC).

Set No. AZ1601

Information on disposal for users of waste electrical & electronic equipment (private households)



This symbol on the products and/or accompanying documents means that used electrical and electronic products should not be mixed with general household waste.

For proper treatment, recovery and recycling, please take these products to designated collection points, where they will be accepted on a free of charge basis. Alternatively, in some countries you may be able to return your products to your local retailer upon the purchase of an equivalent new product.



68LM560 th

Disposing of this product correctly will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling. Please contact your local authority for further details of your nearest designated collection point.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

For business users in the European Union

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

Information on disposal in other countries outside the European Union

This symbol is only valid in the European Union.

If you wish to discard this product, please contact your local authorities or dealer and ask for the correct method of disposal.

Part 15 of the FCC Rules

FCC ID: ACJ932AZ1601

NOTE:

Properly shielded and grounded cables and connectors must be used for connection to host computers and/or peripherals in order to meet FCC emission limits.

WARNING

RF Exposure

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). [But it is desirable that it should be installed and operated keeping the radiator at least 20 cm or more away from person's body.]

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

WARNING

This is a class I laser product. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure. Do not open covers and do not attempt to repair this unit by yourself. Ask an authorized dealer for the repair.

🚯 Bluetooth[®]

The Bluetooth $^{\mbox{\scriptsize B}}$ word mark and logo are registered trademarks and are owned by the Bluetooth SIG, Ink.

NOTE:

This equipment complies with FCC radiation exposure limits set forth for uncontrolled equipment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65. This equipment has very low level of RF energy which does not comply with maximum permissive exposure (MPE) evaluation. But it is desirable that it should be installed and operated with at least 20cm and more between the radiator and person's body (excluding extremities: hands, wrists, feet and ankles).

Stop using this unit and a Bluetooth[®] ready device whenever requested.


This unit shares the communication frequency with other private or public wireless communication equipment such as a wireless LAN and other wireless communication radios.

You should stop using this unit whenever you are notified that your unit disturbs other wireless communication immediately. NOTE:

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

Basic operations

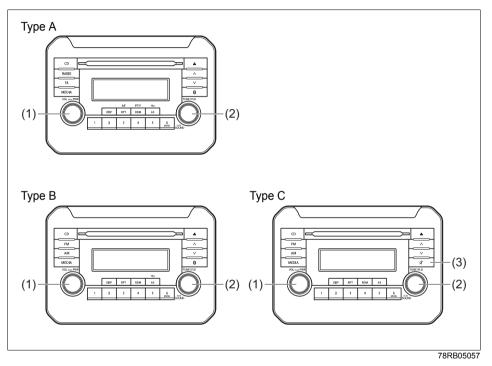

Turning on/off power

Adjusting the volume

Turn "VOL PUSH PWR" knob (1).

turned off

volume.

NOTE:

Mute

again.

vehicle sirens.

Press "VOL PUSH PWR" knob (1) to turn on the power. The unit starts to operate in the previous setting that the power was

Turning it clockwise increases the volume;

turning it counterclockwise decreases the

For the purposes of safe driving, adjust the audio volume to a level that allows you to hear sounds outside of the vehicle including car horns and particularly emergency

Press MUTE button (3) to mute the sound.

To cancel the mute, press MUTE button (3)

(1) "VOL PUSH PWR" knob

(2) "TUNE/FLD PUSH SOUND" knob

(3) MUTE button

Adjusting bass/treble/balance/fader

1) Press "TUNE/FLD PUSH SOUND" knob (2).

Each time the knob is pressed, sound adjustment will change as follows:

Preset-EQ (EQ OFF)

Bass adjustment (BASS 0)

Treble adjustment (TREBLE 0)

Balance adjustment (BALANCE 0)

Fader adjustment (FADER 0)

AVC adjustment (AVC LEVEL 2) -

 Turn "TUNE/FLD PUSH SOUND" knob (2) to adjust the sound. Adjusting the AVC (Auto volume control)

The Auto Volume Control (AVC) function automatically adjusts (increases/ decreases) the sound volume in accordance with vehicle speed. The AVC control is provided with three selectable levels (LEVEL OFF, 1, 2, 3). The range of volume adjustment increases together with the LEVEL number.


- 1) Press "TUNE/FLD PUSH SOUND" knob (2) until the AVC adjustment mode is selected.
- Turn "TUNE/FLD PUSH SOUND" knob (2) to select the desired AVC adjustment level. (Initial setting: LEVEL 2)

Preset-EQ


Preset-EQ calls up various sound types in accordance with the listening music type.

- Press "TUNE/FLD PUSH SOUND" knob (2) several times until "PRESET-EQ" appears.
- 2) Turn "TUNE/FLD PUSH SOUND" knob (2).

Each time the knob is turned, preset EQ mode will change as follows:

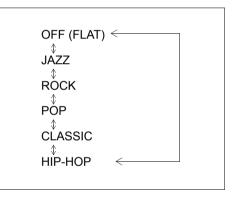

Listening to the radio (Type A)

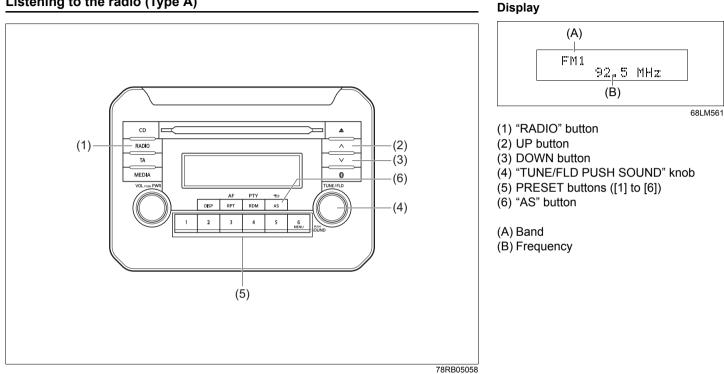

Selecting the reception band

Press the "RADIO" button (1). Each time the button is pressed, the reception band will change as follows:

 $FM1 \rightarrow FM2 \rightarrow DAB1 \text{ (if equipped)} - \uparrow$ $AM \leftarrow DAB2 \text{ (if equipped)} \leftarrow$

Seek tuning

Press UP button (2) or DOWN button (3). The unit stops searching for a station at a frequency where a broadcast station is available.

NOTE:

If AF is on, the unit searches for RDS stations only.

Manual tuning

Turn "TUNE/FLD PUSH SOUND" knob (4). The frequency being received is displayed.

Preset memory

- 1) Select the desired station.
- 2) Hold down a desired button ([1] to [6]) of PRESET buttons (5) to which you want to store the station for 2 seconds or longer.

Auto store

Hold down "AS" button (6) for 2 seconds or longer.

6 stations in good reception will automatically be stored to PRESET buttons (5) in order, starting from a station whose frequency is the lowest.

NOTE:

- Auto store can be released by pressing "AS" button (6) while auto store is under way.
- When the auto store is performed, the station previously stored in the memory at the position is overwritten.
- When there are fewer than 6 stations that can be stored even if 1 round of auto store operation is performed, no station will be stored at the remaining PRESET buttons (5).
- 6 stations can be preset for FM1 and FM2 in common, and 6 stations for AM in auto store mode.
- If AF is on, the unit searches for RDS stations only.


Auto store mode on/off

Press "AS" button (6). Each time the button is pressed, the mode is switched as follows:

AS	S mode on \rightarrow AS mode off	


Radio reception

Radio reception can be affected by environment, atmospheric conditions, or radio signal's power and distance from the station. Nearby mountains and buildings may interfere or deflect radio reception, causing poor reception. Poor reception or radio static can also be caused by electric current from overhead wires or high voltage power lines.

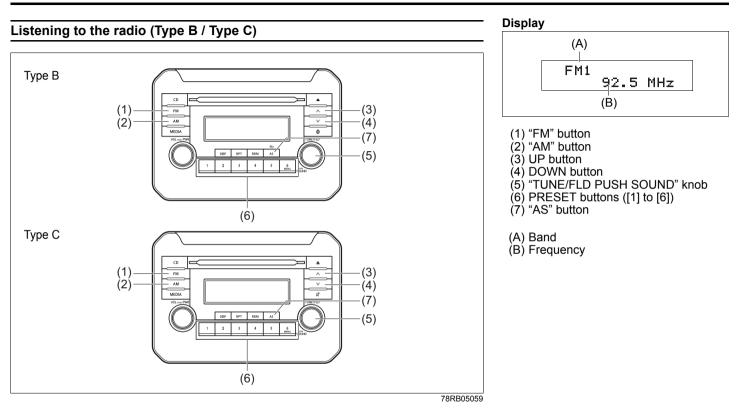

Selecting the FM band

Press "FM" button (1). Each time the button is pressed, the reception band will change as follows:

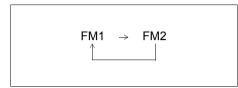

Selecting the AM band

Press "AM" button (2).

Seek tuning

Press UP button (3) or DOWN button (4). The unit stops searching for a station at a frequency where a broadcast station is available.

Manual tuning

Turn "TUNE/FLD PUSH SOUND" knob (5). The frequency being received is displayed.

Preset memory

- 1) Select the desired station.
- Hold down a desired button ([1] to [6]) of the PRESET buttons (6) to which you want to store the station for 2 seconds or longer.

Auto store

Hold down "AS" button (7) for 2 seconds or longer.

6 stations in good reception will automatically be stored to PRESET buttons (6) in order, starting from a station whose frequency is the lowest.


NOTE:

- Auto store can be released by pressing "AS" button (7) while auto store is under way.
- When the auto store is performed, the station previously stored in the memory at the position is overwritten.
- When there are fewer than 6 stations that can be stored even if 1 round of auto store operation is performed, no station will be stored at the remaining PRESET buttons (6).
- 6 stations can be preset for FM1 and FM2 in common, and 6 stations for AM in auto store mode.

Auto store mode on/off

Press "AS" button (7).


Each time the button is pressed, the mode is switched as follows:

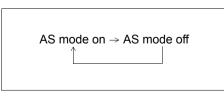

Radio reception

Radio reception can be affected by environment, atmospheric conditions, or radio signal's power and distance from the station. Nearby mountains and buildings may interfere or deflect radio reception, causing poor reception. Poor reception or radio static can also be caused by electric current from overhead wires or high voltage power lines.

Using the RDS functions (Type A)

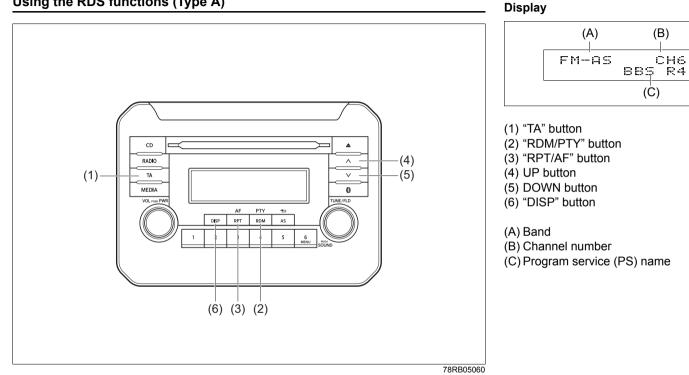

68LM562

TA (Traffic Announcement) on/off

Press "TA" button (1).

Each time it is pressed, TA adjustment is changed as follows:

 $\begin{array}{c} \mathsf{OFF} \to \mathsf{TP} \; \mathsf{ON} \to \mathsf{TA} \; \mathsf{ON} \\ \uparrow \\ \end{array}$

NOTE:

- For listening to only traffic information, activate TA. Once traffic information starts, the volume changes automatically.
- "TP" indicator lights up when TP (Traffic Program) is on. It blinks when no TP data is received.
- "TA" indicator lights while TA is activated. On the other hand, "TA" indicator blinks if the TP data cannot be received.
- If UP button (4) or DOWN button (5) is pressed while TA or TP is set to on, the unit searches for a TP station.
- If no TP station is received, the unit displays "TP NOTHING".

PTY (Program Type) search

- 1) Press "RDM/PTY" button (2) to select PTY mode.
- 2) Press "RDM/PTY" button (2) while PTY is displayed.

Each time it is pressed, PTY adjustment is changed as follows:

NEWS <	
SPORTS	
TALK	
POP	

 Press UP button (4) or DOWN button (5) while PTY is displayed. Search begins.

NOTE:

If no PTY information is received, the unit displays "NOPTY".

AF (Alternative Frequency) on/off

Press "RPT/AF" button (3). Each time it is pressed, AF adjustment is changed as follows:

AF-ON/REG-OFF <	
\downarrow	
AF-ON/REG-ON	
· ↓	
AF-OFF/REG-OFF	

AF: If the reception condition becomes poor, the frequency of the same program with good reception is automatically searched.

REG: With regard to the automatically searched frequency with AF activated, the alternative frequency of the same program is searched within the present region when REG is activated.

NOTE:

"AF" indicator lights up when AF is on. In addition, "REG" indicator lights up when REG is on.

TA standby

At the moment traffic information is received while the source is set to CD, USB, iPod, DAB, or Bluetooth[®]audio with TA activated, the source is automatically changed to radio. After reception of traffic information, the source, which was selected before being changed to radio, resumes.

NOTE:


If no TP station can be received while the unit stands by for TA, it automatically searches for a TP station.

EON (Enhanced Other Network)

When the EON data is received with TP or TA activated, "EON" indicator lights up, and the traffic information from a network other than the currently received station is allowed to be received.


Emergency announcement reception

Emergency announcements are automatically received and displayed.

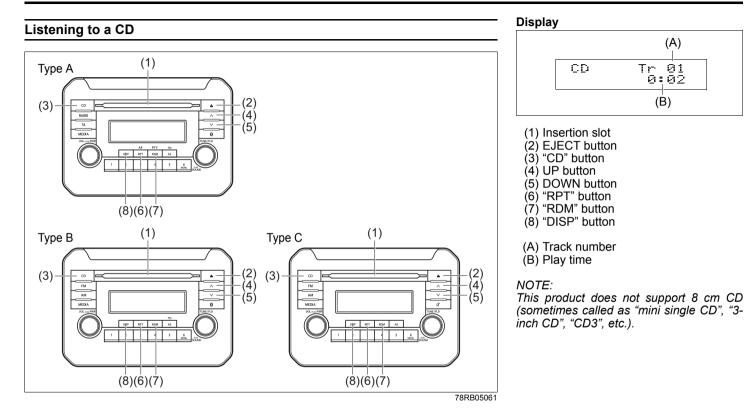



- CDs or CD-ROMs without mark (A) cannot be used.
- Some discs recorded in CD-R/CD-RW format may sometimes be impossible to use.

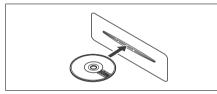

- A CD is to be inserted with its label side up.
- When there is a CD already in the unit, it is impossible to insert another CD without ejecting the CD in the unit. Do not use force to insert a CD into the CD insertion slot.

NOTICE

- Never insert your finger or hand into the CD insertion slot. Never insert foreign objects.
- Never insert a CD with glue coming out from adhesive tape or a rental CD label or with a trace indicating that adhesive tape or a rental CD label has been removed. This may cause the CD not to eject or result in a malfunction.

Loading a CD

Insert a CD in the insertion slot (1). When the CD is loaded, it starts to play.

Ejecting a CD

Press EJECT button (2).

When the ignition switch is in "LOCK" position, the CD remained ejected for around 15 seconds or longer will automatically be drawn inside the unit. (Auto reload function)

The backup eject function:

This function allows you to eject a CD by pressing EJECT button (2) even when the ignition switch is in "LOCK" position.

NOTICE

If you forcefully try to push an ejected CD inside the unit before auto reloading, the disc surface might be scratched.

Before reloading a CD, remove it from the unit completely.

Listening to a CD

When a ČD is inserted, playback will automatically start.

When a CD is already inside the unit, press "CD" button (3) to start playback.

Selecting a track

- Press UP button (4) to listen to the next track.
- Press DOWN button (5) twice to listen to the previous track.


When DOWN button (5) is pressed once, the track currently being played will start from the beginning again.

Fast forwarding/rewinding a track

- Hold down UP button (4) to fast forward the track.
- Hold down DOWN button (5) to fast rewind the track.

Random playback

Press "RDM" button (7). Each time the button is pressed, the mode will change as follows:

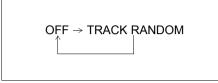


TRACK RANDOM

The random indicator "RDM" will light. The tracks in the loaded disc will be played in random order.

Repeat playback

Press "RPT" button (6).

Each time the button is pressed, the mode will change as follows:

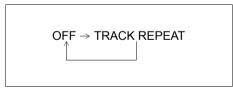

TRACK REPEAT

The repeat indicator "RPT" will light. The track currently being played will be played repeatedly.


Display change


Press "DISP" button (8). Each time the button is pressed, display will change as follows:

NOTE:

- "NO TITLE" will be displayed when there is no text information in the disc currently being played.
- If text data contains more than 16 characters, ">" mark will appear at the right end. Holding down "DISP" button (8) for 1 second or longer can display the next page.

Listening to an MP3/WMA/AAC disc

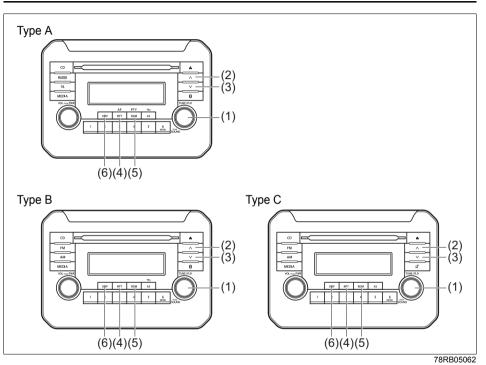

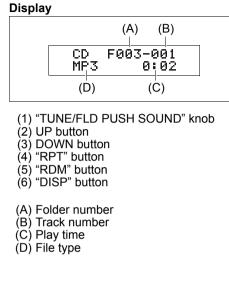

Selecting a folder

Turn "TUNE/FLD PUSH SOUND" knob (1) to select a folder.

Selecting a track

- Press UP button (2) to listen to the next track.
- Press DOWN button (3) twice to listen to the previous track.


When DOWN button (3) is pressed once, the track currently being played will start from the beginning again.

Fast forwarding/rewinding a track

- Hold down UP button (2) to fast forward the track.
- Hold down DOWN button (3) to fast rewind the track.

Random playback

Press "RDM" button (5). Each time the button is pressed, the mode will change as follows:

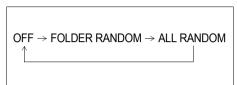

- FOLDER RANDOM The random indicator "F.RDM" will light. The tracks in the current folder will be played in random order.
- ALL RANDOM

The random indicator "RDM" will light. The tracks in the loaded disc will be played in random order.

Repeat playback


Press "RPT" button (4). Each time the button is pressed, the mode will change as follows:

$OFF \rightarrow FILE REPEAT \rightarrow FOLDER REPEAT$

- FILE REPEAT The repeat indicator "RPT" will light. The track currently being played will be played repeatedly.
- FOLDER REPEAT The repeat indicator "F.RPT" will light. All tracks in the currently selected folder will be played repeatedly.

Display change

Press "DISP" button (6). Each time the button is pressed, display will change as follows:

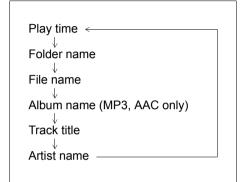

NOTE:

- "NO TITLE" will be displayed when there is no text information in the disc currently being played.
- If text data contains more than 16 characters, ">" mark will appear at the right end. Holding down "DISP" button (6) for 1 second or longer can display the next page.

Notes on MP3/WMA/AAC

What is MP3?

 An abbreviation of "MPEG audio layer3", MP3 is an audio compression format that has become the standard format among PC users. Its merit is that the original audio data is compressed to approximately 1/10 and high sound quality is maintained. This means that it is possible to store the data of approximately 10 music CDs on a single CD-R/ RW disc, which in turn makes it possible to play music for a long time without having to change the disc.

What is WMA?

- An abbreviation of "Windows Media Audio," WMA is an audio compression format developed by Microsoft.
- WMA files for which the DRM (Digital Rights Management) function is on cannot be played.
- Windows MediaTM and the Windows[®] logo are trademarks or registered trademarks of Microsoft Corporation in the United States and other countries.

What is AAC?

• An abbreviation of "Advanced Audio Coding," AAC is an audio compression format used by MPEG2 and MPEG4.

Points to remember when making MP3/ WMA/AAC files

Common

- High bit rate and high sampling frequency are recommended for high quality sounds.
- Selecting VBR (Variable Bit Rate) is not recommended. Selecting VBR may cause display of incorrect playing time and jumpiness of playback.
- Playback sound quality varies depending on the encoding environment. For details, refer to the user manual of the encoding software and the writing software in use.

NOTICE

Never use ".mp3", ".wma" or ".m4a" as a file name extension if it is not in the MP3/WMA/AAC format file. Failure to observe this may result in damage to the speaker due to noise production.

Recording MP3/WMA/AAC files on a CD media

- It is recommended not to write both CD-DA files and MP3/WMA/AAC files on a disc.
- If both CD-DA files and MP3/WMA/AAC files are on the same disc, tracks may not be played in the correct order or some tracks may not be played at all.
- When storing both MP3 data and WMA data on the same disc, sort and place them in different folders.
- Do not write files other than MP3/WMA/ AAC files and unnecessary folders on a disc.
- MP3/WMA/AAC files should be named to meet the standards and the file system specifications as shown below.
- The file extension ".mp3", ".wma" or ".m4a" should be assigned to files based on their format independently.
- You may encounter a trouble in playing MP3/WMA/AAC files or displaying information of MP3/WMA/AAC files depending on the writing software or CD recorder in use.
- This unit does not have a playlist function.
- It is recommended to write discs in Discat-Once mode even though Multi-session mode is supported. These modes are the methods for writing audio data in CD.

Compression formats

MP3

- Bit rate: MPEG1 Audio Layer III: 32 k - 320 kbps MPEG2 Audio Layer III: 8 k - 160 kbps MPEG2.5 Audio Layer III: 8 k - 160 kbps
- Sampling frequency: MPEG1 Audio Layer III: 32 k/44.1 k/ 48 kHz MPEG2 Audio Layer III: 16 k/22.05 k/ 24 kHz MPEG2.5 Audio Layer III: 8 k/11.025 k/ 12 kHz

WMA (Ver. 7, Ver. 8, Ver. 9*)

- Bit rate: CBR 32 k 320 kbps
- Sampling frequency: 32 k/44.1 k/48 kHz
- WMA 9 Professional/LossLess/Voice are not supported.

AAC*

- Bit rate: ABR 16 k 320 kbps
- Sampling frequency: 32 k/44.1 k/48 kHz
- * Apple Lossless is not supported.


Supported file systems


ISO 9660 Level 1/Level 2, Joliet, Romeo

Maximum number of files/folders

- · Maximum number of files: 512
- · Maximum number of files in a folder: 255
- · Maximum depth of tree structure: 8
- Maximum number of folders: 255
 (Root folder is included.)



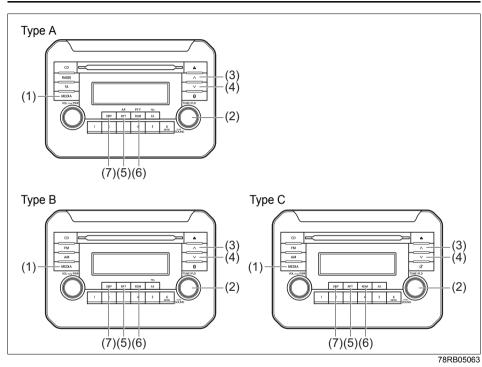


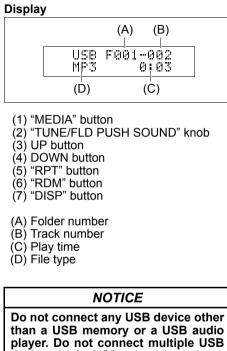

player. Do not connect multiple USB devices to the USB connector using a USB hub, etc. Supplying power to multiple USB devices from the connector could cause overheating and smoking.

Selecting a USB device mode

Press "MEDIA" button (1). Each time the button is pressed, the mode will change as follows:

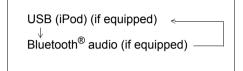

Selecting a folder

Turn "TUNE/FLD PUSH SOUND" knob (2) to select the desired folder.

Selecting a track

- Press UP button (3) to listen to the next track.
- Press DOWN button (4) twice to listen to the previous track.

When DOWN button (4) is pressed once, the track currently being played will start from the beginning again.

Fast forwarding/rewinding a track

- Hold down UP button (3) to fast forward the track.
- Hold down DOWN button (4) to fast rewind the track.

Random playback

Press "RDM" button (6). Each time the button is pressed, the mode will change as follows:

 $OFF \rightarrow FOLDER RANDOM \rightarrow ALL RANDOM$

• FOLDER RANDOM The random indicator "F.RDM" will light. The tracks in the currently selected folder will be played in random order.

• ALL RANDOM The random indicator "RDM" will light. The tracks in the connected USB device will be played in random order.

Repeat playback

Press "RPT" button (5). Each time the button is pressed, the mode will change as follows:

$\bigcirc OFF \to FILE \ REPEAT \to FOLDER \ RI$	EPEAT

• FILE REPEAT The repeat indicator "RPT" will light. The track currently being played will be played repeatedly. FOLDER REPEAT

The repeat indicator "F.RPT" will light. All the tracks in the folder currently selected will be played repeatedly.

Display change

Press "DISP" button (7). Each time the button is pressed, display will change as follows:

Play time ←			
Folder name	•		
↓ File name			
↓ ↓			
Album name	e (MP3, A	AC only)	
Track title			
Artist name			

NOTE:

- "NO TITLE" will be displayed when there is no text information in the file currently being played.
- If text data contains more than 16 characters, ">" mark will appear at the right end. Holding down "DISP" button (7) for 1 second or longer can display the next page.

Notes on USB device

Compatible USB devicesUSB mass storage class

For details as to whether your USB memory/USB audio is compatible with USB mass storage class, please contact the USB memory/USB audio manufacturer.

- USB standard compatibility 1.1/2.0 full speed
- File system FAT12/16/32, VFAT
- Maximum current less than 1.0 A
- If devices such as USB hub, extension cable are connected to the audio system, it may not be recognized. In such case, connect the USB device directly to the audio system.
- Devices such as MP3 player/mobile phone/digital camera may not be recognized by the audio system for playing music.

USB device connection

- When connecting a USB device, check that the connector is pushed all the way into the port.
- Do not leave the USB device for long periods of time inside the vehicle where the temperature can rise too high.
- Back up any important data beforehand. We cannot accept responsibility for any lost data.
- It is recommended not to connect a USB device that contains data files other than MP3/WMA/AAC format.

Recording MP3/WMA/AAC files on a USB device

- Playback or display may not be possible depending on the type of USB device in use or the condition of the recording.
- Depending on the connected USB memory, the files may be played in different order from the stored one.

Compression formats MP3

• Bit rate:

MPEG1 Audio Layer III: 32 k - 320 kbps MPEG2 Audio Layer III: 8 k - 160 kbps MPEG2.5 Audio Layer III: 8 k - 160 kbps

 Sampling frequency: MPEG1 Audio Layer III: 32 k/44.1 k/48 kHz MPEG2 Audio Layer III: 16 k/22.05 k/24 kHz MPEG2.5 Audio Layer III: 8 k/11.025 k/12 kHz

WMA (Ver. 7, Ver. 8, Ver. 9*)

- Bit rate: CBR 32 k 320 kbps
- Sampling frequency: 32 k/44.1 k/48 kHz
- * WMA 9 Professional/LossLess/Voice are not supported.


AAC*


- Bit rate: ABR 16 k 320 kbps
- Sampling frequency: 32 k/44.1 k/48 kHz
- * Apple Lossless is not supported.

Maximum number of files/folders

- · Maximum number of files: 2500
- · Maximum number of files in a folder: 255
- Maximum depth of tree structure: 8
- Maximum number of folders: 255
 (Root folder is included.)


Listening to an iPod

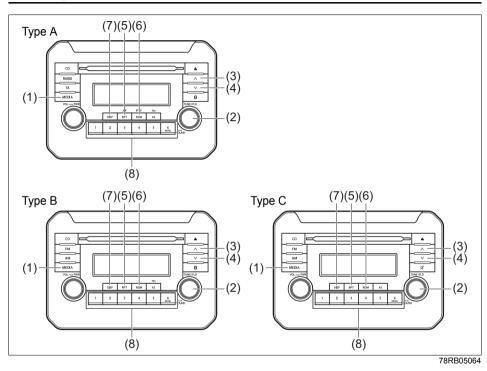

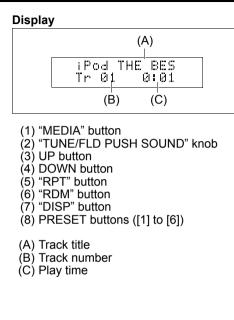

Selecting an iPod mode

Press "MEDIA" button (1). Each time the button is pressed, the mode will change as follows:

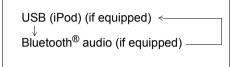

Selecting a track

- Press UP button (3) to listen to the next track.
- Press DOWN button (4) twice to listen to the previous track.

When DOWN button (4) is pressed once, the track currently being played will start from the beginning again.

Fast forwarding/rewinding a track

- Hold down UP button (3) to fast forward the track.
- Hold down DOWN button (4) to fast rewind the track.

Random playback

Press "RDM" button (6). Each time the button is pressed, the mode will change as follows:

$OFF \rightarrow SONG RANDOM \rightarrow ALBUM RANDOM$

- SONG RANDOM The random indicator "RDM" will light. The tracks in the iPod will be played in random order.
- ALBUM RANDOM The random indicator "F.RDM" will light. The albums in the iPod will be played in random order.

Repeat playback

Press "RPT" button (5). Each time the button is pressed, the mode will change as follows:

OFF → SONG REPEAT

• SONG REPEAT The repeat indicator "RPT" will light. The track currently being played will be played repeatedly.

Display change

Press "DISP" button (7). Each time the button is pressed, display will change as follows:

Playlist name / ← Track title (Playlist mode only)
Artist name /
Track title
\downarrow
Album name /
Track title
V
Track title /
Play time
,

NOTE:

If text data contains more than 16 characters, ">" mark will appear at the right end. Holding down "DISP" button (7) for 1 second or longer can display the next page.

Playing mode selection

- Press the button numbered [6] of PRE-SET buttons (8) for 1 second or longer.
- 2) Turn "TUNE/FLD PUSH SOUND" knob (2).

Each time the knob is turned, the mode will change as follows:



 Press "TUNE/FLD PUSH SOUND" knob (2) to select the desired mode.

NOTE:


• When the button numbered [6] of PRE-SET buttons (8) is pressed, the previous mode will be displayed.



Made for iPod

- iPod touch (6th generation)
- iPod touch (5th generation)
- iPod touch (4th generation)
- iPod touch (3rd generation)
- iPod touch (2nd generation)
- iPod touch (1st generation)
- iPod classic
- · iPod nano (7th generation)
- iPod nano (6th generation)
- iPod nano (5th generation)
- iPod nano (4th generation)
- iPod nano (3rd generation)
- iPod nano (2nd generation)
- iPod nano (1st generation)
- iPod (5th generation)
- iPhone 6S Plus
- iPhone 6S
- iPhone 6 Plus
- iPhone 6
- iPhone 5S
- iPhone 5C
- iPhone 5
- iPhone 4S
- iPhone 4
- iPhone 3GS
- iPhone 3G
- iPhone
- * Some functions may not be available depending on the model of iPod.

iPod

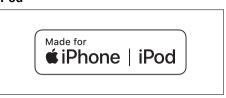


53SB10504

- Use of the Made for Apple badge means that an accessory has been designed to connect specifically to the Apple product(s) identified in the badge, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.
- Please note that the use of this accessory with an Apple product may affect wireless performance.
- Apple, iPod touch, iPod classic, iPod nano, iPhone, and Lightning are trademarks of Apple Inc., registered in the U.S. and other countries.

iPod connection

- Make sure to detach the iPod after turning the ignition switch to "LOCK" position. The iPod may not be shut down when it is being connected and may result in battery depletion.
 Do not connect iPod accessories such
- Do not connect iPod accessories such as an iPod remote control or headphones while connecting the iPod with the unit. The unit may not operate correctly.

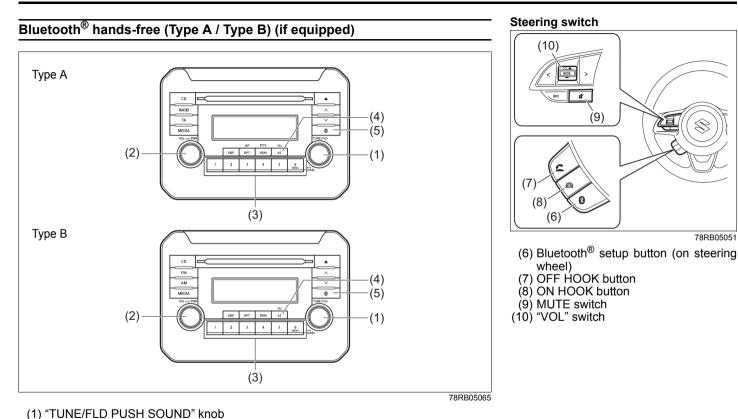

(2) "VOL PUSH PWR" knob (3) PRESET buttons

(4) BACK button
 (5) Bluetooth[®] setup button (on control panel)

OTHER CONTROLS AND EQUIPMENT

5-62

Phone registration

To use the hands-free function with this unit, it is required to register the phone in advance.

NOTE:

- Up to 5 phones can be registered.
- To set up a new phone, disconnect the audio player from the unit. Connect the audio player again after phone setup is completed if necessary.
- When attempts to establish the pairing fail within 60 seconds, the connecting operation will be canceled. Try to establish the pairing again or refer to the manual of the phone in use for how to establish the pairing with the phone.
- 1) Press the Bluetooth[®] setup button (5) or (6).

The Bluetooth[®] setup menu will be displayed.

- Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Setup Bluetooth", and press the knob (1) to determine the selection.
- Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Pairing", and press the knob (1) to determine the selection.
- Select "CAR AUDIO" from the Bluetooth[®] menu of the phone and establish the pairing.

Refer to the manual of the phone in use for further information.

5) Enter the passkey displayed on the unit to the phone.

6) When the pairing with the phone is established, automatic transfer of the phonebook and the call history becomes selectable. The automatic transfer starts with "Yes" and it does not with "No".

7) Press ON HOOK button (8).

NOTE:

- When selecting "Go Back" or pressing BACK button (4), the previous menu will be displayed.
- When registering an additional phone, repeat Step from 1).

Receiving a call

Press OFF HOOK button (7) to receive a call.

Ending a call

Press ON HOOK button (8) to end a call.

Rejecting a call (only for supported models)

Press ON HOOK button (8) to reject a incoming call.

Mute of hands-free microphone

Press MUTE switch (9) to mute the microphone. To cancel the mute, press MUTE switch (9) again.

Adjusting the listening volume

- Turn "VOL PUSH PWR" knob (2) during a call.
 - Turning it clockwise increases the volume; turning it counterclockwise decreases the volume.
- Press "VOL" switch (10) during a call. Pressing the switch up increases the volume; pressing the switch down decreases the volume.

Adjusting the ring volume

• Turn "VOL PUSH PWR" knob (2) while a call is coming in.

Turning it clockwise increases the volume; turning it counterclockwise decreases the volume.

• Press "VOL" switch (10) during a call. Pressing the switch up increases the volume; pressing the switch down decreases the volume.

Adjusting the call or ringtone volume

Follow the instructions below to adjust the call or ringtone volume.

 Press the Bluetooth[®] setup button (5) or (6).

The Bluetooth[®] setup menu will be displayed.

- 2) Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Setup Telephone", and press the knob (1) to determine the selection.
- 3) Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Sound Setting", and press the knob (1) to determine the selection.
- Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Call Volume" or "Ringtone Volume", and press the knob (1) to determine the selection.

The current call or ringtone volume will be displayed.

5) Turn "TUNE/FLD PUSH SOUND" knob (1) to select the desired call or ringtone volume, and press the knob (1) to determine the selection.

NOTE:

When selecting "Go Back" or pressing BACK button (4), the previous menu will be displayed.

Dialing using missed/incoming/ outgoing calls

Follow the instructions below to dial to the previously dialed number again.

NOTE:

Up to 30 phone numbers of the latest calls can be stored. (30 calls including missed, received and dialed call)

- Press OFF HOOK button (7). The Bluetooth[®] phonebook menu will be displayed.
- Turn "TUNE/FLD PUSH SOUND" knob (1) to select "All Calls", "Missed Calls", "Incoming Calls" or "Outgoing Calls", and press the knob (1) to determine the selection.

To dial from the dialed history or the received history, select "All Calls", "Missed Calls", "Incoming Calls" or "Outgoing Calls" respectively.

- Turn "TUŇE/FLD PUSH SOUND" knob (1) to select the desired number, and press the knob (1) to determine the selection.
- Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Dial", and press the knob (1) or OFF HOOK button (7) to dial to the selected number.

NOTE:

• When selecting "Go Back" or pressing BACK button (4), the previous menu will be displayed.

- Pressing "Confirm" after selecting "Add Speed Dial" can register the selected number in the speed dial.
- Pressing "Confirm" after selecting "Delete" can delete the selected number from the call history.

Deletion of call history

Follow the instructions below to delete a missed/incoming/outgoing call history.

1) Press the Bluetooth[®] setup button (5) or (6).

The Bluetooth[®] setup menu will be displayed.

- Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Setup Telephone", and press the knob (1) to determine the selection.
- Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Setup Phonebook", and press the knob (1) to determine the selection.
- 4) Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Delete History", and press the knob (1) to determine the selection.
- Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Missed Calls", "Incoming Calls", or "Outgoing Calls", and press the knob (1) to determine the selection.
- Turn "TUNE/FLD PUSH SOUND" knob (1) to select a number to be deleted or "ALL", and press the knob (1) to determine the selection.

- Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Delete?" or "Delete All?", and press the knob (1) to determine the selection.
- Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Confirm", and press the knob (1) to complete the deletion.

NOTE:

When selecting "Go Back" or pressing BACK button (4), the previous menu will be displayed.

Registration in Phonebook

Follow the instructions below to register phone numbers in the Phonebook of the unit.

1) Press the Bluetooth[®] setup button (5) or (6).

The Bluetooth[®] setup menu will be displayed.

- Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Setup Telephone", and press the knob (1) to determine the selection.
- Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Setup Phonebook", and press the knob (1) to determine the selection.
- Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Add Contacts", and press the knob (1) to determine the selection.

5) Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Overwrite All" or "Add One Contact", and press the knob (1) to determine the selection.

"Rewrite All (MAX1000): Ok?" or "Rest of Memory XXXX: Ok?" will be displayed.

- 6) Press or turn "TUNE/FLD PUSH SOUND" knob (1) to select "Confirm", and press the knob (1) to determine the selection.
- Transfer contacts from the phone. When the registration is completed, the "Setup Phonebook" will be displayed.

NOTE:

- When selecting "Go Back" or pressing BACK button (4), the previous menu will be displayed.
- Up to 1000 numbers can be registered in Phonebook.

Transfer of call history (Call History)

Follow the instructions below to transfer call history of the registered phone.

1) Press the Bluetooth[®] setup button (5) or (6).

The Bluetooth[®] setup menu will be displayed.

- 2) Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Setup Telephone", and press the knob (1) to determine the selection.
- Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Call History", and press the knob (1) to determine the selection.
- Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Overwrite Call History?", and press the knob (1) to determine the selection.
- 5) Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Confirm", and press the knob (1) to transfer the call history from the phone.

NOTE:

When selecting "Go Back" or pressing BACK button (4), the previous menu will be displayed.

Automatic transfer of phonebook/call history

You can select whether or not the device transfers the phonebook and the call history automatically when the phone is registered.

Follow the instructions below to select.

1) Press the Bluetooth[®] setup button (5) or (6).

The Bluetooth[®] setup menu will be displayed.

- Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Setup Telephone", and press the knob (1) to determine the selection.
- Turn "TUNE/FLD PUSH SOUND" knob (1) to select "A.Transfer", and press the knob (1) to determine the selection.
- Pressing "TUNE/FLD PUSH SOUND" knob (1) switches between "A.transfer On" and "A.transfer Off".
- 5) Selecting "Go Back" or pressing the BACK button (4) stores displayed setting and the previous menu is displayed.

Making a call by phonebook

Follow the instructions below to dial a number registered in phonebook.

- Press OFF HOOK button (7). The Bluetooth[®] phonebook menu will be displayed.
- 2) Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Phonebook", and press the knob (1) to determine the selection.
- 3) Turn "TUNE/FLD PUSH SOUND" knob (1) to select the initial of the name you would like to make a call, and press the knob (1) to determine the selection. The registered numbers will be displayed in sequence. If names have been registered together with numbers, the names will be displayed.

Turn "TUNE/FLD PUSH SOUND" knob (1) to select the name you would like to make a call, and press the knob (1) to determine the selection.

4) Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Dial", and press the knob (1) or OFF HOOK button (7).

The displayed number or the number registered with the displayed name will be dialed.

Deletion of registered data (Delete Entry)

Follow the instructions below to delete a number registered in phonebook.

1) Press the Bluetooth[®] setup button (5) or (6).

The Bluetooth[®] setup menu will be displayed.

- Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Setup Telephone", and press the knob (1) to determine the selection.
- Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Setup Phonebook", and press the knob (1) to determine the selection.
- Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Delete Contacts", and press the knob (1) to determine the selection.
- 5) Turn "TUNE/FLD PUSH SOUND" knob (1) to select the initial of the name you would like to delete or "ALL", and press the knob (1) to determine the selection. Turn "TUNE/FLD PUSH SOUND" knob (1) to select the name you would like to delete, and press the knob (1) to determine the selection.
- Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Delete?" or "Delete All?", and press the knob (1) to determine the selection.
- 7) Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Confirm", and press the knob (1) to complete the deletion.

NOTE:

When selecting "Go Back" or pressing BACK button (4), the previous menu will be displayed.

Registration in speed dial

Follow the instructions below to assign a number to one of PRESET buttons (3) to use as the speed dial.

 Press the Bluetooth[®] setup button (5) or (6).

The Bluetooth[®] setup menu will be displayed.

- Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Setup Telephone", and press the knob (1) to determine the selection.
- Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Setup Phonebook", and press the knob (1) to determine the selection.
- Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Add Speed Dial", and press the knob (1) to determine the selection.

 Turn "TUNE/FLD PUSH SOUND" knob (1) to select the initial of the name you would like to register in speed dial, and press the knob (1) to determine the selection.

The registered numbers will be displayed in sequence. If names have been registered together with numbers, the names will be displayed.

Turn "TUNE/FLD PUSH SOUND" knob (1) to select the name you would like to register in speed dial, and press the knob (1) to determine the selection.

6) Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Choose Preset", and press one of PRESET buttons (3) to which the selected number is to be assigned. If a number is already assigned to the selected button, a confirmation message will be displayed.

Turn "TUNE/FLD PUSH SOUND" knob (1) to select a confirmation message, and press the knob (1) to complete the assignment.

Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Confirm", and press the knob (1) to complete the assignment. When the assignment is completed, the "Setup Phonebook" will be displayed.

NOTE:

When selecting "Go Back" or pressing BACK button (4), the previous menu will be displayed.

One-touch call (Speed dial)

Follow the instructions below to dial the number assigned to each of the PRESET buttons (3).

1) Press OFF HOOK button (7).

The Bluetooth[®] phonebook menu will be displayed.

Pressing one of PRESET buttons (3) can skip step 2) and the 1st line of step 3).

- 2) Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Speed Dials", and press the knob (1) to determine the selection.
- Press one of PRESET buttons (3). The assigned number will be displayed. If no number is assigned, "No Entry" is displayed.
- Press OFF HOOK button (7). The selected number will be dialed.

Deletion of speed dial (Del Speed Dial)

Follow the instructions below to delete the number assigned for the speed dial.

- 1) Press OFF HOOK button (7).
- The Bluetooth[®] phonebook menu will be displayed.
- Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Speed Dials", and press the knob (1) to determine the selection.
- 3) Press one of PRESET buttons (3) to which the number to be deleted is assigned.

If the number is not registered, "No Entry" is displayed.

- Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Delete", and press the knob (1) to determine the selection.
- Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Del Speed Dial", and press the knob (1) to determine the selection.
- 6) Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Confirm", and press the knob (1) to complete the deletion.

NOTE:

When selecting "Go Back" or pressing BACK button (4), the previous menu will be displayed.

Display of device data (Device Name)

Follow the instructions below to display the BD (Bluetooth® Device) address and device name.

1) Press the Bluetooth[®] setup button (5) or (6).

The Bluetooth[®] setup menu will be displayed.

- Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Setup Bluetooth", and press the knob (1) to determine the selection.
- Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Bluetooth Info", and press the knob (1) to determine the selection.
- 4) Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Device Name" or "Device Address", and press the knob (1) to display the device name or the BD (Bluetooth[®] Device) address.

NOTE:

When selecting "Go Back" or pressing BACK button (4), the previous menu will be displayed.

Reset to the factory defaults

Follow the instructions below to reset all the settings to the factory defaults.

1) Press the Bluetooth[®] setup button (5) or (6).

The Bluetooth[®] setup menu will be displayed.

- 2) Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Setup Bluetooth", and press the knob (1) to determine the selection.
- Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Initialize", and press the knob (1) to determine the selection.
- 4) Turn "TUNE/FLD PUSH SOUND" knob (1) to select "All Initialize", and press the knob (1) to determine the selection.
- Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Confirm", and press the knob (1) to start the reset.

NOTE:

When selecting "Go Back" or pressing BACK button (4), the previous menu will be displayed.

Selection of phone (Select Phone)

Follow the instructions below to select a phone to be paired with from the registered phones.

1) Press the Bluetooth[®] setup button (5) or (6).

The Bluetooth[®] setup menu will be displayed.

- Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Setup Bluetooth", and press the knob (1) to determine the selection.
- Turn "TUNE/FLD PUSH SOUND" knob (1) to select "List Phone", and press the knob (1) to determine the selection.
- Turn "TUNE/FLD PUSH SOUND" knob (1) to select a phone to be paired with, and press the knob (1) to determine the selection.
- Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Select", and press the knob (1) to determine the selection.

NOTE:

- When selecting "Go Back" or pressing BACK button (4), the previous menu will be displayed.
- The Bluetooth[®] ready audio device will be disconnected when the phone is selected.

List of phones (List Phones)

Follow the instructions below to display the names of the registered phones in sequence.

 Press the Bluetooth[®] setup button (5) or (6).
 The Bluetooth[®] setup monu will be dis

The Bluetooth[®] setup menu will be displayed.

- Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Setup Bluetooth", and press the knob (1) to determine the selection.
- Turn "TUNE/FLD PUSH SOUND" knob (1) to select "List Phone", and press the knob (1) to determine the selection. The names of the registered phones are displayed in sequence.

NOTE:

When selecting "Go Back" or pressing BACK button (4), the previous menu will be displayed.

Passkey setting (Set Passkey)

Follow the instructions below to set the security number (passkey).

1) Press the Bluetooth[®] setup button (5) or (6).

The Bluetooth[®] setup menu will be displayed.

 Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Setup Bluetooth", and press the knob (1) to determine the selection.

- Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Passkey", and press the knob (1) to determine the selection.
- Turn "TÚNE/FLD PUSH SOUND" knob (1) to select "Enter New Passkey", and press the knob (1) to determine the selection.
- 5) Press or turn "TUNE/FLD PUSH SOUND" knob (1) to select "Confirm".
- 6) Turn "TUNE/FLD PUSH SOUND" knob (1) to select a number for the first digit, and press the knob (1) to determine the selection. Select and determine numbers for the second, third and fourth digits in order in the same manner. When not entering up to the eighth digit, enter blanks for the successive digits.
- 7) Press "TUNE/FLD PUSH SOUND" knob (1) to determine the passkey setting.

NOTE:

When selecting "Go Back" or pressing BACK button (4), the previous menu will be displayed.

Deletion of phone information (Delete Phone)

Follow the instructions below to delete the registered phone information.

1) Press the Bluetooth[®] setup button (5) or (6).

The $Bluetooth^{\ensuremath{\mathbb{R}}}$ setup menu will be displayed.

- Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Setup Bluetooth", and press the knob (1) to determine the selection.
- Turn "TUNE/FLD PUSH SOUND" knob (1) to select "List Phone", and press the knob (1) to determine the selection.
- Turn "TUNE/FLD PUSH SOUND" knob (1) to select a phone to be deleted, and press the knob (1) to determine the selection.
- 5) Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Delete", and press the knob (1) to determine the selection.
- Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Delete?", and press the knob (1) to determine the selection.
- Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Confirm", and press the knob (1) to determine the selection.

NOTE:

When selecting "Go Back" or pressing BACK button (4), the previous menu will be displayed.

BT function on/off (BT Power)

Follow the instructions below to turn on/off the Bluetooth® function.

 Press the Bluetooth[®] setup button (5) or (6).


The Bluetooth[®] setup menu will be displayed.

- Turn "TUNE/FLD PUSH SOUND" knob (1) to select "Setup Bluetooth", and press the knob (1) to determine the selection.
- Turn "TUNE/FLD PUSH SOUND" knob (1) to select "BT Power", and press the knob (1) to determine the selection.
- Press ^{*} "TUNE/FLD PUSH SOUND" knob (1) to select "BT Power On" or "BT Power Off".

NOTE:

- When the BT function is turned off, the connection between this unit and the registered phone in use will be disconnected.
- When selecting "Go Back" or pressing BACK button (4), the previous menu will be displayed.

OTHER CONTROLS AND EQUIPMENT

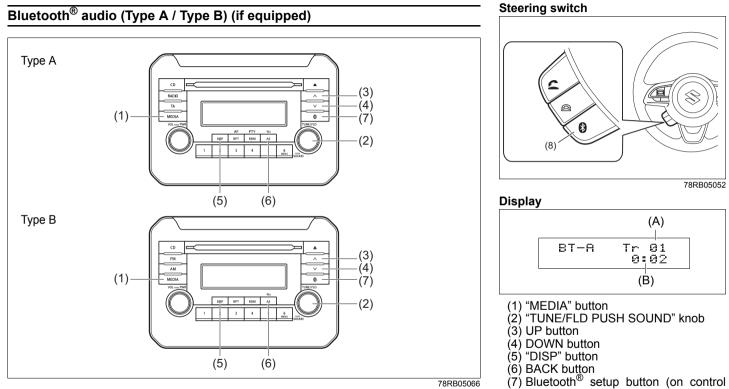

panel)

wheel)

(A) Track number (B) Play time

(8) Bluetooth[®] setup button (on steering

Registration of audio devices

To use $\mathsf{Bluetooth}^{\texttt{®}}$ ready audio devices with this unit, it is required to register the devices.

NOTE:

- To set up a new audio player, disconnect the phone from the unit. Connect the phone after audio player setup is completed if necessary.
- When attempts to establish the pairing fail within 60 seconds, the connecting operation will be canceled. Try to establish the pairing again or refer to the audio player manual for assistance with the pairing process.
- 1) Press the Bluetooth[®] setup button (7) or (8).

The Bluetooth[®] setup menu will be displayed.

- Turn "TUNE/FLD PUSH SOUND" knob (2) to select "Setup Bluetooth", and press the knob (2) to determine the selection.
- Turn "TUNE/FLD PUSH SOUND" knob (2) to select "Pairing", and press the knob (2) to determine the selection.
- Select "My Car" from the Bluetooth[®] menu of the audio player and establish the pairing. Refer to the manual of the audio player

in use for further information.

5) Enter the passkey displayed on the unit to the audio player.

NOTE:

- When selecting "Go Back" or pressing BACK button (6), the previous menu will be displayed.
- When registering additional audio devices, repeat Step from 1).

Selecting Bluetooth[®] audio mode

Press "MEDIA" button (1).

Each time the button is pressed, the mode will change as follows:

USB (iPod) (if equipped) < Bluetooth[®] audio (if equipped) -

Selecting a group (only for supported models)

Turn "TÚNE/FLD PUSH SOUND" knob (2) to select a group.

Selecting a track

- Press UP button (3) to listen to the next track.
- Press DOWN button (4) twice to listen to the previous track.

When DOWN button (4) is pressed once, the track currently being played will start from the beginning again.

Fast forwarding/rewinding a track

- Hold down UP button (3) to fast forward the track.
- Hold down DOWN button (4) to fast rewind the track.

NOTE:

Some functions may not be available depending on ${\sf Bluetooth}^{{\sf R}}$ audio.

Display change

Press "DISP" button (5). Each time the button is pressed, display will change as follows:

Play time <	
\downarrow	
Track name	
\downarrow	
Artist name	
\downarrow	
Album name	

NOTE:

If text data contains more than 16 characters, ">" mark will appear at the right end. Holding down "DISP" button (5) for 1 second or longer can display the next page.

Selection of audio device (Select Audio)

Follow the instructions below to select an audio device to be paired with from the registered audio devices

1) Press the Bluetooth[®] setup button (7) or (8).

The Bluetooth[®] setup menu will be displayed.

- Turn "TUNE/FLD PUSH SOUND" knob (2) to select "Setup Bluetooth", and press the knob (2) to determine the selection.
- Turn "TUNE/FLD PUSH SOUND" knob (2) to select "List Audio", and press the knob (2) to determine the selection.
- Turn "TUNE/FLD PUSH SOUND" knob (2) to select an audio device to be used, and press the knob (2) to determine the selection.
- Turn "TUNE/FLD PUSH SOUND" knob (2) to select "Select", and press the knob (2) to determine the selection.

NOTE:

- When selecting "Go Back" or pressing BACK button (6), the previous menu will be displayed.
- The phone will be disconnected when the Bluetooth[®] ready audio device is selected.

List of audio devices (List Audio)

Follow the instructions below to display the names of the registered audio devices in sequence.

 Press the Bluetooth[®] setup button (7) or (8).

The Bluetooth[®] setup menu will be displayed.

- Turn "TUNE/FLD PUSH SOUND" knob (2) to select "Setup Bluetooth", and press the knob (2) to determine the selection.
- Turn "TUNE/FLD PUSH SOUND" knob (2) to select "List Audio", and press the knob (2) to determine the selection. The names of registered audio devices will be displayed in sequence.

NOTE:

When selecting "Go Back" or pressing BACK button (6), the previous menu will be displayed.

Passkey setting (Set Passkey)

Follow the instructions below to set the security number (Passkey).

1) Press the Bluetooth[®] setup button (7) or (8).

The Bluetooth[®] setup menu will be displayed.

 Turn "TUNE/FLD PUSH SOUND" knob (2) to select "Setup Bluetooth", and press the knob (2) to determine the selection.

- Turn "TUNE/FLD PUSH SOUND" knob (2) to select "Passkey", and press the knob (2) to determine the selection.
- Turn "TÚNE/FLD PUSH SOUND" knob (2) to select "Enter New Passkey", and press the knob (2) to determine the selection.
- 5) Press or turn "TUNE/FLD PUSH SOUND" knob (2) to select "Confirm".
- 6) Turn "TUNE/FLD PUSH SOUND" knob (2) to select a number for the first digit, and press the knob (2) to determine the selection. Select and determine numbers for the second, third and fourth digits in order in the same manner. When not entering up to the eighth digit, enter blanks for the successive digits.
- 7) Press "TUNE/FLD PUSH SOUND" knob (2) to determine the passkey setting.

NOTE:

When selecting "Go Back" or pressing BACK button (6), the previous menu will be displayed.

Deletion of audio device information (Delete Audio)

Follow the instructions below to delete the registered audio device information.

1) Press the Bluetooth[®] setup button (7) or (8).

The Bluetooth[®] setup menu will be displayed.

- Turn "TUNE/FLD PUSH SOUND" knob (2) to select "Setup Bluetooth", and press the knob (2) to determine the selection.
- Turn "TUNE/FLD PUSH SOUND" knob (2) to select "List Audio", and press the knob (2) to determine the selection.
- Turn "TUNE/FLD PUSH SOUND" knob (2) to select an audio device to be deleted, and press the knob (2) to determine the selection.
- Turn "TUNE/FLD PUSH SOUND" knob (2) to select "Delete", and press the knob (2) to determine the selection.
- Turn "TUNE/FLD PUSH SOUND" knob (2) to select "Delete?", and press the knob (2) to determine the selection.
- Turn "TÜNE/FLD PUSH SOUND" knob (2) to select "Confirm", and press the knob (2) to complete the deletion.

NOTE:


When selecting "Go Back" or pressing BACK button (6), the previous menu will be displayed.

Disclaimer for Bluetooth[®] function

- Depending on compatibility of mobile phone models, no Bluetooth[®] function can be used, or some Bluetooth[®] functions may be restricted.
- Connectivity or voice quality may get affected depending on circumstances.
- After the ignition switch is turned "ON" to change the ignition mode to ON, the audio system takes few seconds to detect and connect to the Bluetooth[®] device (if already paired).

Remote audio controls (if equipped)

Controlling basic functions of the audio system is available using the switches on the steering wheel.

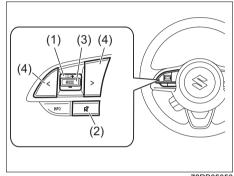

78RB05053


Adjusting the volume

- To increase the volume, press the "VOL" switch (1) up. The volume will continue to increase until the switch is released.
- To decrease the volume, press the "VOL" switch (1) down. The volume will continue to decrease until the switch is released.
- To mute the sound, press the switch (2).

Selecting the mode

Press the switch (3).

Each time the button is pressed, the mode will change as follows:

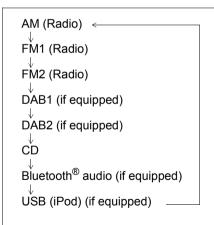

It is possible to turn on the audio system by pressing the switch (3).

Selecting the radio station (AM, FM1, FM2, DAB1, DAB2 mode)

- To select the next preset station, press ">" of the switch (4) only for a moment.
- To select the previous preset station, press "<" of the switch (4) only for a moment.
- To scan a higher frequency radio station, press ">" of the switch (4) for 1 second or longer.
- To scan a lower frequency radio station, press "<" of the switch (4) for 1 second or longer.


Selecting the track (CD, USB (iPod), Bluetooth $^{\ensuremath{\mathbb{B}}}$ audio mode)

- To skip to the next track, press ">" of the switch (4) only for a moment.
- To skip to the previous track, press "<" of the switch (4) twice only for a moment. When the switch (4) is pushed down once only for a moment, the track currently being played will start from the beginning again.

Fast forwarding/rewinding a track

- To fast forward a track, press ">" of the switch (4) for 1 second or longer.
- To fast rewind a track, press "<" of the switch (4) for 1 second or longer.

Anti-theft feature

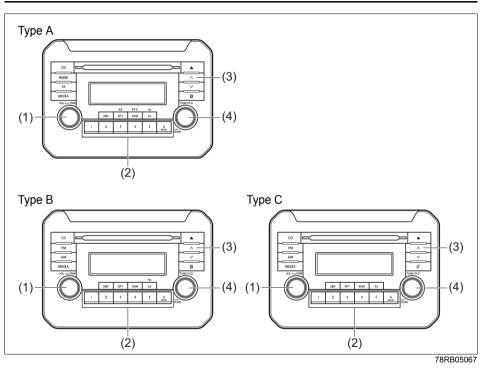

OTHER CONTROLS AND EQUIPMENT

The anti-theft function is intended to discourage thefts. For example, when the audio system is installed in another vehicle, it will become unable to operate. This function works by entering a Personal Identification Number (PIN).

When the unit is disconnected from its power source, such as when the audio system is removed or the lead-acid battery is disconnected, the unit will become inoperable until the PIN is reentered.

- (1) VOL PUSH PWR" knob
- (2) PRESET buttons ([1] to [6])
- (3) UP button
- (4) "TUNE/FLD PUSH SOUND" knob

Setting the anti-theft function

- Press "VOL PUSH PWR" knob (1) to power off.
- Hold down the buttons numbered [1] and [6] of PRESET buttons (2) and press "VOL PUSH PWR" knob (1). "SECURITY" will be displayed.
- Press UP button (3) and the button numbered [1] of PRESET buttons (2) simultaneously.
- 4) Enter a 4-digit number to be registered as PIN using the buttons numbered [1]
 - [4] of PRESET buttons (2).
- 5) Hold down "TUNE/FLD PUSH SOUND" knob (4) for 1 second or longer to set the anti-theft function.

NOTE:

Take a note of the registered PIN and keep it for the future use.

Canceling the anti-theft feature

To cancel the anti-theft function, delete the registered PIN.

- Press "VOL PUSH PWR" knob (1) to power off.
- Hold down the buttons numbered [1] and [6] of PRESET buttons (2) and press "VOL PUSH PWR" knob (1).
 "PIN ENTRY" will be displayed.
- Press UP button (3) and the button numbered [1] of PRESET buttons (2) simultaneously.
- 4) Enter a 4-digit number to be registered as PIN using the buttons numbered [1]
 - [4] of PRESET buttons (2).
- 5) Hold down "TUNE/FLD PUSH SOUND" knob (4) for 1 second or longer to delete the registered PIN. The indication "----" will be displayed and the anti-theft function will be canceled.

NOTE:

To change your PIN, first delete your current PIN, and then set a new one.

Confirming the Personal Identification Number (PIN)

When the main power source is disconnected such as when the lead-acid battery is replaced, etc, it is required to enter the PIN to operate the unit again.

1) Set the ignition switch to "ACC" position.

"SECURITY" will be displayed.

- Press UP button (3) and the button numbered [1] of PRESET buttons (2) simultaneously.
- Enter a 4-digit number to be registered as PIN using the buttons numbered [1]
 - [4] of PRESET buttons (2).
- Hold down "TUNE/FLD PUSH SOUND" knob (4) for 1 second or longer.

When the same PIN as registered is entered, the power of the audio system will be turned off automatically and it will become operable again.

NOTE:

If an incorrect PIN is entered, "ERROR" and the total number of incorrect entry attempts will be displayed.

If an incorrect PIN is entered 10 times or more, "HELP" will be displayed and the audio system will become inoperable.

Troubleshooting

When encountering a problem, check and follow the instructions below.

If the described suggestions do not solve the problem, it is recommended to take the unit to your SUZUKI dealer.

Problem	Possible cause	Possible solution
---------	----------------	-------------------

Common

Unable to operate	The security function is on.	When "SECURITY" is displayed, enter the PIN. When "HELP" is displayed, contact your SUZUKI dealer.
Unable to turn on the power (No sound is produced)	Fuse is blown.	Contact your SUZUKI dealer.

Radio

Much noise	It may not be exactly tuned in to the sta- tion.	Tune it in exactly to the station.
Unable to receive by auto tuning	There may be no station emitting signals powerful enough.	Pick up a station by manual tuning.
Unable to receive by auto tuning	If AF is on, the unit searches for RDS sta- tions only.	Turn off AF.

CD

	The disc is dirty.	Wipe the disc with a soft cloth.
Sound skips or noise produced	The disc has a major scratch or is warped.	Replace the disc with the one which has no scratch and warp.

Problem	Possible cause	Possible solution
---------	----------------	-------------------

MP3/WMA/AAC

No playback	The disc contains unsupported formatted data.	Check the file format.
Sound skips or noise produced	Sound skipping may occur when playing VBR (Variable Bit Rate) files.	It is not recommended to play VBR files.

USB

Playback does not start when the USB	There is no supported format file to play on this unit.	Check the file format.
device is connected	The current consumption of the USB device exceeds 1.0 A.	Use a USB device with a current con- sumption lower than 1.0 A.

Bluetooth[®]

Pairing failed	The distance between this unit and the Bluetooth [®] ready device is too far, or a metallic object may be located between the Bluetooth [®] ready device and this unit.	Change the location of the Bluetooth [®] ready device.
	The Bluetooth [®] function of the Bluetooth [®] ready device is off.	Refer to the manual of the Bluetooth [®] ready device. (Some devices have the power saving function that automatically activates after a certain time.)
Unable to receive a call	Your current location may be out of ser- vice area.	Drive your vehicle to the service area of the phone.
The voice quality of hands-free is low (Distortion, noise etc.)	Another wireless device may be located near the unit.	Switch off the wireless device or keep it away from the unit.

Error display messages

Display	Possible cause	Possible solution
CD		
"ERROR 1"	The disc cannot be read.	Insert the disc with its label side up. Check the disc if it is not warped or is free of flaws. When "ERROR 1" does not disappear even when a nor- mal disc is inserted, contact your dealer.
"ERROR 3"	The player developed an error of an unidentified cause.	When the CD is in the unit, press the CD eject button to remove the disc. When the disc cannot be ejected, contact your dealer.


USB/iPod

"USB ERROR"	The USB device is disconnected.	Check the connection of the USB device.
"ERROR 2"	Impossible to communicate correctly with the USB device.	Unplug the USB device and plug it again. Check the USB device.
"ERROR 3"	Inoperable due to an unidentified cause.	Unplug the USB device and plug it again. When "ERROR 3" does not disappear, contact your dealer.
"ERROR 4"	The current consumption of the USB device exceeds 1.0 A.	Check the USB device.

OTHER CONTROLS AND EQUIPMENT

Display	Possible cause	Possible solution
Bluetooth [®]		
"ERROR 1"	The player developed an error of an unidentified cause.	Disconnect the Bluetooth [®] ready device and connect it again. When "ERROR 1" does not disappear, contact your dealer.
"Connection Failed"	Failed to establish pairing or connection	Try to establish the pairing or connection again.
"Memory Full"	Reached the limit for the number of phone- book data in transfer	Delete registered data of unnecessary number in phone- book and try to transfer the register phone numbers in the phonebook again.
"Not Available"	Inoperable during driving	Operate the system after pulling over your car.

Talk button (if equipped)

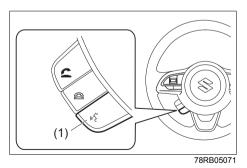

It can be used with a device having a voice recognition function. To use the function, it is necessary to perform a corresponding setting on your device. For operation of the audio system or the navigation system, refer to the supplementary manual, provided along with it.

(1) Talk button

6

INSPECTION AND MAINTENANCE

Maintenance schedule	6-2
Periodic maintenance schedule	
(except for EU countries and Israel)	6-3
Maintenance recommended under severe driving	
conditions (except for EU countries and Israel)	6-8
Periodic maintenance schedule	
(for EU countries and Israel)	6-13
Maintenance recommended under severe driving	
conditions (for EU countries and Israel)	6-18
Drive belt	
Engine oil and filter	
Engine coolant	6-28
Air cleaner	
Spark plugs	6-30
Automatic Transmission (AT) Fluid	
Gear oil	
Clutch	6-35
Brakes	6-35
Steering wheel	6-38
Tyres	6-38
Battery	6-43
Fuses	6-44
Headlight aiming	6-48
Headlight Washer Fluid	6-48
Bulb replacement	6-48
Wiper blades	6-56
Windshield washer fluid	6-60
Air conditioning system	6-61



60G410



60B128S

WARNING

Take extreme care when working on your vehicle to prevent accidental injury. Carefully observe the following precautions:

 To prevent damage or unintended activation of the airbag system or seat belt pretensioner system, check that the lead-acid battery is disconnected and the ignition switch has been in "LOCK" position for at least 90 seconds before performing any electrical service work on your SUZUKI vehicle. Do not touch airbag system components, seat belt pretensioner system components or wires.

The wires are wrapped with yellow tape or yellow tubing, and the couplers are yellow for easy identification.

 Do not leave the engine running in garages or other confined areas. (Continued) (Continued)

- When the engine is running, keep hands, clothing, tools, and other objects away from the fan and drive belt. Even though the fan may not be moving, it can automatically turn on without warning.
- When it is necessary to perform service work with the engine running, check that the parking brake is set fully and the transmission is in Neutral (for manual transmission vehicles) or Park (for automatic transmission vehicles).
- Do not touch ignition wires or other ignition system parts when starting the engine or when the engine is running, or you could receive an electric shock.
- Be careful not to touch a hot engine, exhaust manifold and pipes, muffler, radiator and water hoses.
- Do not allow smoking, sparks, or flames around fuel or the battery. Flammable fumes are present.
- Do not get under your vehicle if it is supported only with the portable jack provided in your vehicle.
- Be careful not to cause accidental short circuits between the positive and negative battery terminals.

(Continued)

WARNING

(Continued)

 Keep used oil, coolant, and other fluids away from children and pets. Dispose of used fluids properly; never pour them on the ground, into sewers, etc.

Maintenance schedule

The following table shows the timing when you should perform regular maintenance on your vehicle. This table shows in miles, kilometers and months when you should perform inspections, adjustments, lubrication and other services. These intervals should be shortened if driving is usually done under severe conditions (refer to "Maintenance recommended under severe driving conditions").

WARNING

SUZUKI recommends that maintenance on items marked with an asterisk (*) be performed by a SUZUKI dealer or a qualified service technician. If you are qualified, you may perform maintenance on the unmarked items by referring to the instructions in this section. If you are not sure whether you can successfully complete any of the unmarked maintenance jobs, ask a SUZUKI dealer to do the maintenance for you.

NOTICE

Whenever it becomes necessary to replace parts on your vehicle, it is recommended that you use genuine SUZUKI replacement parts or their equivalent.

Periodic maintenance schedule (except for EU countries and Israel)

"R" : Replace or Change

"I" : Inspect, clean, adjust, lubricate or replace as necessary

NOTE:

This table shows the service schedule up to 180000 km (108000 miles). Beyond 180000 km (108000 miles), perform the same services at the same intervals shown in the chart.

NOTE:

For the Periodic Maintenance Schedule of Russian models, refer to "For Russia" in the "SUPPLEMENT" section.

Interval: This interval should be judged by		km (x1000)	15	30	45	60	75	90
odometer reading or months, whichever comes		miles (x1000)		18	27	36	45	54
first.		months	-	24	36	48	60	72
ENGINE								
*1-1. Engine accessory drive belt	Tension check, *Adjustment, *Replacement		- 1	- 1	1	-	- 1	R
*1-2. Valve clearance			-	1	-	1	-	1
1-3. Engine oil and engine oil filter			R	R	R	R	R	R
			Replace e	very 10000) km (6000) miles) or	12 months.	(#1)
1-4. Engine coolant	SUZUKI LLC: Super (Blue) (#2)	First time only:	Replace a	t 150000 k	m (90000	miles) or 9	6 months.	
	Seco	ond time and after:	Replace e	very 75000) km (4500	0 miles) or	48 months	S.
	SUZUKI LLC: Standard (Green)		-	-	R	-	-	R
*1-5. Exhaust system (except catalyst)			-	1	-	1	-	1
IGNITION								
2-1. Spark plugs When unleaded fuel is used	Iridium plug		Replace e	very 10500	00 km (630	000 miles) o	or 84 month	IS.
	Nickel plug		-	-	R	-	-	R
Spark plugs When leaded fuel is used, re	efer to "Severe driving condition" schedule.							
FUEL								
3-1. Air cleaner filter element Paved-road			1	1	R	1	1	R
Dusty condit	ion		Refer to "S	Severe driv	ing conditi	on" schedu	ıle.	
*3-2. Fuel lines			-	1	-	1	-	1
*3-3. Fuel filter			Replace e	very 10500	00 km (630	000 miles).		
			Replace e	very 45000) km (2700	00 miles) or	36 months	s. (#1)
*3-4. Fuel tank			-	-	1	-	-	I
EMISSION CONTROL SYSTEM								
*4-1. PCV valve						0 miles) or		
			Inspect ev	ery 90000	km (54000	0 miles) or	72 months	(#1)
*4-2. Fuel evaporative emission control system			-	-	-	-	-	1

#1: For Brazil models

#2: Perform the engine coolant level check under the daily inspection in the "OPERATING YOUR VEHICLE" section. If you use the engine coolant other than "SUZUKI LLC: Super (Blue)" for replacement, follow the schedule of "SUZUKI LLC: Standard (Green)". (Replace every 45000 km (27000 miles) or 36 months.)

**1-1. Engine accessory drive belt Tension check, *Adjustment, *Replacement - - I - - R *1-2. Valve clearance - I - I - I - I - I - I - I - I I - I I - I I - I										
Instruction				, ,		-				
Months 84 96 108 120 132 144 **1-1. Engine accessory drive belt Tension check, *Adjustment, *Replacement - I - I - R *1-2. Valve clearance - I - I - R <		cnever comes		miles (x1000)		· · -				
*1-1. Engine accessory drive belt Tension check, *Adjustment, *Replacement - - I - - R *1-2. Valve clearance - I - I - I - I - I - I				months	84	96	108	120	132	144
*1-2. Valve clearance - I - I - I - I - I - I - I - I - I - I - I - I - I I - I	ENGINE									
1-3. Engine oil and engine oil filter R	*1-1. Engine accessory drive bel	t	Tension check, *Adjustment, *Replac	ement	-	-	1	-	-	R
1-4. Engine coolant SUZUKI LLC: Super (Blue) (#2) First time only: Replace every 10000 km (6000 miles) or 96 months. 1-4. Engine coolant SUZUKI LLC: Super (Blue) (#2) First time only: Replace every 75000 km (45000 miles) or 96 months. 1-5. Exhaust system (except catalyst) - - R - - R *1-5. Exhaust system (except catalyst) - I - I - I - I - I - Replace every 105000 km (63000 miles) or 84 months. *1-5. Exhaust system (except catalyst) - I - I - I - Replace every 105000 km (63000 miles) or 84 months. *1-5. Exhaust system (except catalyst) - I - I - Replace every 105000 km (63000 miles) or 84 months. *1-5. Exhaust system fulges When leaded fuel is used, refer to "Severe driving condition" schedule. - - - Replace every 105000 km (63000 miles) or 84 months. *2. Fuel lines - I Refer to "Severe driving condition" schedule. - I - I - I - I - I - I - I - I <td>*1-2. Valve clearance</td> <td></td> <td></td> <td></td> <td>-</td> <td>1</td> <td>-</td> <td>I</td> <td>-</td> <td>1</td>	*1-2. Valve clearance				-	1	-	I	-	1
1-4. Engine coolant SUZUKI LLC: Super (Blue) (#2) First time only: Second time and after: Second time and after: Replace every 75000 km (45000 miles) or 96 months. *1-5. Exhaust system (except catalyst) - - R - R *1-5. Exhaust system (except catalyst) - I - R - R *1-5. Exhaust system (except catalyst) - I - I - I - R GNITION - I - I - R - R R Replace every 105000 km (63000 miles) or 84 months. Spark plugs When leaded fuel is used, refer to "Severe driving condition" schedule. - - R - R R Replace every 105000 km (63000 miles) or 84 months. Replace time filter element filter element Paved-road Dusty condition - I I R R I I R R I I R R I I R R I I R R I I R R I I R I I R I I R I I I I	1-3. Engine oil and engine oil fill	ter			R	R	R	R	R	R
Second time and after: Replace every 75000 km (45000 miles) or 48 months. SUZUKI LLC: Standard (Green) - - R - R R - R *1-5. Exhaust system (except catalyst) - I - I - I - R - R - R - R R - I R I					Replace e	every 10000) km (6000) miles) or	12 months.	(#1)
SUZUKI LLC: Standard (Green) - - R - - R *1-5. Exhaust system (except catalyst) - I - I - I - I GNITION - I - I - I - I - I 2-1. Spark plugs When unleaded fuel is used Iridium plug Replace every 105000 km (63000 miles) or 84 months. - R - R - R <t< td=""><td>1-4. Engine coolant</td><td></td><td>SUZUKI LLC: Super (Blue) (#2)</td><td>First time only:</td><td>Replace a</td><td>at 150000 k</td><td>m (90000</td><td>miles) or 9</td><td>6 months.</td><td></td></t<>	1-4. Engine coolant		SUZUKI LLC: Super (Blue) (#2)	First time only:	Replace a	at 150000 k	m (90000	miles) or 9	6 months.	
*1-5. Exhaust system (except catalyst) - I I				Second time and after:	Replace e	every 75000	0 km (4500	00 miles) o	r 48 months	S.
GNITION 2-1. Spark plugs When unleaded fuel is used Iridium plug Nickel plug Replace every 105000 km (63000 miles) or 84 months. Spark plugs When leaded fuel is used, refer to "Severe driving condition" schedule. - - R - R Spark plugs When leaded fuel is used, refer to "Severe driving condition" schedule. - R - R			SUZUKI LLC: Standard (Green)		-	-	R	-	-	R
2-1. Spark plugs When unleaded fuel is used Iridium plug Replace every 105000 km (63000 miles) or 84 months. Nickel plug - - R - - R Spark plugs When leaded fuel is used, refer to "Severe driving condition" schedule. - - R - - R Substrain Sign Control system Paved-road I I I R I I R 3-1. Air cleaner filter element Paved-road Dusty condition Refer to "Severe driving condition" schedule. - I R R R *3-2. Fuel lines - I - I - I - I - I R I I R	*1-5. Exhaust system (except cat	talyst)			-	1	-	1	-	1
Nickel plug - - R - R - R Spark plugs When leaded fuel is used, refer to "Severe driving condition" schedule. - - R - R UEL 3-1. Air cleaner filter element Paved-road I I I R I I R 3-1. Air cleaner filter element Paved-road Dusty condition Refer to "Severe driving condition" schedule. - I I I R I I R *3-2. Fuel lines - I I I I I I I Replace every 105000 km (63000 miles). Replace every 45000 km (27000 miles) or 36 months. (#1) - - I - I - I I I I <td>IGNITION</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>	IGNITION									
Spark plugs When leaded fuel is used, refer to "Severe driving condition" schedule. FUEL 3-1. Air cleaner filter element Paved-road I I R I R 3-1. Air cleaner filter element Paved-road Dusty condition Refer to "Severe driving condition" schedule. *3-2. Fuel lines - I - I - I *3-3. Fuel filter Replace every 105000 km (63000 miles). Replace every 45000 km (27000 miles) or 36 months. (#1) *3-4. Fuel tank - - I - I *3-4. Fuel tank - - I - I *3-4. Fuel tank - - I - I *4-1. PCV valve Inspect every 80000 km (50000 miles) or 48 months. Inspect every 90000 km (54000 miles) or 72 months. (#1)	2-1. Spark plugs When unleade	d fuel is used	Iridium plug		Replace e	every 10500	00 km (630	000 miles)	or 84 mont	hs.
UEL 1 1 R 1 R 3-1. Air cleaner filter element Paved-road Dusty condition Refer to "Severe driving condition" schedule. *3-2. Fuel lines - 1 - 1 - 1 *3-3. Fuel filter Replace every 105000 km (63000 miles). Replace every 45000 km (27000 miles) or 36 months. (#1) *3-4. Fuel tank - 1 - 1 WISSION CONTROL SYSTEM *4-1. PCV valve Inspect every 80000 km (50000 miles) or 48 months. Inspect every 90000 km (54000 miles) or 72 months. (#1)			Nickel plug		-	-	R	-	-	R
3-1. Air cleaner filter element Paved-road I I R I I R Dusty condition Dusty condition Refer to "Severe driving condition" schedule. *3-2. Fuel lines - I - I - I *3-3. Fuel filter Replace every 105000 km (63000 miles). Replace every 45000 km (27000 miles) or 36 months. (#1) *3-4. Fuel tank - - I - I *MISSION CONTROL SYSTEM - I - - I *4-1. PCV valve Inspect every 80000 km (50000 miles) or 72 months. (#1)	Spark plugs When leaded f	fuel is used, ret	fer to "Severe driving condition" schee	dule.					•	
Dusty condition Refer to "Severe driving condition" schedule. *3-2. Fuel lines - I - I - I *3-3. Fuel filter Replace every 105000 km (63000 miles). Replace every 45000 km (27000 miles) or 36 months. (#1) *3-4. Fuel tank - I - I - I *3-4. Fuel tank - I - I - I *MISSION CONTROL SYSTEM - Inspect every 80000 km (50000 miles) or 48 months. Inspect every 90000 km (54000 miles) or 72 months. (#1)	FUEL				•					
*3-2. Fuel lines - 1 - 1 - 1 *3-3. Fuel filter Replace every 105000 km (63000 miles). Replace every 45000 km (27000 miles) or 36 months. (#1) *3-4. Fuel tank - - 1 - 1 EMISSION CONTROL SYSTEM - 1 - 1 *4-1. PCV valve Inspect every 80000 km (50000 miles) or 48 months. Inspect every 90000 km (54000 miles) or 72 months. (#1)	3-1. Air cleaner filter element	Paved-road			1	1	R	1	1	R
*3-3. Fuel filter Replace every 105000 km (63000 miles). *3-4. Fuel tank		Dusty condition	on		Refer to "S	Severe driv	ring conditi	ion" schedu	ule.	
*3-4. Fuel tank - - I - - I **3-4. Fuel tank - - I - - I EMISSION CONTROL SYSTEM **4-1. PCV valve Inspect every 80000 km (50000 miles) or 48 months. **4-1. PCV valve Inspect every 90000 km (50000 miles) or 72 months. (#1)	*3-2. Fuel lines				-	I I	-	1	-	1
*3-4. Fuel tank - - 1 - 1 EMISSION CONTROL SYSTEM *4-1. PCV valve Inspect every 80000 km (50000 miles) or 48 months. Inspect every 90000 km (54000 miles) or 72 months. (#1)	*3-3. Fuel filter				Replace e	very 10500	00 km (630	000 miles).		
EMISSION CONTROL SYSTEM *4-1. PCV valve Inspect every 80000 km (50000 miles) or 48 months. Inspect every 90000 km (54000 miles) or 72 months. (#1)					Replace e	every 45000) km (2700	00 miles) or	r 36 month	s. (#1)
*4-1. PCV valve Inspect every 80000 km (50000 miles) or 48 months. Inspect every 90000 km (54000 miles) or 72 months. (#1)	*3-4. Fuel tank				-	-	ì	- 1	-	Í
Inspect every 90000 km (54000 miles) or 72 months. (#1)	EMISSION CONTROL SYSTEM						1		•	
	*4-1. PCV valve				Inspect ev	/ery 80000	km (50000	0 miles) or	48 months	
					Inspect ev	/ery 90000	km (54000	0 miles) or	72 months	. (#1)
	*4-2. Fuel evaporative emission of	control system			_		_	_	- 1	È Î

#1: For Brazil models

#2: Perform the engine coolant level check under the daily inspection in the "OPERATING YOUR VEHICLE" section. If you use the engine coolant other than "SUZUKI LLC: Super (Blue)" for replacement, follow the schedule of "SUZUKI LLC: Standard (Green)". (Replace every 45000 km (27000 miles) or 36 months.)

Interval: This interval should be judged by		km (x1000)	15	30	45	60	75	90
odometer reading or months, whichever		miles (x1000)	9	18	27	36	45	54
comes first.		months	12	24	36	48	60	72
BRAKE								
*5-1. Brake discs and pads (front)			I	I	I	I	I	I
Brake drums and shoes (rear)			-	1	-	1	-	1
*5-2. Brake hoses and pipes			-	I	-	1	-	I
*5-3. Brake pedal			1	I	I I	1	I.	I
*5-4. Brake fluid (#3)			1	R	I	R	I	R
5-5. Brake lever and cable		Check, *Adjustment (1st 15000 km only)	1	-	-	-	-	-
CHASSIS AND BODY								
*6-1. Clutch pedal			1	1	1	1	1	1
*6-2. Clutch fluid (#3)			1	R	1	R	1	R
6-3. Tyres/Wheels			1	I	I I	1	I.	I
*6-4. Wheel bearings			-	I	-	1	-	I
*6-5. Propeller shafts			-	-	I I	-	-	I
*6-6. Suspension system			-	I	-	1	-	I
*6-7. Steering system			-	I.	-	1	-	I
*6-8. Manual transmission oil	Genuine "SUZUKI GEAR OIL 75W"		-	I	-	1	-	I
	Other than "SUZUKI GEAR OIL 75W"	(I: 1st 15000 km only)	1	-	R	-	-	R
6-9. Automatic transmission		Fluid level	-	1	-	1	-	I I
		*Fluid change	Replace	every 16	5000 km	(99000 r	niles).	
		*Fluid hose	-	-	-		-	-
*6-10. Transfer oil	Genuine "SUZUKI GEAR OIL 75W"		Inspect e	every 300	000 km (1	8000 mil	es) or 24	months.
	Other than "SUZUKI GEAR OIL 75W"	(I: 1st 15000 km only)	1	-	R	-	-	R
*6-11. Differential oil	(R: 1st 15000 km only) Genuine "SUZUKI SUPER GEAR OIL 75W-85	SYNTHETIC"	R	-	I	-	I	-
6-12. All latches, hinges and locks			-	I	-	I	-	I
*6-13. Air conditioner filter element			-	I	R	-	I	R

#3: Clutch fluid is supplied from brake fluid reservoir.

WARNING

The shock absorbers are filled with high pressure gas. Never attempt to disassemble them or throw them into a fire. Avoid storing them near a heater or heating device. When scrapping the absorber, the gas must be released from the absorber safely. Ask your dealer for assistance.

Interval: This interval should be judged by		km (x1000)	105	120	135	150	165	180
odometer reading or months, whichever		miles (x1000)	63	72	81	90	99	108
comes first.		months	84	96	108	120	132	144
BRAKE								
*5-1. Brake discs and pads (front)			1	1	I	I	1	1
Brake drums and shoes (rear)			-	1	-	1	-	1
*5-2. Brake hoses and pipes			-	1	-	I	-	1
*5-3. Brake pedal			1	1	1	1	1	1
*5-4. Brake fluid (#3)			1	R	1	R	1	R
5-5. Brake lever and cable		Check, *Adjustment (1st 15000 km only)	-	_	-	-	-	-
CHASSIS AND BODY								
*6-1. Clutch pedal			1	1	1	1	1	1
*6-2. Clutch fluid (#3)			1	R	1	R	1	R
6-3. Tyres/Wheels			1	1	1	1	1	1
*6-4. Wheel bearings			-	1	-	1	-	1
*6-5. Propeller shafts			-	-	1	-	-	1
*6-6. Suspension system			-	1	-	I	-	1
*6-7. Steering system			-	1	-	1	-	1
*6-8. Manual transmission oil	Genuine "SUZUKI GEAR OIL 75W"		-	1	-	I	-	1
	Other than "SUZUKI GEAR OIL 75W"	(I: 1st 15000 km only)	-	-	R	-	-	R
6-9. Automatic transmission		Fluid level	-	1	-		-	1
		*Fluid change	Replace	every 16	5000 km	(99000 r	niles).	
		*Fluid hose	-	1	-	-	-	- I
*6-10. Transfer oil	Genuine "SUZUKI GEAR OIL 75W"		Inspect e	every 300	000 km (1	8000 mil	es) or 24	months.
	Other than "SUZUKI GEAR OIL 75W"	(I: 1st 15000 km only)	-	-	R	-	-	R
*6-11. Differential oil	(R: 1st 15000 km only) Genuine "SUZUKI SUPER GEAR OIL 75W-85	SYNTHETIC"	I	-	I	-	I	-
6-12. All latches, hinges and locks			-	1	-	I	-	1
*6-13. Air conditioner filter element			-	1	R	-	1	R

#3: Clutch fluid is supplied from brake fluid reservoir.

Maintenance recommended under severe driving conditions (except for EU countries and Israel)

Follow this schedule if your vehicle is mainly operated under one or more of the following conditions:

- When most trips are less than 6 km (4 miles).
- When most trips are less than 16 km (10 miles) and outside temperature remains below freezing.
- Idling and/or low-speed operation in stop-and-go traffic.
- Operating in extremely cold weather and/or on salted roads.
- Operating in rough and/or muddy areas.
- · Operating in dusty areas.
- · Repeated high speed drive or high engine revolutions.
- Towing a trailer, if admitted.

Schedule should also be followed if the vehicle is used for delivery service, police, taxi or other commercial applications.

NOTE:

For the Maintenance Recommended under Severe Driving Conditions of Russian models, refer to "For Russia" in the "SUPPLEMENT" section.

Interval: This interval should be judged by		km (x1000)	7.5	15	22.5	30	37.5	45
odometer reading or months, whichever comes		()		-				-
first.		miles (x1000)		9	13.5	18	22.5	27
		months	6	12	18	24	30	36
ENGINE								
*1-1. Engine accessory drive belt	Tension check, *Adjustment, *Replacer	ment	-	I	-	I	-	R
*1-2. Valve clearance			-	-	-	1	-	-
1-3. Engine oil and engine oil filter			R	R	R	R	R	R
			Replace e	very 5000	km (3000 i	niles) or 6	months. (#	1)
1-4. Engine coolant	SUZUKI LLC: Super (Blue) (#2)	First time only:	Replace a	t 150000 k	m (90000 i	miles) or 9	6 months.	
		Second time and after:	Replace e	very 75000) km (4500	0 miles) or	48 months	S.
	SUZUKI LLC: Standard (Green)		-	-	-	-	-	R
*1-5. Exhaust system (except catalyst)			-	-	-	1	-	-
IGNITION								
2-1. Spark plugs	Iridium plug		-	-	-	R	-	-
	Nickel plug		Replace e	very 10000) km (6000	miles) or a	8 months.	
FUEL					,	,		
3-1. Air cleaner filter element*1			Inspect ev	very 2500 k	m (1500 m	niles).		
							24 months	3.
*3-2. Fuel lines			-		<u> </u>	Ĺ	-	-
*3-3. Fuel filter			Replace e	very 10500	00 km (630	00 miles).		
*3-4. Fuel tank			-	- I	_`_		- 1	1
EMISSION CONTROL SYSTEM							I	
*4-1. PCV valve			Inspect ev	verv 80000	km (50000) miles) or -	48 months.	
				,	· ·	,	72 months.	
*4-2. Fuel evaporative emission control system			-	-	_	-	_	_

#1: For Brazil models

#2: Perform the engine coolant level check under the daily inspection in the "OPERATING YOUR VEHICLE" section. If you use the engine coolant other than "SUZUKI LLC: Super (Blue)" for replacement, follow the schedule of "SUZUKI LLC: Standard (Green)". (Replace every 45000 km (27000 miles) or 36 months.)

Interval: This interval should be judged by		km (x1000)	52.5	60	67.5	75	82.5	90
odometer reading or months, whichever comes		miles (x1000)		36	40.5	45	49.5	54
first.		months	42	48	54	60	66	72
ENGINE			•	•				
*1-1. Engine accessory drive belt	Tension check, *Adjustment, *Replace	ement	-	I	-	I	-	R
*1-2. Valve clearance			-	1	-	-	-	I
1-3. Engine oil and engine oil filter			R	R	R	R	R	R
							months. (#	1)
1-4. Engine coolant	SUZUKI LLC: Super (Blue) (#2)	First time only:						
		Second time and after:	Replace e	very 75000) km (4500	0 miles) or	48 months	
	SUZUKI LLC: Standard (Green)		-	-	-	-	-	R
*1-5. Exhaust system (except catalyst)			-	I	-	-	-	
IGNITION				-				_
	Iridium plug		-	R	-	-	-	R
	Nickel plug		Replace e	every 10000	J km (6000	miles) or a	8 months.	
FUEL 3-1. Air cleaner filter element* ¹								
3-1. Air cleaner filter element			Inspect ev				0.4 months	
*3-2. Fuel lines			Replace e		J KIII (1800	io miles) or	24 months	i.
*3-3. Fuel filter			– Replace e	1 10500	-	– 00 milos)	- 1	1
*3-4. Fuel tank								1
EMISSION CONTROL SYSTEM			I –	I –		I –		
*4-1. PCV valve			Inspect ev	erv 80000	km (50000) miles) or	48 months.	
				,	· ·	,	72 months.	
*4-2. Fuel evaporative emission control system			-	-	-	-	_	1

#1: For Brazil models

#2: Perform the engine coolant level check under the daily inspection in the "OPERATING YOUR VEHICLE" section. If you use the engine coolant other than "SUZUKI LLC: Super (Blue)" for replacement, follow the schedule of "SUZUKI LLC: Standard (Green)". (Replace every 45000 km (27000 miles) or 36 months.)

Interval: This interval should be judged by	km (x1000)	7.5	15	22.5	30	37.5	45
odometer reading or months, whichever	miles (x1000)	4.5	9	13.5	18	22.5	27
comes first.	months	6	12	18	24	30	36
BRAKE		_	_	_			
*5-1. Brake discs and pads (front)		-	I	-	I	-	I
Brake drums and shoes (rear)		-	-	-	I	-	-
*5-2. Brake hoses and pipes		-	-	-	I	-	-
*5-3. Brake pedal		-	1	-	1	-	1
*5-4. Brake fluid (#3)		-	I	-	R	-	1
5-5. Brake lever and cable	Check, *Adjustment (1st 15000 km only)	-	I	-	-	-	-
CHASSIS AND BODY							
*6-1. Clutch pedal		-	1	-	I	-	1
*6-2. Clutch fluid (#3)		-	I	-	R	-	1
6-3. Tyres/Wheels		-	1	-	1	-	1
*6-4. Wheel bearings		-	I	-		-	1
*6-5. Propeller shafts		-	I	-	1	-	1
*6-6. Suspension system		-	-	-		-	-
*6-7. Steering system		-	-	-	1	-	-
*6-8. Manual transmission oil	Genuine "SUZUKI GEAR OIL 75W"	-	-	-	1	-	-
	Other than "SUZUKI GEAR OIL 75W"	-	-	-	R	-	-
6-9. Automatic transmission	Fluid level	-	-	-		-	-
		Replace months.	every 30	0000 km (18000 m	iles) or 24	4
	*Fluid hose	Inspect e	every 600	00 km (3	6000 mile	s) or 48 ı	months.
*6-10. Transfer oil	Genuine "SUZUKI GEAR OIL 75W"	Inspect e	every 300)00 km (1	8000 mil	es) or 24	months.
		Replace	every 60	000 km (3	36000 mi	es) or 48	months.
	Other than "SUZUKI GEAR OIL 75W"	-	-	-	R	-	-
*6-11. Differential oil	Genuine "SUZUKI SUPER GEAR OIL 75W-85 SYNTHETIC"	-	R	-	-	-	R
6-12. All latches, hinges and locks		-	-	-	1	-	-
*6-13. Air conditioner filter element * ³		-	I	-	I	-	R

#3: Clutch fluid is supplied from brake fluid reservoir

WARNING

The shock absorbers are filled with high pressure gas. Never attempt to disassemble them or throw them into a fire. Avoid storing them near a heater or heating device. When scrapping the absorber, the gas must be released from the absorber safely. Ask your dealer for assistance.

Interval: This interval should be judged by	km (x1000)	52.5	60	67.5	75	82.5	90
odometer reading or months, whichever	miles (x1000)	31.5	36	40.5	45	49.5	54
comes first.	months	42	48	54	60	66	72
BRAKE		_	_	_			
*5-1. Brake discs and pads (front)		-	I	-	I	-	I
Brake drums and shoes (rear)		-	1	-	-	-	I
*5-2. Brake hoses and pipes		-	I	-	-	-	I
*5-3. Brake pedal		-	1	-	1	-	1
*5-4. Brake fluid (#3)		-	R	-	I	-	R
5-5. Brake lever and cable	Check, *Adjustment (1st 15000 km only)	-	-	-	-	-	-
CHASSIS AND BODY							
*6-1. Clutch pedal		-	1	-	1	-	1
*6-2. Clutch fluid (#3)		-	R	-	I	-	R
6-3. Tyres/Wheels		-	I I	-	I	-	I
*6-4. Wheel bearings		-	I	-	I	-	I
*6-5. Propeller shafts		-	I I	-	I	-	I
*6-6. Suspension system		-	I	-	-	-	I
*6-7. Steering system		-	1	-	-	-	1
*6-8. Manual transmission oil	Genuine "SUZUKI GEAR OIL 75W"	-	R	-	-	-	I
	Other than "SUZUKI GEAR OIL 75W"	-	R	-	-	-	R
6-9. Automatic transmission	Fluid level	-	1	-	-	-	1
	*Fluid change	Replace months.	every 30	0000 km (18000 m	iles) or 24	4
	*Fluid hose	Inspect e	every 600	00 km (3	6000 mile	es) or 48 ı	months.
*6-10. Transfer oil	Genuine "SUZUKI GEAR OIL 75W"	Inspect e	every 300	000 km (1	8000 mil	es) or 24	months.
		Replace	every 60	000 km (3	36000 mi	les) or 48	months.
	Other than "SUZUKI GEAR OIL 75W"	-	R	-	-	-	R
*6-11. Differential oil	Genuine "SUZUKI SUPER GEAR OIL 75W-85 SYNTHETIC"	-	-	-	R	-	-
6-12. All latches, hinges and locks		-	I	-	-	-	Ι
*6-13. Air conditioner filter element * ³		-	I	-	I	-	R

#3: Clutch fluid is supplied from brake fluid reservoir

NOTE:

This table shows the service schedule up to 90000 km (54000 miles). Beyond 90000 km (54000 miles), perform the same services at the same intervals shown in the chart. *1 Inspect more frequently if the vehicle is used under dusty conditions. *2 Check or replace as necessary if you usually drive with high speed or high engine revolutions. *3 Clean more frequently if the air flow from the air conditioner decreases.

Periodic maintenance schedule (for EU countries and Israel)

"R" : Replace or Change "I" : Inspect, clean, adjust, lubricate or replace as necessary

NOTE:

This table shows the service schedule up to 240000 km (150000 miles). Beyond 240000 km (150000 miles), perform the same services at the same intervals shown in the chart.

Interval: This interval should be judged by		km (x1000)	20	40	60	80	100	120
odometer reading or months, whichever comes		miles (x1000)	-	25	37.5	50	62.5	75
first.		months	12	24	36	48	60	72
ENGINE								
*1-1. Engine accessory drive belt	Tension check, *Adjustment, *Replacem	nent	-	1	-	1	-	R
*1-2. Valve clearance			-	1	-	1	-	1
1-3. Engine oil and engine oil filter	ACEA Standards or SUZUKI GENUINE	OIL (#1)	R	R	R	R	R	R
			Refer to "O tion.	il change rei	minder light	in the "BEF	ORE DRIVI	ING" sec-
	Other than ACEA Standards or SUZUK	GENUINE OIL (#1)	Replace e	very 15000) km (9375	miles) or	12 months.	
			Refer to "O tion.	il change rei	minder light	in the "BEF	ORE DRIVI	ING" sec-
1-4. Engine coolant	SUZUKI LLC: Super (Blue) (#2)	First time only:	Replace a	t 160000 k	m (100000	miles) or 9	96 months.	
	Ś	Second time and after:	Replace e	very 80000) km (5000	0 miles) or	48 months	S.
	SUZUKI LLC: Standard (Green)		Replace e	very 40000) km (2500	0 miles) or	36 months	S.
*1-5. Exhaust system (except catalyst)			-	1	-	-	-	1
IGNITION								
2-1. Spark plugs When unleaded fuel is used			Replace e	very 10000)0 km (625	00 miles) o	or 84 month	IS.
Spark plugs When leaded fuel is used, re	efer to "Severe driving condition" schedul	e.						
FUEL								
3-1. Air cleaner filter element Paved-road							12 months.	
					``	,	36 months	S.
Dusty condit	ion		Refer to "S	Severe driv	ing conditi	on" schedu	lle.	
*3-2. Fuel lines			-	I	-	1	-	1
*3-3. Fuel tank			-	I	-		-	

#1: For further details, see "Engine oil and filter" in this section.

#2: Perform the engine coolant level check under the daily inspection in the "OPERATING YOUR VEHICLE" section.
 If you use the engine coolant other than "SUZUKI LLC: Super (Blue)" for replacement, follow the schedule of "SUZUKI LLC: Standard (Green)". (Replace every 40000 km (25000 miles) or 36 months.)

		1	1 (1000)		100	100			0.40
Interval: This interval should b			km (x1000)		160	180	200	220	240
odometer reading or months, whit	cnever comes		miles (x1000)		100	112.5	125	137.5	150
first.			months	84	96	108	120	132	144
ENGINE									
*1-1. Engine accessory drive belt	t	Tension check, *Adjustment, *Replace	ement	-	I	-	1	-	R
*1-2. Valve clearance				-	1	-	1	-	I
1-3. Engine oil and engine oil filt	ter	ACEA Standards or SUZUKI GENUIN	E OIL (#1)	R	R	R	R	R	R
				Refer to "O tion.	il change rei	minder light	in the "BEI	ORE DRIV	ING" sec-
		Other than ACEA Standards or SUZU	KI GENUINE OIL (#1)	Replace e	very 15000) km (9375	i miles) or	12 months.	
					il change rei	· ·	,		
1-4. Engine coolant		SUZUKI LLC: Super (Blue) (#2)	First time only:	Replace a	t 160000 k	m (100000) miles) or	96 months.	
			Second time and after:	Replace e	very 80000) km (5000	0 miles) or	48 months	S.
		SUZUKI LLC: Standard (Green)		Replace e	very 40000) km (2500	0 miles) or	36 months	S.
*1-5. Exhaust system (except cat	talyst)			-	1	-	1	-	I
IGNITION									
2-1. Spark plugs When unleade	d fuel is used	Iridium plug		Replace e	very 10000	00 km (625	i00 miles) o	or 84 montl	ns.
Spark plugs When leaded f	uel is used, re	fer to "Severe driving condition" sched	ule.						
FUEL									
3-1. Air cleaner filter element	Paved-road			Inspect ev	ery 20000	km (12500) miles) or	12 months	
				Replace e	very 40000) km (2500	0 miles) or	36 months	S.
	Dusty condit	ion		Refer to "S	Severe driv	ing conditi	on" schedu	ıle.	
*3-2. Fuel lines	-			-	1	-		-	1
*3-3. Fuel tank				_	I	-	I	-	1
· · · · · · · · · · · · · · · · · · ·									

#1: For further details, see "Engine oil and filter" in this section.

#2: Perform the engine coolant level check under the daily inspection in the "OPERATING YOUR VEHICLE" section.
 If you use the engine coolant other than "SUZUKI LLC: Super (Blue)" for replacement, follow the schedule of "SUZUKI LLC: Standard (Green)". (Replace every 40000 km (25000 miles) or 36 months.)

Interval: This interval should be judged by	km (x1000)	20	40	60	80	100	120
odometer reading or months, whichever	miles (x1000)	12.5	25	37.5	50	62.5	75
comes first.	months	12	24	36	48	60	72
EMISSION CONTROL SYSTEM							
*4-1. PCV valve		-	-	-	I	-	-
*4-2. Fuel evaporative emission control sy	/stem	-	-	-	-	-	1
BRAKE							
*5-1. Brake discs and pads (front)		1	1	1	1	1	1
Brake drums and shoes (rear)		-	I	-	1	-	1
*5-2. Brake hoses and pipes		-	I	-	1	-	1
*5-3. Brake pedal		1	I	I	1	1	1
*5-4. Brake fluid (#3)		1	R	I	R	I	R
5-5. Brake lever and cable	Check, *Adjustment (1st 20000 km only)	1	-	-	-	-	-
CHASSIS AND BODY							
*6-1. Clutch pedal		1	I	I I	I	1	1
*6-2. Clutch fluid (#3)		1	R	1	R	1	R
6-3. Tyres/Wheels		1	I.	I.	1	1	I
*6-4. Wheel bearings		-	1	-	1	-	1
*6-5. Propeller shafts		-	1	-	1	-	1
*6-6. Suspension system		-	- 1	-	1	-	1
*6-7. Steering system		-	I	-		-	1
*6-8. Manual transmission oil	Genuine "SUZUKI GEAR OIL 75W"	-	I	-	I	-	I
	Other than "SUZUKI GEAR OIL 75W"	-	R	-	R	-	R
*6-9. Automatic transmission oil	Fluid level	-	1	-	1	-	1
	*Fluid change	Replace	every 16	5000 km	(99000 r	niles).	
	*Fluid hose	-	-	1	-	-	1
*6-10. Transfer oil	Genuine "SUZUKI GEAR OIL 75W"	Inspect e	every 400	000 km (2	5000 mil	es) or 24	months.
	Other than "SUZUKI GEAR OIL 75W"	-	R	-	R	-	R
*6-11. Differential oil	Genuine "SUZUKI SUPER GEAR OIL 75W-85 SYNTHETIC"	R	-	I	-	I	-
6-12. All latches, hinges and locks		-	I	-	I	-	I
*6-13. Air conditioner filter element		-	I	R	-	I	R

#3: Clutch fluid is supplied from brake fluid reservoir.

WARNING

The shock absorbers are filled with high pressure gas. Never attempt to disassemble them or throw them into a fire. Avoid storing them near a heater or heating device. When scrapping the absorber, the gas must be released from the absorber safely. Ask your dealer for assistance.

Interval: This interval should be judged by		140	160	180	200	220	240
odometer reading or months, whichever	miles (x1000)	87.5	100	112.5	125	137.5	150
comes first.	months	84	96	108	120	132	144
EMISSION CONTROL SYSTEM							
*4-1. PCV valve		-	I	-	-	-	I
*4-2. Fuel evaporative emission control sy	stem	-	-	-	-	-	I
BRAKE							
*5-1. Brake discs and pads (front)		1	1	1	I	1	1
Brake drums and shoes (rear)		-	1	-	I	-	1
*5-2. Brake hoses and pipes		-	1	-	I	-	1
*5-3. Brake pedal		1	1	1	I	1	1
*5-4. Brake fluid (#3)		1	R	1	R	1	R
5-5. Brake lever and cable	Check, *Adjustment (1st 20000 km only)	-	-	-	-	-	-
CHASSIS AND BODY							
*6-1. Clutch pedal		1	I	1	I	1	1
*6-2. Clutch fluid (#3)		1	R	1	R	1	R
6-3. Tyres/Wheels		1	1	1	I	1	1
*6-4. Wheel bearings		-	1	-	1	-	1
*6-5. Propeller shafts		-	1	-	I	-	1
*6-6. Suspension system		-	1	-	1	-	I
*6-7. Steering system		-	1	-	I	-	1
*6-8. Manual transmission oil	Genuine "SUZUKI GEAR OIL 75W"	-	1	-	1	-	I
	Other than "SUZUKI GEAR OIL 75W"	-	R	-	R	-	R
*6-9. Automatic transmission oil	Fluid level	-	1	-	I	-	1
	*Fluid change	Replace	every 16	5000 km	(99000 r	niles).	
	*Fluid hose	-	-	1	-	-	1
*6-10. Transfer oil	Genuine "SUZUKI GEAR OIL 75W"	Inspect of	every 400	000 km (2	5000 mil	es) or 24	months.
	Other than "SUZUKI GEAR OIL 75W"	-	R	-	R	-	R
*6-11. Differential oil	Genuine "SUZUKI SUPER GEAR OIL 75W-85 SYNTHETIC"	1	-	1	-	I	-
6-12. All latches, hinges and locks		-	I	-	1	-	1
*6-13. Air conditioner filter element		-	I	R	-	I	R

#3: Clutch fluid is supplied from brake fluid reservoir.

Maintenance recommended under severe driving conditions (for EU countries and Israel)

Follow this schedule if your vehicle is mainly operated under one or more of the following conditions:

- When most trips are less than 6 km (4 miles).
- When most trips are less than 16 km (10 miles) and outside temperature remains below freezing.
- Idling and/or low-speed operation in stop-and-go traffic.
- Operating in extremely cold weather and/or on salted roads.
- Operating in rough and/or muddy areas.
- Operating in dusty areas.
- · Repeated high speed drive or high engine revolutions.
- Towing a trailer, if admitted.

Schedule should also be followed if the vehicle is used for delivery service, police, taxi or other commercial applications.

Interval: This interval should be judged by		km (x1000)	10	20	30	40	50	60	
odometer reading or months, whichever comes		miles (x1000)	6.25	12.5	18.75	25	31.25	37.5	
first.		months	6	12	18	24	30	36	
ENGINE									
*1-1. Engine accessory drive belt	Tension check, *Adjustment, *Replacen	nent	-	I	-	1	-	R	
*1-2. Valve clearance			-	-	-	1	-	-	
1-3. Engine oil and engine oil filter	ACEA Standards or SUZUKI GENUINE	OIL (#1)	R	R	R	R	R	R	
			Refer to "O tion.	il change rei	minder light	in the "BEI	ORE DRIVI	NG" sec-	
	Other than ACEA Standards or SUZUK	I GENUINE OIL (#1)	Replace e	very 7500	km (4687 ı	miles) or 6	months.		
			Refer to "O tion.	il change rei	minder light	in the "BEI	ORE DRIVI	NG" sec-	
1-4. Engine coolant	SUZUKI LLC: Super (Blue) (#2)	First time only:	Replace a	t 160000 k	m (100000) miles) or	96 months.		
		Second time and after:	Replace e	very 80000) km (5000	0 miles) or	48 months	S.	
	SUZUKI LLC: Standard (Green)		Replace e	very 40000) km (2500	0 miles) or	36 months	S.	
*1-5. Exhaust system (except catalyst)			-	-	-	1	-	-	
IGNITION			-						
2-1. Spark plugs	Iridium plug		Replace e	very 30000) km (1875	i0 miles) oi	24 months	S.	
FUEL			-						
3-1. Air cleaner filter element* ¹			Inspect every 2500 km (1562 miles).						
			Replace every 30000 km (18750 miles) or 24 months.						
*3-2. Fuel lines			-	-	-	I	-	-	
*3-3. Fuel tank			-	-	-		-	-	
EMISSION CONTROL SYSTEM									
*4-1. PCV valve			Inspect ev	ery 80000	km (50000) miles) or	48 months.		
*4-2. Fuel evaporative emission control system	-	-	-	-	-	-			

#1: For further details, see "Engine oil and filter" in this section.

#2: Perform the engine coolant level check under the daily inspection in the "OPERATING YOUR VEHICLE" section.
 If you use the engine coolant other than "SUZUKI LLC: Super (Blue)" for replacement, follow the schedule of "SUZUKI LLC: Standard (Green)". (Replace every 40000 km (25000 miles) or 36 months.)

Interval: This interval should be judged by		km (x1000)	70	80	90	100	110	120	
odometer reading or months, whichever comes		miles (x1000)	43.75	50	56.25	62.5	68.75	75	
first.		months	42	48	54	60	66	72	
ENGINE									
*1-1. Engine accessory drive belt	Tension check, *Adjustment, *Replacen	nent	-	I	-	1	-	R	
*1-2. Valve clearance			-	1	-	-	-	1	
1-3. Engine oil and engine oil filter	ACEA Standards or SUZUKI GENUINE	OIL (#1)	R	R	R	R	R	R	
			Refer to "O tion.	il change rei	minder light	in the "BEI	FORE DRIV	ING" sec-	
	Other than ACEA Standards or SUZUK	I GENUINE OIL (#1)	Replace e	very 7500	km (4687 ۱	niles) or 6	months.		
			Refer to "O tion.	il change rei	minder light	in the "BEI	FORE DRIV	ING" sec-	
1-4. Engine coolant	SUZUKI LLC: Super (Blue) (#2)	First time only:	Replace a	t 160000 k	m (100000	miles) or	96 months.		
	:	Second time and after:	Replace e	very 80000) km (5000	0 miles) or	r 48 months	S.	
	SUZUKI LLC: Standard (Green)		Replace e	very 40000) km (2500	0 miles) or	r 36 months	S.	
*1-5. Exhaust system (except catalyst)			-	1	-	-	-	1	
IGNITION									
2-1. Spark plugs	Iridium plug		Replace e	very 30000) km (1875	0 miles) or	r 24 months	S.	
FUEL									
3-1. Air cleaner filter element* ¹			Inspect every 2500 km (1562 miles).						
			Replace every 30000 km (18750 miles) or 24 months.						
*3-2. Fuel lines			-	1	-	-	-	1	
*3-3. Fuel tank			-		-	-	-		
EMISSION CONTROL SYSTEM									
*4-1. PCV valve			Inspect ev	ery 80000	km (50000) miles) or	48 months.		
*4-2. Fuel evaporative emission control system	-	-	-	-	-	I			

#1: For further details, see "Engine oil and filter" in this section.

#2: Perform the engine coolant level check under the daily inspection in the "OPERATING YOUR VEHICLE" section.
 If you use the engine coolant other than "SUZUKI LLC: Super (Blue)" for replacement, follow the schedule of "SUZUKI LLC: Standard (Green)". (Replace every 40000 km (25000 miles) or 36 months.)

Interval: This interval should be judged by		km (x1000)	10	20	30	40	50	60
odometer reading or months, whichever		miles (x1000)	6.25	12.5	18.75	25	31.25	37.5
comes first.		months	6	12	18	24	30	36
BRAKE	•							
*5-1. Brake discs and pads (front)			-	1	-	I	-	I
Brake drums and shoes (rear)			-	-	-	I	-	-
*5-2. Brake hoses and pipes			-	-	-	I	-	-
*5-3. Brake pedal			-	1	-	I	-	1
*5-4. Brake fluid (#3)			-	1	-	R	-	1
5-5. Brake lever and cable		Check, *Adjustment (1st 20000 km only)	-	1	-	-	-	-
CHASSIS AND BODY				_				
*6-1. Clutch pedal			-	I	-	I	-	I
*6-2. Clutch fluid (#3)			-	I	-	R	-	I
6-3. Tyres/Wheels			-	I	-	I	-	I
*6-4. Wheel bearings			-	I	-	I	-	I
*6-5. Propeller shafts			-	I	-	I	-	I
*6-6. Suspension system			-	-	-	I	-	-
*6-7. Steering system			-	-	-	I	-	-
*6-8. Manual transmission oil	Genuine "SUZUKI GEAR OIL 75W"		-	1	-	I	-	I
	Other than "SUZUKI GEAR OIL 75W"		-	R	-	R	-	R
6-9. Automatic transmission		Fluid level	-	I	-	I	-	I
					000 km (
					000 km (3			
*6-10. Transfer oil	Genuine "SUZUKI GEAR OIL 75W")00 km (1			
			Replace		000 km (5		les) or 48	
	Other than "SUZUKI GEAR OIL 75W"		-	R	-	R	-	R
*6-11. Differential oil	Genuine "SUZUKI SUPER GEAR OIL	75W-85 SYNTHETIC"	-	R	-	-	-	R
6-12. All latches, hinges and locks			-	-	-	I	-	-
6-13. Air conditioner filter element ³			-	I	-	I	-	R

#3: Clutch fluid is supplied from brake fluid reservoir.

A WARNING

The shock absorbers are filled with high pressure gas. Never attempt to disassemble them or throw them into a fire. Avoid storing them near a heater or heating device. When scrapping the absorber, the gas must be released from the absorber safely. Ask your dealer for assistance.

Interval: This interval should be judged by		km (x1000)	70	80	90	100	110	120
odometer reading or months, whichever		miles (x1000)	43.75	50	56.25	62.5	68.75	75
comes first.		months	42	48	54	60	66	72
BRAKE				_				
*5-1. Brake discs and pads (front)			-	1	-	I	-	
Brake drums and shoes (rear)			-	1	-	-	-	1
*5-2. Brake hoses and pipes			-	1	-	-	-	
*5-3. Brake pedal			-	1	-	1	-	
*5-4. Brake fluid (#3)			-	R	-	1	-	R
5-5. Brake lever and cable	Check, *Adju	stment (1st 20000 km only)	-	-	-	-	-	-
CHASSIS AND BODY								
*6-1. Clutch pedal			-	1	-	1	-	
*6-2. Clutch fluid (#3)			-	R	-	I	-	R
6-3. Tyres/Wheels			-	1	-	1	-	
*6-4. Wheel bearings			-	1	-	1	-	
*6-5. Propeller shafts			-	1	-	-	-	
*6-6. Suspension system			-	1	-	-	-	
*6-7. Steering system			-	1	-	-	-	
*6-8. Manual transmission oil	Genuine "SUZUKI GEAR OIL 75W"		-	R	-	I	-	
	Other than "SUZUKI GEAR OIL 75W"		-	R	-	R	-	R
6-9. Automatic transmission	Fluid level		-	1	-	I	-	
	*Fluid chang	le	Replace	every 30	000 km (18000 m	iles).	
	*Fluid hose		Inspect e	every 600)00 km (3	7500 mil	es).	
*6-10. Transfer oil	Genuine "SUZUKI GEAR OIL 75W")00 km (1			
			Replace	every 80	000 km (5	50000 mil	les) or 48	months.
	Other than "SUZUKI GEAR OIL 75W"		-	R	-	R	-	R
*6-11. Differential oil	Genuine "SUZUKI SUPER GEAR OIL 75W-85 SYN	THETIC"	-	-	-	R	-	-
6-12. All latches, hinges and locks			-	1	-	-	-	I I
*6-13. Air conditioner filter element * ³			-		-	I	-	R

#3: Clutch fluid is supplied from brake fluid reservoir.

NOTE:

This table shows the service schedule up to 120000 km (75000 miles).

Beyond 120000 km (75000 miles), perform the same services at the same intervals shown in the chart. *1 Inspect more frequently if the vehicle is used under dusty conditions. *2 Check or replace as necessary if you usually drive with high speed or high engine revolutions. *3 Clean more frequently if the air flow from the air conditioner decreases.

Drive belt


A WARNING

When the engine is running, keep hands, hair, clothing, tools, etc. away from the moving fan and drive belts.

Check that the drive belt tension is correct while the engine is stopped. If the belt is too loose, insufficient battery charging, engine overheating, poor air conditioning, or excessive belt wear can result. When you push the belt with your thumb midpoint between the pulleys, there should be a deflection according to the following chart.

The belts should also be examined to ensure that they are not damaged.

If you need to replace or adjust the belt have it done by a SUZUKI dealer.

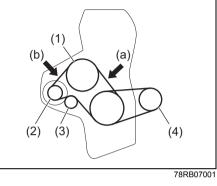

- (1) Water pump
- (2) Generator
- (3) Idler pulley
- (4) Air conditioner compressor

Drive belt deflection (100 N (10 kg, 22 lbs) press)

(a) New:


4.8 - 5.9 mm (0.19 - 0.23 in.) Readjustment: 6.2 - 7.1 mm (0.24 - 0.28 in.)

- (b) New:
 - 3.2 4.1 mm (0.13 0.16 in.) Readjustment: 4.4 - 5.0 mm (0.17 - 0.20 in.)

Engine oil and filter

Specified oil

Models for EU countries, Israel and Taiwan

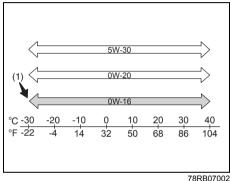

(1) Preferred

Check that the engine oil you use comes under the quality classification as listed below:

- ACEA* A1/B1, A3/B3, A3/B4, A5/B5
- · API SL, SM, SN, SP
- ILSAC GF-3, GF-4, GF-5, GF-6

*For EU countries and Israel

Select the appropriate oil viscosity according to the above chart.


(For EU countries and Israel)

The replacement timing varies with the type of engine oil that you choose. Refer to "Maintenance schedule" in this section for corresponding maintenance schedule.

SAE 0W-16 (1) is the best choice for good fuel economy and good startability in cold weather.

NOTE:

SUZUKI highly recommends the use of ECSTAR brand engine oil. ECSTAR has been specially formulated for your SUZUKI product and contributes to the desired vehicle performance and ideal driving experience. Models for Hong Kong, Macao, Singapore and Morocco

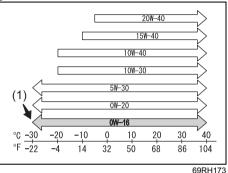

(1) Preferred

Be sure that the engine oil you use comes under the quality classification as listed below.


- · API SL, SM, SN, SP
- ILSAC GF-3, GF-4, GF-5, GF-6

Select the appropriate oil viscosity according to the above chart.

SAE 0W-16 (1) is the best choice for good fuel economy and good starting in cold weather.

NOTE:

We recommend that you use SUZUKI genuine oil. To purchase it, see a SUZUKI dealer or a qualified workshop. Models except for EU countries, Israel, Hong Kong, Macao, Singapore, Morocco and Taiwan

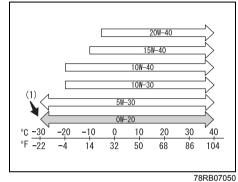

(1) Preferred

Be sure that the engine oil you use comes under the quality classification as listed below.

- API SG, SH, SJ, SL, SM, SN, SP
- ILSAC GF-3, GF-4, GF-5, GF-6


Select the appropriate oil viscosity according to the above chart.

SAE 0W-20 (1) is the best choice for good fuel economy, and good starting in cold weather.

NOTE:

We recommend that you use SUZUKI genuine oil. To purchase it, see a SUZUKI dealer or a qualified workshop.

Oil level check

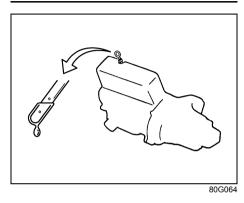


It is important to keep the engine oil at the correct level for proper lubrication of your vehicle's engine. Check the oil level with the vehicle on a level surface. The oil level indication may be inaccurate if the vehicle is on a slope. The oil level should be checked either before starting the engine or at least 5 minutes after stopping the engine.

Pull out the oil dipstick, wipe the oil off with a clean cloth, insert the dipstick all the way into the engine, and then remove it again. The oil on the stick should be between the upper and lower limits shown on the stick. If the oil level indication is near the lower limit, add enough oil to raise the level to the upper limit.

NOTICE


Failure to check the oil level regularly could lead to serious engine trouble due to insufficient oil.

Refilling

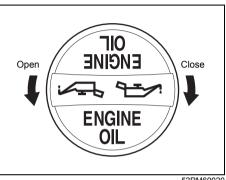

52RM60020


Remove the oil filler cap and pour oil slowly through the filler hole to bring the oil level to the upper limit on the dipstick. Be careful not to overfill the oil. Too much oil is almost as bad as too little oil. After refilling, start the engine and allow it to idle for about a minute. Stop the engine, wait about 5 minutes and check the oil level again.

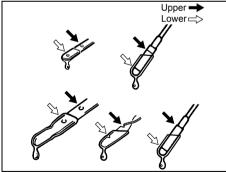

52D084


Changing engine oil and filter

Drain the engine oil while the engine is still warm.

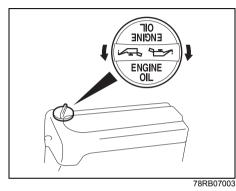

- 1) Remove the oil filler cap.
- 2) Place a drain pan under the drain plug.
- 3) Using a wrench, remove the drain plug and drain the engine oil.

The engine oil temperature may be high enough to burn your fingers when the drain plug is loosened. Wait until the drain plug is cool enough to touch with your bare hands.

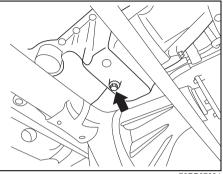

78RB07004

Tightening torque for drain plug: 35 Nm (3.6 kg-m, 25.8 lb-ft)

A WARNING

Engine oil can be hazardous. Children and pets may be harmed by swallowing new or used oil. Keep new and used oil and used oil filters away from children and pets.

Repeated, prolonged contact with used engine oil may cause skin cancer.

Brief contact with used oil may irritate skin.

(Continued)

A WARNING

(Continued)

To minimize your exposure to used oil, wear a long-sleeve shirt and moisture-proof gloves (such as dishwashing gloves) when changing oil. If oil contacts your skin, wash thoroughly with soap and water.

Launder any clothing or rags if it is with oil.

Recycle or properly dispose of used oil and oil filters.


4) Reinstall the drain plug with new gasket. Tighten the plug with a wrench to the specified torque.

NOTE:

- Whenever the engine oil is changed, the oil life monitoring must be reset to monitor the next oil change timing properly. To reset the light, consult a SUZUKI dealer. If you reset it by yourself, refer to "Setting mode" in "BEFORE DRIVING" section.
- For more information of the oil change reminder light and oil life monitoring, refer to "Oil change reminder light (if equipped)" or "Information display" in "BEFORE DRIVING" section.
- Ask a SUZUKI dealer for changing engine oil and filter if you have difficulties.

Oil filter replacement

- 1) Using an oil filter wrench, turn the oil filter counterclockwise and remove it.
- 2) Using a clean rag, wipe off the mounting surface on the engine where the new filter will be seated.
- Smear a small amount of engine oil around the rubber gasket of the new oil filter.
- Screw the new filter by hand until the filter gasket contacts the mounting surface.

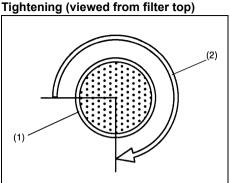

54G093

(1) (2) 54G092

(1) Loosen

(2) Tighten

(1) Oil filter (2) 3/4 turn

NOTICE

To tighten the oil filter properly, it is important to accurately identify the position at which the filter gasket first contacts the mounting surface. 5) Tighten the filter as specified below from the point of contact with the mounting surface (or to the specified torque) using an oil filter wrench.

Tightening torque for oil filter: 3/4 turn or

14 Nm (1.4 kg-m, 10.3 lb-ft)

NOTICE

To prevent oil leakage, check that the oil filter is tight, but do not overtighten it.

Refill with oil and oil leakage check

1) Pour oil through the filler hole and install the filler cap.

For the approximate capacity of the oil, refer to "Recommended fuel / lubricants and capacities (approx.)" in "SPECIFI-CATIONS" section.

- Start the engine and carefully check the oil filter and the drain plug for leakage. Run the engine at various speeds for at least 5 minutes.
- Stop the engine and wait about 5 minutes. Check the oil level again and add oil if necessary. Check for leakage again.

NOTICE

- When replacing the oil filter, it is recommended that you use a genuine SUZUKI replacement filter. If you use an aftermarket filter, check that it is of equivalent quality and follow the manufacturer's instructions.
- Oil leakage from the periphery of the oil filter or drain plug indicate incorrect installation or gasket damage. If you find any leakage or are not sure that the filter has been properly tightened, have the vehicle inspected by a SUZUKI dealer.

Engine coolant

Selection of coolant

NOTICE

SUZUKI LLC: Super (Blue) coolant; This coolant is already diluted to the proper percentage. Do not dilute with distilled water additionally. Doing so may result in the possibility of freezing and/or overheating coolant.

To maintain optimum performance and durability of your engine, use SUZUKI genuine coolant or equivalent.

NOTE:

If you use the engine coolant other than the SUZUKI LLC: Super (Blue) for replacement, follow the schedule of SUZUKI LLC: Standard (Green). To see the detail of the maintenance schedule, refer to "Periodic maintenance schedule" in this section.

This type of coolant is the best for cooling system for the following reasons:

- The coolant helps maintain proper engine temperature.
- It gives proper protection against freezing and boiling.
- It gives proper protection against corrosion and rust.

Failure to use the proper coolant can damage your cooling system. Your SUZUKI dealer can help you select the proper coolant.

NOTICE

To avoid damaging your cooling system:

- Always use a high quality ethylene glycol base non-silicate type coolant diluted with distilled water at the correct mixture concentration.
- Check that the proper mix is 50/50 coolant to distilled water and in no case higher than 70/30. Concentrations greater than 70/30 coolant to distilled water will cause overheating conditions.
- Do not use straight coolant nor plain water (except "SUZUKI LLC: Super (Blue)").
- Do not add extra inhibitors or additives. They may not be compatible with your cooling system.
- Do not mix different types of base coolants. Doing so may result in accelerated seal wear and/or the possibility of severe overheating and extensive engine/automatic transmission damage.

NOTE:

SUZUKI highly recommends the use of ECSTAR brand coolant. ECSTAR has been specially formulated for your SUZUKI product and contributes to the desired vehicle performance and ideal driving experience.

Coolant level check

Check the coolant level at the reservoir tank, not at the radiator. With the engine cool, the coolant level should be between "FULL" and "LOW" marks.

Adding coolant

WARNING

Swallowing engine coolant can cause severe injury or death. Inhaling coolant mist or vapors or getting coolant in your eyes could result in severe injury.

- Do not drink antifreeze or coolant solution. If swallowed, do not induce vomiting. Immediately contact a poison control center or a physician.
- Avoid inhaling coolant mist or hot vapors. If inhaled, remove to a fresh air area.

(Continued)

WARNING

(Continued)

- If coolant gets in the eyes, flush with water and seek medical attention.
- Wash thoroughly after handling coolant.
- Keep engine coolant out of the reach of children and pets.


NOTICE

SUZUKI LLC: Super (Blue) coolant; This coolant is already diluted to the proper percentage. Do not dilute with distilled water additionally. Doing so may result in the possibility of freezing and/or overheating coolant.

NOTICE

SUZUKI LLC: Standard (Green) coolant;

- The mixture you use should contain 50% concentration of antifreeze.
- If the lowest ambient temperature in your area is expected to be -35°C (-31°F) or below, use higher concentrations up to 60% following the instructions on the antifreeze container.

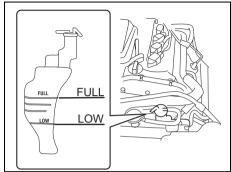

78RB07005

If the coolant level is below "LOW" mark, coolant should be added. While the engine is cool, remove the reservoir tank cap and add coolant until the reservoir tank level reaches "FULL" mark. Never fill the reservoir tank above "FULL" mark.

NOTICE


When putting the cap on the reservoir tank, line up the mark on the cap and the mark on the tank. Failure to follow this can result in coolant leakage.

Coolant replacement

Since special procedures are required, ask a SUZUKI dealer for this job.


Air cleaner

If the air cleaner is clogged with dust, there will be greater intake resistance, resulting in decreased power output and increased fuel consumption.

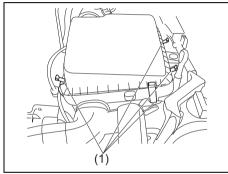

Spark plugs

Spark plug replacement and inspection

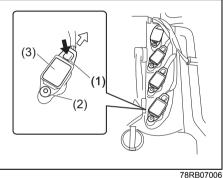

006

78RM70010


- 1) Unclamp the clamps (1).
- 2) Hold up the air cleaner upper case.
- Remove the element from the air cleaner case. If it appears to be dirty, clean or replace it with a new one.
- 4) If the element is installed on the air cleaner case, confirm the mark of "FRONT" on the element and fit the boss of the element in the groove of the front on the air cleaner case.
- 5) Clamp the clamps securely.

To access the spark plug:

- 1) Disconnect the coupler (1) while pushing the release lever.
- 2) Remove the bolt (2).
- 3) Pull out the ignition coil (3) straight.


NOTE:

During installation, check that the wires, couplers, sealing rubber of air cleaner chassis and washers, are correctly returned in place.

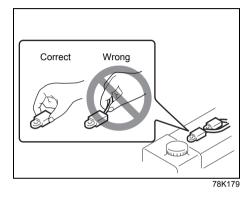


NOTICE

- When pulling out the ignition coils, do not pull on the cable. Pulling on the cable can damage it.
- When servicing the iridium/platinum spark plugs (slender center electrode type plugs), do not touch the center electrode, as it is easy to be damaged.

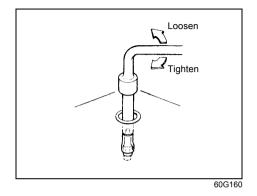

NOTICE

- When installing the spark plugs, screw them in with your fingers to avoid stripping the threads. Tighten the spark plugs with a torque wrench to 17.5 Nm (1.7 kgm, 12.9 lb-ft). Do not allow contaminants to enter the engine through the spark plug holes when the plugs are removed.
- Never use spark plugs with the wrong thread size.

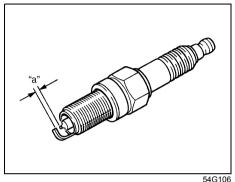

Spark plug gap "a":

ZXU20PR11 1.0-1.1mm (0.039-0.043 in.) KR6A-10 0.95-1.05mm (0.037-0.041 in.)

NOTICE

When replacing spark plugs, you should use the brand and type specified for your vehicle. For the specified plugs, refer to "SPECIFICATIONS" section in the end of this book. If you wish to use a brand of spark plug other than the specified plugs, consult a SUZUKI dealer.

Automatic transmission (AT) Fluid

Specified fluid

Use an automatic transmission fluid SUZUKI ATF3317 or Mobil ATF3309.

Fluid level check

NOTICE

Driving with too much or too little fluid can damage the transmission.

You must check the fluid level with the automatic transmission fluid at normal operating temperature.

To check the fluid level:

- 1) To warm up the transmission fluid, drive the vehicle or idle the engine until the engine coolant temperature light (blue color) goes off.
- 2) Then drive for ten more minutes.

NOTICE

Be sure to use the specified automatic transmission fluid. Using automatic transmission fluid other than SUZUKI ATF3317 or Mobil ATF3309 may damage the automatic transmission of your vehicle.

7) Check both sides of the dipstick, and

hot range on the dipstick.

(1)

(3)


(2`

read the lowest level. The fluid level

should be between the two marks in the

NOTE:

Do not check the fluid level if you have just driven the vehicle for a long time at high speed, or if you have driven in city traffic in hot weather. Wait until the fluid cools down (about 30 minutes), or the fluid level indication will not be correct.

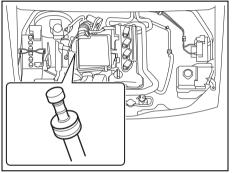


78RB07054

- 3) Park your vehicle on level ground.
- 4) Apply the parking brake and then start the engine in "P" (Park). Let it idle for two minutes and keep it running during the fluid level check.
- 5) With your foot on the brake pedal, move the gearshift lever through each gear, pausing for about three seconds in each range. Then move it back to the "P" (Park) position.

WARNING

Be sure to depress the brake pedal when moving the gearshift lever, or the vehicle can move suddenly.

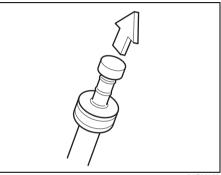

it back in until the cap seats. Then pull

out the dipstick.

(1) FULL 9 (2) LOW

- (3) The lowest point = Fluid level
- 8) Add just enough specified fluid through the dipstick hole to fill the transmission oil to the proper level.

NOTICE

After checking or adding oil, be sure to insert the dipstick securely.

6) Remove the dipstick, clean it and push

6-32

78RB07055

Changing oil

Since special procedures, materials, and tools are required to change the automatic transmission oil, ask a SUZUKI dealer or a qualified workshop for this job.


Gear oil

Manual transmission oil / transfer oil / rear differential oil

When adding gear oil, use gear oil with the appropriate viscosity and grade as shown in the chart below.

We highly recommend you use "SUZUKI GEAR OIL 75W" for manual transmission oil and transfer oil.


Manual transmission oil Transfer oil

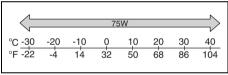

54P120706


We highly recommend you use "SUZUKI SUPER GEAR OIL 75W-85 SYNTHETIC" for front/rear differential oil.

Front/rear differential oil

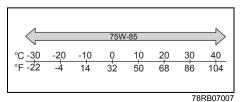


Gear oil level check

Manual transmission

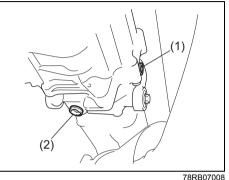

(1) Oil filler and level plug(2) Oil drain plug


Transfer

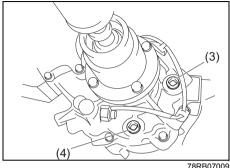



- (3) Oil filter and level plug
- (4) Oil drain plug

Front/rear differential

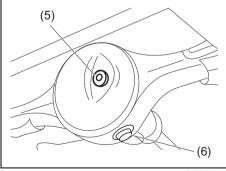

78RB07010

(5) Oil filter and level plug(6) Oil drain plug

To check the gear oil level, use the following procedure:

- 1) Park the vehicle on a level surface with the parking brake applied. Then, stop the engine.
- 2) Remove the oil filler and level plug.

For the manual transmission;

3) If gear oil flows from the plug hole, the oil level is correct. Reinstall the plug. If gear oil does not flow from the plug hole, add oil through the filler plug hole until oil flows a little from the plug hole.

For the transfer and front/rear differential;

- Check the inside of the hole with your finger. If the oil level comes up to the bottom of the plug hole, the oil level is correct. If so, reinstall the plug.
- 4) If the oil level is low, add gear oil through the oil filler and level plug hole until the oil level reaches the bottom of the filler hole, and then reinstall the plug.

Tightening torque for oil filler and level plug

Manual transmission (1)(2): 23 Nm (2.3 kg-m, 16.6 lb-ft)

Transfer (3)(4): 23 Nm (2.3 kg-m, 16.6 lb-ft)

Front/rear differential (5)(6): (5)50 Nm (5.0 kg-m, 36.2 lb-ft) (6)55 Nm (5.6 kg-m, 40.5 lb-ft) After driving the vehicle, the gear oil temperature may be high enough to burn you. Wait until the oil filler and level plug are cool enough to touch with your bare hands before inspecting gear oil level.

NOTICE


Be sure to use new plug with new gasket to avoid looseness of the plug and oil leakage.

Gear oil change

Since special procedures, materials and tools are required, ask a SUZUKI dealer for this job.

Clutch

Clutch fluid

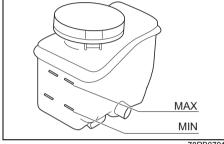

78RB07011


Check the clutch pedal for smooth operation and clutch fluid level from time to time. If clutch dragging is felt with the pedal fully depressed, have the clutch inspected by a SUZUKI dealer. If the clutch fluid level is near "MIN" line, fill it up to "MAX" line with DOT3 or SAE J1703 brake fluid.

NOTICE

Clutch fluid is supplied from brake fluid reservoir. If your clutch fluid level is increased or near the "MIN" line, there is a possibility of clutch or brake fluid leakage or abnormal wear of clutch. Have your vehicle inspected immediately by a SUZUKI dealer or a qualified workshop.

Brakes

Brake fluid

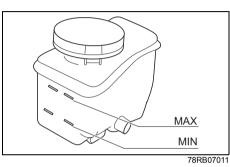

Check the brake fluid level by looking at the reservoir in the engine compartment. Check that the fluid level is between "MAX" and "MIN" lines.

NOTE:

SUZUKI highly recommends the use of ECSTAR brand brake fluid. ECSTAR has been specially formulated for your SUZUKI product and contributes to the desired vehicle performance and ideal driving experience.

WARNING

- Failure to follow the guidelines below can result in personal injury or serious damage to the brake system.
 - If the brake fluid in the reservoir drops below a certain level, the brake warning light on the instrument cluster will come on (the engine must be running with the parking brake fully disengaged). Should the light come on, immediately ask a SUZUKI dealer to inspect the brake system.
 - A rapid fluid loss indicates leakage in the brake system which should be inspected by a SUZUKI dealer immediately.
 - Do not use any fluid other than DOT3 or SAE J1703 brake fluid. Do not use reclaimed fluid or fluid that has been stored in old or open containers. It is essential that foreign particles and other liquids are kept out of the brake fluid reservoir.

(Continued)

WARNING

(Continued)

• Brake fluid is harmful or fatal if swallowed, and harmful if it comes in contact with skin or eyes. If swallowed, do not induce vomiting. Immediately contact a poison control center or a physician. If brake fluid gets in eyes, flush eyes with water and seek medical attention. Wash thoroughly after handling. Solution can be poisonous to animals. Keep out of reach of children and animals.

NOTICE

- If your brake fluid level is near the "MIN" line, there is a possibility of brake pad and/or shoe wear and brake fluid leakage. Consult with a SUZUKI dealer regarding this possibility before filling the reservoir.
- Brake fluid can harm your eyes and damage painted surfaces. Be careful when refilling the reservoir.


NOTE:

- The fluid level can be expected to gradually fall as the brake pad and/or shoe wear.
- Brake fluid absorbs water over time and brake fluid with high water content may cause vapor lock or brake system malfunction.

Replace your brake fluid in accordance with the maintenance schedule in your Owner's Manual.

Brake pedal

Check brake pedal stroke. If the stroke is so large, have the brake system inspected by a SUZUKI dealer. If you doubt the brake pedal is at its normal height, check it as follows:

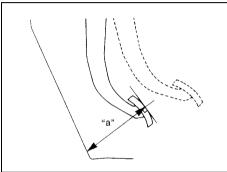

54G108

Minimum distance between brake pedal and floor carpet "a"


LHD	101 mm (4.0 in.)
RHD	89 mm (3.5 in.)

With the engine running, measure the distance between the brake pedal and floor carpet when the pedal is depressed with approximately 30 kg (66 lbs) of force. The minimum distance required is as specified. Since your vehicle's brake system is selfadjusting, there is no need for pedal adjustment.

If the pedal to floor carpet distance as measured above is less than the minimum distance required, have your vehicle inspected by a SUZUKI dealer.

NOTE:

- When measuring the distance between the brake pedal and floor wall, be sure not to include the floor mat or rubber on the floor carpet in your measurement.
- Measure the distance at the brake pedal's side facing toward the passenger's door.

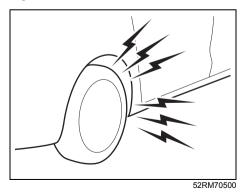

WARNING

If the brake pad lining becomes worn and it has reached its minimum thickness, squealing noise sounds during braking.


If you hear this noise, have the vehicle inspected immediately by an authorized SUZUKI dealer.

Continued driving with this condition can cause an accident.

If you experience any of the following problems with your vehicle's brake system, have the vehicle inspected immediately by an authorized SUZUKI dealer.

- Poor braking performance
- Uneven braking (brakes not working uniformly on all wheels)
- Excessive pedal travel
- Brake dragging

Parking brake

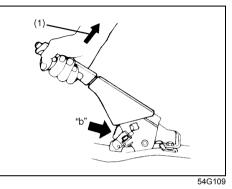

Ratchet tooth specification "b": 4th – 9th Lever pull force (1): 200 N (20 kg, 45 lbs)

Check the parking brake for proper adjustment by counting the number of clicks made by the ratchet teeth as you slowly pull up on the parking brake lever to the point of full engagement. The parking brake lever should stop between the specified ratchet teeth and the rear wheels should be securely locked. If the parking brake is not properly adjusted or the brakes drag is suspected even after the lever has been fully released, have the parking brake inspected and/or adjusted by a SUZUKI dealer.

Brake discs and brake drums


Brake disc

Brake location	Minimum thickness
Front wheels	8.0 mm (0.3 in.)

Brake drum

Brake location	Maximum inner diameter
Rear wheels	222 mm (8.74 in.)

If the measured thickness or inner diameter of the most worn part falls below or exceeds the value indicated above, the parts should be replaced with a new one. The measurement involves disassembling each brake and requires the use of a micrometer or caliper, which must be done according to the instructions described in the relevant service manual or available from the relevant repair information site.

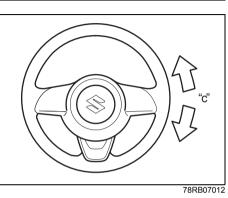


Steering wheel play "c": 0 - 30 mm (0.0 - 1.2 in.)

Steering wheel

Check the free play of the steering wheel by gently turning it from left to right and measuring the distance that it moves before you feel slight resistance. The play should be between the specified values.

Check that the steering wheel turns easily and smoothly without rattling by turning it all the way to the right and to the left while driving very slowly in an open area. If the amount of free play is not as specified or you find anything else to be wrong, an inspection must be performed by a SUZUKI dealer.

Tyres

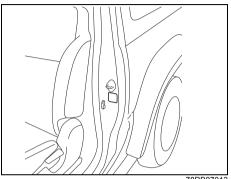

78RB07013

The front and rear tyre pressure specifications are listed in the tyre information label. Both front and rear tyres should have the specified tyre pressure.

NOTE:

The tyre pressure will change due to changes in atmospheric pressure, temperature or tyre temperature when driving. To reduce the chance that the low tyre pressure warning light (if equipped) will come on due to normal changes in temperature and atmospheric pressure, it is important to check and adjust the tyre pressures when the tyres are cold. If you check tyres after driving, they are warm. Even if the tyre pressure seems to be good in this condition, it could fall below the specified pressure when tyres cool down. Also, tyres that are inflated to the specified pressure in a warm garage may have pressure below the specification when the vehicle is driven outside in very cold temperature. If you adjust the tyre pressure in a garage that is warmer than the outside temperature, you should add 1 kPa to the recommended cold tyre pressure for every 0.8°C difference between garage temperature and outside temperature.

Tyre inspection

Inspect your vehicle's tyres at least once a month or before long trip by performing the following checks:


 Measure the air pressure with a tyre gauge. Adjust the pressure if necessary. Remember to check the spare tyre, too.

A WARNING

- Air pressures should be checked when the tyres are cold or you may get inaccurate readings.
- Check the inflation pressure from time to time while inflating the tyre gradually, until the specified pressure is obtained.
- Never under-inflate or over-inflate the tyres.

Under-inflation can cause unusual handling characteristics or can cause the rim to slip on the tyre bead, resulting in an accident or damage to the tyre or rim.

Over-inflation can cause the tyre to burst, resulting in personal injury. Over-inflation can also cause unusual handling characteristics which may result in an accident.

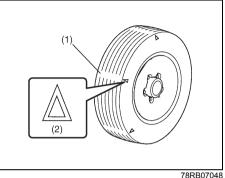

78RB07048

(1) Tread wear indicator(2) Indicator location mark

- 2) Check that the depth of the tread groove is more than 1.6 mm (0.06 in.). To help you check this, the tyres have molded-in tread wear indicators in the grooves. When the indicators appear on the tread surface, the remaining depth of the tread is 1.6 mm (0.06 in.) or less and the tyre should be replaced.
- Check for abnormal wear, cracks and damage. Any tyres with cracks or other damage should be replaced. If any tyres show abnormal wear, have them inspected by a SUZUKI dealer.

Hitting curbs and running over rocks can damage tyres and affect wheel alignment. Have tyres and wheel alignment checked periodically by a SUZUKI dealer.

- 4) Check for loose wheel nuts.
- Check that there are no nails, stones or other objects sticking into the tyres.

A WARNING


- Your SUZUKI vehicle is equipped with tyres which are all the same type and size. This is important to ensure proper steering and handling of the vehicle. Never mix tyres of different size or type on the four wheels of your vehicle. The size and type of tyres used should be only those approved by SUZUKI as standard or optional equipment for your vehicle.
- Replacing the wheels and tyres equipped on your vehicle with certain combinations of aftermarket wheels and tyres can significantly change the steering and handling characteristics of your vehicle.
- Therefore, use only those wheel and tyre combinations approved by SUZUKI as standard or optional equipment for your vehicle.

NOTICE

- Replacing the original tyres with tyres of a different size may result in false speedometer or odometer readings. Check with a SUZUKI dealer before purchasing replacement tyres that differ in size from the original tyres.
- Replacing a tyre with one of a different size, or using different brands among the four tyres can result in damage to the drive train.

Tyre rotation

5-tyre rotation

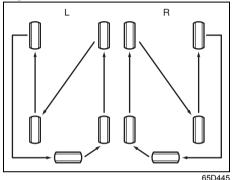


L: Left hand drive R: Right hand drive

NOTE:

If your vehicle is equipped with the tyre pressure monitoring system, the spare tyre TPMS sensor must be recognized when you include the spare tyre during a tyre rotation. For details, refer to "Replacing Tyres and/or Wheels" in "Tyre Pressure Monitoring System (TPMS)" in the "OPER-ATING YOUR VEHICLE" section.

4-tyre rotation

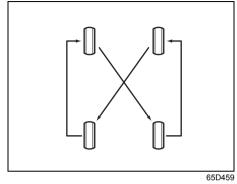


To avoid uneven wear of your tyres and to prolong their life, rotate the tyres as illustrated. Tyres should be rotated every 10000 km (6000 miles). After rotation, adjust front and rear tyre pressures to the specification listed on your vehicle's Tyre Information Label. Changing Wheels

To change a wheel, use the following procedure:

1) Remove the jack, tools and spare wheel from the vehicle.


NOTE: How to remove the spare wheel:

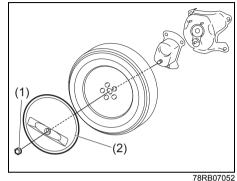



- 1. Remove the center nut (1), then remove the spare wheel half cover (2) (if equipped).
- 2. Remove the wheel nuts of the spare wheel, then remove the spare wheel with both hands.
- 2) Loosen, but do not remove the wheel nuts.
- Jack up the vehicle (follow the jacking instructions in the "EMERGENCY SER-VICE" section in this manual)
- 4) Remove the wheel nuts and wheel.
- 5) Before installing the new wheel, clean any mud or dirt off from the surface of the wheel and hub with a clean cloth. Clean the hub carefully; it may be hot from driving.


6) Install the new wheel and replace the wheel nuts with their cone shaped end facing the wheel. Tighten each nut snugly by hand until the wheel is securely seated on the hub.

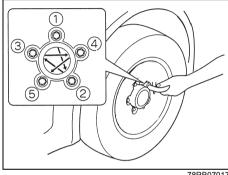

WARNING

Use genuine wheel nuts and tighten them to the specified torque as soon as possible after changing wheels. Incorrect wheel nuts or improperly tightened wheel nuts may come loose or fall off, which can result in an accident. If you do not have a torque wrench. have the wheel nut torque checked by a SUZUKI dealer.

NOTE How to install the spare wheel:

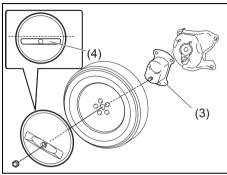

78RB07053

When you install a 195/80R15 spare wheel to the vehicle, set the spare tyre bracket (3) (if equipped) with the mark of "195" on up position, and handle it in the reverse order of removal. For vehicles equipped with the spare wheel half cover, when you install the spare wheel half cover, check that the hollow (4) of the cover is positioned below the center of the spare wheel half cover.

78RB07017


Tightening torgue for wheel nut: 100 Nm (10.0 kg-m. 72.3 lb-ft)

7) Lower the jack and fully tighten the nuts in a crisscross fashion with a wrench as shown in the illustration.

Battery

WARNING


- Batteries produce flammable hydrogen gas. Keep flames and sparks away from the battery or an explosion may occur. Never smoke when working near the battery.
- When checking or servicing the battery, disconnect the negative cable. Be careful not to cause a short circuit by allowing metal objects to contact the battery posts and the vehicle at the same time.
- To avoid harm to yourself or damage to your vehicle or battery, follow the jump-starting instructions in "EMERGENCY SERVICE" section if it is necessary to jump-start your vehicle.
- Diluted sulfuric acid spilled from battery can cause blindness or severe burns. Use proper eye protection and gloves. Flush eyes or body with ample water and get medical care immediately if suffered. Keep batteries out of reach of children.

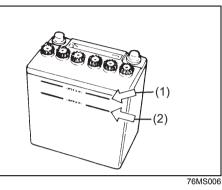

For maintenance-free battery (cap-less type), you need not add water. For traditional type battery, which has water filler caps, the level of the battery fluid (acid) fluid (acid) must be kept between the upper level line (1) and lower level line (2) at all times. If the level is found to be below the lower level line (2), add distilled water to the upper level line (1). You should periodically check the battery, battery terminals, and battery hold-down bracket for corrosion. Remove corrosion using a stiff brush and ammonia mixed with water, or baking soda mixed with water. After removing corrosion, rinse with clean water.

If your vehicle is not going to be driven for a month or longer, disconnect the cable from the negative terminal of the battery to help prevent discharge.

Replacement of the battery

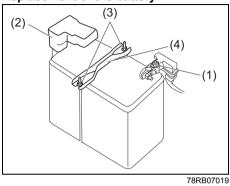

To remove the battery:

- 1) Disconnect the negative cable (1).
- 2) Disconnect the positive cable (2).
- 3) Remove the retainer nuts (3) and remove the retainer (4).

To install the battery:

- 1) Install the battery in the reverse order of removal.
- 2) Tighten the bracket bolt and battery cables securely.

NOTE:

• When the battery is disconnected, some of the vehicle's functions will be initialized and/or deactivated.

These functions must be required to reset after the battery is reconnected.

• Do not disconnect the battery terminals for at least one minute after the ignition switch is turned off.


WARNING

Batteries contain toxic substances including sulfuric acid and lead. They could have potential negative consequences for the environment and human health. Used batteries must be disposed of or recycled according to applicable rules or regulations and must not be disposed of with ordinary household trash. Make sure not to tip over the battery when you remove it from the vehicle. Otherwise, sulfuric acid could run out and you might get injury.

NOTICE

After stopping the engine, controller and system are operated for a while. Therefore, before removing the battery, wait for more than one minute after turning the ignition switch to "OFF".

(Battery label)

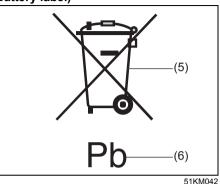

(5) Crossed-out wheeled bin symbol

(6) Chemical symbol of "Pb"

The crossed-out wheeled bin symbol (5) located on the battery label indicates that the used battery should be collected separately from ordinary household trash. The chemical symbol of "Pb" (6) indicates the battery contains more than 0.004% lead.

By ensuring the used battery is disposed of or recycled correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate trash handling of the battery. The recycling of materials will help to conserve natural resources. For more detailed information about disposing of or recycling the used battery, consult a SUZUKI dealer.

Fuses

Your vehicle has three types of fuses, as described below:

Main fuse

The main fuse takes current directly from the lead-acid battery.


Primary fuses

These fuses are between the main fuse and individual fuses, and are for electrical load groups.

Individual fuses


These fuses are for individual electrical circuits.

To remove a fuse, use the fuse puller provided in the fuse box cover.

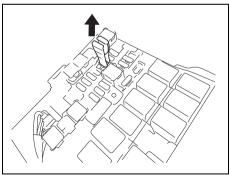

78RB07020


Fuses in engine compartment

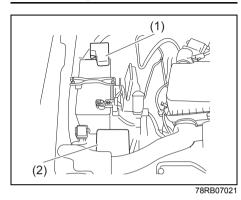


(1) Main fuse box

(2) Relay box

Main fuse box

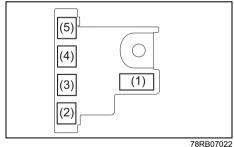



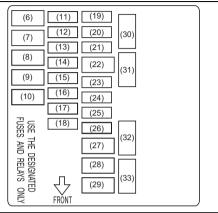

78RB07023


MAIN	FUSE /	PRIMARY FUSE
(1)	120 A	FL1
(2)	100 A	FL2
(3)	80 A	FL3
(4)	100 A	FL4
(5)	50 A	FL5
(6)	50 A	Ignition switch
(7)	40 A	ABS motor
(8)	_	Blank

(9)	30 A	Blower fan
(10)	30 A	Starter motor
(11)	30 A	Headlight cleaner
(12)	15 A	Headlight (Right)
(13)	15 A	Headlight (Left)
(14)	25 A	ABS/ESP [®] control mod- ule
(15)	-	Blank
(16)	15 A	Ignition coil
(17)	25 A	Headlight high
(18)	30 A	Back up
(19)	-	Blank
(20)	15 A	Fuel injection
(21)	15 A	Transmission
(22)	50 A	Ignition sw2
(23)	10 A	A/C compressor
(24)	10 A	4WD
(25)	20 A	Front fog light
(26)	-	Blank
(27)	40 A	Power steering
(28)	_	Blank
(29)	40 A	Radiator fan

(30)	_	Blank
(31)	5 A	Starter motor
(32)	15 A	Headlight high (Left)
(33)	15 A	Headlight high (Right)

The main fuse, primary fuses and some of the individual fuses are located in the engine compartment. If the main fuse blows, no electrical component will function. If a primary fuse blows, no electrical component in the corresponding load group will function. When replacing the main fuse, a primary fuse or an individual fuse, use a genuine SUZUKI replacement parts or equivalent for individual fuses.

To remove a fuse, use the fuse puller provided in the fuse box. The amperage of each fuse is shown in the back of the fuse box cover.

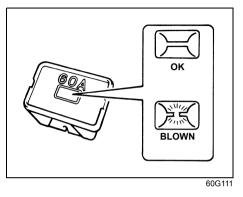


WARNING


If the main fuse or a primary fuse blows, have your vehicle inspected by a SUZUKI dealer. Always use a genuine SUZUKI replacement. Never use a substitute such as a wire even for a temporary repair, or extensive electrical damage and a fire can result.

NOTE:

Check that the fuse box always carries spare fuses.


Fuses under dashboard

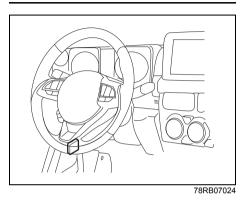

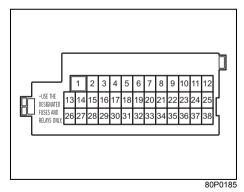

PRIMARY FUSE		
(1)	30 A	Power window
(2)	10 A	Meter
(3)	15 A	Engine Control Module
(4)	5 A	Ignition-1 signal 2
(5)	20 A	Blank
(6)	-	Blank
(7)	-	Blank
(8)	20 A	Door lock
(9)	15 A	Steering lock
(10)	10 A	Hazard
(11)	-	Blank
(12)	10 A	Rear fog lamp
(13)	5 A	ABS/ESP [®] control mod- ule
(14)	15 A	Seat heater
(15)	5 A	Ignition-1 signal 3
(16)	10 A	Dome light-2
(17)	5 A	Dome light
(18)	15 A	Radio
(19)	5 A	CONT
(20)	5 A	Key 2

20 A	Power window timer
5 A	Кеу
15 A	Horn
5 A	Tail light (Left)
10 A	Tail light
10 A	Airbag
10 A	Ignition-1 signal
10 A	Back-up light
5 A	ACC-3
20 A	Rear defogger
10 A	Heated mirror
15 A	ACC-2
5 A	ACC
10 A	Rear wiper
5 A	Ignition-2 signal
15 A	Washer
25 A	Front wiper
10 A	Stop light
	5 A 15 A 10 A 10 A 10 A 10 A 5 A 20 A 10 A 15 A 5 A 10 A 5 A 15 A 25 A

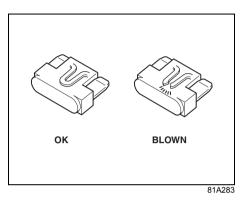


WARNING

Always replace a blown fuse with a fuse of the correct amperage. Never use a substitute such as aluminum foil or wire to replace a blown fuse. If you replace a fuse and the new one blows in a short period of time, you may have a major electrical problem. Have your vehicle inspected immediately by a SUZUKI dealer.

Headlight aiming

Since special procedures are required, ask a SUZUKI dealer for this job.

Headlight Washer Fluid

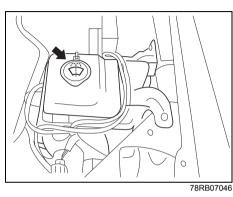

Check that there is washer fluid in the tank. Refill it if necessary.

NOTICE

- In winter season, be sure to remove snow or ice on the nozzle at the front bumper before operating headlight washer.
- To avoid the frozen damage to the nozzle of the headlight washer, be sure to use the specific washer fluid.

Bulb replacement

A CAUTION

- Light bulbs can be hot enough to burn your finger right after turning off lights. This is true especially for halogen headlight bulbs. Replace the bulbs after they become cool enough.
- The headlight bulbs are filled with pressurized halogen gas. They can burst and injure you if they are hit or dropped. Handle them carefully.
- To avoid injury by sharp-edged parts of the body, wear gloves and a long-sleeved shirt when replacing light bulbs.

NOTICE

The oils from your skin may cause a halogen bulb to overheat and burst when the lights are on. Grasp a new bulb with a clean cloth.

NOTICE

Frequent bulb replacement indicates the need for an inspection of the electrical system. This should be carried out by a SUZUKI dealer.

NOTE:

The inner surface of lens such as the headlights or the rear combination lights may be clouded or dew condensation may occur by driving on a rainy day or washing the vehicle. This is a temporary phenomenon caused by temperature difference between the inside and the outside of the lights. (This is the same phenomenon as the windows are clouded on a rainy day.) Also, it sometimes seems that water gets into the lights because of waterdrop on the edge of the lens. This is a temporary phenomenon caused by water adherence to the outside of the lights.

The above-mentioned phenomena are not vehicle malfunction.

However, if water is piled up in the lights or large waterdrop adheres to the inner surface of lens, have your vehicle inspected by an authorized SUZUKI dealer.

Non-disassembled type lights

Since the lights shown below are non-disassemble type, you cannot replace a bulb. Replace the target assembly if any light is defective.

If you need to replace the assembly, ask your SUZUKI dealer.


- · LED headlight
- Side turn signal light/hazard warning light on fender or outside rearview mirrors
- High mount stop light
- Position light (vehicle with LED headlights)
- LED License plate light (if equipped)

Headlights

LED type


Since special procedures are required, it is recommended that you take your vehicle to a SUZUKI dealer for light replacement.


Halogen type

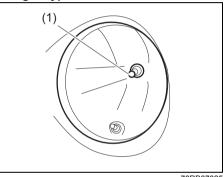

78RB07025

(1) Bulb

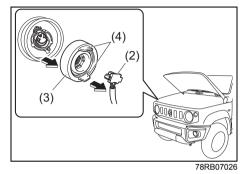

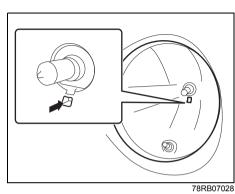

 Open the engine hood while the engine is stopped. Disconnect the coupler (2). Remove the sealing rubber (3) by pulling the grip (4).


NOTE:

You can see the position of retaining spring from the hole of headlight.


Front turn signal light and front position light

For front LED position light (if equipped), it is recommended that you take your vehicle to a SUZUKI dealer for light replacement since special procedures are required.

Vehicle with the halogen headlights

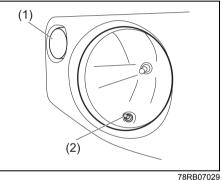


(1) Front turn signal light(2) Front position light

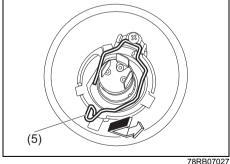




 Push the retaining spring (5) forward and unhook it. Then remove the bulb. Install a new bulb in the reverse order of removal.

Vehicle with the LED headlights

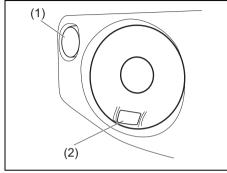


78RB07030

(1) Front turn signal light(2) Front LED position light

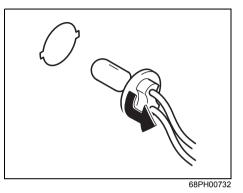


 Open the engine hood while the engine is stopped. To remove the bulb holder of the front turn signal light or the front position light (for vehicle with halogen headlights) from the light housing, turn the holder counterclockwise and pull it out.

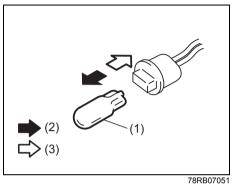

(2) Removal(3) Installation

2) To remove and install the bulb of the front position light (1), simply pull out or push in the bulb.

Side turn signal light

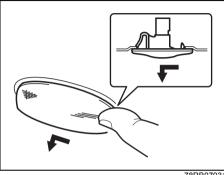


78RB07031

Since the bulb is built-in type, replace it as the light assembly. Remove the light assembly by sliding the light housing leftward with your finger.


Front fog light (if equipped)

 Start the engine. Turn the steering wheel to the opposite side of the fog light to be replaced to replace the bulb easily. Then turn off the engine.

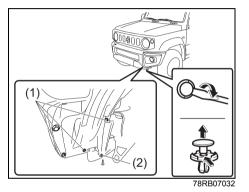


2) Remove the clips (1) and screw (2) at the bottom of bumper.

For removing the clip, use a flat-bladed screwdriver as shown in the illustration.

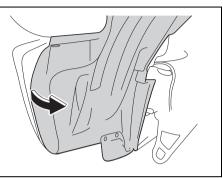

78RB07033

3) Open the end of the cover inside the fender.

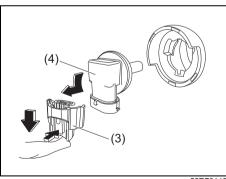


52R70140


4) Disconnect the coupler (3) by pushing the lock release. Turn the bulb holder (4) counterclockwise and remove it.

Daytime running light (if equipped)

Models without front fog light

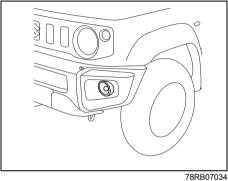


Models with front fog light

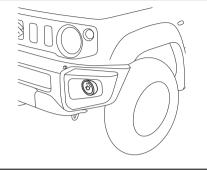

78RB07035

 To approach the daytime running light, open the end of the cover inside the front fender. Refer to the procedure for the bulb replacement of the "Front Fog Light" in this section.

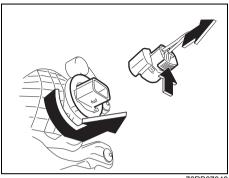


78RB07049


2) Disconnect the coupler by pushing the lock release. Turn the bulb holder counterclockwise and remove it.

NOTE:


Depending on the vehicle's specification, the daytime running light is located under the front fog light, but the replace method is same as the above.

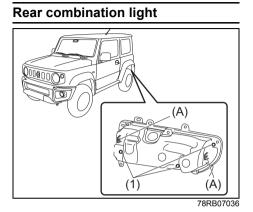

 Remove the nuts (1) and pull the rear combination light from the rear bumper by pushing the hooks (A).

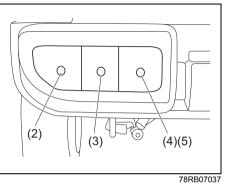

- (2) Brake/tail light
- (3) Rear turn signal light
- (4) Reversing light
- (5) Rear fog light (if equipped)
- To remove the bulb holder of the above light from the light housing, turn the holder counterclockwise and pull it out.

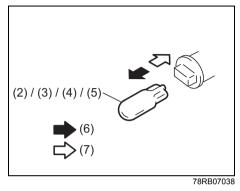

(6) Removal(7) Installation


 To remove and install the bulb of the brake/tail light (2), the rear turn signal light (3), the reversing light (4), or the rear fog light (5) (if equipped), simply pull out or push in the bulb.

License plate light LED type


52RM90001

Since special procedures are required, it is recommended that you take your vehicle to an authorized SUZUKI dealer for light replacement.

Bulb type

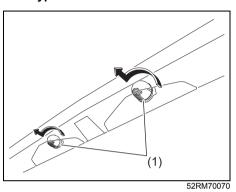

1) Remove the cover (1) by turning it counterclockwise.

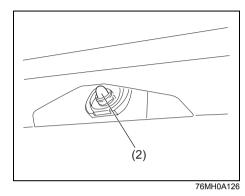

2) To remove and install the bulb of the license plate light (2), simply pull out or push in the bulb.

High-mount stop light

LED is used. It is recommended that you take your vehicle to a SUZUKI dealer for bulb replacement since special procedures are required.


Interior light

Remove the lens by using a flat-bladed screwdriver covered with a soft cloth as shown. To install it, simply push it back in.

Front



Luggage compartment (if equipped)

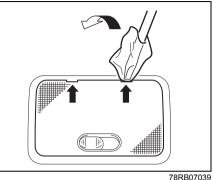

Wiper blades



If the wiper blades become brittle or damaged, or make streaks when wiping, replace the wiper blades.

To install new wiper blades, follow the procedures below.

NOTICE


To avoid scratching or breaking the window, do not let the wiper arm strike the window while replacing the wiper blade.

76MH0A139


NOTE:

Some wiper blades may be different from the ones described here depending on vehicle specifications. If so, consult a SUZUKI dealer for proper replacement method.


For windshield wipers:

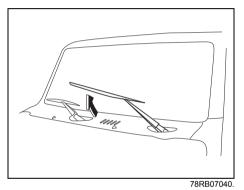


1) Hold the wiper arm away from the window.

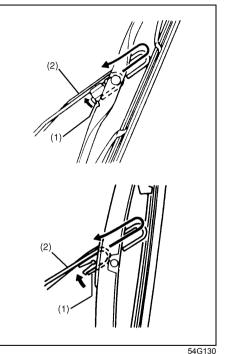


- Squeeze lock (1) towards wiper arm (2) and remove the wiper frame from the arm as shown.
- 3) Unlock the lock end of the wiper blade and slide the blade out as shown.

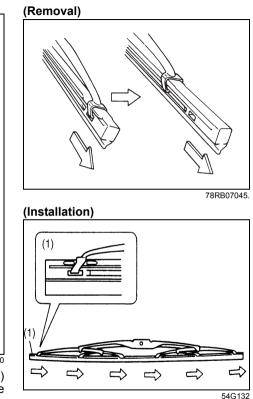

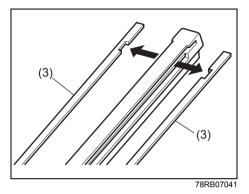

For rear windshield wipers:

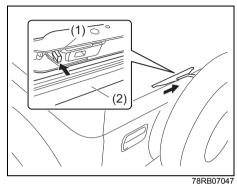


- (3) Retainer
- If the new blade is provided without the two metal retainers, move them from the old blade to the new one.
- 5) Install the new blade in the reverse order of removal, with the locked end positioned toward the wiper arm. Make sure the blade is properly retained by all the hooks. Lock the blade end into place.
- 6) Reinstall wiper frame to arm, making sure that the lock lever is snapped securely into the arm.


- (1) Lock end(2) Blade rubber
- Lift the rear wiper arm a little from the rear window. Remove the wiper frame from the rear wiper arm by pushing the lock end (1) from the side of wiper blade frame and then by pushing the wiper frame to the direction of the arrow with the lock end (1) free from locking in the above illustration.

NOTE:

Return the rear wiper arm slowly after removing the rear wiper blade.

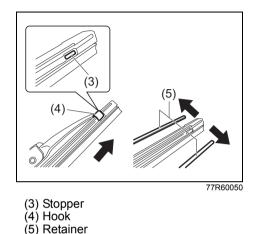


 Pull and remove the wiper blade rubber from the wiper frame until the stopper (3) of the wiper frame is taken out of the hook (4). Remove the retainers (5) from the wiper blade.

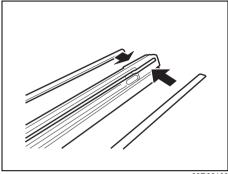


63R60160


3) If the new blade is provided without the two metal retainers, install them from the old blade to the new one.

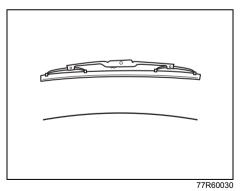

4) Install the retainers along the direction of camber as shown in the illustration.

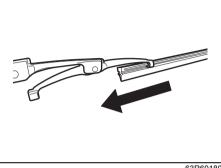


- 63R60180
- 5) Slide the new wiper blade into the wiper frame. When installing the blade rubber, put into the side that has no stopper on the wiper blade.

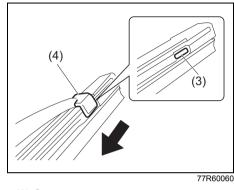

⁽⁶⁾ Stopper (7) Hook

- 6) Fix the wiper blade securely by pushing the hook (7) into the stopper (6).
- 7) Reinstall the wiper frame to the rear wiper arm in the reverse order of removal. Make sure that the rear wiper blade is installed securely.

Windshield washer fluid

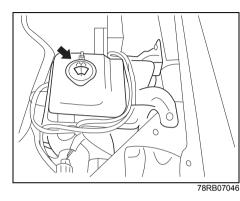

WARNING

Do not use radiator antifreeze in the windshield washer reservoir. This can severely impair visibility when sprayed on the windshield, and also can damage your vehicle's paint.

NOTICE

Damage may result if the washer motor is operated with no fluid in the washer tank.

Check that there is washer fluid in the tank. Refill it if necessary. Use a good quality windshield washer fluid, diluted with water as necessary.

NOTE:


SUZUKI highly recommends the use of ECSTAR brand windshield washer fluid. ECSTAR has been specially formulated for your SUZUKI product and contributes to the desired vehicle performance and ideal driving experience.

Air conditioning system


If you do not use the air conditioner for a long period, such as during winter, it may not give the best performance when you start using it again. To help maintain optimum performance and durability of your air conditioner, it needs to be run periodically. Operate the air conditioner at least once a month for one minute with the engine idling. This circulates the refrigerant and oil and helps protect the internal components.

Air conditioner filter replacement


Since special procedures are required, ask your authorized SUZUKI dealer for this job.

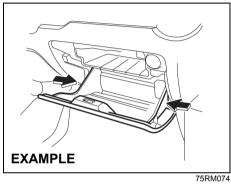

 To approach the air conditioner filter, remove the glove box. Press both sides of the glove box in arrow directions to remove it.

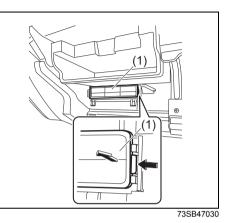


2) Unlock the holder (1) and release it from the air conditioner unit.

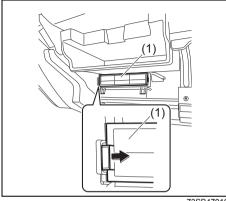




3) Slide the tab of the holder (1) in an arrow direction and remove the holder.

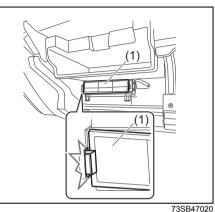



NOTICE

Do not apply excessive force to the tab when removing the holder (1). Otherwise, the tab may be damaged.

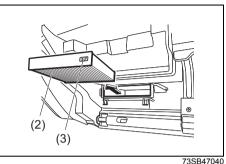

4) Pull out the air conditioner filter (2).

NOTE:


When you install a new air conditioner filter, check that the UP mark (3) faces upward.

MEMO

|
 | |
|------|------|------|------|------|------|------|--|
|
 | |
|
 | |
|
 | |
|
 | |
|
 | |
|
 | |
|
 | |
|
 | |
|
 | |
|
 | |
|
 | |


EMERGENCY SERVICE

Tyre changing tool	7-1
Jacking instructions	7-1
Jump-starting instructions	
Towing your vehicle (recreational towing)	
Engine trouble: Starter does not operate	7-10
Engine trouble: Does not start	7-10
Engine trouble: Overheating	

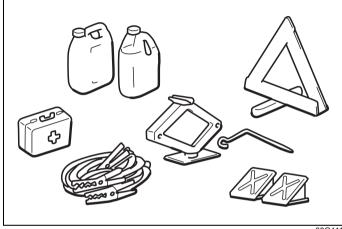

60G411

Tyre changing tool

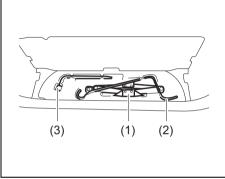


78RB08009

- (1) Jack
- (2) Jack handle
- (3) Wheel wrench

The tyre changing tools are stowed in the luggage compartment. Refer to "LUGGAGE COMPARTMENT" in "ILLUSTRATED TABLE OF CONTENTS" section.


Jacking instructions

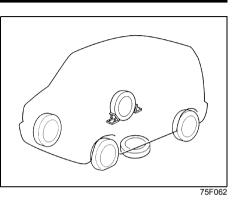

- 1) Place the vehicle on level, hard ground.
- 2) Set the parking brake firmly and shift into "P" (Park) if your vehicle has an automatic transmission, or shift into "R" (Reverse) if your vehicle has a manual transmission.


WARNING

- Shift into "P" (Park) for an automatic transmission, or into "R" (Reverse) for a manual transmission vehicle when you jack up the vehicle.
- Never jack up the vehicle with the transmission in "N" (Neutral). Otherwise, unstable jack may cause an accident.
- 3) Turn on the hazard warning switch if your vehicle is near traffic.
- Block the front and rear of the wheel diagonally opposite of the wheel being lifted.
- 5) Place the spare wheel near the wheel being lifted as shown in the illustration in case that the jack is slipped.

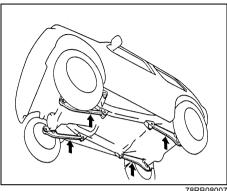

78RB08007

Front wheel/Rear wheel

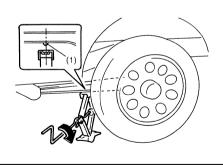

54G277

(1) Boss


- 6) Position the jack vertically and raise the jack by turning the jack handle clockwise until the jack head hole fits into the boss (1) of the body as the illustration.
- 7) Continue to raise the jack slowly and smoothly until the tyre clears the ground. Do not raise the vehicle more than necessary.

WARNING

- Use the jack only to change wheels on level, hard ground.
- Never jack up the vehicle on an inclined surface.
- · Never raise the vehicle with the iack in a location other than between the frame bosses near the wheel to be changed.
- · Make sure that the jack is raised at least 51 mm (2 inches) before it contacts the boss. Use of the jack when it is within 51 mm (2 inches) of being fully collapsed may result in failure of the jack.
- · No person should place any portion of their body under a vehicle that is supported by a jack.
- Never run the engine when the vehicle is supported by the jack and never allow passengers to remain in the vehicle.

Raising vehicle with garage jack

- Apply the garage jack to one of the points indicated below.
- Always support the raised vehicle with jack stands (commercially available) at the points indicated below.

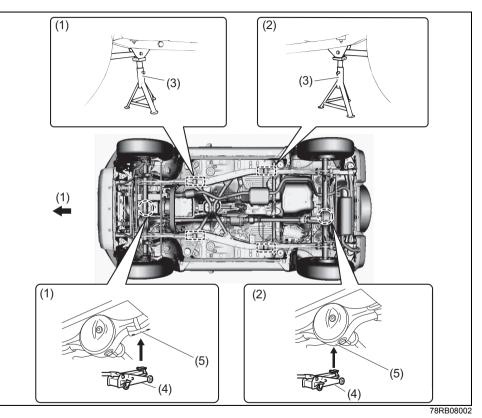

(1) Front (2) Rear (3) Jack stand

(4) Garage jack(5) Jacking point for garage jack

NOTICE

Never apply a garage jack to the exhaust pipe, front fender splash guard, side sill splash, rear fender or splash guard.

NOTE:

For more details, contact a SUZUKI dealer.

Changing wheels


To change a wheel, use the following procedure:

- 1) Prepare the jack, tools and spare tyre.
- 2) Loosen, but do not remove the wheel nuts.
- 3) Jack up the vehicle (follow the jacking instructions in this section).

WARNING

- Shift into "P" (Park) for an automatic transmission, or into "R" (Reverse) for a manual transmission vehicle when you jack up the vehicle.
- Never jack up the vehicle with the transmission in "N" (Neutral). Otherwise, unstable jack may cause an accident.

Immediately after the vehicle has been driven, the wheels, the wheel nuts and the area around the brakes might be extremely hot. Touching these areas may cause burn injury. Do not touch these areas, immediately after the vehicle has been driven. 4) Remove the wheel nuts and wheel.

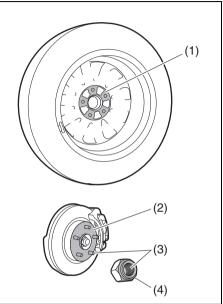


65J4033

Clean any mud or dirt off from the surface of the wheel (1), hub (2), thread part (3) and surface of the wheel nuts (4) with a clean cloth.

Clean the hub carefully; it may be hot from driving.

EMERGENCY SERVICE

6) Install the new wheel and replace the wheel nuts with their cone shaped end facing the wheel. Tighten each nut snugly by hand until the wheel is securely seated on the hub.

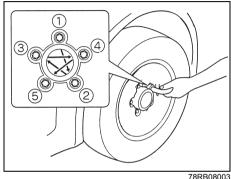

WARNING

Use genuine wheel nuts and tighten them to the specified torque as soon as possible after changing wheels. Incorrect wheel nuts or improperly tightened wheel nuts may come loose or fall off, which can result in an accident. If you do not have a torque wrench, have the wheel nut torque checked by a SUZUKI dealer.

Jump-starting instructions

A WARNING

- Never attempt to jump-start your vehicle if the lead-acid battery appears to be frozen. Batteries in this condition may explode.
- When making jump lead connections, check that your hands and the jump leads remain clear from pulleys, belts or fans.
- Lead-acid batteries produce flammable hydrogen gas. Keep flames and sparks away from the battery or an explosion may occur. Never smoke when working near the battery.
- If the booster battery you use for jump-starting is installed in another vehicle, check that the two vehicles are not touching each other.
- If your lead-acid battery discharges repeatedly, for no apparent reason, have your vehicle inspected by a SUZUKI dealer.
- To avoid harm to yourself or damage to your vehicle or battery, follow the jump-starting instructions below.

If you are in doubt, call for qualified road service.


Tightening torque for wheel nut 100 Nm (10.0 kg-m, 72.3 lb-ft)

 Lower the jack and fully tighten the nuts with a wheel wrench in numerical order as shown in the illustration.

NOTICE

Your vehicle should not be started by pushing or towing. This starting method could result in permanent damage to the catalytic converter. Use jump leads to start a vehicle with a weak or flat battery.

- Use only a 12-volt lead-acid battery to jump-start your vehicle. Position the good 12-volt lead-acid battery close to your vehicle so that the jump leads will reach both batteries. When using a battery installed on another vehicle, check that two vehicles do not touch each other. Set the parking brakes fully on both vehicles.
- Turn off all vehicle accessories, except those necessary for safety reasons (for example, headlights or hazard lights).

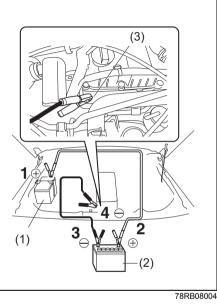

- 3) Connect jump leads as follows:
 - 1. Connect one end of the first jump lead to the positive (+) terminal of the discharged battery (1).
 - Connect the other end to the positive (+) terminal of the booster battery (2).
 - 3. Connect one end of the second jump lead to the negative (–) terminal of the booster battery (2).

4. Make the final connection to an unpainted metal part (3) of engine cylinder head in the vehicle with the discharged battery (1).


WARNING

Never connect the jump lead directly to the negative (–) terminal of the discharged battery, or an explosion may occur.

- 4) If the booster battery you are using is fitted to another vehicle, start the engine of the vehicle with the booster battery. Run the engine at moderate speed.
- 5) Start the engine of the vehicle with the discharged battery.
- 6) Remove the jump leads in the exact reverse order in which you connected them.

Towing your vehicle (recreational towing)

If you need to have your vehicle towed, contact a professional service. A SUZUKI dealer can provide you with detailed towing instructions.

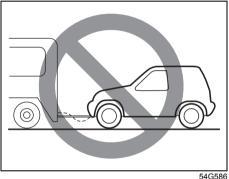


WARNING

When you tow your vehicle, follow the instructions below to avoid accidents and damage to your vehicle. In addition, be sure to observe government and local requirements regarding vehicle lighting and trailer hitches or tow bars.

WARNING

A safety chain should always be used when you tow your vehicle.

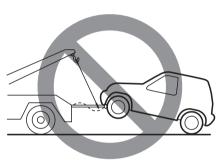

54G587

NOTICE

Do not tow your vehicle with the rear wheels directly on the ground (and the transmission in neutral). If you do, the transmission will be damaged fatally.

WARNING


For vehicles equipped with the dual sensor brake support, if your vehicle is towed with the engine on, press dual sensor brake support OFF switch and turn off the dual sensor brake support. If not, accidents related to the system being turned on may occur.

NOTICE

Observe the following instructions when towing your vehicle.

- · To help avoid damage to your vehicle during towing, proper equipment and towing procedures must be used.
- Using the frame hook, tow your vehicle on paved roads for short distances at low speed.

Before towing

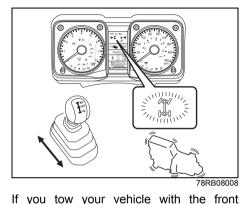

wheels on the ground, shift the transmission into Neutral and make sure the 4WD indicator on the instrument cluster comes on when you use the transfer lever to shift into 4-wheel drive high range position ("4H") and goes off when you use the transfer lever to shift into 2-wheel high drive position ("2H") with the engine run-

ning. If the 4WD indicator does not come

on or it does not go off, that means, the air-

locking hubs cannot be locked or


unlocked, the vehicle must be towed with

the front wheels lifted and the rear wheels

on a dolly.


Towing a Disabled Vehicle

If your vehicle is disabled, and if the steering and drive train are in good condition (and the engine can be started for 4WD vehicles), the vehicle can be towed according to the instructions in this section. Your vehicle may also be towed by a tow truck with the front or rear wheels lifted, according to the instructions below.

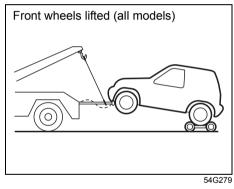

Front wheels lifted

Your vehicle may be towed by a tow truck with the front wheels lifted and a dolly under the rear wheels.

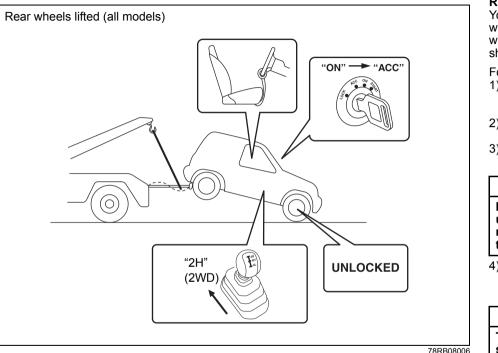

Rear wheels lifted

Your vehicle may be towed by a tow truck with the rear wheels lifted and the front wheels on the ground. Towing speed should not exceed 90 km/h (55 mph).

For this type of towing:

- Shift the manual transmission to Neutral or the automatic transmission to "P" position and start the engine.
- 2) Shift the transfer lever to 2WD position ("2H").
- 3) Make sure the 4WD indicator on the instrument cluster is turned off.

NOTICE

If the air-locking hubs cannot be unlocked, tow the vehicle with the rear wheels lifted and a dolly under the front wheels.

4) Turn the ignition key to the "ACC" position to stop the engine and to unlock the steering wheel.

NOTICE

The steering column lock is not strong enough to withstand shocks transmitted from the front wheels during towing.

5) Make sure the front wheels are facing straight forward and secure the steering wheel with a steering wheel clamping device designed for towing service.

Engine trouble: Starter does not operate

- Try turning the ignition switch to "START" position with the headlights turned on to determine the lead-acid battery condition. If the headlights go excessively dim or go off, it usually means that either the lead-acid battery is discharged or the battery terminal contact is poor. Recharge the lead-acid battery or correct battery terminal contact as necessary.
- 2) If the headlights remain bright, check the fuses. If the reason for failure of the starter is not obvious, there may be a major electrical problem. Have the vehicle inspected by a SUZUKI dealer.

Engine trouble: Does not start

Make sure that your vehicle has enough fuel and battery.

If the engine does not start under very cold condition, press the accelerator pedal all the way to the floor and hold it while cranking the engine.

Refer to "Starting engine" in operating your vehicle section.

If the engine still does not start have your vehicle inspected at a SUZUKI dealer.

• Do not operate the starter motor for more than 12 seconds.

Engine trouble: Overheating

The engine could overheat temporarily under severe driving conditions. If the high engine coolant temperature warning light comes on as overheating or the engine coolant temperature gauge indicates overheating during driving:

- 1) Turn off the air conditioner.
- 2) Take the vehicle to a safe place and park.
- Run the engine at a normal idle speed for a few minutes until the high engine coolant temperature warning light goes off or the indicator is within the normal, acceptable temperature range between "H" and "C".

WARNING

If you see or hear escaping steam, stop the vehicle in a safe place and immediately turn off the engine to cool it. Do not open the hood when steam is present. When the steam can no longer be seen or heard, open the hood to see if the coolant is still boiling. If it is, you must wait until it stops boiling before you proceed.


EMERGENCY SERVICE

If the high engine coolant temperature warning light does not go off or the temperature indication does not come down to within the normal, acceptable range:

- Turn off the engine and check that the water pump belt and pulleys are not damaged or slipping. If any abnormality is found, correct it.
- 2) Check the coolant level in the reservoir. If it is found to be lower than "LOW" line, check radiator, water pump, radiator hoses and heater hoses for leakage. If leakage that may cause overheating is found, do not run the engine until these problems have been corrected.
- If leakage is not found, carefully add coolant to the reservoir and then the radiator, if necessary. (Refer to "Engine coolant" in "INSPECTION AND MAIN-TENANCE" section.)

NOTE:

If engine overheats and you are not sure what to do, contact a SUZUKI dealer.

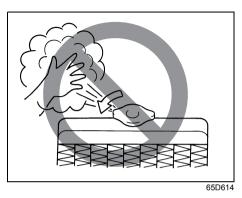


WARNING

- It is hazardous to remove the radiator cap when the water temperature is high, because scalding fluid and steam may be blown out under pressure. The cap should only be taken off when the coolant temperature has lowered.
- To help prevent personal injury, keep hands, tools and clothing away from the engine cooling fan and air-conditioner fan. These electric fans can automatically turn on without warning.

APPEARANCE CARE

Corrosion prevention 8	-1
Vehicle cleaning	-2

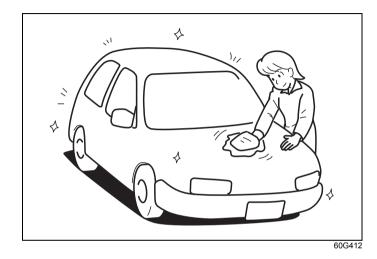

Corrosion prevention

It is important to take good care of your vehicle to protect it from corrosion. Listed below are instructions for how to maintain your vehicle to prevent corrosion. Please read and follow these instructions carefully.

Important information about corrosion

Common causes of corrosion

- Accumulation of road salt, dirt, moisture or chemicals in hard-to-reach areas of the vehicle underbody or frame.
- Chipping, scratches and any damage to treated or painted metal surfaces resulting from minor accidents or abrasion by stones and gravel.

Environmental conditions which accelerate corrosion

- 1) Road salt, dust control chemicals, sea breeze or industrial pollution will all accelerate the corrosion of metal.
- High humidity will increase the rate of corrosion particularly when the temperature range is just above the freezing point.
- Moisture in certain areas of a vehicle for an extended period of time may promote corrosion even though other body sections may be completely dry.

 High temperatures will cause an accelerated rate of corrosion to parts of the vehicle which are not well-ventilated to permit quick drying.

This information illustrates the necessity of keeping your vehicle (particularly the underbody) as clean and dry as possible. It is equally important to repair any damage to the paint or protective coatings as soon as possible.

How to help prevent corrosion

Wash your vehicle frequently

The best way to preserve the finish on your vehicle and to help avoid corrosion is to keep it clean with frequent washing. Wash your vehicle at least once during the winter and once immediately after the winter. Keep your vehicle, particularly the underside, as clean and dry as possible. If you frequently drive on salted roads, your vehicle should be washed at least once a month during the winter. If you live near the ocean, your vehicle should be washed at least once a month throughout the vear.

For washing instructions, refer to "Vehicle cleaning" section.

Remove foreign material deposits

Foreign materials such as salts, chemicals, road oil or tar, tree sap, bird droppings and industrial fall-out may damage the finish of your vehicle if it is left on painted surfaces. Remove these types of deposits as quickly as possible. If these deposits are difficult to wash off, an additional cleaner may be required. Check that any cleaner you use is not harmful to painted surfaces and is specifically intended for your purposes. Follow the manufacturer's directions when using these special cleaners.

Repair finish damage

Carefully examine your vehicle for damage to the painted surfaces. Should you find any chips or scratches in the paint, touch them up immediately to prevent corrosion from starting. If the chips or scratches have gone through to the bare metal, have a qualified body shop make the repair.

Keep passenger and luggage compartments clean

Moisture, dirt or mud can accumulate under the floor mats and may cause corrosion. Occasionally, check under these mats to ensure that this area is clean and dry. More frequent checks are necessary if the vehicle is used for off-road driving or in wet weather.

Certain cargos such as chemicals, fertilizers, cleaners, salts, etc. are extremely corrosive by nature. These products should be transported in sealed containers. If they are spilled or leaked, clean and dry the area immediately.

Park your vehicle in a dry, well-ventilated area

Do not park your vehicle in a damp, poorlyventilated area. If you often wash your vehicle in the garage and place it there in wet condition, your garage may be damp. The high humidity in the garage may cause or accelerate corrosion. A wet vehicle may corrode even in a heated garage if the ventilation is poor.

Use mud and gravel shields

The use of mud and gravel shields will help protect your vehicle, especially if you frequently drive on gravel or salted roads. Full-size shields, which extend as close to the road as is practical, are the best. The fittings for such shields should also be corrosion resistant. Please check with your SUZUKI dealer for information on these shields.

WARNING

Do not apply additional undercoating or rust preventive coating on or around exhaust system components such as the catalytic converter and exhaust pipes. A fire could be started if the undercoating substance becomes overheated.

Vehicle cleaning



76G0445

MARNING

When cleaning the interior or exterior of the vehicle, do not use flammable solvents such as lacquer thinners, gasoline and benzene. Also, do not use cleaning materials such as bleaches and strong household detergents. The materials could cause personal injury or damage to the vehicle.

Cleaning interior

Vinyl upholstery

Prepare a solution of soap or mild detergent dissolved in warm water. Apply the solution to the vinyl with a sponge or soft cloth and let it soak for a few minutes to loosen dirt.

Rub the surface with a clean, damp cloth to remove dirt and the soap solution. If some dirt still remains on the surface, repeat this procedure.

Fabric upholstery

Remove loose dirt with a vacuum cleaner. Using a mild soap solution, rub stained areas with a clean damp cloth. To remove soap, rub the areas again with a cloth dampened with water. Repeat this until the stain is removed, or use a commercial fabric cleaner for tougher stains. If you use a fabric cleaner, carefully follow the manufacturer's instructions and precautions.

Leather upholstery

Remove loose dirt with a vacuum cleaner. Using a mild soap or saddle soap solution, wipe dirt off with a clean damp soft cloth. To remove soap, wipe the areas again with a soft cloth dampened with water. Wipe the areas dry with a soft dry cloth. Repeat this until the dirt or stain is removed, or use a commercial leather cleaner for tougher dirt or stains. If you use a leather cleaner, carefully follow the manufacturer's instructions and precautions. Do not use solvent type cleaners or abrasive cleaners.

NOTE:

- In order to keep leather upholstery looking good, it should be cleaned at least twice a year.
- If leather upholstery becomes wet, immediately wipe it dry with tissue paper or a soft cloth. Water may cause leather to harden and shrink if it is not wiped off.
- When parking on sunny days, select a shady place or use a sunshade. If leather upholstery is exposed to direct sunlight for a long time, it may discolor and shrink.
- As is common with natural materials, leather is inherently irregular in grain and cowhide has spots in its natural state. These do not affect the performance of the leather in any way.

Seat belts

Clean seat belts with a mild soap and water. Do not use bleach or dye on the belts. They may weaken the fabric in the belts.

Vinyl floor mats

Ordinary dirt can be removed from vinyl with water or mild soap. Use a brush to help loosen dirt. After the dirt is loosened, rinse the mat thoroughly with water and dry it in the shade.

Carpets

Remove dirt and soil as much as possible with a vacuum cleaner. Using a mild soap solution, rub stained areas with a clean damp cloth. To remove soap, rub the areas again with a cloth dampened with water. Repeat this until the stain is removed, or use a commercial carpet cleaner for tougher stains. If you use a carpet cleaner, carefully follow the manufacturer's instructions and precautions.

Instrument panel and console

Remove loose dirt with a vacuum cleaner. Gently wipe dirt off with a tightly squeezed damp clean cloth. Repeat this until the dirt is removed.

NOTICE

Do not use chemical products that contain silicon to wipe electrical components such as the air conditioning system, audio, navigation system, or other switches. These will cause damage to the components.

NOTICE

- Liquid such as liquid aromatics, soft drinks or juice may cause discoloration, wrinkles, and cracking to resin-based parts and textiles. Immediately wipe it dry with tissue paper or a soft cloth.
- Do not leave leather products with color, fur or vinyl products, etc. in your vehicle for long periods. It may cause discoloration or deterioration of interior.

Cleaning exterior

NOTICE

It is important that your vehicle be kept clean and free from dirt. Failure to keep your vehicle clean may result in fading of the paint or corrosion to various parts of the vehicle body.

Caring for aluminum wheels

NOTE:


- Do not use an acidic or alkaline detergent, or a cleaner containing petroleum solvent to wash aluminum wheels. These types of cleaner will cause permanent spots, discoloration and cracks on finished surfaces and damage to center caps.
- Do not use a bristle brush and soap containing an abrasive material. These will damage finished surfaces.

Washing

A WARNING

- Never attempt to wash and wax your vehicle with the engine running.
- When cleaning the underside of the body and fender, where there may be sharp-edged parts, wear gloves and a long-sleeved shirt to protect your hands and arms from being cut.
- After washing your vehicle, carefully test the brakes before driving to check that they have maintained their normal effectiveness.

Washing by hand

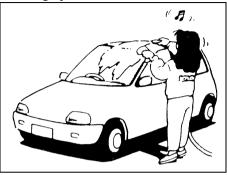

60B212S

When washing the vehicle, park it in the place where direct sunlight does not fall on it as much as possible and follow the instructions below:

1) Flush the underside of body and wheel housings with pressurized water to remove mud and debris. Use plenty of water.

NOTICE

When washing the vehicle:

- Avoid directing steam or hot water of more than 80°C (176°F) on plastic parts.
- To avoid damaging engine components, do not use pressurized water in the engine compartment.

2) Rinse the body to loosen the dirt. Remove dirt and mud from the body exterior with running water. You may use a soft sponge or brush. Do not use hard materials which can scratch the paint or plastic. Remember that the headlight covers or lenses are made of plastic in many cases.

NOTICE

To avoid damage to the paint or plastic surface, do not wipe the dirt off without ample water. Follow the above procedure.

3) Wash the entire exterior with a mild detergent or car wash soap using a sponge or soft cloth. The sponge or cloth should be frequently soaked in the soap solution.

NOTICE

When using a commercial car wash product, observe the cautions specified by the manufacturer. Never use strong household detergents or soaps.

- Once the dirt has been completely removed, rinse off the detergent with running water.
- 5) Wipe off the vehicle body with a wet chamois or cloth and allow it to dry in the shade.

- Check carefully for damage to painted surfaces. If there is any damage, touch up the damage following the procedure below:
 - 1. Clean all damaged spots and allow them to dry.
 - 2. Stir the paint and touch up the damaged spots lightly using a small brush.
 - 3. Allow the paint to dry completely.

Washing by an automatic car wash

NOTICE

If you use an automatic car wash, check that your vehicle's body parts, such as antenna and spare wheel, cannot be damaged. If you are in doubt, consult the car wash operator for advice. Washing by a high-pressure cleaner

NOTICE

If you use a high-pressure cleaner, keep away the nozzle from your vehicle sufficiently.

- Bringing the nozzle to your vehicle too close or pointing the nozzle to the opening of front grill or bumper etc. can cause damage and malfunction of the vehicle body and parts.
- Pointing the nozzle to door glasses and door frames can allow water to enter the cabin.

Waxing



After washing the vehicle, waxing and polishing are recommended to further protect and beautify the paint.


- Only use waxes and polishes of good quality.
- When using waxes and polishes, observe the precautions specified by the manufacturers.

MEMO

 	 	 	 · -	 	-	 -	-		 -	-			-	_		 -	 · –		 	-			 -	 	• -
 	 	 	 	 	-	 · _	-		 · _	-			· _	_		 _	 · _		 	-			 -	 	
 	 	 	 	 	_	 · _	_		 	_			· _	_		 	 · _		 	_			 _	 	
 	 	 	 	 	_	 	_		 	_				_		 _	 		 	_			 _	 	
 	 	 	 	 	_	 	_		 	_				_		 	 		 	_			 _	 	
 	 	 	 	 	_	 	_		 	_						 	 		 	_			 _	 	
 	 	 	 	 	_	 	_	_	 	_	_	_		_	_	 _	 	_	 	_	_	_	 _	 _	
 	 	 	 . –	 	-	 	-		 . –	-			-	_		 _	 		 	-			 -	 	· -
 	 	 	 -	 	-	 -	-		 -	-			-	_		 _	 -		 	-			 -	 	
 	 	 	 -	 	-	 -	-		 	-			-	_		 -	 		 	-			 -	 	
 	 	 	 	 	-	 	-		 	-			-	_		 	 		 	_			 -	 	
 	 	 	 	 	_	 	_		 	_			-	_		 	 		 	_			 _	 	


SPECIFICATION


Vehicle identification	9-1
Fuel recommendation	9-2
Specifications	9-4

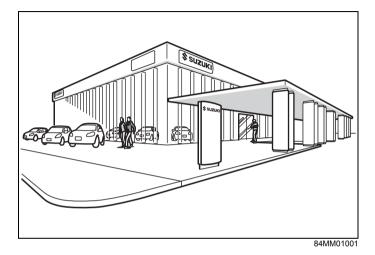


Vehicle identification

Chassis serial number

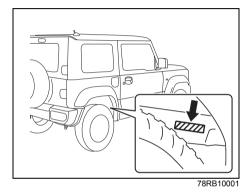


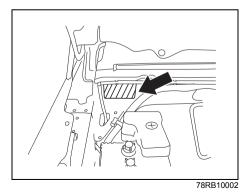

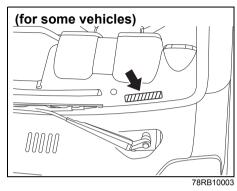


The chassis and/or engine serial numbers are used to register the vehicle. They are also used to assist a SUZUKI dealer when ordering or referring to special service information. Whenever you have occasion to consult a SUZUKI dealer, remember to identify your vehicle with this number. Should you find the number difficult to read, you will also find it on the identification plate.

Engine serial number

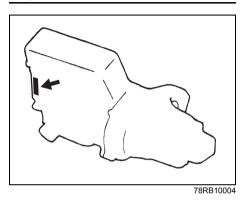

The engine serial number is stamped on the cylinder block as shown in the illustration.

Fuel recommendation

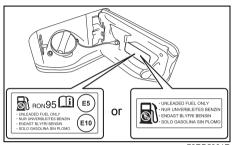

78RB5901R

To avoid damaging catalytic converter, you **must** use unleaded gasoline with an octane number (RON) of 91 or higher (or 95 or higher if a "RON 95" label is attached on the fuel filler lid), which complies with the European standard EN228. Do not use gasoline with additives containing metal. This is identified by a label attached on fuel lid that states: "UNLEADED FUEL ONLY", "NUR UNVERBLEITES BENZIN", "ENDAST BLY-FRI BENSIN" or "SOLO GASOLINA SIN PLOMO".

Gasoline-ethanol blends

Blends of unleaded gasoline and ethanol (grain alcohol), also known as gasohol, are commercially available in certain areas. Blends of this type may be used in your vehicle if they are no more than 10% ethanol. Check that this gasoline-ethanol blend has octane ratings no lower than those recommended for the gasoline. Use the recommended gasoline which conforms to the following labels.



78RB0902R

NOTE:

If you are not satisfied with the driveability or fuel economy of your vehicle when you use a gasoline-alcohol blend, you should switch back to unleaded gasoline containing no alcohol.

Gasoline containing MTBE (where legally available)

Unleaded gasoline containing MTBE (methyl tertiary butyl ether) may be used in your vehicle if the MTBE content is not greater than 15%. This oxygenated fuel does not contain alcohol.

NOTICE

The fuel tank has an air space to allow for fuel expansion in hot weather. If you continue to add fuel after the filler nozzle has automatically shut off or an initial blowback occurs, the air chamber will become full. Exposure to heat when fully fuelled in this manner will result in leakage due to fuel expansion. To prevent such fuel leakage, stop filling after the filler nozzle has automatically shut off, or when initial vent blowback occurs, if using an alternative non-automatic system.

NOTICE

Be careful not to spill fuel containing alcohol while refueling. If fuel is spilled on the vehicle body, wipe it up immediately. Fuels containing alcohol can cause paint damage, which is not covered under the New Vehicle Limited Warranty.

SPECIFICATION

NOTE:

- For the fuel recommendation of Chile and Panama models, refer to "For Chile and Panama" in the "SUPPLEMENT" section.
- For the fuel recommendation of Brazil models, refer to "For Brazil" in the "SUP-PLEMENT" section.
- For the fuel recommendation of Thailand models, refer to "For Thailand" in the "SUPPLEMENT" section.
- For the fuel recommendation of Ukraine models, refer to "For Ukraine" in the "SUPPLEMENT" section.

Specifications

NOTE:

Specifications are subject to change without notice.

M/T: Manual transmission

A/T: Automatic transmission

ITEM: Dimensions	UNIT: mm (in.)						
Overall length		3625 (142.7) (Front bumper to spare tyre) 3645 (143.5) (Front bumper to spare wheel half cover)					
Overall width		1645 (64.8)					
Overall height		1720 (67.7)					
Wheelbase		2250 (88.6)					
Track	Front	1395 (54.9)					
	Rear	1405 (55.3)					
Ground clearance		210 (8.2)					

ITEM: Mass (weight)	UNIT: kg (lbs)				
Curb mass (weight)	M/T	1080 - 1095 (2381- 2414)			
	A/T	1095 - 1110 (2414 - 2447)			
Gross vehicle mass (weight) rating		1435 (3163)			
Permissible maximum Axle Weight	Front	680 (1499)			
	Rear	880 (1940)			

ITEM: Engine	
Туре	K15B
Number of cylinders	4
Bore	74.0 mm (2.91 in.)
Stroke	85.0 mm (3.35in.)
Piston displacement	1462 cm ³ (1462 cc, 89.2 cu.in)
Compression ratio	10.0 : 1

ITEM: Electrical	
Standard spark plug	DENSO ZXU20PR11, NGK KR6A-10
Battery	12V 55B24L 20HR 45AH CCA 370A(JIS)
Fuses	See "INSPECTION AND MAINTENANCE" section.

ITEM: Lights		WATTAGE	BULB No.				
Headlight	Halogen	12V 60/55W	H4				
	LED	LED ^{*1}	-				
Front fog light (if equipped)	Without daytime running light	12V 19W	H16				
	With daytime running light	12V 35W	H8				
Position light (if equipped)		12V 5W	W5W				
		LED ^{*1}	-				
Daytime running light (if equipp	oed)	12V 13W	P13W				
Turn signal light	Front	12V 21W	W21W				
	Rear	12V 21W	WY21W				
Side turn signal light		12V 5W	-				
Tail/brake light		12V 21/5W	W21/5W				
High mount stop light		LED ^{*1}	-				
Reversing light		12V 21W	W21W				
License plate light		12V 5W	W5W				
		LED ^{*1}	-				
Rear fog light		12V 21W	W21W				
Interior light	Front	12V 10W	-				
	Luggage compartment (if equipped)	12V 8W	-				

If you need to replace the following bulbs indicated in the above table, consult your SUZUKI dealer.
*1 Since the lights are non-disassemble type, you cannot replace a bulb. Replace the target assembly if any light is defective.

ITEM: Wheels and tyres							
Tyre size, front and rear 195/80R15 96S ^{*1}							
Rim size	with steel wheels	15X5 1/2JJ					
	with aluminum wheels	15X5 1/2J					
Tyre pressures	For the specified tyre pressu on the driver's door lock pilla	For the specified tyre pressure, see the tyre information label locate on the driver's door lock pillar.					
Recommended snow chain (for Europe)	Radial thickness: 20 mm, ax	Radial thickness: 20 mm, axial thickness: 20mm					
Recommended snow tyre	195/80R15 ^{*2}						

*1 If you cannot prepare tyres with the specified load index rate and speed symbol, prepare tyres with higher load index rate and speed symbol.

*2 If you prepare snow tyres;
• Check that they are tyres of the same size, structure and load capacity as the originally installed tyres.

• Mount the snow tyres on all four wheels.

• Understand that the maximum permissible speed of snow tyres is generally less than the originally installed tyres.

Consult a SUZUKI dealer or supplier for further information.

ITEM: Recommended fuel / lubricants and capacities (approx.)								
Fuel		See "FUEL RECOMMENDATION" section.	40 L (8.8 lmp gal)					
Engine oil	For EU countries, Israel, Hong Kong, Macao, Singapore, Tai- wan and Morocco	Classification: API SN, SP ILSAC GF-5, GF-6 Viscosity: SAE 0W-16	3.6 L (6.3 Imp pt)					
Except For EU coun- tries, Israel, Hong Kong, Macao, Singa- pore, Taiwan and Morocco		Classification: API SL, SM, SN or SP ILSAC GF-3, GF-4, GF-5, or GF-6 Viscosity: SAE 0W-20	(replacement with oil filter)					
Engine coolant	M/T	"CLIZUKUUUC: Super (Dlue) Coolert"	5.0 L (8.8 Imp pt) (including reservoir tank)					
A/T		"SUZUKI LLC: Super (Blue) Coolant"	4.9 L (8.6 Imp pt) (including reservoir tank)					

ITEM: Recommended fuel / lubricants and capacities (approx.)				
Manual transmission oil		"SUZUKI GEAR OIL 75W"	1.2 L (2.1 Imp pt)	
Automatic transmission oil		"SUZUKI ATF 3317 or Mobil ATF3309"	5.7 L (10.0 Imp pt)	
Differential oil	Front	- "SUZUKI SUPER GEAR OIL 75W-85 SYNTHETIC"	1.6 L (2.8 Imp pt)	
	Rear		1.3 L (2.3 Imp pt)	
Transfer oil		"SUZUKI GEAR OIL 75W"	1.21 L (2.1 Imp pt)	
Brake fluid / Clutch fluid		SAE J1703 or DOT3	-	

SUPPLEMENT

For Australia	
For GCC countries	10-5
For Chile and Panama	10-7
For Brazil	10-8
For Taiwan	10-9
For Thailand	
For Russia and other countries	
adopting ERA-GLONASS	
For Russia	10-22
For Indonesia	
For Ukraine	10-38

For Australia

Built date

Built date is located on Vehicle Identification plate.

"Built date" means – the calendar month and the year in which the body shell and power train sub-assemblies are conjoined and the vehicle is driven or moved from the production line.

Child restraint

A WARNING


Child restraint anchorages are designed to withstand only those loads imposed by correctly fitted child restraints. Under no circumstances are they to be used for adult seat belts, harnesses or for attaching other items or equipment to the vehicle.


NOTE:

SUZUKI genuine child restraint systems do not comply with AS (Australian standard) 1754.

Do not use these child restraint systems in Australia.


Installation of child restraint with top tether anchorage

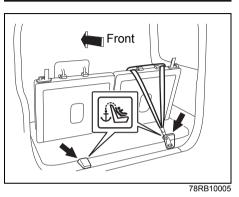

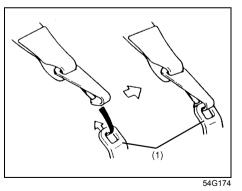




Some child restraint systems require the use of a top tether strap. Top tether anchorage brackets are provided in your vehicle at the locations shown in the illustrations. The number of the top tether anchorage brackets provided in your vehicle depends on the vehicle specification. Install the child restraint system as follows.

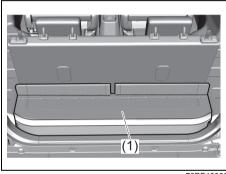

78RB10006

- 1) Remove the luggage box (1).
- Secure the child restraint on the rear seat using the procedure described above for securing a restraint system that does not require a top tether strap.
- 3) Hook the top tether strap to the top tether anchorage bracket and tighten the top tether strap according to the instructions provided by the child restraint system manufacturer. Attach the top tether strap to the corresponding top tether anchorage bracket

located on the floor of the rear cargo area.

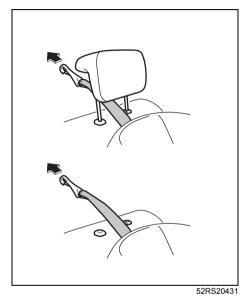

- 4) When routing the top tether strap, pass the top tether strap as shown in the illustration. (Refer to "Head restraints" section for details on how to adjust the height of head restraint or remove it.)
- 5) Check that cargo does not interfere with routing of the top tether strap.

NOTICE

When installing a child restraint system to the rear seat, adjust the front seat position so that the front seat does not interfere with the child restraint system.

Rear-facing child restraint



58MS030

A WARNING

Do not use a rearward facing child restraint on a seat protected by an airbag in front of it.

A WARNING

Do not install a rear-facing child restraint in the front passenger's seat. If the passenger's front airbag inflates, a child in a rear-facing child restraint could be killed or severely injured. The back of a rear-facing child restraint would be too close to the inflating airbag.

If you must use a front-facing child restraint in the front passenger's seat, be sure to move the front passenger's seat as far back as possible. Please refer to "Seat belts and child restraint systems" in the "BEFORE DRIVING" section for details on securing your child. Warning label for front passenger's front airbag



72M00150

You may find this label on the sun visor.

WARNING

NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur.

Seat belt warning

Follow this warning as well as the instruction for seat belt in this book.

WARNING

Seat belts are designed to bear upon the bony structure of the body, and should be worn low across the front of the pelvis or the pelvis, chest and shoulders, as applicable; wearing the lap section of the belt across the abdominal area must be avoided.

- Seat belts should be adjusted as firmly as possible, consistent with comfort, to provide the protection for which they have been designed. A slack belt will greatly reduce the protection afforded to the wearer.
- Care should be taken to avoid contamination of the webbing with polishes, oils and chemicals, and particularly battery acid. Cleaning may safely be carried out using mild soap and water. The belt should be replaced if webbing becomes frayed, contaminated or damaged.

(Continued)

M WARNING

(Continued)

- It is essential to replace the entire assembly after it has been worn in a severe impact even if damage to the assembly is not obvious.
- Belts should not be worn with straps twisted.
- Each belt assembly must only be used by one occupant; it is dangerous to put a belt around a child being carried on the occupant's lap.

In the case where a "Seat Belt Assembly" incorporates an "Automatic Length Adjusting and Locking Retractor" or an "Emergency Locking Retractor".

A WARNING

- No modifications or additions should be made by the user which will either prevent the seat belt adjusting devices from operating to remove slack, or prevent the seat belt assembly from being adjusted to remove slack.
- Referring to the SEAT BELT instruction in this book, adjust the seat belt so that the lap and sash portions of the Seat Belt Assembly fit as firmly as possible consistent with comfort.

Lithium battery



78RM10010

WARNING

Do not ingest the battery, Chemical Burn Hazard

(The remote control supplied with) This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

For GCC countries

Technical data

Max power : 75kW/6000 rpm Max torque : 130Nm/4000 rpm Max speed : 145km/h (2WD M/T) 140km/h (2WD A/T)

Warning label for front passenger's front airbag





You may find this label on the sun visor.

WARNING

NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur.


البطارية

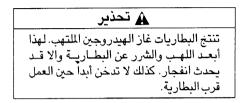

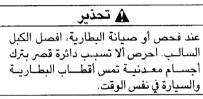

🗛 تحذير لتجنب الأذى الشخصي أو اتلاف السيارة أو البطارية، اتبع تعليمات بدء الحركة بكبلات العبور المذكورة في قسم خدمة الطوارىء من هذا الدليل اذا كان من الضروري بدء حركة السيارة بكيلات العبور.

بطارية بأغطية في الأعلى

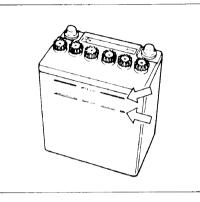

يجب ابقاء مستوى محلول البطارية بين خطي المستوى العلوي "UPPER" والسفلي "LOWER" في كل الأوقات. اذا وجدت أن المستوى هو تحت خط المستوى "LOWER" ، عندها أضف ماء مقطراً الى خط المستوى "UPPER" . ينبغي أن تفحص دوريا البطارية وأطراف وصل البطارية ومسند تثبيت البطارية بالنسبة للصدا. أزل الصدأ مستعملاً فرشاة قاسية ونشادر ممزوجاً بالماء، أو صودا الخبز المزوجة بالماء. بعد ازالة الصدا، اشطف بماء نظيف.

اذا كان لن يتم قيادة سيارتك لشهر أو أطول، عندها افصل الكبل من الطرف السالب للبطارية للمساعدة في منع التفريغ.

احتياطات في اعادة شحن البطارية


حيث أن غاز الهيدر وجين الملتهب يتولد في البطارية. ويخرج منها عند الشحن، لهذا تأكد من اتباع الاجراءات أدناه قبل اعادة الشحن. ١ _ انزع المفتاح من مفتاح الاشعال وأوقف تشغيل كل الملحقات. ٢ ـ افصل الكبل من الطرف السالب للبطارية إذا كانت البطارية في السيارة. ٣ - انزع أغطية البطارية إذا كانت الأغطية مزودة وتيار الشحن الكهربائي هو ٦ أمبير أو اكثر. في هذه الحالة لا تتحاوز ٥٦ أمسر. استعمل تياراً كهربائياً ٥ أمبير أو أقل حين عدم نزع الأغطية أو إذا كانت البطارية غير مزودة بالأغطية أصلاً. ٤ - أوقف تشغيل الشاحن عند وصل وفصل كبلات الشاحن من البطارية. \Lambda تحذير لا تشحن البطارية أبدأ في مناطق محصورة مثل المراب. أبعد اللهب والشرر عن البطارية

والاقد يحدث انفجار. كذلك لا تدخن أبدأ

حين العمل قرب البطارية.

For Chile and Panama


Fuel recommendation

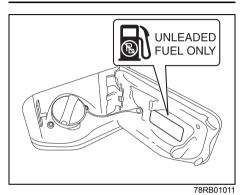

To avoid damaging the catalytic converter, you **must** use unleaded gasoline with an octane number (RON) of 91 or higher. These vehicles are also identified by a

label attached near the fuel filler pipe that states: "UNLEADED FUEL ONLY", "NUR UNVERBLEITES BENZIN", "ENDAST BLYFRI BENSIN" or "SOLO GASOLINA SIN PLOMO".

Gasoline-ethanol blends

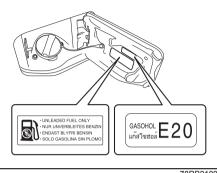

78RB21004

Blends of unleaded gasoline and ethanol (grain alcohol), also known as gasohol, are commercially available in certain areas. Blends of this type may be used in your vehicle if they are no more than 10% ethanol

Check that this gasoline-ethanol blend has octane ratings no lower than those recommended for the gasoline.

NOTE:

If you are not satisfied with the driveability or fuel economy of your vehicle when you use a gasoline-alcohol blend, you should switch back to unleaded gasoline containing no alcohol.

NOTICE


The fuel tank has an air space to allow for fuel expansion in hot weather. If you continue to add fuel after the filler nozzle has automatically shut off or an initial blowback occurs, the air chamber will become full. Exposure to heat when fully fuelled in this manner will result in leakage due to fuel expansion. To prevent such fuel leakage, stop filling after the filler nozzle has automatically shut off, or when initial vent blowback occurs, if using an alternative non-automatic system.

NOTICE

Be careful not to spill fuel containing alcohol while refueling. If fuel is spilled on the vehicle body, wipe it up immediately. Fuels containing alcohol can cause paint damage, which is not covered under the New Vehicle Limited Warranty.

For Brazil

Fuel recommendation

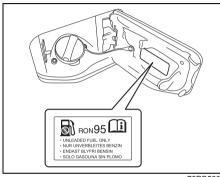

78RB59001

To avoid damaging the catalytic converter, you **must** use unleaded gasoline with an octane number (RON) of 91 or higher. These vehicles are also identified by a label attached near the fuel filler pipe that states: "UNLEADED FUEL ONLY", "NUR UNVERBLEITES BENZIN", "ENDAST BLYFRI BENSIN" or "SOLO GASOLINA SIN PLOMO".

Gasoline-ethanol blends

Blends of unleaded gasoline and ethanol (grain alcohol), also known as gasohol, are commercially available in certain areas. Blends of this type may be used in your vehicle if they are no more than 27% ethanol.

Check that this gasoline-ethanol blend has octane ratings no lower than those recommended for the gasoline.

NOTE:

If you are not satisfied with the driveability or fuel economy of your vehicle when you use a gasoline-alcohol blend, you should switch back to unleaded gasoline containing no alcohol.

NOTICE

The fuel tank has an air space to allow for fuel expansion in hot weather. If you continue to add fuel after the filler nozzle has automatically shut off or an initial blowback occurs, the air chamber will become full. Exposure to heat when fully fuelled in this manner will result in leakage due to fuel expansion. To prevent such fuel leakage, stop filling after the filler nozzle has automatically shut off, or when initial vent blowback occurs, if using an alternative non-automatic system. NOTICE

Be careful not to spill fuel containing alcohol while refueling. If fuel is spilled on the vehicle body, wipe it up immediately. Fuels containing alcohol can cause paint damage, which is not covered under the New Vehicle Limited Warranty.


SUPPLEMENT

For Taiwan


Child restraint

The suitability of each passenger's seat position for carriage of children and fitting of child restraint system is shown in the table below.

Child restraint systems suitability for each seat position

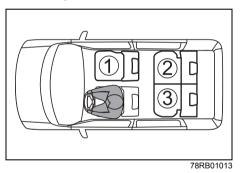

- ① Front passenger's seat
- ② Rear seat right side
- 3 Rear seat left side

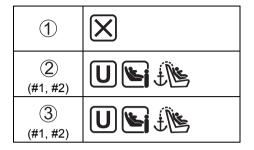



Ľ

It is suitable for universal category of child restraint system fixed with the vehicle seat belt.

It is suitable for i-Size and ISOFIX child restraint system.



This seat is equipped with Top tether anchorage point.



It is not suitable for child restraint system.

- #1: When you install a front-facing child restraint, if there is a gap or space between the child restraint and the seatback, adjust the seatback angle in order to install the child restraint system properly.
- #2: If the head restraint interferes with the child restraint system, adjust the height of the head restraint or remove it, as necessary.

Detailed information for child restraint system

		Seating position	
Seat position number	1	2	3
Seating position suitable for universal belted (YES/NO)	NO	YES	YES
i-Size seating position (YES/NO)	NO	YES	YES
Seating position suitable for lateral fixture (L1/L2)	NO	х	х
Suitable rear-facing fixture (R1/R2/R3)	NO	R1, R2	R1, R2
Suitable front-facing fixture (F2X/F2/F3)	NO	F2X, F2, F3	F2X, F2, F3

Key of letters to be inserted in the above table YES =Suitable for this seating position NO = Not suitable for this seating position X =ISOFIX position is not suitable for ISOFIX child restraint systems in this fixture.

ISOFIX child restraint systems are divided into different mass group, size class and fixture. The child restraint system can be used in the seating positions for fixture shown in the above table. For mass group, size class and fixture, confirm the table of next page. If your child restraint system has no size class (or if you cannot find information in the following table), refer to the child restraint system suitability information for the vehicle or ask the retailer of your child seat.

Mass group	Size class	Fixture	Description
	F	L1	Left Lateral facing position Child Restraint Systems (carry-cot)
0 (up to 10 kg)	G	L2	Right Lateral facing position Child Restraint Systems (carry-cot)
	E	R1	Rear-facing seat
	E	R1	Rear-facing seat
0+ (up to 13kg)	D	R2	Reduced-Size rear-facing toddler Child Restraint Systems
	С	R3	Full-Size rear-facing toddler Child Restraint Systems
	D	R2	Reduced-Size rear-facing toddler Child Restraint Systems
	С	R3	Full-Size rear-facing toddler Child Restraint Systems
l (9kg to 18kg)	В	F2	Reduced-Height front-facing toddler Child Restraint Systems
	B1	F2X	Reduced-Height front-facing toddler Child Restraint Systems
	A	F3	Full-Height front-facing toddler Child Restraint Systems
II (15kg to 25kg)	Х	Х	_
III (22kg to 36kg)	Х	Х	_

Key of letters to be inserted in the above table

X = There is no fixture for this mass group.

Warning label for front passenger's front airbag



You may find this label on the sun visor.

WARNING

DO NOT carry baby, infant and children on the front passenger seat. Otherwise, it is a violation of the legislation.

For Thailand

Fuel

To avoid damaging catalytic converter, you must use unleaded gasoline with an octane number (RON) of 90 or higher. This is identified by a label attached on fuel lid that states: "UNLEADED FUEL ONLY", "NUR UNVERBLEITES BENZIN", "ENDAST BLYFRI BENSIN", "SOLO GAS-OLINA SIN PLOMO" or "KHUSUS BEN-SIN TANPA TIMBAL".

Gasoline/Ethanol blends

Blends of unleaded gasoline and ethanol (grain alcohol), also known as gasohol, are commercially available in certain areas. Blends of this type may be used in your vehicle if they are no more than 20% ethanol.

Make sure this gasoline-ethanol blend has octane ratings no lower than those recommended for the gasoline.

NOTE:

If you are not satisfied with the driveability or fuel economy of your vehicle when you use a gasoline/alcohol blend, you should switch back to unleaded gasoline containing no alcohol.

Gasoline containing MTBE

Unleaded gasoline containing MTBE (methyl tertiary butyl ether) may be used in your vehicle if the MTBE content is not greater than 15%. This oxygenated fuel does not contain alcohol.

NOTICE

The fuel tank has an air space to allow for fuel expansion in hot weather. If you continue to add fuel after the filler nozzle has automatically shut off or an initial blowback occurs, the air chamber will become full. Exposure to heat when fully fuelled in this manner will result in leakage due to fuel expansion. To prevent such fuel leakage, stop filling after the filler nozzle has automatically shut off, or when initial vent blowback occurs, if using an alternative non-automatic system.


NOTICE

Be careful not to spill fuel containing alcohol while refueling. If fuel is spilled on the vehicle body, wipe it up immediately. Fuels containing alcohol can cause paint damage, which is not covered under the New Vehicle Limited Warranty. For Russia and other countries adopting ERA-GLONASS

VIEW A


Description of equipment

- 1. "SOS" button
- 2. ERA-GLONASS microphone (Front passenger's seat side)

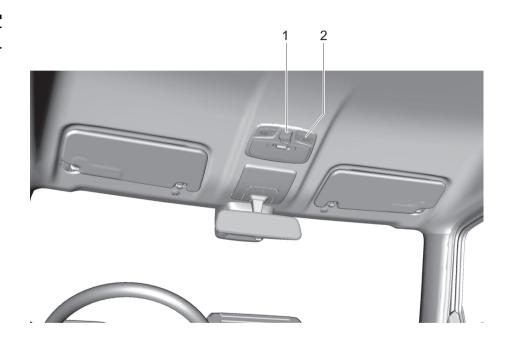

78RB21001

Emergency Road Assistance - Global Navigation Satellite System (ERA-GLONASS)

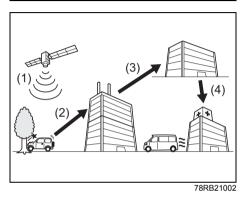

- (1) Location information is received.
- (2) Vehicle information is transmitted to emergency contact center.
- (3) Emergency contact center informs regional EMERCOM center (112 service) of accident conditions.
- (4) Emergency vehicle is dispatched.

The ERA-GLONASS (emergency road assistance - global navigation satellite system) is a system equipped with the vehicle. This system automatically sends the information to the emergency contact center when a crush occurs calls up an ERA-GLONASS operator for quick help.

NOTE:

- Vehicle ERA-GLONASS system's correct functioning directly depends on presence of ERA-GLONASS operator in country, and availability of its services.
- The responsibility of the components of the ERA-GLONASS system (with the exception of equipment installed on the vehicle) is borne by the operator of the ERA-GLONASS system.


- The ERA-GLONASS is only available where communication is possible using wireless mobile communication. This system cannot be used in areas with atmospheric disturbance, remote areas and areas where a signal cannot be obtained.
- If the microphone, speaker or "SOS" button is malfunctioning, ERA-GLONASS cannot operate properly.

Have the function checked by an authorized SUZUKI dealer.

 For normal operating condition of the ERA-GLONASS, use SUZUKI genuine audio system.

How to use the ERA-GLONASS

The ERA-GLONASS has 2 modes, automatic operation mode and manual operation mode.

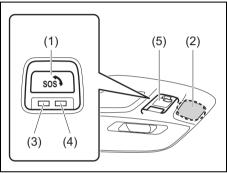

78RB21003

- (1) "SOS" button
- (2) ERA-GLONASS microphone (Front passenger's seat side)
- (3) Green indicator
- (4) Red indicator
- (5) Cover

Automatic operation mode

The ERA-GLONASS system is operated when the ignition switch is turned to "ON" position. In the event of a collision from the side, vehicle rollover or an accident that an airbag is activated, signals about your vehicle's various information such as the vehicle's position are sent automatically to the emergency contact center.

The green indicator (3) will change from a blinking state to on, and you can call up an ERA-GLONASS operator using the microphone (2).

Manual operation mode

Open the cover (5) for manual operation. When the ignition switch is turned to "ON" position, push and hold "SOS" button (1) for more than 2 seconds and release it. The green indicator (3) will change from a blinking state to on, and you can call up an ERA-GLONASS operator using the microphone (2).

NOTE:

(Only for manual operation mode)

Do not perform a test operation in order to confirm the function using manual operation.

If the function check is necessary, perform a test operation using the test mode. Refer to "How to use test mode" in this section for details.

Cancel the operation if the system is accidentally operated. Refer to "Cancellation of ERA-GLONASS" in this section for details.

NOTE:

(For both automatic and manual operation modes)

- A tone will sound when the emergency call operates for starting, calling up and finishing.
- The vehicle information (for example, the vehicle location, direction, VIN, accident time, etc.) is sent to the emergency contact center when ERA-GLONASS operates. The above information will not be sent except when the emergency call is performed.
- Any conversation held during communication is not recorded by the vehicle itself, but is recorded by the emergency contact center.
- Communication from the ERA-GLON-ASS operator can be heard from the audio speaker on the passenger side. If the audio system is in use, the communication from the ERA-GLONASS operator will be prioritized and any other audio will be automatically muted.
- The ERA-GLONASS is equipped with a built-in battery as a backup power for the damaged onboard battery caused by an accident. The useful life of the built-in battery will be about 3 years under the temperature conditions between -40 °C and 85 °C (-40 °F and 185 °F).


SUPPLEMENT

NOTE:

• If the red indicator blinks every 1 second and the ERA-GLONASS warning light comes on at the same time, an undercharged condition of the built-in battery or system error is estimated. Have your vehicle inspected by an authorized SUZUKI dealer soon. When the built-in battery is in the undercharged condition. replace the battery as soon as possible even though the remaining battery power is considered to last for about 10 minute call with ERA-GLONASS operator. This built-in battery is specified for the ERA-GLONASS exclusively. Therefore when you replace the battery. consult your SUZUKI dealer.

NOTE:

Used batteries must be disposed properly according to applicable rules or regulations and must not be disposed with ordinary household trash.

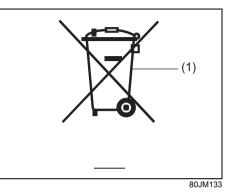

(1) Crossed-out wheeled bin symbol

The crossed-out wheeled bin symbol (1) indicates that used battery should be collected separately from ordinary household trash.

By ensuring the used battery is disposed or recycled correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate trash handling of the battery. The recycling of materials will help to conserve natural resources. For more detailed information about disposing or recycling of the used battery, consult your SUZUKI dealer.

Indicator light

The indicator light in "SOS" button operate as follows, according to the ERA-GLONASS operation state and communication state.

Green indicator	Red indicator	State
Off	Off	Normal operation.
On	On	For about 30 seconds when the ignition switch is turned to "ON".(#1) (For 2 seconds when the ignition switch is turned to "ON" within 60 seconds after turning the ignition switch to "OFF".)
Blinks (approximately every 3 seconds)	Off	There is no GLONASS / GPS connection or modem network. (#2) ERA-GLONASS device is out of communication range.
Blinks (approximately every 1 second)	Off	ERA-GLONASS operation begins.
On	Off	ERA-GLONASS communication is established.
Blinks (approximately every 0.3 seconds)	Off	ERA-GLONASS communication finishes normally.(#3)
Off	Blinks (approximately every 1 second)	The built-in battery in ERA-GLONASS is discharged or system error.
Off	Blinks (approximately every 0.3 seconds)	ERA-GLONASS communication finishes abnormally or communication fails.

(#1) While the green indicator in "SOS" button stays on, manual operation cannot be actuated even if the "SOS" button is pressed. If an accident occurs in the above condition, the indicator light goes out and the ERA-GLONASS system starts the automatic operation.

(#2) You can customize the system to stop blinking of the green indicator. Ask an authorized SUZUKI dealer for details.

(#3) When the call is completed, either the green indicator or the red indicator could blink, depending on the emergency contact center behavior.

ERA-GLONASS Warning Light



79MS1R218

If this warning light on the instrument cluster comes on and the red indicator light blinks (approximately every 1 second) in "SOS" button, there may be problem with the ERA-GLONASS.

Have your vehicle inspected by an authorized SUZUKI dealer.

Cancellation of ERA-GLONASS

The operation can be canceled only when communication is performed via manual operation. The operation can be canceled if "SOS" button is pressed before communication is established with ERA-GLON-ASS operator.

NOTE:

- Communication cannot be canceled in automatic operation mode.
- The cancellation of the communication is available until 10 seconds after pushing the "SOS" button first.
- Communication cannot be canceled from the vehicle after communication is established with ERA-GLONASS operator. Ask the emergency contact center to cancel the communication.

How to use the test mode

Using the test mode, the ERA-GLONASS system can be checked whether or not the system operates normally.

NOTE:

While the system is in the test mode, emergency call is not performed even if an accident occurs.

Park the vehicle at a safe place and start the test mode.

Test mode entry

To start the test mode, perform the following steps.

- 1) Close driver's door and set the parking brake fully.
- 2) Turn the ignition switch to the "ON" position and wait for about 60 seconds with the vehicle parked.

NOTE:

All operations in the following steps 3), 4) and 5) must be completed within 20 seconds.

- 3) Release the parking brake and set the parking brake. Repeat this operation 3 times in total (the parking brake is set finally).
- 4) Open the driver's door, and then close it.
- 5) Release the parking brake and set it again. Repeat this operation 3 times in total (the parking brake is set finally).
- 6) The ERA-GLONASS system starts the test mode. In the "SOS" button, green indicator goes out and red indicator blinks every 3 seconds continuously in this mode.

NOTE:

A tone will sound when the test mode is starting and finishing.

Test call

Normal function of the ERA-GLONASS system can be checked using the microphone, speaker and the call center for test as follows.

- 1) Check the "SOS" button (1) and make sure that the green indicator (3) is off and red indicator (4) is blinking every 3 seconds continuously.
- 2) Push and hold "SOS" button (1) for more than 2 seconds and release it.
- 3) The red indicator (4) will be on for 5 seconds, during this period speak over the microphone.
- 4) Processing time by system for few seconds.
- 5) The green indicator (3) will be on for 5 seconds, you can hear your voice form the speaker.
- 6) The green indicator (3) and red indicator (4) will change the blinking interval to approximately every 1 second for 10 seconds. During this timing, you must confirm if the audio has been recorded/ replayed correctly.

Pushing "SOS" button (1) during green indicator and red indicator blink means that test is OK; otherwise test is failed. In this case, do not push "SOS" button.

- 7) The test call communication begins automatically. The green indicator (3) will change the blinking interval to approximately every 1 second and the red indicator (4) will change the blinking interval to approximately every 3 seconds.
- 8) The green indicator (3) will change from a blinking state (approximately every 1 second) to on.
- The green indicator (3) will change the blinking interval to approximately every 0.3 seconds, and then it goes out.
- 10)The test mode will be finished automatically.

To exit from test mode

To exit from the test mode, perform any one of the following 3 methods.

- Turn the ignition switch to the "LOCK" position.
- Start the vehicle to move.
- The test call is finished.

Indicator light (in the test mode)

In the test mode, the indicator light in "SOS" button operate as follows, according to the ERA-GLONASS operation state and communication state.

Green indicator	Red indicator	State
Off	Blinks (approximately every 3 sec- onds)	Normal operation (Test mode).
Off	On (approximately 5 seconds)	You speak over the microphone.
ON (approximately 5 seconds)	Off	Hear your voice from the speaker.
Blinks (approximately every 1 second)	Blinks (approximately every 1 second)	Confirm if the audio has been recorded/replayed correctly. And push the "SOS" button if it is correct.
Blinks (approximately every 1 sec- ond)	Blinks (approximately every 3 sec- onds)	Test call communication begins.
On	Blinks (approximately every 3 sec- onds)	Test call communication is established.
Blinks (approximately every 0.3 seconds)	Blinks (approximately every 3 sec- onds)	Test call communication finishes normally.(#1)
Off	Blinks (approximately every 0.3 sec- onds)	Test call communication finishes abnormally or communication fails.

(#1) When the test call is performed, please wait for the voice feedback that should confirm the vehicle information is received correctly. This is the confirmation the test call works properly.

When the test call is completed, either the green LED or the red LED could blink, depending on the contact center behavior.

For Russia

Periodic maintenance schedule

"R" : Replace or Change

"I" : Inspect, clean, adjust, lubricate or replace as necessary

NOTE:

This table shows the service schedule up to 180000 km (108000 miles). Beyond 180000 km (108000 miles), perform the same services at the same intervals shown in the chart.

Interval: This interval should b			km (x1000)		30	45	60	75	90
odometer reading or months, wh	ichever comes		miles (x1000)		18	27	36	45	54
first.			months	12	24	36	48	60	72
ENGINE						-			
*1-1. Engine accessory drive be	lt	Tension check, *Adjustment, *Replac	ement	-	-		-	-	R
*1-2. Valve clearance				-	1	-	I	-	I
1-3. Engine oil and engine oil fi	lter			R	R	R	R	R	R
1-4. Engine coolant		SUZUKI LLC: Super (Blue) (#1)	First time only:	Replace a	it 150000 k	m (90000 i	niles) or 96	6 months.	
			Second time and after:	Replace e	very 75000) km (4500	0 miles) or	48 months	š.
		SUZUKI LLC: Standard (Green)		-	-	R	-	-	R
*1-5. Exhaust system (except ca	-5. Exhaust system (except catalyst)			-	I	-	I	-	I
IGNITION									
2-1. Spark plugs When unlead	ed fuel is used	Iridium plug		Replace e	very 10500	00 km (630	00 miles) o	or 84 month	1S.
		Nickel plug		-	-	R	-	-	R
Spark plugs When leaded	fuel is used, re	fer to "Severe driving condition" schee	dule.						
FUEL									
3-1. Air cleaner filter element	Paved-road			I	I	R	I	I	R
	Dusty conditi	on		Refer to "S	Severe driv	ing conditi	on" schedu	ıle.	
*3-2. Fuel lines				-	I	-	I	-	I I
*3-3. Fuel filter				Replace e	very 10500	00 km (630	00 miles).		
*3-4. Fuel tank				-	-	1	-	-	I I
EMISSION CONTROL SYSTEM				•	•	•			
*4-1. PCV valve				Inspect ev	ery 80000/	km (50000	miles) or 4	48 months.	
*4-2. Fuel evaporative emission	*4-2. Fuel evaporative emission control system				-	-	-	-	I

#1: Perform the engine coolant level check under the daily inspection in the "OPERATING YOUR VEHICLE" section. If you use the engine coolant other than "SUZUKI LLC: Super (Blue)" for replacement, follow the schedule of "SUZUKI LLC: Standard (Green)". (Replace every 45000 km (27000 miles) or 36 months.)

									
Interval: This interval should b			km (x1000)		120	135	150	165	180
odometer reading or months, whi	chever comes		miles (x1000)		72	81	90	99	108
first.			months	84	96	108	120	132	144
ENGINE									
*1-1. Engine accessory drive bel	t	Tension check, *Adjustment, *Replacer	ment	-	-	1	-	-	R
*1-2. Valve clearance				-	1	-	1	-	
1-3. Engine oil and engine oil fil	ter			R	R	R	R	R	R
1-4. Engine coolant		SUZUKI LLC: Super (Blue) (#1)	First time only:	Replace a	t 150000 k	m (90000	miles) or 96	6 months.	
-			Second time and after:	Replace e	very 75000) km (4500	0 miles) or	48 month	s.
		SUZUKI LLC: Standard (Green)		-	-	Ŕ	-	-	R
*1-5. Exhaust system (except ca	talyst)	· · · ·		-	1	-	1	-	
IGNITION									
2-1. Spark plugs When unleade	d fuel is used	Iridium plug		Replace e	very 10500	00 km (630	000 miles) o	or 84 mont	ns.
		Nickel plug		-	-	R	- 1	-	R
Spark plugs When leaded	fuel is used, re	fer to "Severe driving condition" schedu	ıle.						
FUEL									
3-1. Air cleaner filter element	Paved-road			1	1	R	1	1	R
	Dusty conditi	on		Refer to "S	Severe driv	ing conditi	on" schedu	ile.	
*3-2. Fuel lines				-	1	-	1	-	
*3-3. Fuel filter				Replace e	very 10500	00 km (630	000 miles).		
*3-4. Fuel tank				-	-	L I	· - /	-	
EMISSION CONTROL SYSTEM				1					
*4-1. PCV valve				Inspect ev	ery 80000	km (50000) miles) or 4	48 months	
*4-2. Fuel evaporative emission of	control system				-	, _	-	-	
	control system			Inspect ev –	ery 80000 –	km (50000 –) miles) or 4 –	48 months –	l

#1: Perform the engine coolant level check under the daily inspection in the "OPERATING YOUR VEHICLE" section. If you use the engine coolant other than "SUZUKI LLC: Super (Blue)" for replacement, follow the schedule of "SUZUKI LLC: Standard (Green)". (Replace every 45000 km (27000 miles) or 36 months.)

Interval: This interval should be judged by	л	km (x1000)	15	30	45	60	75	90
odometer reading or months, whichever		miles (x1000)	9	18	27	36	45	54
comes first.		months	12	24	36	48	60	72
BRAKE	<u> </u>	months	12	27	00	40	00	12
*5-1. Brake discs and pads (front)				l i	l i	1		1
Brake drums and shoes (rear)			-	i			-	
*5-2. Brake hoses and pipes			_	i i	_		_	
*5-3. Brake pedal				i	1			
*5-4. Brake fluid (#2)				R	i	R		R
5-5. Brake lever and cable		Check, *Adjustment (1st 15000 km only)	i	-	-	-	_	-
CHASSIS AND BODY								
*6-1. Clutch pedal				I	1		1	
*6-2. Clutch fluid (#2)			1	R	1	R	1	R
6-3. Tyres/Wheels			1	I	1	1	1	
*6-4. Wheel bearings			-	1	-	1	-	1
*6-5. Propeller shafts			-	-	I	_	-	I
*6-6. Suspension system			-	1	-	1	-	1
*6-7. Steering system			-	I	-	1	_	1
*6-8. Manual transmission oil	Genuine "SUZUKI GEAR OIL 75W"		-	1	-	1	-	1
	Other than "SUZUKI GEAR OIL 75W"	(I: 1st 15000 km only)	1	-	R	-	-	R
6-9. Automatic transmission		Fluid level	-	I	-	1	-	I
		*Fluid change	Replace	every 16	5000 km	(99000 r	niles).	
		*Fluid hose	-	-	-	I	-	-
*6-10. Transfer oil	Genuine "SUZUKI GEAR OIL 75W"		Inspect of	every 300	000 km (1	8000 mil	es) or 24	months.
	Other than "SUZUKI GEAR OIL 75W"	(I: 1st 15000 km only)	1	-	R	-	-	R
*6-11. Differential oil	(R: 1st 15000 km only) Genuine "SUZUKI SUPER GEAR OIL 75W-85	SYNTHETIC"	R	-	I	-	I	-
6-12. All latches, hinges and locks			-	I	-	I	-	I
*6-13. Air conditioner filter element			-	I	R	-	1	R

#2: Clutch fluid is supplied from brake fluid reservoir.

WARNING

The shock absorbers are filled with high pressure gas. Never attempt to disassemble them or throw them into a fire. Avoid storing them near a heater or heating device. When scrapping the absorber, the gas must be released from the absorber safely. Ask your dealer for assistance.

Interval: This interval should be judged by		km (x1000)	105	120	135	150	165	180
odometer reading or months, whichever		miles (x1000)	63	72	81	90	99	108
comes first.		months	84	96	108	120	132	144
BRAKE								
*5-1. Brake discs and pads (front)			I	I	I	1	1	1
Brake drums and shoes (rear)			-	1	-	1	-	1
*5-2. Brake hoses and pipes			-	I	-	1	-	1
*5-3. Brake pedal			1	1	1	1	1	1
*5-4. Brake fluid (#2)			1	R	I	R	1	R
5-5. Brake lever and cable		Check, *Adjustment (1st 15000 km only)	-	-	-	-	-	-
CHASSIS AND BODY								
*6-1. Clutch pedal			1	I	I I	1	1	1
*6-2. Clutch fluid (#2)				R	I	R	1	R
6-3. Tyres/Wheels			1	I	I I	1	1	1
*6-4. Wheel bearings			-	I	-	1	-	1
*6-5. Propeller shafts			-	-	I I	-	-	1
*6-6. Suspension system			-	I	-	1	-	1
*6-7. Steering system			-	I.	-	1	-	1
*6-8. Manual transmission oil	Genuine "SUZUKI GEAR OIL 75W"		-	I	-	1	-	1
	Other than "SUZUKI GEAR OIL 75W"	(I: 1st 15000 km only)	-	-	R	-	-	R
6-9. Automatic transmission		Fluid level	-	I	-	1	-	I
		*Fluid change	Replace	every 16	5000 km	(99000 r	niles).	
		*Fluid hose	-	I	-	-	-	1
*6-10. Transfer oil	Genuine "SUZUKI GEAR OIL 75W"		Inspect e	every 300	000 km (1	8000 mil	es) or 24	months.
	Other than "SUZUKI GEAR OIL 75W"	(I: 1st 15000 km only)		-	R	-	-	R
*6-11. Differential oil	(R: 1st 15000 km only) Genuine "SUZUKI SUPER GEAR OIL 75W-85	SYNTHETIC"	Ι	-	I	-	I	-
6-12. All latches, hinges and locks			-	I	-	I	-	1
*6-13. Air conditioner filter element			-	I	R	-	1	R

#2: Clutch fluid is supplied from brake fluid reservoir.

Maintenance recommended under severe driving conditions

Follow this schedule if your vehicle is mainly operated under one or more of the following conditions:

- When most trips are less than 6 km (4 miles).
- When most trips are less than 16 km (10 miles) and outside temperature remains below freezing.
- Idling and/or low-speed operation in stop-and-go traffic.
- Operating in extremely cold weather and/or on salted roads.
- Operating in rough and/or muddy areas.
- Operating in dusty areas.
- · Repeated high speed drive or high engine revolutions.
- Towing a trailer, if admitted.

Schedule should also be followed if the vehicle is used for delivery service, police, taxi or other commercial applications.

Literation The second and a literation of the	1	1 (1000)	7.5	45	00 F	00	07.5	45
Interval: This interval should be judged by		km (x1000)		15	22.5	30	37.5	45
odometer reading or months, whichever comes first.		miles (x1000)	4.5	9	13.5	18	22.5	27
IIISI.		months	6	12	18	24	30	36
ENGINE								
*1-1. Engine accessory drive belt	Tension check, *Adjustment, *Replacem	ent	- 1	I	-	I	-	R
*1-2. Valve clearance			-	-	-	1	-	-
1-3. Engine oil and engine oil filter			R	R	R	R	R	R
1-4. Engine coolant	SUZUKI LLC: Super (Blue) (#1)	First time only:	Replace a	t 150000 k	m (90000	miles) or 9	6 months.	
		Second time and after: Replace every 75000 km (45000 miles) or 48 mo					48 months	3.
	SUZUKI LLC: Standard (Green)		-	-	_		-	R
*1-5. Exhaust system (except catalyst)	(, , , , , , , , , , , , , , , , , , ,		-	-	-	1	-	-
GNITION								
2-1. Spark plugs	Iridium plug		- 1	-	_	R	-	-
1 1 0	Nickel plug		Replace e	very 10000) km (6000) miles) or a	8 months.	
FUEL				,	,	,		
3-1. Air cleaner filter element*1			Inspect ev	ery 2500 k	m (1500 m	niles).		
			Replace e				24 months	3.
*3-2. Fuel lines			_	_	_		_	-
*3-3. Fuel filter			Replace e	verv 10500) 0 km (630	00 miles).		
*3-4. Fuel tank			-	_	_	_	_	
EMISSION CONTROL SYSTEM			1			1		
*4-1. PCV valve			Inspect ev	erv 80000	km (50000) miles) or	48 months.	
			_	_	_	_		-
			Inspect ev –	ery 80000 –	km (50000 –) miles) or –	48 months. –	

#1 Perform the engine coolant level check under the daily inspection in the "OPERATING YOUR VEHICLE" section. If you use the engine coolant other than "SUZUKI LLC: Super (Blue)" for replacement, follow the schedule of "SUZUKI LLC: Standard (Green)". (Replace every 45000 km (27000 miles) or 36 months.)

					~= =		<u> </u>	
Interval: This interval should be judged by		km (x1000)		60	67.5	75	82.5	90
odometer reading or months, whichever comes		miles (x1000)		36	40.5	45	49.5	54
first.		months	42	48	54	60	66	72
ENGINE								
*1-1. Engine accessory drive belt	Tension check, *Adjustment, *Replace	ment	-	I	-	1	-	R
*1-2. Valve clearance			-	I	-	-	-	I
1-3. Engine oil and engine oil filter			R	R	R	R	R	R
1-4. Engine coolant	SUZUKI LLC: Super (Blue) (#1)	First time only:	only: Replace at 150000 km (90000 miles) or 96 months.					
		Second time and after:	after: Replace every 75000 km (45000 miles) or 48 months.					s.
	SUZUKI LLC: Standard (Green)		-	-	_	-	-	R
*1-5. Exhaust system (except catalyst)			-	1	-	-	-	1
IGNITION								
2-1. Spark plugs	Iridium plug		-	R	-	-	-	R
	Nickel plug		Replace e	very 10000) km (6000	miles) or	8 months.	
FUEL								
3-1. Air cleaner filter element*1			Inspect ev	ery 2500 k	m (1500 m	niles).		
							24 months	s.
*3-2. Fuel lines			-	I I	_	-	-	1
*3-3. Fuel filter			Replace e	very 10500	00 km (630	00 miles).		
*3-4. Fuel tank			-	-	-	-	-	1
EMISSION CONTROL SYSTEM								
*4-1. PCV valve			Inspect ev	ery 80000	km (50000) miles) or	48 months.	
*4-2. Fuel evaporative emission control system			_	-	, _	_	-	1
					1	1	1 1	

#1 Perform the engine coolant level check under the daily inspection in the "OPERATING YOUR VEHICLE" section. If you use the engine coolant other than "SUZUKI LLC: Super (Blue)" for replacement, follow the schedule of "SUZUKI LLC: Standard (Green)". (Replace every 45000 km (27000 miles) or 36 months.)

Interval: This interval should be judged by		km (x1000)	7.5	15	22.5	30	37.5	45
odometer reading or months, whichever		miles (x1000)	4.5	9	13.5	18	22.5	27
comes first.		months	6	12	18	24	30	36
BRAKE								
*5-1. Brake discs and pads (front)			-	I	-	Ι	-	I
Brake drums and shoes (rear)			-	-	-	1	-	-
*5-2. Brake hoses and pipes			-	-	-	Ι	-	-
*5-3. Brake pedal			-	1	-	1	-	1
*5-4. Brake fluid (#2)			-	1	-	R	-	1
5-5. Brake lever and cable		Check, *Adjustment (1st 15000 km only)	-	-	-	-	-	-
CHASSIS AND BODY				_				
*6-1. Clutch pedal			-	I	-	I	-	1
*6-2. Clutch fluid (#2)			-	I	-	R	-	I
6-3. Tyres/Wheels			-	1	-	1	-	1
*6-4. Wheel bearings			-	1	-	I	-	1
*6-5. Propeller shafts			-	1	-	1	-	1
*6-6. Suspension system			-	-	-	Ι	-	-
*6-7. Steering system			-	-	-	1	-	-
*6-8. Manual transmission oil	Genuine "SUZUKI GEAR OIL 75W"		-	-	-	Ι	-	-
	Other than "SUZUKI GEAR OIL 75W"		-	-	-	R	-	-
6-9. Automatic transmission		Fluid level	-	-	-	I	-	-
			Replace months.	every 30	000 km (18000 m	les) or 24	4
		*Fluid hose	Inspect e	every 600	00 km (3	6000 mile	s) or 48 r	months.
*6-10. Transfer oil	Genuine "SUZUKI GEAR OIL 75W"		Inspect e	every 300)00 km (1	8000 mil	es) or 24	months.
			Replace	every 60	000 km (3	36000 mil	es) or 48	months.
	Other than "SUZUKI GEAR OIL 75W"		-	-	-	R	-	-
*6-11. Differential oil	Genuine "SUZUKI SUPER GEAR OIL 7	75W-85 SYNTHETIC"	-	R	-	-	-	R
6-12. All latches, hinges and locks			-	-	-	Ι	-	-
*6-13. Air conditioner filter element * ³			-	1	-	I	-	R

#2: Clutch fluid is supplied from brake fluid reservoir.

WARNING

The shock absorbers are filled with high pressure gas. Never attempt to disassemble them or throw them into a fire. Avoid storing them near a heater or heating device. When scrapping the absorber, the gas must be released from the absorber safely. Ask your dealer for assistance.

Interval: This interval should be judged by		km (x1000)	52.5	60	67.5	75	82.5	90
odometer reading or months, whichever		miles (x1000)		36	40.5	45	49.5	54
comes first.		months	42	48	54	60	66	72
BRAKE		ineriale			•			. –
*5-1. Brake discs and pads (front)			-	1	-	1	- 1	1
Brake drums and shoes (rear)			-	Ι	-	-	_	Ι
*5-2. Brake hoses and pipes			-	1	-	-	-	1
*5-3. Brake pedal			-	1	-	1	_	1
*5-4. Brake fluid (#2)			-	R	-	1	-	R
5-5. Brake lever and cable	Cł	heck, *Adjustment (1st 15000 km only)	-	-	-	-	_	_
CHASSIS AND BODY								
*6-1. Clutch pedal			-	1	-	1	-	1
*6-2. Clutch fluid (#2)			-	R	-	1	-	R
6-3. Tyres/Wheels			-	1	-	1	-	1
*6-4. Wheel bearings			-	I	-	1	-	I
*6-5. Propeller shafts			-	1	-	1	-	1
*6-6. Suspension system			-	I	-	-	-	I
*6-7. Steering system			-	1	-	-	-	1
*6-8. Manual transmission oil	Genuine "SUZUKI GEAR OIL 75W"		-	R	-	-	-	1
	Other than "SUZUKI GEAR OIL 75W"		-	R	-	-	-	R
6-9. Automatic transmission	Fl	uid level	-	Ι	-	-	-	I
	*F		Replace months.	every 30	000 km (18000 mi	les) or 24	1
	*F	luid hose	Inspect e	very 600	00 km (36	6000 mile	s) or 48 r	months.
*6-10. Transfer oil	Genuine "SUZUKI GEAR OIL 75W"		Inspect e	every 300	00 km (1	8000 mil	es) or 24	months.
			Replace	every 60	000 km (3	86000 mil	es) or 48	months.
	Other than "SUZUKI GEAR OIL 75W"		-	R	-	-	-	R
*6-11. Differential oil	Genuine "SUZUKI SUPER GEAR OIL 75	W-85 SYNTHETIC"	-	-	-	R	-	-
6-12. All latches, hinges and locks			-	I	-	-	-	I
*6-13. Air conditioner filter element * ³			-	I	-	I	-	R

#2: Clutch fluid is supplied from brake fluid reservoir.


NOTE:

This table shows the service schedule up to 90000 km (54000 miles). Beyond 90000 km (54000 miles), perform the same services at the same intervals shown in the chart. *1 Inspect more frequently if the vehicle is used under dusty conditions. *2 Check or replace as necessary if you usually drive with high speed or high engine revolutions. *3 Clean more frequently if the air flow from the air conditioner decreases.

For Indonesia

Fire extinguisher

The fire extinguisher (1) is mounted under the driver's seat.

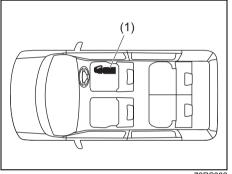

73RS302

WARNING

• The fire extinguisher is filled with high-pressure gas.

Failure to perform the following operations could result in the fire extinguisher malfunction, damage or even serious injury to the driver and the passengers.

- Do not put your foot on the fire extinguisher or kick it.
- Do not place objects on the fire extinguisher or by the fire extinguisher.
- Do not let the child touch the fire extinguisher.
- Do not drop anything on the fire extinguisher or apply strong shock.
- Keep the fire extinguisher dry. If the fire extinguisher gets wet, wipe off with a dry cloth.
- Do not leave the fire extinguisher in high temperatures exposed to direct sunlight.
- If rust or damage is found on the fire extinguisher, contact an authorized SUZUKI dealer for inspection.


(Continued)

WARNING

(Continued)

- If you do not observe the following rules, the fire extinguisher may come off during driving and injure the passengers, or it may interfere with your driving and lead to a serious accident in the worst case.
 - Do not operate the fire extinguisher mounting band or latch except during use or maintenance.
 - If the mounting band or latch of the fire extinguisher has been operated, firmly fix the fire extinguisher in the specified position.
 For details, refer to "Installation on the vehicle" in this section.
 - If the fire extinguisher mounting band is loose, contact an authorized SUZUKI dealer and have it inspected.


Removal and installation for the fire extinguisher

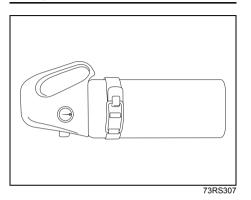


Use the fire extinguisher according to the following procedures. The fire extinguisher is effective only for initial fire extinguishing. If the fire is large, there may be cases not to extinguish the fire. Call the fire station immediately.

Removal from the vehicle


1) Slide the seat where the fire extinguisher is mounted fully rearward.

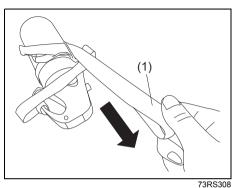

 Hold the handle (1) of the strap and pull it towards the front of the vehicle. (The handle is attached to the floor carpet by the hook and loop fastener.)

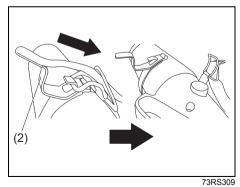

3) The latch (2) is unlocked when you pull the strap.

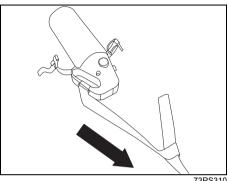

- 73RS310
- 4) Continue pulling the strap and completely separate the fire extinguisher from the bracket.


NOTE:

If the fire extinguisher cannot be removed in the above procedure, follow the procedure, referring to "When the fire extinguisher cannot be removed by using the strap".


SUPPLEMENT

When the fire extinguisher cannot be removed by using the strap


1) Slide the seat where the fire extinguisher is mounted fully rearward.

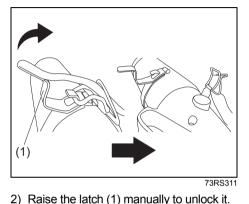

- 3) Pull up the pocket (2) on the strap end to release it from the latch (1).

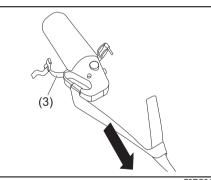

- Installation on the vehicle
- Slide the seat where the fire extinguisher will be mounted fully forward. Install the fire extinguisher from the backward of the seat.

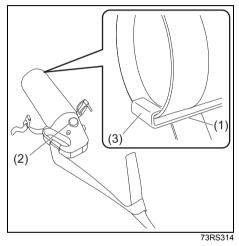



2) Place the fire extinguisher on the bracket (1) with the pressure gauge (2) faced upward. Hang the bottom end of the fire extinguisher onto the hook (3) of the bracket.



4) Completely loosen the band (3), and remove the fire extinguisher from the bracket.


SUPPLEMENT

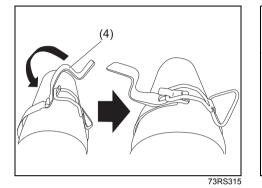

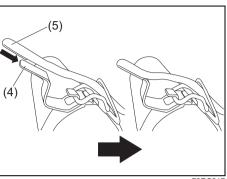


73RS317

3) Recline the latch (4) in the arrow direction to lock it securely.

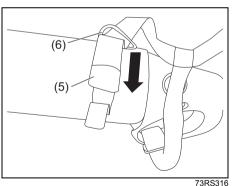

4) Pass the pocket (5) at the tip of the strap through the ring (6).

5) Hook the pocket (5) to the latch (4).

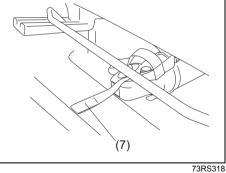

6) Slide the seat where the fire extinguisher is mounted fully rearward and paste the handle (7) of the strap to the protruding part of the floor carpet. Paste the handle straight from the center of the fire extinguisher so that the tip of the handle does not stick out from the edge of the protruding part.

7) Make sure that the pocket is hooked to the latch.


WARNING

Fix the fire extinguisher securely on the specified position.


If the installation is unstable, the fire extinguisher may come off during driving and injure the passengers, or it may interfere with your driving and lead to a serious accident in the worst case.

How to operate the fire extinguisher

Operate the fire extinguisher according to the following procedure and the same procedure described on the fire extinguisher label.

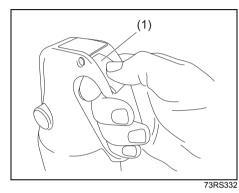


1) Hold the fire extinguisher vertically and press the yellow button (1) to release the safety lock.

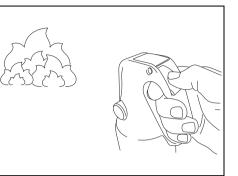


73RS333


2) Point the nozzle toward the flame.

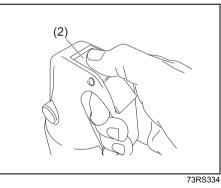

3) Press the red button (2) completely and spray the fire extinguishing agent until the fire is extinguished.

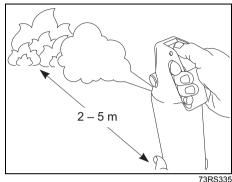

 The distance is adjusted by the fire extinguisher's injection range (about 2 - 5 m) according to the fire condition.

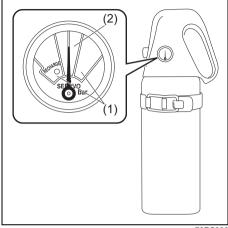

73RS336

NOTE:

- If the pressure gauge needle on the top of the fire extinguisher indicates the red range (1), normal performance may not be obtained. Make sure it is in the green range (2).
- The fire extinguisher spray time under normal conditions (new, prescribed pressure and fully refilled) is approximately 8 seconds minimum. Release the red button to stop the spray.

Management after using

NOTICE

Once the fire extinguisher is used, the safety lock cannot be engaged. Be careful not to spray the fire extinguisher accidentally. Also, do not reattach the fire extinguisher to the vehicle and reuse them, even if they remain.

Refilling of the fire extinguisher (filling and pressurization of the fire extinguishing agent) and replacement of parts are required for each use. Contact an authorized SUZUKI dealer regarding the handling of the fire extinguisher after using.

Maintenance

- To operate the fire extinguisher properly, check the following items periodically (at least every 6 months). It is recommended to ask an authorized SUZUKI dealer for inspection.
- If you find any trouble with the fire extinguisher, or if you need to replace or dispose of the fire extinguisher, contact an authorized SUZUKI dealer.




73RS337

- (1) "Exp. Date" indicates the expiration date.
- (2) "Prod. Date" indicates the production date.

SUPPLEMENT

1) Check that expiration date printed on the label of the fire extinguisher has not been exceeded.

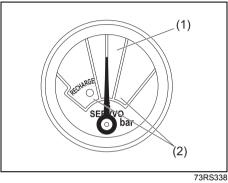

- 2) Check that the pressure gauge needle is in the green range (1) and that the pressure is normal. When the pressure drops, the needle swings to the left, indicating the red range (2). If too much pressure is applied, the needle will swing to the right, indicating the red range. Also, check that the pressure gauge itself is not damaged.

If the pressure is abnormal, contact an authorized SUZUKI dealer.

- 3) Check the following items to see if there are any problems with the fire extinauisher.
 - Damage to the handle and nozzle
 - Deterioration of the plastic part
 - · Rust and dents in the fire extinquisher body (side, bottom)
 - Leakage of fire extinguishing agent
 - · Loosening or damage of the mounting band

WARNING


- · Do not use a faulty fire extinquisher. The fire extinguisher may malfunction or be damaged, resulting in serious injury.
- The fire extinguisher is filled with high-pressure gas. Do not disassemble the fire extinguisher by vourself. The fire extinguisher may malfunction or be damaged, resulting in serious injury.

NOTE:

When cleaning the fire extinguisher, use a clean, dry cloth and do not use water.

For Ukraine

Gasoline engine

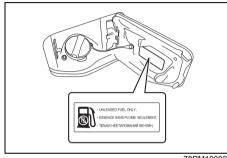

78RM100020

To avoid damaging the catalytic converter, you **must** use unleaded gasoline with an octane number (RON) of 91 or higher (or 95 or higher if it is stated on the fuel filler lid), which comply with the European standard EN228. These vehicles are also identified by a label attached near the fuel filler pipe that states: "UNLEADED FUEL ONLY", "ESSENCE SANS PLOMB SEULEMENT" or "TIЛЬКИ НЕЕТИЛОВАНИЙ БЕНЗИН".

Gasoline-ethanol blends

Blends of unleaded gasoline and ethanol (grain alcohol), also known as gasohol, are commercially available in certain areas. Blends of this type may be used in your vehicle if they are no more than 10% ethanol. Check that this gasoline-ethanol blend has octane ratings no lower than those recommended for the gasoline.

NOTE:

If you are not satisfied with the driveability or fuel economy of your vehicle when you use a gasoline-alcohol blend, you should switch back to unleaded gasoline containing no alcohol.

Gasoline containing MTBE (where legally available)

Unleaded gasoline containing MTBE (methyl tertiary butyl ether) may be used in your vehicle if the MTBE content is not greater than 15%. This oxygenated fuel does not contain alcohol.

NOTICE

The fuel tank has an air space to allow for fuel expansion in hot weather. If you continue to add fuel after the filler nozzle has automatically shut off or an initial blowback occurs, the air chamber will become full. Exposure to heat when fully fuelled in this manner will result in leakage due to fuel expansion. To prevent such fuel leakage, stop filling after the filler nozzle has automatically shut off, or when initial vent blowback occurs, if using an alternative non-automatic system.

NOTICE

Be careful not to spill fuel containing alcohol while refueling. If fuel is spilled on the vehicle body, wipe it up immediately. Fuels containing alcohol can cause paint damage, which is not covered under the New Vehicle Limited Warranty.

SUPPLEMENT

MEMO

 	 	 	 	 	 	-	 	 	-		-	 	 -	 -	 	 	 	
 	 	 	 	 	 	-	 · _	 	_		_	 · _ ·	 _	 -	 	 	 	
 	 	 	 	 	 	_	 	 			_	 · _ ·	 _	 _	 	 	 	
 	 	 	 	 	 	_	 	 			_	 · _ ·	 	 _	 	 	 	
 	 	 	 	 	 	_	 	 			_	 	 	 _	 	 	 	
 	 	 	 	 	 	_	 	 			_	 	 	 _	 	 	 	
 	 	 	 	 	 	_	 	 			_	 	 	 _	 	 	 	
 	 	 	 	 	 	_	 	 			_	 	 	 _	 	 	 	
 	 	 	 	 	 	_	 	 			_	 	 	 _	 	 	 	
 	 	 	 	 	 	_	 	 	_	_	_	 _	 _	 _	 _	 	 	
 	 	 	 	 	 	_	 	 	_		_	 	 _	 -	 	 	 	
 	 	 	 	 	 	-	 -	 	-		-	 	 -	 -	 	 	 	

INDEX

Symbols

"SOS" button	10-14
Α	
Accelerator pedal	3-7
Accessory socket	
Adding coolant	6-29
Adjusting headlight pattern	
Air cleaner	
Air conditioning system	6-61
AIRBAG light	1-43, 2-47
Anti-lock brake system (ABS)	3-54, 3-56
Anti-lock brake system (ABS) warning light	
Anti-theft feature	5-76
Assist grips	
Automatic headlight leveling system warning ligh	t 2-52
Automatic heating and air conditioning system	
(climate control)	5-23
Automatic light operation	2-58
Automatic transmission	3-10
Automatic transmission (AT) Fluid	
Average fuel consumption	 2-21 , 2-3 1
Average speed	2-3′
В	
Battery	6-43
Battery replacement	2-7
Bluetooth® audio	5-7 <i>°</i>
Bluetooth® hands-free	5-62
Brake assist system	3-53
Brake fluid	6-3

Brake pedal	8-7, 6-36
Brake system warning light	2-43
Brakes	
Braking	3-53
Brightness control2-	18, 2-27
Built date	
Bulb replacement	
C	
Catalytic converter	4-9
Central door locking system	
Changing engine oil and filter	
Changing wheels	
Charging light	
Chassis serial number	
Child restraint	
Child restraint system for countries applied for	
UN Regulation No.16	1-21
Child restraint systems	
Child restraint systems suitability for each seat posit	
(for the light commercial vehicle)	
Child restraint systems suitability for each seat posit	
(for the passenger vehicle with airbag	
deactivation switch)	1-21
Child restraint systems suitability for each seat posit	
(for the passenger vehicle without airbag	
deactivation switch)	1-27
Clock	
Clutch fluid	
Clutch pedal	3-7, 6-35
Coolant level check	
Coolant replacement	

Dual sensor brake support OFF indicator light	2-51	For GCC countries
Dual sensor brake support OFF switch	3-37	For Indonesia
E		For Russia
Electric mirrors	2-15	For Russia and other c
Electric window controls	2-11	adopting ERA-GLONA
Electronic stability program (ESP [®])	3-55	For Taiwan
Emergency locking retractor (ELR)		For Thailand
Emergency stop signal (ESS)		For Ukraine
Engine coolant		Frame hooks
Engine coolant temperature light		Front airbags
Engine hood		Front fog light
Engine oil and filter		Front fog light indicate
Engine oil consumption		Front fog light switch
Engine serial number		Front passenger airbag
Engine trouble: Does not start		Front position light
~		

Engine trouble: Overheating	7-10
Engine trouble: Starter does not operate	7-10
ERA-GLONASS microphone	
ERA-GLONASS Warning Light	3-77, 10-19
ESP [®] OFF indicator light	2-45, 3-57
ESP [®] OFF switch	3-58
ESP [®] warning light	2-44, 3-57
Exhaust gas warning	1-56
F	
Floor mats	1-1
Fluid level check	6-31
Folding rear seats	
Footrest	5-13
For Australia	
For Brazil	
For Chile and Panama	
For GCC countries	
For Indonesia	10-31
For Russia	
For Russia and other countries	
adopting ERA-GLONASS	
For Taiwan	
For Thailand	10-13
For Ukraine	
Frame hooks	5-14
Front airbags	1-44
Front fog light	6-52
Front fog light indicator light	
Front fog light switch	
Front passenger airbag deactivation system	1-54
Front position light	6-50

Front seat back pocket	
Front seat heater	
Front turn signal light	6-50
Fuel	
Fuel consumption	2-21, 2-31, 9-4
Fuel filler cap	5-1
Fuel gauge	
Fuel recommendation	
Fuses	6-44
Fuses in engine compartment	
Fuses under dashboard	6-46
6	

G

Gear oil	
Gear oil change	
Gear oil level check	
Gearshift indicator	
Glove box	
Guide me light	
н	

Halogen headlights	6-49
Hazard warning switch	2-69
Head restraints	
Headlight aiming	6-48
Headlight leveling switch	2-67
Heated rear window switch /	
heated outside rearview mirror switch	
Heating and air conditioning system	5-16
High beam assist	3-35
High beam assist indicator light (green)	2-54
High beam assist warning light (orange)	2-53

High engine coolant temperature warning light	
(red color)	2-50
Highway driving	4-10
Hill descent control indicator light	3-60
Hill descent control switch	
Hill hold control system	3-61
Horn	2-72
How ABS works	3-55
I	
Ignition key reminder	2-2
Ignition switch	
Illumination indicator light	2-54
Immobilizer system	
Immobilizer system warning light	2-48
Improving fuel economy	
Information display	
Information switch	2-28
Inside rearview mirror	2-13
Installation of child restraint with top tether	1-41
Installation of radio frequency transmitters	5-30
Installation with ISOFIX type anchorages	
Instantaneous fuel consumption	
Instrument cluster	
Instrument panel tray	5-10
Interior light	
J	
Jacking instructions	7-1
Jump-starting instructions	
κ	
Keyless entry system transmitter	2-6
Keys	

L

Lane departure warning	3-33
Lane departure warning indicator light	2-51
Lane departure warning OFF indicator light	2-52
Lane departure warning OFF switch	3-38
Lap-shoulder belt	
Lap-shoulder belt with detachable connector	1-11
LED headlight warning light	2-53
LED headlights	6-49
License plate light	6-55
Light reminder buzzer	2-60
Lighting control lever	2-57
Listening to a CD	5-48
Listening to an iPod	5-58
Listening to an MP3/WMA/AAC disc	
Listening to files stored in a USB device	5-55
Listening to the radio5-4	1, 5-43
Low engine coolant temperature light (blue color)	2-50
Low fuel warning light	
Low tyre pressure warning light2-4	1, 3-64
Μ	
Main beam (high beam) indicator light	2-54
Maintenance recommended under	
severe driving conditions	. 10-26
Maintenance recommended under severe driving cond	
(except for EU countries and Israel)	
Maintenance recommended under severe driving cond	
(for EU countries and Israel)	
Maintenance schedule	
Malfunction indicator light	
Manual heating and air conditioning system	5-17

Master warning indicator light2-56Mirrors2-13O2-0Odometer2-21, 2-33Oil change reminder light2-55Oil filter replacement6-27Oil level check6-25Oil pressure light2-46Open door warning light2-49Outside rearview mirrors2-14Outside rearview mirrors folding switch2-15
O Odometer
Odometer2-21, 2-33Oil change reminder light2-55Oil filter replacement6-27Oil level check6-25Oil pressure light2-46Open door warning light2-49Outside rearview mirrors2-14
Oil change reminder light
Oil filter replacement6-27Oil level check6-25Oil pressure light2-46Open door warning light2-49Outside rearview mirrors2-14
Oil filter replacement6-27Oil level check6-25Oil pressure light2-46Open door warning light2-49Outside rearview mirrors2-14
Oil level check6-25Oil pressure light2-46Open door warning light2-49Outside rearview mirrors2-14
Oil pressure light
Outside rearview mirrors2-14
Outside rearview mirrors2-14
Outside rearview mirrors folding switch2-15
Ρ
Parking brake6-37
Parking brake lever
Pedal
Periodic maintenance schedule
(except for EU countries and Israel)6-3
Periodic maintenance schedule
(for EU countries and Israel)6-13
Pinching prevention function2-12
Power-assisted brakes
R
Radio antenna5-30
Raising vehicle with garage jack7-3
RDS (Radio Data System)5-45
Rear combination light
Rear differential oil
Rear fog light indicator light2-55
Rear fog light switch2-62
Rear passenger's seat belt reminder light2-47

Rear seats1-5
Rear window wiper/washer switch2-71
Refill with oil and oil leakage check
Refilling
Remote audio controls
Replacing tyres and/or wheels 3-71
Running-in
S
Seat adjustment 1-2
Seat belt inspection 1-17
Seat belt pretensioner system1-18
Seat belt reminder 1-15
Seat belt warning 10-3
Seat belts and child restraint systems 1-7
Seat position adjustment lever
Seatback angle adjustment lever 1-3
Selection of coolant
Selector position / Gearshift indicator
Setting mode
Side airbags and side curtain airbags 1-48
Side door locks
Side turn signal light 6-52
Spark plugs 6-30
Specified Fluid 6-31
Specified oil6-23
Speed limiter 3-25
Speedometer
Stability control system 3-56
Starting engine
Steering wheel 6-38
Sun visor 5-4

Supplemental restraint system (airbags)	1-42
SUZUKI SAFETY SUPPORT	
т	
Tachometer	2-17, 2-27
Tailgate	2-3
Theft deterrent alarm system	2-9
Theft deterrent light	
Thermometer	
Tilt steering lock lever	2-71
Towing your vehicle (recreational towing)	7-7
Traction control system	
Traffic sign recognition	
Trailer towing	
Transfer lever	
Transfer oil	6-33
Trip meter	2-21, 2-33
Turn signal control lever	2-68
Turn signal indicators	2-54
Turn signal operation	2-68
Tyre changing tool	
Tyre inspection	
Tyre pressure monitoring system (TPMS)	3-63
Tyre rotation	6-40
Tyres	6-38
Ŭ	
USB socket	
Using transmission	
v	
Vehicle cleaning	
Vehicle identification	
Vehicle swaying warning	
· · · · · · · · · · · · · · · · · · ·	

INDEX

W

Warning and indicator lights	
Warning and indicator messages	2-37
Washing	8-4
Waxing	8-6
Windows	
Windshield washer	2-70
Windshield washer fluid	6-60
Windshield wiper and washer lever	2-69
Windshield wipers	2-70
Wiper and washer operation	2-69
Wiper blades	

MEMO

 -
 -
 -
 -
 -
 _
 -
 -
 -
 -
 -
 -
 -

For countries, in which the revised edition is applicable after the third edition of UN Regulation No.10 has been enacted.

Installation of Radio Frequency (RF) Transmitting Equipment

Your vehicle is conformed to the revised edition since the third edition of UN Regulation No.10.

When you intend to use RF transmitting equipment in your vehicle, we strongly recommend that you select the equipment which conforms to applicable rules or regulations in your country, and consult a SUZUKI dealer or qualified service technician for advice.

Table : Installing and the use of the on-board RF transmitter equipment

Frequency b	ands (MHz)	Antenna position at vehicle*	Maximum output power (W)
144-146	Amateur band		50
430-440	Amateur band		50
1200-1300	Amateur band	84MM01201	10

(1) Front

(2) Antenna installation position: Front left of roof

(3) Antenna installation position: Front right of roof

*The illustration is example of hatchback vehicle.

Specific conditions for installation


NOTE:

- 1) Antenna cable shall be routed as far as possible from the vehicle electrical and electronic systems and wiring in the vehicle.
- 2) Power cable of transmitter shall be properly connected to lead-acid battery in the vehicle.

NOTICE

Before using your vehicle, check if there is no interference to all electrical devices on your vehicle for both Standby mode and Transmitting mode of the RF transmitting equipment.

Approved by TRA

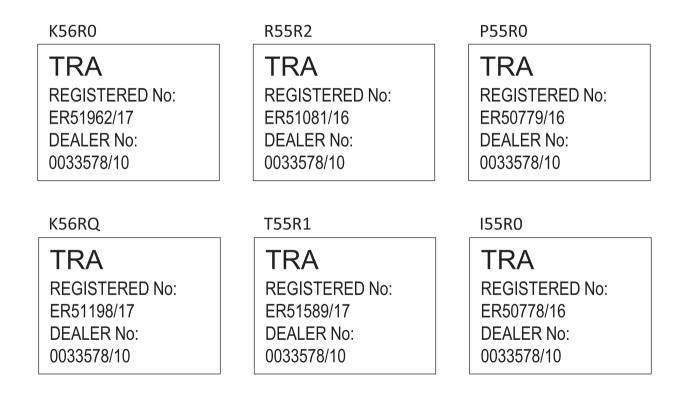

Approved by TRA

K56RA

TRA REGISTERED No: ER54680/17 DEALER No: 0033578/10

K72R0

TRA REGISTERED No: ER59978/17 DEALER No: 0033578/10 R55R3

TRA REGISTERED No: ER60628/18 DEALER No: 0033578/10

Approved by TRA

S180052024

TRA
REGISTERED No: ER60911/18
DEALER No: DA36975/14

TIS-15

TRA REGISTERED No: ER59583/17 DEALER No: DA36975/14

40398036

TRA REGISTERED No: ER38555/15 DEALER No: DA36975/14 Model:K77RA



א.השימוש במכשיר הינו על בסיס "משני" ופטור מרשיון הפעלה אלחוטי. כלומר-לא מוגן מהפרעות וללא הפרעה למערכות אחרות הפועלות כדין. ב. רק "בפעולת בזק" לשימוש עצמי של הלקוח בלבד,הציוד פטור מרשיון הפעלה אלחוטי. מתן "שרות בזק" לצד ג' מחייב רשיון מיוחדממשרד התקשורת. ג.אסור להחליף את האנטנה המקורית של המכשיר,ולא לעשות בו כל שינוי טכני אחר.

K56RQ

מספר אישור אלחוטי של משרד התקשורת הוא 51-59818 אסור להחליף את האנטנה המקורית של המכשיר ולא לעשות בו כל שינוי טכני אחר

T55R1

מספר אישור אלחוטי של משרד התקשורת הוא 51-60620 אסור להחליף את האנטנה המקורית של המכשיר ולא לעשות בו כל שינוי טכני אחר

155R0

מספר אישור אלחוטי של משרד התקשורת הוא 51-60622 אסור להחליף את האנטנה המקורית של המכשיר ולא לעשות בו כל שינוי טכני אחר

מספר אישור אלחוטי של משרד התקשורת הוא 51-61633 אסור להחליף את האנטנה המקורית של המכשיר ולא לעשות בו כל שינוי טכני אחר

R55R2

מספר אישור אלחוטי של משרד התקשורת הוא 51-60619 אסור להחליף את האנטנה המקורית של המכשיר ולא לעשות בו כל שינוי טכני אחר

P55R0


מספר אישור אלחוטי של משרד התקשורת הוא 51-60623 אסור להחליף את האנטנה המקורית של המכשיר ולא לעשות בו כל שינוי טכני אחר

K77RA

מספר אישור אלחוטי של משרד התקשורת הוא 51-63422 אסור להחליף את האנטנה המקורית של המכשיר ולא לעשות בו כל שינוי טכני אחר

K56RA

Approved by OMAN-TRA

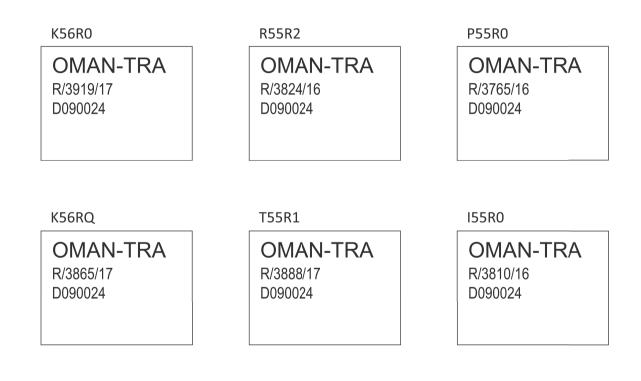

Approved by OMAN-TRA

K56RA

OMAN-TRA R/4423/17 D090024 K72R0

OMAN-TRA R/5099/18 D090024 R55R3

OMAN-TRA R/5258/18 D090024

Approved by OMAN-TRA

S180052024

OMAN-TRA R/1293/10 D090258

TIS-15

OMAN-TRA R/4948/17 D100428 Model:K77RA

OMAN-TRA

R/5041/17

D090024

40398036

OMAN-TRA R/1445/10 D090258

MODEL NUMBER:K77RA

Equipment Identifier:K77RA

NCA APPROVED: 1R3-1M-7E1-171

"This product has been Type Approved by Jamaica: SMA - "K77RA".

MODEL:K77RA



K56R0

NCA APPROVED: 1R3-1M-7E0-13A

K56RQ

NCA APPROVED: 1R3-1M-7E0-144

P55R0

NCA APPROVED: 1R3-1M-7E0-13C

T55R1

NCA APPROVED: 1R3-1M-7E1-130

K72R0

NCA APPROVED: 1R3-1M-7E1-170

155R0

NCA APPROVED: 1R3-1M-7E1-12D

R55R2

NCA APPROVED: 1R3-1M-7E0-13E

R55R3

NCA APPROVED: BR3-1M-GE2-009

S180052024





И005 18

Equipment type/model: K77RA



МОДЕЛ: K56RQ,R55R2,T55R1 P55R0,I55R0,K56RA




40398036



FCC CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

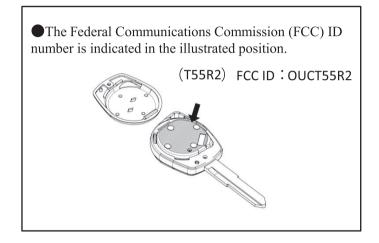

S180052024

AGREE PAR L'ANRT MAROC

Numéro d'agrément : MR 17719 ANRT 2018 Date d'agrément : 16/10/2018

TIS-15

AGREE PAR L'ANRT MAROC

Numéro d'agrément : MR 17386 ANRT 2018 Date d'agrément : 30/08/2018

40398036

AGREE PAR L'ANRT MAROC

Numéro d'agrément : MR 5837 ANRT 2010 Date d'agrément : 08/10/2010 TYPE:K77RA

AGRÉÉ PAR L'ANRT MAROC

Numéro d'agrément: MR 15253 ANRT 2017 Date d'agrément: 29/11/2017 K56RA

AGRÉÉ PAR L'ANRT MAROC Numéro d'agrément : MR13801ANRT2017

R55R2

AGRÉÉ PAR L'ANRT MAROC Numéro d'agrément : MR13797ANRT2017

P55R0

AGRÉÉ PAR L'ANRT MAROC Numéro d'agrément : MR13794ANRT2017 K56RQ

AGRÉÉ PAR L'ANRT MAROC Numéro d'agrément : MR13800ANRT2017

T55R1

AGRÉÉ PAR L'ANRT MAROC Numéro d'agrément : MR13799ANRT2017

155R0

AGRÉÉ PAR L'ANRT MAROC Numéro d'agrément : MR13795ANRT2017

AGREE PAR L'ATRPT BENIN Numéro d'agrément : 026/ARCEP/SE/DR/DAJRC/GU/2018

Date d'agrément :14 FEV. 2018

K56R0

AGREE PAR L'ATRPT BENIN Numéro d'agrément : 068/ARCEP/SE/DR/DAJRC/GU/2018

Date d'agrément :5 AVR. 2018

K56RQ

AGREE PAR L'ATRPT BENIN

Numéro d'agrément : 067/ARCEP/SE/DR/DAJRC/GU/2018 Date d'agrément :5 AVR. 2018

R55R3

AGREE PAR L'ATRPT BENIN Numéro d'agrément : 063/ARCEP/SE/DR/DAJRC/GU/2018

Date d'agrément :5 AVR. 2018

AGRÉÉ PAR L'ATRPT BENIN Numéro d'agrément : N°057/ARCEP/SE/DR/DAJRC/GU/2019 Date d'agrément : 09 AVR 2019

155R0

AGREE PAR L'ATRPT BENIN

Numéro d'agrément : 025/ARCEP/SE/DR/DAJRC/GU/2018 Date d'agrément :14 FEV. 2018

K72R0

AGREE PAR L'ATRPT BENIN Numéro d'agrément : 065/ARCEP/SE/DR/DAJRC/GU/2018 Date d'agrément :5 AVR. 2018

P55R0

AGREE PAR L'ATRPT BENIN Numéro d'agrément : 064/ARCEP/SE/DR/DAJRC/GU/2018 Date d'agrément :5 AVR. 2018

Modèle :K77RA

AGREE PAR L'ATRPT BENIN

Numero d'agrement: 007/ARCEP/SE/DR/DAJRC/GU/2018

Date d'agrement: 23 JAN. 2018

K56R0,R55R2,P55R0,I55R0,T55R1,R55R3,T55R2



Continental Automotive GmbH S180052024 TRC/LPD/2017/104

Continental Automotive GmbH TIS-15 TRC/LPD/2017/560

Model:K77RA

Type approval No:TRC/LPD/2017/606

Continental Automotive GmbH 40398036 TRC/LPD/2018/431
 K56R0
 K72R0
 K56RQ
 I55R0


 TRC/LPD/2017/549
 TRC/LPD/2017/605
 TRC/LPD/2017/550
 TRC/LPD/2017/492


 P55R0
 T55R1
 R55R2
 R55R3

 TRC/LPD/2017/551
 TRC/LPD/2017/493
 TRC/LPD/2017/552
 TRC/LPD/2018/78

T55R2 TRC/LPD/2018/79



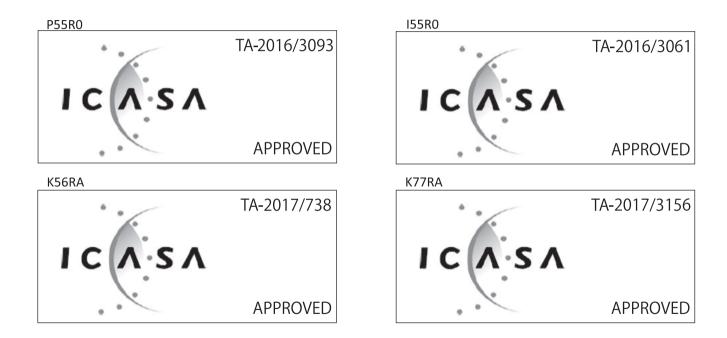

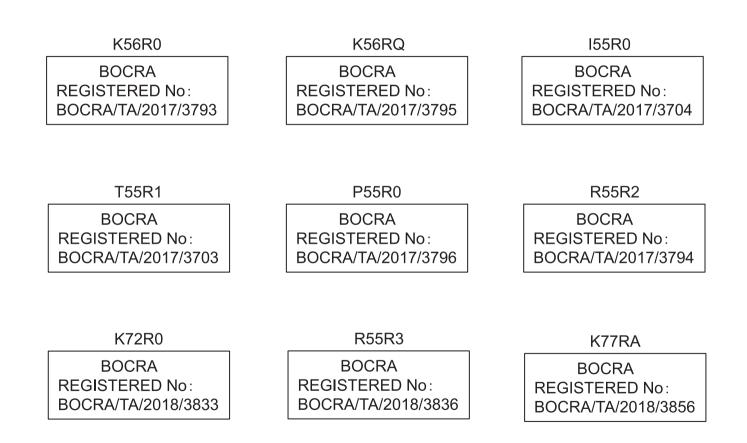

K56R0,K72R0,K56RQ,I55R0,P55R0,R55R3,T55R1,K77RA

<u>Connection and use of this communications</u> <u>equipment is permitted by the Nigerian</u>

Communications Commission



NAME CENSU S.A. ADDRESS AVDA. RCA. ARGENTINA NRO. 900 ESQ LOPEZ MOREIRA PHONE +595 21 600 700



- NR: 2018-03-I-000082 OMRON T55R1
- NR: 2018-03-I-000092 OMRON T55R2
- NR: 2018-03-I-000093 OMRON R55R3
- NR: 2018-05-I-000184 OMRON K56R0
- NR: 2018-05-I-000185 OMRON K73R0
- NR: 2018-05-I-000186 OMRON P55R0

Fabricados por OMRON Automotive Electronics, Co. Ltd.

T55R2

155R0





I55R0,T55R1



Model/Type:K77RA

CNC COMISIÓN NACIONAL DE COMUNICACIONES H-21160

55742/SDPPI/2018

7522

Додаток 5 до Технічного регламенту

ДЕКЛАРАЦІЯ ПРО ВІДПОВІДНІСТЬ

1. Радіообладнання (виріб, тип, номер партії чи серійний номер)

Радіоприймач торговельної марки SUZUKI моделі К77RA системи дистанційного керування доступом до автомобіля.

2. Найменування га адреса виробника або його уповноваженого представника

"Сузукі Моуте Коперейшн", 300 Такасука-Чо, Маінамі-Ку, Хамаматсу-Ші, Шізоука 432-8611, Японія("Suzuki Motor Corporation", 300 Takatsuka-Cho, Minami-Ku, Hamamatsu-Shi, Shizuoka 432-8611 Japan).

3. Ця декларація відповідності видана під особисту відповідальність виробника.

Японія("Suzuki Motor Corporation", 300 Takatsuka-Cho, Mimami-Ku, Hamamatsu-Shi, Shizuoka 432-8611 "Сузукі Моуте Коперейшн", 300 Такасука-Чо, Маінамі-Ку, Хамаматсу-Ші, Шізоука 432-8611. Japan).

КПД 4. Об'єкт декларації (ідентифікація радіообладнання, яка дає змогу забезпечити його чітке зображення у разі потреби кольорове ідентифікації зазначеного радіообладнання) простежуваність; може включати

Радіоприймач торговельної марки SUZUKI моделі К77RA системи дистанційного керування

доступом до автомобіля.

5. Об'єкт декларації відповідає вимогам таких технічних регламентів:

Технічного регламенту радіообладнання;

6. Посилання на відповідні стандарти з переліку національних стандартів, що були яких декларується ання) TAD AT інші технічні специфікації, щодо na Rencii Ta вілповілність (із зазначенням ілентифікаційного номе застосовані, або посилання на

ВІДПОВІДНІСТЬ (13 3а.	відповідність (із зазначенням ідентифікаціиного номера, версії та дати видання)	юмера, верси та дат	и видання)	
Пункти "Технічного регламенту	Стандарти	Номер протоколу випробувань	Випробувальна лабораторія	
радіообладнання"			(атестат акредитації)/	
			додаткова інформація	
Застосовані станда	Застосовані стандарти, що включені до "Переліку національних стандартів, відповідність яким надає презумпцію відповідності радіообладнання суттевим вимогам"	іональних стандартів, іаднання суттевим вим	відповідність яким надає югам"	
п.7		1		
Застосовані стандар	Застосовані стандарти, що не включені до "Переліку національних стандартів, відповідність яким надає презумпцію відповідності радіообладнання суттевим вимогам"	щіональних стандартів іаднання суттєвим вим	з, відповідність яким надає іогам"	
п.6,абзац1	ДСТУ EN 60950-1:2015	6909 від 21.12.2017	ВЦ РіТ УНДІРТ(2Н227)	
	(тільки за пп. 1.2.3,1.2.4,1.7)			
п.6,абзац2	ДСТУ EN 301 489-1:2014	6909 від 21.12.2017	ВЦ РіТ УНДІРТ(2Н227)	
	(пп.8.2,9.2,9.3)			
	(з урахуванням			
	ДСТУ ETSI EN 301 489-3:2009)			
п.7	ДСТУ ETSI EN 300 220-2:2012, ETSI EN 300 220-2 V2.3.1	6909 від 21.12.2017	ВЦ Р:Т УНДІРТ(2Н27)	

(H)	7. Призна
айменув	ичений .
ання, іл	орган з
ентифікац	в оцінки
ійний	відпо
номер	відно
згілно	on.
з ресстро	

(наименування, ідентифікаційний номер згідно з реєстром призначених органі в
ених органив)

Ta (у разі залучення призначеного органу з оцінки відповідності). видав сертифікат експертизи типу No BIJ

p

поширюється дія декларації про відповідність забезпечення, 8 У відповідних випадках опис компонентів та аксесуарів, у тому числі програмного завдяки якому радіообладнання функціонує за призначенням і на яке

Версія виконання виробу(HW version),яка впливає на дотримання суттєвих вимог: Версія ПЗ(SW/FW version), яка впливає на дотримання суттєвих вимог:

77R00005/77RF0005; C/G;

9. Додаткова інформація

"Сузукі Моуте Коперейшн" ("Suzuki Motor Corporation")

Шизуока,Японія," 19" Серпень 2019 р. (місце та дата видачі)

КЕРІВНИК ВІДДІЛУ

ВІДДІЛ ПРОЕКТУВАННЯ АВТОМОБІЛЬНОЇ ЕЛЕКТРОННОЇ ТА ЕЛЕКТРИЧНОЇ СИСТЕМ

(посада)

(підпис d

(ініціали та прізвище) Чіакі Фукуда

OMRON

OMRON Automotive Electronics Co.Ltd. 6368 Nenjo-zaka, Okusa, Komaki, Aichi 485-0802 JAPAN TEL:+81-568-78-6159 FAX:+81-568-78-7659

MODEL:T55R1,I55R0



Frequency band(s) : T55R1:433.92MHz; I55R0:125kHz Maximum radio-frequency power transmitted in the frequency band(s) : T55R1: 80dBµV/m [@3m]; I55R0: 54dBµV/m [@10m]



та видав сертифікат експертизи типу № 2037.4.1-CET від 30.08.2018 аних ним дій)

виконав (найменування, ідентифікаційний номер згідно з ресстром призначених органів) експертизу типу

Ресстрацій номер: UA.TR.028

"УКРАЇНСЬКИЙ НАУКОВО-ДОСЛІДНИЙ ІНСТИТУТ Призначений орган з оцінки відповідності ДЕРЖАВНОГО ПІДПРИЄМСТВА НСЬКИЙ НАУКОВО-ДОСЛІДНИЙ ІНСТИТУТ РАДІО І ТЕЛЕБАЧЕННЯ".

Застосовані стан	Застосовані стандарти, що не включені до "Переліку національних стандартів, відповідпієть яким надає презумпцію відповідності радіообладивания суттєвим вимогам''	яльних стандартів, відперід ния суттєвим вимогам"	ність яким надає презумпцію
n.6, a63au 1	ДСТУ ЕN 60950-1:2015 (тільки за пл. 1.2.3, 1.2.4, 1.7), ДСТУ EN 50385;2007	7000 від 06.02.2018	вц рат ундирт (2н227)
n.6, aбзац 2	ДСТУ EN 301 489-1:2014 (пп. 8.2, 9.2, 9.3) (3 урахуванням ДСТУ ETSI EN 301 489-3:2009)	7000 sin 06.02.2018	вц ріт ундірт (2н227)
n.7	ДСТУ ETSI EN 300 220-2:2012, ETSI EN 300 220-2 V2.3.1	7000 sig 06.02.2018	ВЦ РГГ УНДІРТ (2H227)

P.J	Застосовані станд	регламенту радіообладнання"
	стандарти, що включені до "Переліку націо відповідності радіооблад	
3	зальних стандартів, відповід нання сутгсвим вимогам''	випребувань
	ність яким надає презумпцію	(атестат акредитації)/ додаткова інформація

Пункти "Технічного Стандарти Номер протоколу Випробувальна лабораторія

EI0

були застосовані, або посилання на інші технічні специфікації, щодо яких декларується

відповідність (із зазначенням ідентифікаційного номера, версії та дати видання):

6. Посилання на відновідні стандарти з переліку національних стандартів,

Технічного регламенту радіообладнання;

Ko., Лтл." ("OMRON Automotive Electronics Co., Ltd."), Японія, від 02.08.2018).

3. Ця декларація відповідності видана під особисту відповідальність виробника: "Омрен Отемоутів Електронікс Ко., Лгд.", 6368 Ненжозека, Оукюса, Комакі-сіті, Айчі-преф. 485-0802, Японія ("OMRON Automotive Electronics Co., Ltd.", 6368 Nenjozaka, Okusa, Komakicity, Aichi-pref. 485-0802 JAPAN)

Радіопульт торговельної марки OMIRON моделі T55R1 системи дистанційного керування

1. Радіообладнання (виріб, тип, номер партії чи серійний номер):

ДЕКЛАРАЦІЯ ПРО ВІДПОВІДНІСТЬ .№ RTS.UKR.355-44/18

доступом до автомобіля.

2. Найменування та адреса виробника або його уповноваженого представника: Уповноважений представник - ТОВ "Радіо Тест Стандарт", Україна, 03115, м.Каїв, вул. Львівська, 22-а, кв 135, код ЄДРПОУ 39205151 (Довіреність "Омрен Отемоутів Електронікс

T55R1

4. Об'єкт декларації (ідентифікація радіообладнання, яка дає змогу забезпечити

ідентифікації зазначеного радіообладнання): його простежуваність; може включати кольорове чітке зображення у разі потреби для

Радіопульт торговельної марки OMRON моделі T55R1 системи дистанційного керування

доступом до автомобіля.

5. Об'єкт декларації відповідає вимогам таких технічних регламентів:

T55R1

тому числі 33 функціонує > та аксесуарів, програмного забезпечення, завдяки якому радіообладнання призначенням і на яке поширюється дія декларації про відповідність: відповідних випадках опис компонентів GIKOMY забезпечення, програмного > ŝ

Ver7440;	Ver2.0;
Bepciя ПЗ (SW/FW version), яка впливає на дотримання суттевих вимог;	Bepcis виконання виробу (HW version), яка впливає на дотримання суттевих вимог:

9. Додаткова інформація:

Підприємства-виробники:

- "Омрен Отемоутів Електронікс Ко., Лгд.", Кірібайші, Іде-сіті, Наганоу-Пріфектер 399-2565, Японія ("OMRON Automotive Electronics Co., Ltd.", Kiribayashi, lida-city, Nagano-Prefecture 399-2565 Japan);

"Ей Ес Ті Ай Електронікс Індіє Прайвіг Лімітед", Плоє Но.399, Секте 8 Ай Ем Ті, Манесак Діст.Гургаон-122 050 Харіана, Індія ("ASTI Electronics India Private Limited", Plot No.399, Sector 8 ІМТ, Manesar Distt.Gurgaon-122 050 Нагуапа Іndia).

Підписано від імені та за дорученням:

"Oмрен Отемоутів Електронікс Ко., Лгд." ("OMRON Automotive Electronics Co., Ltd."), Японія, уповноваженим представником - ТОВ "Радіо Тест Стандарт"





та видав сертифікат експертизи типу № 2037.3.1-СЕТ від 30.08.2018 (опис виконаних ним дій)

експертизу типу

виконав (найменування, ідентифікаційний номер згідно з ресстром призначених органів)

"УКРАЇНСЬКИЙ НАУКОВО-ДОСЛІДНИЙ Ресстрацій номер: UA.TR.028 Призначений орган з оцінки відповідності ДЕРЖАВНОГО ПІДПРИЄМСТВА ІНСТИТУТ РАДЮ ТЕЛЕБАЧЕННЯ"

відповідності радіообладнання суттєвим вимогам"	тевим вимогам"	
n.7 -		1000
Застосовані стандарти, що не включені до "Персліку національних стандартів, відповідність яким надає презумпцію відповідності радіообладиання суттєвим вимотам"	стандартів, відповід тєвим вимогам''	ність яким надає презумпи
п.б. абзац I ДСТУ ЕN 60950-1:2015 6999 ві (пп. 1.2.3, 1.2.4, 1.7), ДСТУ EN 50364:2016	6999 від 06.02.2018	ВЦ РТ УНДРТ (2Н227)
	6999 від 06.02.2018	вц ртг ундргг (2н227)
ACTS FISTEN S01 493-52009)		BII PIT YHJIPT (2H227)

Застосовані стандарти, що включені до "Переліку національних стандартів, відповідність яким надає презумпцію регламенту Стандарти Номер протоколу випробувань Випробувальна лабораторія (атестат акредитації)/ додаткова інформація

були застосовані, або посилання на інші технічні специфікації, щодо яких декларується відповідність (із зазначенням ідентифікаційного номера, версії та дати видання): Пункти "Технічного радіообладнання"

155R0

ДЕКЛАРАЦІЯ ПРО ВІДПОВІДНІСТЬ № RTS.UKR.355-43/18

1. Радіообладнання (виріб, тип, номер партії чи серійний номер):

керування доступом до автомобіля. Радіопристрій (імобілайзер) торговельної марки OMRON моделі I55R0 системи дистанційного

2. Найменування та адреса виробника або його уповноваженого представника:

Уповноважений представник - ТОВ "Радіо Тест Стандарт", Україна, 03115, м.Кнів, вул. Львівська, 22-а, кв 135, код ЄДРПОУ 39205151 (Довіреність "Омрен Отемоутів Електронікс Ко., Лтд." ("OMRON Automotive Electronics Co., Ltd."), Японія, від 02.08.2018).

485-0802, Японія ("OMRON Automotive Electronics Co., Ltd.", 6368 Nenjozaka, Okusa, Komaki-"Омрен Отемоутів Електронікс Ко., Лтд.", 6368 Ненжозека, Оукюса, Комакі-сіті, Айчі-преф 3. Ця декларація відповідності видана під особисту відповідальність виробника:

city, Aichi-pref. 485-0802 JAPAN).

його простежуваність; може включати кольорове чітке зображення у разі потреби для ідентифікації зазначеного радіообладнання): 4. Об'скт декларації (ідентифікація радіообладнання, яка дає змогу забезпечити

Радіопристрій (імобілайзер) торговельної марки OMRON моделі 155R0 системи дистанційного

керування доступом до автомобіля.

Технічного регламенту радіообладнання; 5. Об'скт декларації відповідає вимогам таких технічних регламентів:

6. Посилання на відповідні стандарти з переліку національних стандартів, що

I55R0

33 у тому числі функціонує akcecyapin, призначенням і на яке поширюється дія декларації про відповідність: радіообладнання Ta відповідних випадках опис компонентів SIKOMY завдяки забезпечення, програмного > ÷

ні ідентифікується; Ver1.0; Bepciя виконання виробу (HW version), яка впливає на дотримання суттєвих вимог: Версія ПЗ (SW/FW version), яка впливає на дотримання суттевих вимог:

9. Додаткова інформація:

Підприємства-виробники:

"Омрен Отемоутів Електронікс Ко., Лгд.", Кірібайші, Іде-сіті, Наганоу-Пріфекчер 399-2565, Японія ("OMRON Automotive Electronics Co., Ltd.", Kiribayashi, lida-city, Nagano-Prefecture 399-2565 Japan);

- "Ей Ес Ті Ай Електронікс Індіе Прайвіт Лімітед", Плое Но.399, Секте 8 Ай Ем Ті, Манесак Діст.Гургаон-122 050 Харіана, Індія ("ASTI Electronics India Private Limited", Plot No.399, Sector 8 IMT, Manesar Distt.Gurgaon-122 050 Натуапа India).

Підписано від імені та за дорученням: "Омрен Отемоутів Електронікс Ко., Лтд." ("OMRON Automotive Electronics Co., Ltd."), Японія, уповноваженим представником - ТОВ "Радіо Тест Стандарт"



ДЕКЛАРАЦІЯ ПРО ВІДПОВІДНІСТЬ

моделей 5WK50250, 5WK50252, 5WK50257, 5WK50254, 40398036, 40406557, 40398279 Радіообладнання: Модуль радіоприймача (Receiver Module) торговельної марки «Continental»

(виріб, тип, номер партії чи серійний номер)

код €ДРПОУ 37463168) 2. ТОВ «Нормакон-Україна» (сфіс 314, вул. Кірова 139, м. Мелітополь, Запорізька обл., 72319, Україна,

(найменування та адреса виробника або його уповноваженого представника

3. Ця декларація відповідності видана під особисту відповідальність виробника

4. Об'єкт декларації:

Назва обладнання: Модуль радіоприймача (Receiver Module); Моделі: 5WK50250, SWK50252, SWK50257, SWK50254, 40398036, 40406557, 40398279;

Радіообладнання: радіоприймач 433 МГц;

Торговельна марка: «Continental»;

Automotive GmbH» (Siemensstrasse 12, D-93055 Re Ayromorib Cicreme Vex Pena6nik c.p.o.» (744 01 Виробник: «Контінентал Аутомотів ГмбХ» (Сименсстрасе 12, Д-93055 Ренсборг, Німеччина) / «Continental Kopanska 1713, Czech Republic); Peenyőnika) / «Continental Automotive Systems Czech Republic s.r.o.» (744 01 Frenstat pod Radhostem, Regensburg, Germany) на підприємстві: «Контінентал Френстат под Радхостем, Копанска 1713, Чеська

Номер партий або сериний номер: продукція виготовляється серийно.

(ідентифікація радіообладнання, яка дає змогу забезпечити його простежуваність; може включати кольорове чітке

зображення у разі потреби для ідентифікації зазначеного радіообладнання)

постановою Кабінета Міністрів України від 24.05.2017р. № 355 5. Об' ект декларації відповідає вимогам «Технічного регламенту радіообладнання», затвердженого

специфікації, щодо яких декларується відповідність: 6. Стандарти з переліку національних стандартів, що були застосовані, та інші стандарти і технічні

з безпеки (пункт 6 технічного регламенту)

JCTY EN 60950-1:2015 (EN 60950-1:2006 A11:2009 A1:2010 A12:2011 AC:2011 A2:2013, IDT);

ості (тункт 6 техні ного регламенту)

JCTY ETSI EN 301 489-3:2009 (ETSI EN 301 489-3:2002, IDT) ДСТУ EN 301 489-1:2014 (EN 301 489-1 V1.9.2, IDT);

ефективне використання радіочастотного ресурсу (пункт 7 технічного регламенту)

ETSI EN 300 220-2 V2.4.1 (2012 05)

(із зазначенням ідентифікаційного номера, версії та дати видання)

ma eupobie» (No UA. TR. 032) 7. Призначений орган з оцінки відповідності ООВ «Орган сертифікації «Центр сертифікації матеріалів

(найменування, ідентифікаційний номер згідно з реєстром призначених органів,

Виконав роботи з оцінки відповідності за процедурою експертизи типу (Модуль В)

(onuc euk онаних ним oiu,

та видав сертифікат експертизи типу № UA.032.СТ.0030-18 від 11 травня 2018р

(у разі запучення призначеного органу з оцінки відповідності,

Програмне забезпечення не впливає на технічні характеристики радіообладнання і не може бути змінене

користувачем.

8. Додаткова інформація:

93055 Regensburg, Germany) уповноваженим представником в Україні ТОВ «Нормакон-Україна» (Сименсстрасе 12, Д-93055 Ренсборг, Hiмеччина) / «Continental Automotive GmbH» (Siemensstrasse 12, Підписано від імені та за договором дорученням № 20180503 «Контінентал Аутомотів ГмбХ»

M.II

Директор

ТОВ «Нормакон-Україна»

VHIVANA

("HOPMAROH VKPAIHA,

0

В. Шелегін Взята на облік

TOB HEK

NIT

H

травня

2018 p.

, P

004 77 007463169

ополь

OKA OBJ., N.MEI

11A.032.D. (90327-18

Y OOB TOB «OC «LICMB»»

м. Мелітополь, Україна

(місце та дата видачі)

CEPTNDIKAT EKCHEPTN3N TUIIY TYPE EXAMINATION CERTIFICATE	rpi	(c) 5100022024 50 Toproselista mapka Continental	-	(university manus, appear, non CLPIOV (and internationo) suppointents) (manu, address of manufacturer) (b) IIIIIIPINGCTBA 'VERTAINESKIRЙ HAYKOBO-JIOCTIJIIIIRЙ HICTHITYT (b) PLIJIIIPINGCTBA 'VERTAINESKIRЙ HAYKOBO-JIOCTIJIIIIRЙ HICTHITYT (b) PLIJIIIPINGCTBA 'VERTAINE') (CATURTPT) Feerpanitiania nosep: UA.TR.028 (5026, M. Oleca, nyr. Byrina, 31, renz. (48) 740 71 22, 740 71 29, (absc. (48) 722 45 83, cental infeali@milit.com.ag, www.amilit.com.ag	Висновки досліцжения ¹ : за резульватили експертизи технічної документації та підтаєрдних документів стосовно відповідності технічного проекту радіообладнання суптевим вимогам "Технічного реглайенту радіообладивния" (затвердожений ПКМУ від 24 травия 2017р. № 355) встановленог:	и.6- щоло забелиенаня захисту длоров'я, безпеки віцповідає людій і домашийх тварии, захисту влаениеті (а.6, абала 1)	п.6 - шоло відповідного рівня електроматнітної відповідає сумісності (п.6, абзац 2)	 п.7 - щоло зобов'ятань ефективно використовувати і цідтримувати ефективно використовувати і цідтримувати ефективне використания радіочастотного ресурку України у алад (п.7) 	до радіообладиання, с здійснюсться експерт пього сертифіката у актах центрального о гахтах че инля	Керівник органу з оцінки відповідності Виссиг of he conformity аssessment body (пілине, інгіліали, пріла редукально пілик, видих радо	По сратират дуби нойрозии, у рад экесанае изобытов субъеках зан Ос техного дуга развезанае изобытех достобрание об субъекано СО Субъекано Субъекано СО Субъекано	
0	3apeccrpoBauo B pecc Regutered at the Record of confo Unturth Big. The due certification is granted Inporykulta / Production Turt / Type	MOLETE (1) / Model (3) TOPFOBA HA3BA a60 Mapka / Brand name or trademark	Виробник продукції <i>Producer</i>	Ceptudpicat Butano / Certificate is issued b the conformity assessment body	Висновки дослідження ² : за результатами експер відповідності технічног радіообладнання" (затв	п.6 - щодо забези людей і домашніх абзац 1)	п.6 - щодо відповідного сумісності (п.6, абзац 2)	п.7 - щоло зобов'ятань ефективно выкористовувати і підгримувати е выкористания радіочаєтотного ре відповідний радіотехнології та уни завад (п.7)	п.8 - щодо основних вимог	Керівник органу Director of the conformity	 Led optimicipant 604 in Polyamism ya 60, adout polyamism ya 60, adout polyamism ya 60, adout polyamism wa 60, a evel adottam wa 60, adout polyami 2 bolograpas at monta in oloo portograpas at montar in oloo portograpas at montar in oloo portograpas at montar in oloo portograpas at montar pole higalited by apara are to be higalited by apara 	0-03.02.07

C0.C0-0	Kepii Directo							6	رى رى		Ę,	•////	3 3.1 3.2 3.3 3.4	2	12 I I I	N2 885	
1-40	Керівник органу з оцінки ві Бисели обле софонф, азекання водо	n.7	п.6, абзац 2	п.б, абзац 1	Застосовані станд	п.7	Пункти "Технічного регламенту радіообладнання"	Випробування, застосс	Умови застосувания радіообладнання: Рапообладнання, що зазначене у ць використания радіочастотиоть ресур 12.012.012 № 18) та експлуатація 23.12.2014 № 844, заресстровано у Мін	на рівні мінус 30 дБ - 1 - тип антени / коефіціє	тим розков оснадивники радиотся. Технічні характернетики радиово, - радіотехнологія згідно з Планом радіочастотного ресурсу України - ліапазон частор, МГи - максимальна вихідна потужніст - клас випромінювания - клас виромінювания	вхідна напруга постійного струму	Laeнтифікаційні характеристики: Версія IIЗ (SWFW version), яка в Версія виконання виробу (HW ve Процесор, що виконує функції фо Напруга живлення:	Технічна документаці загальний опис радіоо опис та необхідні пояс стандартів, опис пров	Технічна документаці Назва архіву з технічн Зберігається у компан Адреса: 03115, м.Кнїв.	⊥ № 889.14-CET	
	лповідвості	ДСТУ ETSI EN 300 220-2:2012, ETSI EN 300 220-2 V2.3.1	ДСТУ ЕN 301 489-1:2014 (пп. 8.2, 9-2, 9-3) (з урахуванням ДСТУ ETSI EN 301 489-3:2009)	ДСТУ ЕN 60950-1:2015 (гільки за пл. 1.2.3, 1.2.4, 1.7), ДСТУ EN 50385:2007	Застосовані стандарти, що не включені до "Переліку няціональних стандартів, відповідність яким надає презумпшію відповідності радіообладнанна суттсвим вимогам"	лл	Стандарти	Випробування, застосовані стандарти та або інші технічні специфікації	Унови мётеуманія ралюбланнания: Ралюбланнята, що знанчене у цюму сергифікаті, відовідає упальнення умовам застосудання у сфері викорістання ралючастотись ресурсу України, які вилівчені РІ 422 (долагки 19 до рішення НКРЗІ від 1911/2012 № 18) та експлуатація його здійсносться без офіорадення довалаїв УДПР (рішення НКРЗІ від 23.12.2014 № 843, арвестровалю у Миї́кост України 19.02.2015 в № 2017.26460.	на рівні мінує 30 дБ - контролька, не більше, кГц - тип антени / коефіцієнт підсилення, не більше, дБі	технічных мональными рыдочеськоютия, що візначені планом використания рыдочастотого ресурсу України: технічні харастерістики радобаланники: радочастотого ресурсу України: радочастотого ресурсу України: телеметрія та радодистанцівне керумання: - ліянаюч частор, МГц - чактемальная висімна полужність передавача, дБм (міВт) - мактемальная висімна полужність передавача, дБм (міВт)	ного струму	(дей-парканійні характеристики: Версія ПЗ (SW/FW version), яка виливає на дотримання суттевих вимог: Версія викования впороб. (НЖ честкой), яка виливає на дотримания суттевих Процесор, нов виковус функції формування радіочастотних сигналів: Напруга жильсника	технічна досумонтацій містить такі слементи: знатальній още радообладавныя, технічний проект, результати проектик розрахунків, проведених перевірок, опис та необхідні совснення да розуміння технічного проекту, протоколи випробуванів, список застосованих стандартів, опис проведення і результати належного аналізу та оцінки ризиків	Технічна документація та підтвердиі документи Назва вруку у технічною документацією: 383,14-СЕТ_вер.1 Зберінсться у компайт: ТОВ "Укайо Тесс Соладарт", Україна, кол ЄДРПОУ 39205151 Адреса: 03115, м.Київ, вул. Львінська, 22-а, кв 135	до сертифіката експертизи типу Annex 1 to type examination certificate	ДОДАТОК
	Current For Andrew Control Current For Andrew Co	7005 Big 08.02.2018 BI	7005 від 08.02.2018	7005 від 08.02.2018	щіональних стандартів, від аднання суттєвим вимогах	в, відповідність яким нада свим вимогам" -	Номер.протоколу випробувань	тецифікації	повідає узагальненим умс начені РІ 42-2 (додатки оформлення дозволів У 15 за № 201/26646).		ном використания радіоч. телеметрія га ра		ЕВИХ ВИМОГ: Имання сугтевих вимог: Сигналів:	ати проектних розрахункії сту, протоколи випробуван та оцінки ризиків	на, код ЄДРПОУ 39205151	Пертизи тип ation certificate	OK 1
	And	BU PIT VHДIPT (2H227)	ВЦ РІТ УНДІРТ (2Н227)	ВЦ РІТ УНДІРТ (2Н227)	дповідність яким надає м''	іє презумпцію відповідності -	Випробувальна лабораторія (атестат акрелитації)/ додаткова інформація		(с) овам застосування у сфері 19 до рішення НКРЗІ від /ЛЦР (рішення НКРЗІ від	300; інтегрована / 2.	листания радючаетотного ресурсу України: телеметрія та радіодистанційне керумання; 433.0543,79; 00.000 100.000 100.000	3,0 B;	V1; V1; ZA729057M0B;	в, проведених перевірок, нь, список застосованих		V	

ДОДАТОК 2 до сертифіката експертизи типу ^{Annes 2} to type examination certificate


Nº 889.14-CET

початок

Інформація щодо зобов'язань Виробника відповідно до Гехнічного регламенту радіообладиання Затверджено постановою Кабінету Міністрів України від 24 травня 2017 р. № 355) та відповідні пункти Directive 2014/53/EU.

Information on the Manufacturer's obligations, imposed by the provisions of Technical Regulation of Radio Equipment (approved by the Decree of the Cabinet of Ministers of Ukraine. As 355 of May 24, 2017) and Radio Equipment Directive 2014/53/EU, Articles (Annex, Module) which comply the appropriate articles of the

we Article 10.6: Manufacturers shall ensure that radio article 10.6: Manufacturers shall ensure that radio are observed an article they have proceed on the market bears a no. Dype, buch or serial number or other element allowing its ensurement of the stree or nature of the radio sis equipment does not allow it, that the equired information is projugal on the packeging, or in a document accompanying the radio equipment. 22. BupoGunsu nonunui sfepiraru rexuisury notymentanito ra Article 10.4: Manufacturers shall keep the technical accumentation on po minoration of conformity for 10, pears after the radio equipment has been placed on the market. Radio Equipment Directive 2014/53/EU, Articles (Annex, Module) which comply the appropriate articles of the Technical Regulation of Radio Equipment 25. Bipodiutsu, nonunii azayaurru na patiooônaanuni naaw, Article 10,7. Montfoctineers shall indicine on the radio concontrol monthing and processing optimization and the radio reprosively spectromating and the radio reprosively appectromating and address at michich hope can be as arantee, also, nauno parsory, as storo a supan works radie monthing are conclused address at michich hope can be as arantee, also, nauno possipi also vapareerp paulooficitaments he conclused optimization and address at michich hope can be as around a short and provide and address at michich hope can be as around a postretication and address at michich hope can be as around a storow are postiple and address at michich hope can be as around a storow are postiple and address at mich and and and and and and a michich hope can be as around a storow around a starteet a suposting patient and address at mice address and a storow are postiple and a storow are patient and a storow around a storow are address and a storow around a storow are address and address at mice address at a storow are address and a storow around a storow are address and a storow around a storowant and a storow around a storowant and address at a storow around a storowant around a storowant and address at a storowant and address at a storoward and a storoward address at a storoward ower transmitted in the lio equipment operates. And the second s operates (b) magninge another frequence build (M.M. endell'angedish 24. Впробники повитиї гарантувати, що радіообладивния, яке пові падають прику, має полозначеннях партії артії абот серійного помера тошко, дасть умогот дого серіто падають помера тошко, дасть у доготу дого сперіоруатит, бого у раці всякливант да вода внащираванності, через характер, радіообладівания це заядачити надається інформація на пакуавния бос супровідних подається (cMyrax) максимальну потужність випромінновання в смузі раліочастот, в якій (в яких) працює раліооблалнання. BHH Керівник органу з оцінки відповідності Director of the conformity assessment body Пункти Технічного регламенту радіообладна Technical Regulation of Radio Equipment

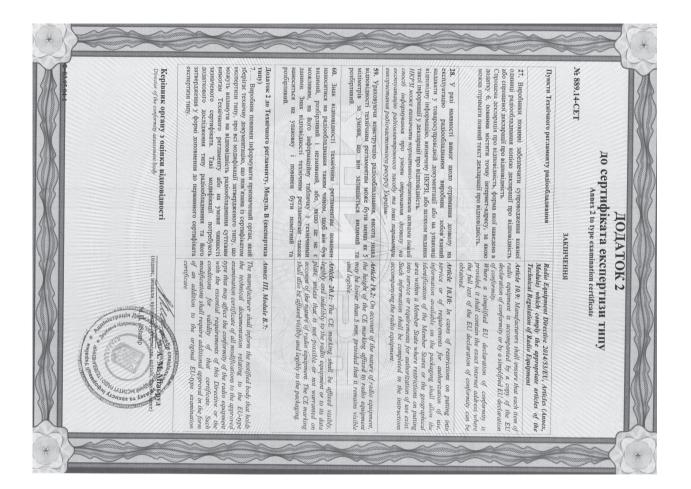

та видав сертифікат експертизи типу № 889.14-СЕТ від 15.11.2018.

експертизу типу (опис виконаних ним дій)

виконав

(найменування, ідентифікаційний номер згідно з реєстром призначених органів)

7. Призначений орган з оцінки відповідності <u>ДЕРЖАВНОГО ПІДПРИЄМ</u>СТВА

"УКРАЇНСЬКИЙ НАУКОВО-ДОСЛІДНИЙ ІНСТИТУТ

Ресстрацій номер: UA.TR.028

TEJIEBA YEHHA"

Т

РАДО

ВЦ РіТ УНДІРТ (2H227)

7005 Big 08.02.2018

ACTY ETSI EN 300 220-2:2012, ETSI EN 300 220-2 V2.3.1

п.7

Львівська, 22-а, к. 135, код ЄДРПОУ 39205151 (Довіреність "Контіненталь Аутомоутів Уповноважений представник - ТОВ "Радіо Тест Стандарт", Україна, 03115, м.Київ, вул.

ГмбХ" ("Continental Automotive GmbH"), Hiмеччина, від 18.09.2018).

Німеччина 3. Ця декларація відповідності видана під особисту відповідальність виробника: Д-93055 Регенсбург, "Контіненталь Аутомоутів ГмбХ", Зіменсштрассе 12,

4. Об'єкт декларації (ідентифікація радіообладнання, яка дає змогу забезпечити

його простежуваність; може включати кольорове чітке зображення у разі потреби для Радіопередавач торговельної марки Continental моделі S180052024 системи контролю тиску в шині ідентифікації зазначеного радіообладнання):

автомобіля.

5. Об'єкт декларації відповідає вимогам таких технічних регламентів: Гехнічного регламенту радіообладнання;

Î були застосовані, або посилання на інші технічні специфікації, щодо яких декларується національних стандартів, відповідність (із зазначенням ідентифікаційного номера, версії та дати видання): 6. Посилання на відповідні стандарти з переліку

Номер протоколу Випробувальна лабораторія випробувань (атестат акредитації) додаткова інформація	Застосовані стандарти, що включені до "Переліку національних стандартів, відповідність яким надає презумпцію відповідності радіообладняння суттевим вимогам"		Застосовані стандарти, що не включені до "Переліку національних стандартів, відповідність яким надає презумпцію відповідності радіообладнания суттевим вимогам"	7005 Big 08.02.2018 BIL PT YHUIPT (2H227)	7005 BUI 08.02.2018 BUI PIT VHJUPT (2H227)
Стандарти	ти, що включені до "Переліку націо відповідності радіооблад	1	и, що не включені до "Переліку нац відповідності радіооблад	ДСТУ EN 60950-1:2015 (тільки за пп. 1.2.3, 1.2.4, 1.7), ДСТУ EN 50385:2007	ДСТУ EN 301 489-1:2014 (пл. 8.2, 9.2, 9.3) (3 урахуванням ДСТУ ETSI EN 301 489-3:2009)
Пункти "Технічного регламенту радіообладнання"	Застосовані стандарі	п.7	Застосовані стандарти	п.6, абзац 1	п.6, абзац 2

ЦЕКЛАРАЦІЯ ПРО ВІДПОВІДНІСТЬ № RTS.UKR.355-90/18

Радіопередавач торговельної марки Continental моделі S180052024 системи контролю тиску 1. Радіообладнання (виріб, тип, номер партії чи серійний номер):

щ шині автомобіля.

2. Найменування та адреса виробника або його уповноваженого представника:

("Continental Automotive GmbH", Siemensstrasse 12, D-93055 Regensburg, Germany)

призначенням і на яке поширюється дія декларації про відповідність: програмного 00 У відповідних випадках опис компонентів та аксесуарів, забезпечення, завдяки якому радіообладнання функціонує у тому числі 3a

Процесор(и), що виконус(ють) функції формування радіочастотних сигналів:	Версія виконання виробу (HW version), яка впливає на дотримання суттєвих вимог:	Версія ПЗ (SW/FW version), яка впливає на дотримання суттєвих вимог:
ZA729057M0B;	V1;	V1;

9. Додаткова інформація:

Франція - "Континенталь Аутомоутив Франс С..А.С.", 1 Ав. Поль Орляк, 31036 Тулуза, Седекс 1, Підприємства-виробники:

("Continental Automotive France S.A.S.", 1 Av. Paul Ourliac, 31036 Toulouse CEDEX 1, France, Франція);

Підписано від імені та за дорученням: "Контіненталь Аутомоутів ГмбХ" ("Continental Automotive GmbH"), Німеччина, уповноваженим представником - ТОВ "Радіо Тест Стандарт", Україна.

м.Київ, "15" листопада 2018 р (місце та дата видачі)



(ініціали та прізвище) Д. В. Шуман

ЦЕКЛАРАЦІЯ ПРО ВІДПОВІДНІСТЬ

Радіообладнання: Wheel Unit (TPMS) - 433 МГц (телеметрія та радіодистанційне керування). виріб, тип, номер партії чи серійний

(дэмон

2. ТОВ «Нормакон-Україна» (сфіс 314, вул. Кірова 139, м. Мелітополь, Запорізька обл., 72319, Україна, код ЄдРПОУ 37463168).

(найменування та адреса виробника або його уповноваженого представ

3. Ця декларація відповідності видана під особисту відповідальність виробника.

4. Об'єкт декларації:

Назва обладнання: Модуль радіопередавача (Wheel Unit (TPMS));

Modemb: TIS-15;

Regensburg, Germany) Горговельна марка: «Continental»;

Micue supobnunmea: «Continental Automotive France S.A.S.» (1 Avenue Paul Ourliac 31100 Toulouse, France) Bigzönuz: «Continental Automotive GmbH» (Siemensstrasse 12, D-93055 Rege «Контінентал Аутомотів ГмбХ» (Сименсстрассе 12, Д-93055 Регенсбург, Німеччина);

/ «Контінентал Аутомотів Франс САС» (1 Авеню Паул Оурліак, 31100 Тулуз, Франція);

Номер партії або серійний номер: продукція виготовляється серійно.

uimke кольорове (ідентифікація радіообладнання, яка дає змогу забеянечити його простежуваність; може включати зображення у разі потреби для ідентифікації хазначеного радіообладнання)

5. Об'єкт декларації відповідає вимогам «Технічного регламенту радіообладнання», затвердженого

постановою Кабінета Міністрів України від 24.05.2017р. № 355

Стандарти з перелику національних стандартів, що були застосовані, та інші стандарти і технічні специфікації, щодо яких декларується відповідність: 6.

з безпеки (пункт 6 технічного регламенту):

JICTY EN 60950-1:2015 (EN 60950-1:2006 A11:2009 A1:2010 A12:2011 A2:2013, IDT);

ності (пункт 6 технічного регламенту): електромагнітної суміс

JICTY EN 301 489-1:2014 (EN 301 489-1 VI 9.2, IDT); JICTY ETSI EN 301 489-3:2009 (ETSI EN 301 489 3:2002, IDT); eigeentaise ausopuentaina probiousenonmozo peopro; (nyustr 7 nez effect VETSI EN 300 220-2:2012 (ETSI EN 300 220-2:2007, IDT); ETSI EN 300 220-2 V3.1.1 (2017-02); ETSI EN 300 220-2 V3.1.1 (2017-02);

технічного регламенту):

із зазначенням ідентифікаційного номера, версії та дати видання)

7. Призначений орган з оцінки відповідності ООВ «Орган сертифікації «Центр сертифікації матеріалів ma supobis» (Ne UA.TR.032)

ня, ідентифікаційний номер згідно з реєстром призначених органів) найменув

Виконав роботи з оцінки відповідності за процедурою експертизи типу (Модуль В)

та видав сертифікат експертизи типу № UA.032.CT.0275-18 від 17 грудня 2018 р.

(у разі запучення призначеного органу з оцінки відповідності)

8. Додаткова інформація:

Програмна версія не визначена.

Підписано від імені та за договором дорученням № 20180503 від 03.05.2018 р. «Сопіпепtal Automotive GmbH» (Siemenstrasse 12, D-93055 Regensburg, Germany) уповноваженим представником в Україні ТОВ «Нормакон-Україна».



ЕРТИФИКАТ СЕ	ЕРТИФІКАТ CERTIFICATI		CERTIFIC	AT 证书	RTIFIKAT CER 중명서	CEPT	ификат	СЕРТИ	φικατ cer	RTIFICATE	E ZERTIFI	AT CERTIFICAT
Kepianik oprany of Director of the conformit set association of the conformation of the conformation set of the conformation		Additional information Ha nincrabi On the grounds of	Certificate is issued by the conformity assessment body Додаткова інформація	Сертифікат видано органом з оцінки	Micue виробництва Place of production	Виробник Producer	Відповідає вимогам Comply with the requirements	Продукція Production	Сертифікат видано Certificate is issued to	Me y peccrpi Me in the register UA.032.CT.0275-18		I AF
	THE VIEW OF THE AND A THE	Рішення за результатами з	тел. (044) 221-94-10, 497-69-23, тел./факс 04-68-03) Технічні характеристики та умови застосування наве	ООВ «Орган сертифікації «Центр сертифікації мате Атестат про акребитацію НААУ № 10175 (орибична абреса: 03164, м. Київ. вул. Малинська, 20-А; понто аблоса: 03660 м. Київ. вул. Малинська, 20-А;	«Continental Automotive Fra «Контінентал Аутомотів Фр	«Continental Automotive Gr «Контінентал Аутомотів Гмі	Технічного регламенту ра міністрів України від 24 т сумісність, п. 7 – ефективне	Модуль радіопередавача «Continental» моделі TIS-15 (повна назва, тип, якд, карка, торгова марка)	ТОВ «Нормакон-Україна» (офіс 314, вул. 72319, Україна, код ЄДРПОУ 37463168) 03.05.2018р. «Continental Automotive Regensburg, Germany/Hiweччина) (извы та офеса выробника або утов	Кількість додатків number of applications 1	CEPTИΦΙΚΑΤ ΤΥΡΕ ΕΧΑΜΙΝ	
O. C. IЩСНКО (ritume, initiasu, uppsause) (signature, initias, family name) set for a non-out-22-04-10 [Jalicrane opprudpauro consertrane watero nonospan-s family name) set for the canter of the cantification body to 044 22-04-10	K	Рішення за результатами звіту про оцінювання № ТR0369-18 від 17.12.2018 р	тел. (044) 221-94-10, 457-69-23, тел./факс 404-88-03) Технічні характеристики та умови застосування наведені в Додатку	ООВ «Орган сертифікації «Центр сертифікації матеріалів та виробів», № UA TR.032 Атестат про акредитацію НААУ № 10175 Горибична здреса: 03164, м. Кив. вид. Вул. Малинська, 20-А; пошт запосо: 10580 м. и б. вид. Вул. Малинська, 20-А;	«Continental Automotive France S.A.S.» (1 Avenue Paul Ourliac 31100 Toulouse, France) / «Контінентал Аутомотів Франс САС» (1 Авеню Паул Оурліак, 31100 Тулуз, Франція)	«Continental Automotive GmbH» (Siemensstrasse 12, D-93055 Regensburg, Germany) / «Контінентал Аутомотів ГмбХ» (Сименсстрассе 12, Д-93055 Регенсбург, Німеччина)	егламенту радіообладнання затвердженого постановою Кабінено айни від 24 травня 2017 р. № 355, п.6 – безпека, електромагнітна 7 – ефективне використання радіочастотного ресурсу	Модуль радіопередавача (Wheel Unit (TPMS)) торговельної марки 8526 «Continental» моделі TIS-15 (позна изла, тип, ил, нарка, торгова марка) / (complete product name, type, kind, model, merchandise mark (mademark)) (под 10 колово в советно на водать в советно	TOB «Нормакон-Україна» (офіс 314, вул. Кірова 139, м. Мелітополь, Запорізька обл., 12319, Україна, код ЄДРПОУ 37463168) за договором дорученням № 20180503 від 03.05.2018р. «Continental Automotive GmbH» (Siemensstrasse 12, D-93055 Regensburg, Germany/Hiмеччина) ((авля та адреса авробника або уповноваленної особи)	Tepmiiн дії Term of validity is from від 17 грудня 2018 р.	CEPTUΦIKAT EKCΠEPTU3U TUΠY TYPE EXAMINATION CERTIFICATE	





ANNEX TO TYPE EXAMINATION CERTIFICATE до сертифіката експертизи типу додаток

№ UA.032.CT.0275-18 від 17 грудня 2018 р.

Обґрунтування відповідності пристрою вимогам Технічного регламенту радіообладнання, протоколи, нормативні документи

CYTTEBI BUMOFN TP	Суттєві Вимоги, що вимоги ТР перевірялися	Протоколи	Дата	Стандарти, що застосовувалися
п. 6 абз. 1	Безпека	160917-AU01+S01	04.09.2017 p.	ACTY EN 60950-1:2015 (EN 60950-1:2006 A11:2009 A1:2010 A12:2011 AC:2011 A2:2013, IDT)
п. 6 абз. 2	EMC	160917-AU01+E01_R1	07.09.2017 p.	ACTY EN 301 489-1:2014 (EN 301 489-1 V1.9.2, IDT); ACTY ETSI EN 301 489-3:2009 (ETSI EN 301 489-3:2002, IDT)
п. 7	Радіо	160917-AU01+W01_R1	07.09.2017 p.	ACTY ETSI EN 300 220-2:2012 (ETSI EN 300 220-2:2007, IDT); ETSI EN 300 220-1 V3.1.1 (2017-02); ETSI EN 300 220-2 V3.1.1 (2017-02);

2. Технічні характеристики радіообладнання:

2.1. Wheel Unit (TPMS) - 433 МГц:
 2.1.1 Радіотехнологія: телемерія та радіодистанційне керування;
 2.1.2 Діралазон частот, МГц. 433,05 - 434,79;
 2.1.3 Номінальна робоча частота, МГц. 433,92;
 2.1.4 Ефективна випромінована потужність: (мінус) 21,76 дБм;
 2.1.5 Тип модуляції: FSK;
 2.1.6 Тип антеми: Митеция випромінована потужність: (мінус) 21,76 дБм;

3. Програмна версія не визначена.

4. Перелік документації на продукцію, що розглядалася:

- Специфікація;

струкція;

Маркування;

CXeMN;

Оцінка ризиків; Зображе

иньої та зовнішньої компоновки (фото); внутрії

Декларація ЕU; Сертифікат EU.

5. Умови застосування:

Продукція зазначена в сертифікаті відповідає узагальненим умовам: РІ 42.2, які схвалені Рішенням НКРЗІ від 17.2.0.12014 Ка18 станом во 60.3.2.318 р., додаток 18.1. Експлуятація зазначеного в циому сертифікаті радіобладнання у зазначеному складі та технічними характеристиками адійсносться на бездозвільній основі (Рішення НКРЗІ №844 від 23.12.2014 р., зарестровано у Міністеристиками адійсносться на бездозвільній основі (Рішення НКРЗІ №844 від 23.12.2014 р., зарестровано зарактеристиками адійсносться на бездозвільній основі (Рішення НКРЗІ №844 від 23.12.2014 р., аректровано зарактеристиками адійсносться на бездозвільній основі (Рішення НКРЗІ №344 від 23.12.2014 р., аректровано зарактеристиками адійсносться на бездозвільній основі (Рішення НКРЗІ оз 20.12.2015 р., за випромінювальних пристроїв, що аректи вестру раценнять ресстру рацеонстрованого користування, азтерованого рішеннями НКРЗІ 03.04.2018 р. за № 188, заресстрованого Міністерстві Юстиції України 07.06.2018 р. за № 888/23140.



K56R0	R55R2			P55R0		
51789/SDPPI/2017		DPPI/2017		51923/SDPPI/2017		
4128	4	128		4128		
K56RQ	K73R0			R55R3		
52912/SDPPI/2017	52913/S	DPPI/2017		55593/SDPPI/2018		
4128	4	128		4128		
T55R2						
55630/SDPPI/2018						
4128						
T55R1(Country of ori	gin: INDIA)	I55R0(Coun	try	of origin: INDIA)		
51924/SDPPI/2017		51895/SDPF	PI/20)17		
4128		4128				
T55R1(Country of ori	gin: Japan)	I55R0(Country of origin: Japan)				
52684/SDPPI/2017		52685/SDPF	PI/20)17		
4128		4128				





K72R0 **ZICTA** ZMB/ZICTA/TA/2017/12/15







ZMB/ZICTA/TA/2017/10/22

R55R2



ZMB/ZICTA/TA/2017/12/6

I55R0 **ZICTA** ZMB/ZICTA/TA/2017/10/21



MODEL No: I55R0, T55R1, T55R2, K77RA, 40398036, S180052024

低功率電波輻射性電機管理辦法

第十二條

經型式認證合格之低功率射頻電機,非經許可,公司、商號或使用者均不得擅 自變更頻率、加大功率或變更原設計之特性及功能。

第十四條

低功率射頻電機之使用不得影響飛航安全及干擾合法通信;經發現有干擾現象時,應立即停用,並改善至無干擾時方得繼續使用。 前項合法通信,指依電信法規定作業之無線電通信。 低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之 干擾。



Este equipamento não tem direito á proteção contra interferência prejudicial e não pode causar interferência em sistemas devidamente autorizados.

Para consultas, visite: www.anatel.gov.br

CE	NIDEC MOBILITY CORPORATION 6368 Neipo-ada, Ostas, Komski, Alchi 145-0802 JAPAN 6368 Neipo-ada, Ostas, Komski, Alchi 145-0802 JAPAN 7EL-961-568-78-6159 FAX-e81-568-78-659 Frequency band(s): T55R1; T6810, R54M0: 433-202MHz; 5581 Noipo-240-09, S78M0: T25Hz; 5581: 8005Ju/m (alg.); T6801: 75620; T6810; T6	Receiver Category of these radio equipment is Category 2, which is referred to EN 300 220-1. CAUTION • To prevent an explosion or leakage of farmmable liquid or gas: • Do not dispose of a battery with an incorrect type, Replaced on ywith the same or equivalent type. • Do not dispose of a battery with a line or incherator, or by mechanically crushing or cutting the battery. • Do not use, store, or liske a battery any place where it may be exposed to extremely high temperature or externely low of The Symbol results and the same or the temperature of the same o	CANTON ©D not insellow a coin type battery: • Do not insellow a coin type battery: • The product contracts a coin / button oil battery. If the coin / button coil battery is swellowed, it can cause server internal borns in just 2 hours and can lead to death. • W the battery compariment case not close servery, itclo using the product and keep it away from children. If you thin butteries might have been evaluated or placed it away for of hebody.
[Czech]	Společnost NIDEC MOBILITY CORPORATION timto prohlašuje, že [T68L	0,154P0,R64M0,37290-54P0,S54P0,S79M0,T55R1,I55R0] dodržuje Nařízení 2014/53/EU. Podrobné informace naleznete	na následující URL:https://www.nidec.com/en/nidec-mobility/rfequipdocs/eudocz
[Danish]	NIDEC MOBILITY CORPORATION erklærer herved, at [T68L0, I54P0, R64	M0,37290-54P0,S54P0,S79M0,T55R1,I55R0] er i overensstemmelse med Direktiv 2014/53/EU. For detaljer, bedes du ad	gang til følgende webadresse:https://www.nidec.com/en/nidec-mobility/rfequipdocs/eudocz
[German]	Hiermit erklärt NIDEC MOBILITY CORPORATION, dass [T68L0,154P0,R6 mobility/rfequipdocs/eudocz	4M0,37290-54P0,S54P0,S79M0,T55R1,I55R0] in Ubereinstimmung mit der Richtlinie 2014/53/EU steht. Für Einzelheiten	greifen Sie auf folgende URL zu/https://www.nidec.com/en/nidec-
[Estonian]	Käesolevaga teatab NIDEC MOBILITY CORPORATION, et [T68L0, I54P0	R64M0,37290-54P0,S54P0,S79M0,T55R1,I55R0] on kooskõlas Direktiiviga 2014/53/EL. Üksikasjade nägemiseks külasta	ge võrguaadressi:https://www.nidec.com/en/nidec-mobility/rfequipdocs/eudocz
[English]	Hereby, NIDEC MOBILITY CORPORATION, declares that [T68L0, I54P0, R	64M0,37290-54P0,S54P0,S79M0,T55R1,I55R0] are in compliance with Directive 2014/53/EU. For details, please access I	the following URL:https://www.nidec.com/en/nidec-mobility/rfequipdocs/eudocz
[Spanish]	Por la presente NIDEC MOBILITY CORPORATION, declara que (168) 0.15	4P0.R64M0.37290-54P0.S54P0.S79M0.T55R1.I55R0] cumple con la Directiva 2014/53/UE. Para más información. accer	a a la siguiente URI https://www.pidec.com/en/pidec-mobility/rfeguipdocs/eudocz
[Greek]		, I54P0,R64M0,37290-54P0,S54P0,S79M0,T55R1,I55R0] συμμορφώνονται με την Οδηγία 2014/53/ΕΕ. Για λεπτομέρειες,	
[French]	Par le présent document NIDEC MOBILITY CORPORATION, déclare que mobility/rfequipdocs/eudocz	T68L0,154P0,R64M0,37290-54P0,S54P0,S79M0,T55R1,155R0] sont conformes à la Directive 2014/53/UE. Pour plus d'in	formations visitez la page suivante:https://www.nidec.com/en/nidec-
[Italian]	Con la presente, NIDEC MOBILITY CORPORATION, dichiara che [T68L0,	54P0,R64M0,37290-54P0,S54P0,S79M0,T55R1,I55R0] sono conformi alla Direttiva 2014/53/UE. Per ulteriori dettagli, acc	cedere al seguente URL:https://www.nidec.com/en/nidec-mobility/rfequipdocs/eudocz
[Latvian]	Ar šo uzņēmums NIDEC MOBILITY CORPORATION apstiprina, ka [T68L0 mobility/rlequipdocs/eudocz	,I54P0,R64M0,37290-54P0,S54P0,S79M0,T55R1,I55R0] atbilst Direktīvas 2014/53/ES prasībām. Detalizētu informāciju,	lūdzu, skatiet šajā vietrādī URL:https://www.nidec.com/en/nidec-
[Lithuanian]	Šiuo dokumentu NIDEC MOBILITY CORPORATION pareiškia, kad [T68L0 mobility/rfequidocs/eudocz	,154P0,R64M0,37290-54P0,S54P0,S79M0,T55R1,155R0] attitinka Direktyvą 2014/53/ES. Norėdami išsamesnės informaci	os, apsilankykite šiuo URL adresu:https://www.nidec.com/en/hidec-
[Dutch]	Hiermee verklaart NIDEC MOBILITY CORPORATION. dat [T68L0.154P0.F	164M0,37290-54P0,S54P0,S79M0,T55R1,I55R0] in overeenstemming zijn met Richtlijn 2014/53/EU. Klik voor meer inform	natie op de onderstaande link:https://www.nidec.com/en/nidec-mobility/rfeguipdocs/eudocz
[Maltese]	NIDEC MOBILITY CORPORATION, tiddikjara li [T68L0,154P0,R64M0,372	90-54P0,S54P0,S79M0,T55R1,I55R0] huma f konformità mad-Direttiva 2014/53/UE. Ghal dettaliji, jekk joghģbok aččessa l	-URL li gejja:https://www.nidec.com/en/nidec-mobility/rfequipdocs/eudocz
[Hungarian]		R64M0,37290-54P0,S54P0,S79M0,T55R1,I55R0] megfelel a 2014/53/EU Irányelvnek. A részletekért nyissa meg a követk	
[Polish]		8L0,154P0,R64M0,37290-54P0,S54P0,S79M0,T55R1,155R0] spełniają wymogi Dyrektywy 2014/53/UE. Szczegółowe info	
[Portuguese]	Por isto, NIDEC MOBILITY CORPORATION, declara que [T68L0,I54P0,R mobility/rfequipdocs/eudocz	54M0,37290-54P0,S54P0,S79M0,T55R1,I55R0] estão em conformidade com a Directiva 2014/53/UE. Para mais detalhes	, favor aceder acessar ao seguinte URL:https://www.nidec.com/en/nidec-
[Slovenian]	S tem podjetje NIDEC MOBILITY CORPORATION, izjavlja, da so [T68L0,	54P0,R64M0,37290-54P0,S54P0,S79M0,T55R1,I55R0] v skladu z Direktivo 2014/53/EU. Za podrobnosti odprite naslednj	i URL:https://www.nidec.com/en/nidec-mobility/rfequipdocs/eudocz
[Slovak]	Spoločnosť NIDEC MOBILITY CORPORATION týmto vyhlasuje, že [T68L),154P0,R64M0,37290-54P0,S54P0,S79M0,T55R1,155R0] dodržiava Smemicu 2014/53/EU. Podrobné informácie nájdete	na nasledujúcej URL:https://www.nidec.com/en/nidec-mobility/rfequipdocs/eudocz
[Finnish]	NIDEC MOBILITY CORPORATION, imoittaa täten, että [T68L0,I54P0,R64	M0,37290-54P0,S54P0,S79M0,T55R1,I55R0] noudattaa Direktiivin 2014/53/EU vaatimuksia. Saadaksesi lisätietoja, käytä	a seuraavaa URL-osoitetta:https://www.nidec.com/en/nidec-mobility/rfequipdocs/eudocz
[Swedish]	NIDEC MOBILITY CORPORATION förklarar jag härmed att [T68L0,154P0	R64M0.37290-54P0.S54P0.S79M0.T55R1.I55R0] är i enlighet med Direktiv 2014/53/EU. För detaljer vänligen använd fi	bljande webbläsare:https://www.nidec.com/en/nidec-mobility/rfequipdocs/eudocz
[Icelandic]	Hér, NIDEC MOBILITY CORPORATION, segir að [T68L0,154P0,R64M0,3 mobility/rfequipdocs/eudocz	290-54P0,S54P0,S79M0,T55R1,I55R0] þeir eru í samræmi við Úrskurði 2014/53 / ESB. Fyrir frekari upplýsingar, vinsaml	egast aðgang að eftirfarandi URL: https://www.nidec.com/en/nidec-
[Norwegian]	Herved NIDEC MOBILITY CORPORATION, erklærer at [T68L0, I54P0, R64	M0,37290-54P0,S54P0,S79M0,T55R1,I55R0] samsvar med Resolusjon 2014/53/EU. For ytterligere informasjon, vennligs	t sjekk følgende URL:https://www.nidec.com/en/nidec-mobility/rfequipdocs/eudocz
[Turkish]		P0,S54P0,S79M0,T55R1,I55R0] ürünlerinin 2014/53/EU Direktifi ile uyumlu olduğunu beyan eder. Ayrıntılar için lütfen aşı	
[Romanian]		20,R64M0,37290-54P0,S54P0,S79M0,T55R1,I55R0] sunt în conformitate cu Directiva 2014/53/UE. Pentru detalii, accesaț	
[Bulgarian]	С настоящия документ NIDEC MOBILITY CORPORATION, декларира, agpec:https://www.nidec.com/en/nidec-mobility/rfequipdocs/eudocz	е [T68L0,I54P0,R64M0,37290-54P0,S54P0,S79M0,T55R1,I55R0] съответстват с Директива 2014/53/ЕС. За подробно	ости посетете следния
[Croatian]		8L0,I54P0,R64M0,37290-54P0,S54P0,S79M0,T55R1,I55R0] sukladna s Direktivom 2014/53/EU. Za pojedinosti posjetite	sljedeći URL:https://www.nidec.com/en/nidec-mobility/rfequipdocs/eudocz
[Crnogorski jezik]	Ovim putem NIDEC MOBILITY CORPORATION, izjavljuje da su [T68L0,I5	4P0,R64M0,37290-54P0,S54P0,S79M0,T55R1,I55R0] u skladu sa Odredbom 2014/53/EU. Za više detalja, pristupite slje	dećoj URL adresi:https://www.nidec.com/en/nidec-mobility/rfequipdocs/eudocz
[Macedonian]	Co оттука, NIDEC MOBILITY CORPORATION. изјавува дека [T68L0,I54 mobility/rfequipdocs/eudocz	P0,R64M0,37290-54P0,S54P0,S79M0,T55R1,I55R0] е во согласност со Директивата 2014/53/EU. За подетални инфо	рмации, отворете ја следнава УРЛ:https://www.nidec.com/en/nidec-
[Albanian]		10,37290-54P0,S54P0,S79M0,T55R1,I55R0] janë në përputhje me Direktivën 2014/53/EU. Për hollësi, ju lutem hapni URI	-në e mëposhtme: https://www.nidec.com/en/nidec-mobility/rfequipdocs/eudocz
[Georgian]	კომპანია NIDEC MOBILITY CORPORATION აცხადებს, რომ [T68L0 ბმული:https://www.nidec.com/en/nidec.mobility/ifequipdocs/eudocz	,I54P0,R64M0,37290-54P0,S54P0,S79M0,T55R1,I55R0] არის 2014/53/EU დირექტივის სრულ შესაბამისობაში	ი. დაწვრილებითი ინფორმაციისთვის იხილეთ შემდეგი

NIDEC NUEL CMOBILITY CORPORATION Networks Mark Mark 456.0812.JPAN TEL.+81-568.78-6159 Natl. 456.0812.JPAN TEL.+81-568.78-6159 VGK Frequency hand(s): T5581, T68L0, R6MM- 233.22MHz 5560, 0673.2205.4982, 5780.01258Hz; Maximum radio-frequency power transmitted in the frequency hand(s): T5581, 0684JW/m [8071 mills; 1550.5484BJW/m [8109]; 1569.5484JW/m [8109]; 1249: 2584JW/m [81071 mills; 1580.5484JW/m [8109]; 12780.5492, 5780.5780.5780.5780.3494/m [8109];	Receive: Category of these radio equipment is Category 2, which is referred to EN 300 220-1. CAUTION To provent an explositor or leakage of flammable liquid or gas: Do not replese the hatteny with an incorrect type, Replesion only with the same or equivalent type. Do not dispose of a battery into a firor or incinentor, or by mechanically mushing or culting the battery Do not dispose of a battery into a firor or incinentor, or by mechanically mushing or culting the battery Do not dispose of a battery any place where it may be exposed to externely high temperature or externely bot an ar pression. This symbol in include to air the user to the presence or important operating and maintenance(servicing)instructions in the iterature accompanying the appliance.	CAUTION Do not seallow a coin type battery: - Do not isgest battery, Chemical Burn Hazard - This product contains a coin / button cell battery. If the coin / button cell battery is swallowed, I can cause severe internal burns in just 2 hours and can lead to death. - Reep new and used batteries away from children. If the battery coincident if you shring hourse might have been swallowed if the battery coincident if you shring hourse might have been swallowed or placed inside any part of the body, seek immediate medical attention.	
English] Hereby,NIDEC MOBILITY CORPORATION, declares that [T68L0,154P0,R64M0.37290-54P0,S54P0,S79M0,T55R1,155R0] are in compliance with Radio Equipment Regulations 2017 (S.1. 2017/1206). For details, please access the following URL: https://www.nidec.com/enhidec-mobility/fequipdocs/ukdocz			



SUZUKI MOTOR CORPORATION 300 TAKATSUKA-CHO, MINAMI-KU,HAMAMATSU-SHI,SHIZUOKA 432-8611 JAPAN TEL: (+81) 53-440-2008 FAX: (+81)53-440-2957

[Czech]	Tímio SUZUKI MOTOR CORPORATION prohlašuje, že typ rádiového zařizení K77RA je v souladu se směrnici 2014/53/EU. Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: https://www.globalsuzuki.com/automobile/technology/eu_doc.pdf
[Danish]	Hermed erklærer SUZUKI MOTOR CORPORATION, at radioudstyrstypen K77RA er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: https://www.globalsuzuki.com/automobile?technology/eu_doc.pdf
[German]	Hiernit erklärt SUZUKI MOTOR CORPORATION, dass der Funkanlagentyp K77RA der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformlätserklärung ist unter der folgenden Internetadresse verfügbar: https://www.globalsuzuki.com/automobile/technology/eu_doc.pdf
[Estonian]	Käesolevaga deklareerib SUZUKI MOTOR CORPORATION, et käesolev raadioseadme tüüp K/77RA vastab direktiivi 2014/53/EL nõuetele. ELI vastavusdeklaratsiooni tälelik tekst on kättesaadav järgmisel internetiaadressil: https://www.globalsuzuki.com/automobile/technology/eu_doc.pdf
[English]	Hereby, SUZUKI MOTOR CORPORATION declares that the radio equipment type K77RA is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: https://www.globalsuzuki.com/automobile/technology/eu_doc.pdf
	Hereby, SUZUKI MOTOR CORPORATION declares that the radio equipment type K77RA is in compliance with Radio Equipment Regulations 2017(S.I. 2017/1206). The full text of the UK declaration of conformity is available at the following internet address: https://www.globalsuzuki.com/automobile/technology/uk_doc.pdf
[Spanish]	Por la presente, SUZUKI MOTOR CORPORATION declara que el tipo de equipo radioeléctrico K77RA es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: https://www.globalsuzuki.com/automobile/technology/eu_doc.pdf
[Greek]	Με την παρούσα οη SUZUKI MOTOR CORPORATION, δηλώνει ότι ο ραδισεξοπλισμός K77RA πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσκλίδα στο διαδίκτυο: https://www.globalsuzuki.com/automobile/technology/eu_doc.pdf
[French]	Le soussigné, SUZUKI MOTOR CORPORATION, déclare que l'équipement radicélectrique du type K77RA est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: https://www.globalsuzuki.com/automobile/technology/eu_doc.pdf
[Italian]	Il fabbricante, SUZUKI MOTOR CORPORATION, dichiara che il tipo di apparecchiatura radio K77RA è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: https://www.globalsuzuki.com/automobile1echnology/eu_doc.pdf
[Latvian]	Ar šo SUZUKI MOTOR CORPORATION deklarē, ka radioiekārta K77RA atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: https://www.globalsuzuki.com/automobile/technology/eu_doc.pdf
[Lithuanian]	Aš, SUZUKI MOTOR CORPORATION, patvirtinu, kad radijo jrenginių tipas K77RA attitinka Direktyvą 2014/53/ES. Visas ES attilikties deklaracijos tekstas prieinamas šiuo interneto adresu: https://www.globalsuzuki.com/automobile/technology/eu_doc.pdf
[Dutch]	Hierbij verklaar ik, SUZUKI MOTOR CORPORATION, dat het type radioapparatuur K77RA conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: https://www.globalsuzuki.com/automobile/technology/eu_doc.pdf
[Maltese]	B'dan, SUZUKI MOTOR CORPORATION, niddikjara il dan it-tip ta' taghmir tar-radju K77RA huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbi l'dan I-indirizz tal-Internet li ĝej: https://www.globalsuzuki.com/automobile/technology/eu_doc.pdf
[Hungarian]	SUZUKI MOTOR CORPORATION igazoja, hogy a K77RA tipusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen: https://www.globalsuzuki.com/automobile1echnology/eu_doc.pdf
[Polish]	SUZUKI MOTOR CORPORATION niniejszym oświadcza, że typ urządzenia radiowego K77RA jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dosłępny pod nasłępującym adresem internetowym: https://www.globalsuzuki.com/automobile/technology/eu_doc.pdf
[Portuguese]	(a)(a) abaico assinado(a) SUZUKI MOTOR CORPORATION declara que o presente lipo de equipamento de rádio K77AR esté en conformidade com a Diretiva 2014/83/UE. O texto integrá at declaração de conformidade está disponível no seguine entereixo Enternet: https://www.globabux.uki.com/automediate/antidogi.com.globabux.uki.com/automedi
[Slovenian]	SUZUKI MOTOR CORPORATION potrjuje, da je tip radijske opreme K77RA skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na vojio na naslednjem spletnem naslovu: https://www.globalsuzuki.com/automobile1echnology/eu_doc.pdf
[Slovak]	SUZUKI MOTOR CORPORATION týmto vyhlasuje, že rádlové zariadenie typu K77RA je v súlade so smernicou 2014/53/EÚ. Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: https://www.globalsuzuki.com/automobile/technology/eu_doc.pdf
[Finnish]	SUZUKI MOTOR CORPORATION vakuuttaa, että radiolaitetyyppi K77RA on direktiilviin 2014/53/EU mukainen. EU-vaatimustemmukaisuusvakuutuksen täysimiltainen teksti on saatavilla seuraavassa internetosoitteessa: https://www.globalsuzuki.com/automobile/lechnology/eu_doc.pdf
[Swedish]	Härmed försäkrar SUZUKI MOTOR CORPORATION att denna typ av radioutrustning K77RA överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: https://www.globalsuzuki.com/automobile/technology/eu_doc.pdf
[Icelandic]	SUZUKI MOTOR CORPORATION lýsir því hér yfir að radióbúnaður af tegundinni K77RA er í samraemi við tilskipun 2014/53/ESB. Heildar texti ESB-samræmisyliriýsingarinnar er að finna á eftirfarandi veffangi: https://www.globalsuzuki.com/automobile/technology/eu_doc.pdf
[Norwegian]	SUZUKI MOTOR CORPORATION, erklærer herved at radioutstyr type K77RA er i samsvar med direktiv 2014/53/EU. Den fullstendige teksten i EU-erklæring er tilgjengelig på følgende internettadresse: https://www.globalsuzuki.com/automobile/technology/eu_doc.pdf
[Turkish]	Bu vesile ile, SUZUKI MOTOR CORPORATION, K77RA radio cihazi tipinin, 2014/53/AB Direktifi ile uyumlu olduğunu beyan eder. AB uygunluk beyanının tam metni, aşağıdaki internet adresinden temin edilebilir: https://www.globalsuzuki.com/automobile/technology/eu_doc.pdf
[Romanian]	Prin prezenta, SUZUKI MOTOR CORPORATION declară că tipul de echipamente radio K77RA este în conformitate cu Directiva 2014/53/UE, Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: https://www.globalsuzuki.com/automobile/technology/eu_doc.pdf
[Bulgarian]	C настоящото SUZUKI MOTOR CORPORATION декларира, че този тип радиосхоръжение К7/RA е в съответствие с Директива 2014/53/EC. Цялостният текст на EC декларацията за съответствие може да се намери на следния интернет адрес: https://www.globalsuzuki.com/automobile/technology/eu_doc.pdf
[Croatian]	SUZUKI MOTOR CORPORATION ovime izjavljuje da je radijska oprema tipa K77RA u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: https://www.globalsuzuki.com/automobile/technology/eu_doc.pdf
[Crnogorski jezik]	Sa ovim, SUZUKI MOTOR CORPORATION, izjavljuje da je tip radio opreme K77RA u saglasnosti sa direktivom 2014/53/EU. Cijeli tekst UE deklaracije o saglasnosti je dostupan na slijedećuj internet adresi: https://www.globalsuzuki.com/automobile/technology/eu_doc.pdf
[Macedonian]	Co cea, SUZUKI MOTOR CORPORATION, изјавува дека типот на радио опрема К77RA е во согласност со Директивата 2014/53/EУ. Целосниот текст на декларацијата на ЕУ за сообразност е достапна на следнава интернет адреса: https://www.globalsuzuki.com/automobile/technology/eu_doc.pdf

@ntinental 3

Manufacturer: Continental	Automotive GmbH
Address: Seimensstrasse12	D-93055 Regensburg Germany
TEL : :49 941 790 8942	FAX : :49 941 790 998942

66	Wittinemai »	Manufacturer: Continental Automotive GmbH			
CE	Radio Transmitter: S180052024, TIS-15 and Radio Receiver: 40398036	Address: Seimensstrasse12 D-93055 Regensburg Germany TEL : :49 941 790 8942 FAX : :49 941 790 998942			
[Czech]	Timto Continental prohlašuje, že typ rádiového zařízení \$180052024/TIS-15/40398036 je v souladu se směrnicí 2014/53/EU. Úplné znění EU p http://continental-homologation.com/suzuki	prohlášení o shodě je k dispozici na této internetové adrese:			
[Danish]	Hermed erkkerer Continental, at radioudstyrstypen S180052024/TIS-15/40398036 er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: http://continental-homologation.com/suzuki				
[German]	Hiermit erklärt Continental, dass der Funkanlagentyp S180052024/TIS-15/40398036 der Richtlinie 2014/53/EU entspricht. Der vollständige Te Internetadresse verfügbar: http://continental-homologation.com/suzuki	ext der EU-Konformitätserklärung ist unter der folgenden			
[Estonian]	Käesolevaga deklareerib Continental, et käesolev raadioseadme tüüp S180052024/TIS-15/40398036 vastab direktiivi 2014/53/EL nõuetele. ELi internetiaadressil: http://continental-homologation.com/suzuki				
[English]	Hereby, Continental declares that the radio equipment type S180052024/TIS-15/40398036 is in compliance with Directive 2014/53/EU. The ful following internet address: http://continental-homologation.com/suzuki	· · · · · · · · · · · · · · · · · · ·			
[Spanish]	Por la presente, Continental declara que el tipo de equipo radioeléctrico S180052024/TIS-15/40398036 es conforme con la Directiva 2014/53/U à disponible en la dirección Irternet siguiente. http://continental-homologation.com/suzuki				
[Greek]	Με την παρούσα ο/η Contineatal, δηλώνει ότι ο ραδιοεξοπλισμός \$180052024/TI\$-15/40398036 πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κε υθη ιστοσελίδα στο διαδίκτυς: http://continental-homologation.com/suzuki				
[French]	Le soussigné, Continental, déclare que l'équipement radioélectrique du type \$180052024/TIS-15/40398036 est conforme à la directive 2014/53/ disponible à l'adresse internet suivante: http://continental-homologation.com/suzuki				
[Italian]	Il fabbricante, Continental, dichiara che il tipo di apparecchiatura radio S180052024/TIS-15/40398036 è conforme alla direttiva 2014/53/UE. Il disponibile al seguente indirizzo Internet: http://continental-homologation.com/suzuki	*			
[Latvian]	Ar šo Continental deklarē, ka radioiekārta \$180052024/TIS-15/40398036 atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts homologation.com/suzuki				
[Lithuanian]	Aš, Continental, patvirtinu, kad radijo jrenginių tipas S180052024/TIS-15/40398036 attinka Direktyvą 2014/53/ES. Visas ES attikties deklarad http://continental-homologation.com/suzuki				
[Dutch]	Hierbij verklaar ik, Continental, dat het type radioapparatuar S180052024/TIS-15/40398036 conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: http://continental-homologation.com/suzuki				
[Maltese]	B'dan, Continental, niddikjaral ii dan it-tip ta' taghmir tar-radju S180052024/TIS-15/40398036 huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan I-indirizz tal-Internet li gej: http://continental-homologation.com/suzuki				
[Hungarian]	Continental igzzolja, hogy a SI80052024/TIS-15/40398036 tipusú riádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes ci inen: http://continental-homobgation.com/szuzki Continental inieszm ówiadcza, ze ty urzadzenia radiowego S180052024/TIS-15/40398036 jest zgodny z dyrektvwa 2014/53/UE. Pehy tekst deklaracji zgodności UE jest dostępny pod następującym				
[Polish]	commentaria imingazi in swiacca, zcipi urającznia radiowego i 1600/2020 i 1510/10/2000 jest zgodny z urtectiva z 1700/2020 i 1510/2000/2020 i 1510/10/2000 jest zgodny z urtectiva z 1700/2020 i 1510/2000 jest zgodny z urtectiva z 1700/2020 i 1510/2000 jest zgodny z urtectiva z 1700/2000 jest zgodny z urtectiva z				
[Portuguese]	conformidade está disponível no seguinte endereço de Internet: http://continental-homologation.com/strzuki Continental potriuje, da je tip radijske orerne S180052024/TIS-15/40398036 skladen z Direktivo 2014/53/EU. Celotno besedilo iziave EU o sl				
[Slovenian]	Continental portigic, agi e upratigase operative records and re	, , , , , , , , , , , , , , , , , , ,			
[Slovak]	Commentar tymo vymastije, ze natove zanačene typu 518052024/115-15/40598056 je v stuace so snerineou 2014/55/EU. Opine EU vymas http://continenta1-homologation.com/suzuki Continenta1-wakuttaa, etta radiolaietvvpoi \$180052024/115-15/40398036 on direktiivin 2014/53/EU mukainen. EU-vaatimustennukaisuusvak				
[Finish]	Continentia vakuutaa, eta raatoaatetyyppi S180052024/115-15/4059056 on uirekuivin 2014/55/EU mukamen. EU-vaaumusteimukaisuusvak internetosoitteessa: http://continental-homologation.com/suzuki Härmed försäkrat Continental att denna tvo av radiouttustinine S180052024/TIS-15/40398036 överensstämmer med direktiv 2014/53/EU. Den 1	· · · · · · · · · · · · · · · · · · ·			
[Swedish]	framet of sakata commentata u centa (y) av factourusung 31600/2024/115-15-16-059000 Overensstammer med ciretti 2014/3512). Den finns på följande webbadress: http://continental-homologation.com/suzuki Hér með Vsir Continental vil bvi að \$1800/2024/TIS-15/40398036 er í samremi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2				
[Icelandic]	The full treat of your commentary in period 500050247151515140590500 cf 1 same full voi guinaktion of gata kona, som goton efter inskopar 2 The fullur text af ESB-samramisyfirlýsing er í boði á eftirfarandi veffangi: http://continental-homologation.com/suzuki Continental erklærer herved a utstver (S180052024/TIS-15/40398036 er i samsvar med de grunnleggende krav og verige relevante krav i direkt				
[Norwegian]	Den fullstendige teksten i EU-deklarasjon finnes på følgende internettadresse: http://continental-homologation.com/suzuki				
[Turkish]	Işburada Continental, S180052024/TIS-15/40398036 ile Direktif 2014/53/AB hin uyumlu olduğunu beyan eder. AB uygunluk beyanının tam me homologation.com/suzuki	10			
[Romanian]	Prin prezenta, Continental declară că tipul de echipamente radio \$180052024/TIS-15/40398036 este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: http://continental-homologation.com/suzuki				
[Bulgarian]	С настоящото Continental декларира, че този тип радносьорьжение \$180052024/TIS-15/40398036 е в съответствие с Директива 2014/5 не може да се намери на следния интернет адрес: http://continental-homologation.com/suzuki				
[Croatian]	Continental ovime izjavljuje da je radijska oprema tipa S180052024/TIS-15/40398036 u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU iz http://continental-homologation.com/suzuki				
Crnogorski jezik]	Ovim, Continental, izjavljuje da je tip radio opreme S180052024/TIS-15/40398036 u skladu sa Direktivom 2014/53/EU. Kompletan tekst EU iz http://continental-homologation.com/suzuki				
[Macedonian]	Prin prezenta, Continental declară că tipul de echipamente radio \$180052024/TIS-15/40398036 este în conformitate cu Directiva 2014/53/UE./ disponibil la următoarea adresă internet: http://continental-homologation.com/suzuki	Textul integral al declarației UE de conformitate este			
	\$180052024 / TIS-15 : Frequen	new band : 433 97MHz			

CAUTION - Do not exposed to excessive heat such as sunshine, fire or the like.

S180052024 / TIS-15 : Frequency band : 433.92MHz Maximum radio-frequency power : <10mW e.r.p



Radio Transmitter: S180052024, TIS-15 and Radio Receiver: P61M0

 Manufacturer: Continental Automotive GmbH

 Address: Seimensstrasse12 D-93055 Regensburg Germany

 TEL: :49 941 790 8942
 FAX: :49 941 790 998942

[English]

Hereby, Continental declares that the radio equipment type S180052024/TIS-15/P61M0 is in compliance with Directive 2017 No. 1206. The full text of the UK declaration of conformity is available at the following internet address: http://continental-homologation.com/suzuki

CAUTION - Do not exposed to excessive heat such as sunshine, fire or the like.


S180052024 / TIS-15 : Frequency band : 433.92MHz Maximum radio-frequency power : <10mW e.r.p


Microsoft WMT License

This product is protected by certain intellectual property rights of Microsoft Corporation and third parties.

Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary and third parties. Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.



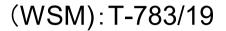

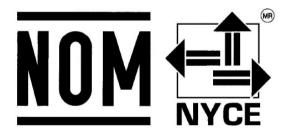

IFETEL:RCPPAAZ16-0312

La operación de este equipo está sujeta a las siguientes dos condiciones: (1) es posible que este equipo o dispositivo no cause interferencia perjudicial y (2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada. ABTO Інтернешнл 04073 м.Київ, пр -кт.Степана Бандери, 22-A 101 Moo 2 Teparak Road T.Bangsaothong A.Bangsaothong Samutprakarn, 10570, Thailand



Bluetooth

смугу радіочастот, в якій працює радіообладнання; 2402-2480MHz максимальну потужність випромінювання в смузі радіочастот, в якій працює радіообладнання; 2.5mW

справжнім Panasonic Corporation заявляє, що тип радіообладнання [CQ-JZ06F1JT,CQ-JZ46F1JT,CQ-CZ28E1JT] відповідає Технічному регламенту радіообладнання;

повний текст декларації про відповідність доступний на веб-сайті за такою адресою:

https://service.panasonic.ua/

(розділ «Технічне регулювання»)







This product has been Type Approved by Jamaica: SMA – AZ1601.

Продукты	Блок управления функциями салона (BCM)	Контроллер системы контроля давления в шинах (TPMS)	Клапан системы контроля давления в шинах (TPMS)	Контроллер иммобилайзера	Передатчик системы бесключевого доступа
Модель	K77RA	40398036	S180052024	155R0	T55R1
Производитель	SUZUKI MOTOR CORPORATION	Continental Aut	tomotive GmbH	OMRON Automotiv	e Electronics Co. Ltd.
Страна производителя	Япония	Франция		Яп	ония
Адрес	300 TAKATSUKA-CHO, MINAMI-KU, HAMAMATSU-SHI, SHIZUOKA 432-8611 JAPAN (ЯПОНИЯ)	Siemensstarasse12 D-93055 Regensburg Germany (Германия)		Aichi 485-0	a, Okusa, Komaki,)802 JAPAN)НИЯ)
Телефон	(+81) 53-440-2008	(+49) 941-790-8942		(+81) 56	8-78-6159
ФАКС	(+81) 53-440-2957	(+49) 941-790-998942		(+81) 56	8-78-7659

Дата производства указана на этикетке продукта.

Импортеры	ООО «СУЗУКИ МОТОР РУС»	
Телефон	+7 (495)787-2773 / добавочный номер 310	
ФАКС	+7 (495) 787-2795	
Адрес	Россия, Москва, Снежная ул. 26, 129323	



Продукты	Аудиосистема	
Модель	AZ1601	
Производитель	Panasonic	
Страна происхождения	Таиланд	

Дата производства найдена на маркировке продукта.

Средства импорта	СУЗУКИ МОТОР РУС	
Адрес	ул. Снежная 26, Москва, Россия. 129323	

EHC

Торговая марка: Continental Оборудование: Датчик контроля давления в шинах Модель: TIS-15 Диапазон напряжения питания: 2.1 вплоть до 3.2V Изготовитель: Continental Automotive GmbH Сделано в: Continental Automotive Франция С.А.С. Дата производства: 01.2019

Сертификат соответствия ТР ТС 020/2011 № RU Д-DE.МЛ04.В.01219 от 11.05.2018, действителен по 10.05.2023

Declaration of Conformity

CE

- 1. Manufacturer/s :
- a) Model/s : 81A
- RIKENKAKI CO., LTD. 5-6-12 Chiyoda, Sakado-shi, Saitama 350-0214 JAPAN
- b) Model/s : 55L, 72K, 54L, 77K, 81A
- CHANGZHOU RIKENSEIKO MACHINERY CO., LTD. No. 5 Xinlin Road. Zhonglou Changzhou, Jiangsu CHINA
- 2. Legal person authorised to compile the technical file : -Suzuki International Europe GmbH Service Automobile Suzuki-Altee 7 64625 Bensheim GERMANY
- 3. Product : Pantograph jack
- 4. Function : Lifting motor vehicle

5. Model	6. Type		
55L	Suzuki	Type- I	
72K	Suzuki	Type- II	
54L	Suzuki	Type-III	
81A	Suzuki	Type-IV	
77K	Suzuki	Type-V	
81A	Suzuki	Type-VI	

- The undersigned, Mr. Shuzo Osawa, representing the manufacturers, herewith declares that the machinery described below fulfils all the relevant provisions of : -The EC-directive 2006/42/EC on machinery
- 8. References to harmonized standards : EN1494:2000+A1:2008
- 9. Other standards or specifications : --
- 10. Date : 1 Jun, 2021
- 11. Signature : Shuzo asame
- 12. Name : Shuzo Osawa
- 13. Position : President

Note: This declaration becomes invalid, if technical or operational modifications are introduced without the manufacturers consent.

	Česky (Czech)
Izjava o sukladnosti	Prohlášení o shodě
1. Proizvodaći 1. Proizvodaći 2) Moreli Di	1. Vyrobaddi 2) Albodely b) Modely 2) Optohedin 2, b) Modely 2) Optohedin 2, b) Modely 4) Vyrobek : 2vedák 4. Funkce : 2vedák 4. Funkce : 2vedák 5. Typ 6. Typ 6. Typ 6. Typ 6. Typ 6. Typ 6. Typ 6. Typ 6. Typ 7. Typ
Nederlands (Dutek)	Eesti (Estonian)
Conformiteitsverklaring Conformiteitsverklaring) Brabinating)	Vastavusdeklaratsioon 1. 1. Tootjad a) Mudel/d D) Mudel/d D) Mudel/d D) Mudel/d Tohmiliae dokumentatsiooni koostamise õigusega juridiline isik 5. Toode: pankorgantungraud 4. Funktsioon: mootorsõukki töstmine 5. Mudel 4. Funktsioon: Kinsta kässelvasga, et allopol kirjeldatud seade vastab költidela äliginarovata direktiikide aajakohastele sätetele: 4. Olias dimtustatud standarditele 8. Vitad ühtustatud standarditele 8. Mudel sätetele: 10. Mudel sätetele: 11. Alloin 12. Nimi 13. Ametikoht: president
Français (French)	Deutsch (German)
Déclaration de conformité	Konformitätserklärung
1. Fabricant(s) b) Modèle(s) a) Modèle(s) b) Modèle(s) 2. Personne légalement audorsée à aompiler le doiser lechnique aompiler le doiser lechnique 4. Fonction : Lever un véhicule motorsé 5. Modèle 6. Topie 1. Je soussignet, M. Shuuro Caswa, 1. Je soussignet, M. Shuuro Caswa, 1. a directive ce fabricantis, désare nar présentes que le dispositif - dessous répond à toutes les dispositions correspondantes de : 1. a directive surgéente 2006/2/2CE 8. Références à des momes harmonisées 9. Autres normes ou spécifications 10. Date 11. Signutre 13. Fonction : Président 11.	1. Hersteller a) Modell(e) 2. Summerstellung der technischen Unterlagen 4. Funklön: Helemotor Fahrzaug 4. Funklön: Helemotor Fahrzaug 4. Funklön: Helemotor Fahrzaug 6. Typ 70 Der Unterzeichnete, Herr Shuzo Casson, Verfreife des Herstellers, Gangen, Verfreife des Herstellers, Modeller, Schleine Geschlersbergen Sontige Normen oder Spezifikationen 10. Datum 10. Datum
	a) Modeli b) Modeli Pravna osoba ovisštena za sastavljunje tehničkog lista Protizvot i znahografska držala Fancija: podzanje motomi vozia a) Tip 7. Ja. g. Shuzo Osawe, kao predstavnik proizvodžao, vime izjavljujem da stroj opisan u nastavku isputjem se ze - archevante održet. 1. Podpis 1. Dotatum 1. Podpis 1. Fabricaj: Predsjednik Nederlands (Dutch) Conformiteitsverklaring 1. Fabricanic) Predsjednik 1. Fabricanic) Strategi samen te stalion 3. Product : Schawirki 5. Model (Dutch) Dodardine technicke dosave hiero dod o falant diade ultrusting de hieronder stata teschreven vodozet aan alle relevante vooreweidon wich miljin 2006/2/2C 1. Fabricanic) 1. Aantem 1. Aantem 1. Aantem 1. Aantem 1. Sundie (Prench) Declaration de conformité 1. Sandelen 1. Santele President Français (French) Declaration de conformité 1. Santele (Prench) Declaration de conformité 3. Producti : Cha parallégramme 4. Producti : Cha parallégramme 4. References de de snormes harmonisées 1. Autres normes ou spécifications 1. Sundie 1. Santele (Prench) Declaration de sante scheven paris présentes que la dispositif of desous répond à tutes les dispositions de des normes harmonisées 1. Autres normes ou spécifications 1. Santele (Prench) Declaration de santes (Prench) Declaration de santes (Prench) Declaration de des normes harmonisées 1. Autres normes ou spécifications 1. Santele (Prench) Declaration de santes (Prench) Declaration de desourmes harmonisées 1. Autres normes ou spécifications

le.

Ελλ	ηνικά (Greek)	Magyar (Hungarian)	Italiano (Italian)
_	Δήλωση Πιστότητας	Megfelelőségi nyilatkozat	Dichiarazione di Conformità
1	Κατασκευαστής/-ές	1. Gyártó(k)	1. Fabbricante/i
	α) Μοντέλο/-α β) Μοντέλο/-α Νομικό πρόσωπο εξουσιοδοτημένο να	 Gyarto(k) a) Modell(ek) b) Modell(ek) A műszaki fáll összeállításáért felelős 	a) Modello/i b) Modello/i 2. Persona giuridica autorizzata a
	συντάξει το τεχνικό αρχείο	 A muszaki faji összeallításaert felelős jogi személy 	 Persona giundica autorizzata a compilare il fascicolo tecnico
3.	Προϊόν : Γρύλος παντογράφου	Termék : Pantograph emelő	3. Prodotto : Cric a pantografo
	Λειτουργία : Ανύψωση μηχανοκίνητου οχήματος	4. Funkció : Motoros járművek emelése	4. Funzione : Sollevamento di veicolo a
5.	Μοντέλο	5. Modell 6. Tipus	motore 5. Modello
6.	Είδος Ο υπογράφων, κ. Shuzo Osawa,	 Alulírott, Mr. Shuzo Osawa a gyártók 	6. Tipo
	ο υπογραφων, κ. Snuzo Osawa, εκπροσωπώντας τους κατασκευαστές,	képviseletében ezennel kijelentem,	7. Il sottoscritto, Shuzo Osawa, che
	δηλώνει δια του παρόντος ότι τα	hogy az alább leírt gép megfelel az alábbi rendeletek minden	rappresenta i produttori, dichiara con la presente che la macchina descritta
	μηχανήματα που περιγράφονται κατωτέρω πληρούν όλες τις σχετικές	követelményének:	qui sotto soddisfa tutti i requisiti
	διατάξεις της:	 Az Európai Közösség 2006/42/EK 	pertinenti di:
	 Ευρωπαϊκής Οδηγίας 2006/42/ΕΚ 	irányelve a gépekről 8. Hivatkozások harmonizált	Direttiva CE 2006/42/CE relativa alle macchine
8	σχετικά με τα μηχανήματα Αναφορές σε εναρμονισμένα πρότυπα	 Bivatkozasok narmonizait szabványokra 	8. Norme armonizzate di riferimento
9.	Άλλα πρότυπα ή προδιαγραφές	9. Egyéb szabványok vagy specifikációk	9. Altre norme o specifiche
	Ημερομηνία	10. Dátum	10. Data
11.	Υπογραφή Όνομα	11. Aláírás 12. Név	11. Firma 12. Nome
13.	Θέση : Πρόεδρος	13. Beosztás : Elnök	13. Posizione : Presidente
Lah	riešu (Latvian)	Lietuviškai (Lithuanian)	Polski (Polish)
Luii	Atbilstības deklarācija	Atitikties deklaracija	Deklaracia zgodności
1	Ražotājs(-i)		1. Producent/producenci:
	a) Modelis(-li) b) Modelis(-li)	 Gamintojas (-ai): a) Modelis (-iai) b) Modelis (-iai) 	a) Model(e) b) Model(e)
2.	Juridiskā persona, kurai ir atļauts	 Juridinis asmuo, įgaliotas ruošti 	2. Osoba prawna upoważniona do
3	sagatavot tehnisko datni Produkts : Pantogrāfa domkrats	techninį dokumentą	sporządzenia dokumentacji technicznej
4.	Funkcija : Mehānisko transportlīdzekļu	Gaminys : trapecinis domkratas	Produkt : podnośnik trapezowy
~	pacelšana Modelis	 Funkcija : motorinių transporto priemoniu kėlimas 	 Funkcja : podnoszenie pojazdów mechanicznych
5. 6.	Tips	5. Modelis	5. Model
7.	Apakšā parakstījies Šuzo Osava	6. Tipas	 Typ Niżej podpisany, reprezentujacy
	(Shuzo Osawa), kas pārstāv ražotājus, ar šo dokumentu paziņo, kas turpmāk	 Žemiau pasirašęs, P. Shuzo Osawa, atstovaujantis gamintojus, šiuo 	 Niżej podpisany, reprezentujący producentów Shuzo Osawa
	aprakstītā iekārta atbilst visiem	pareiškia, kad žemiau aprašyti	niniejszym oświadcza, że opisane
	paredzētajiem nosacījumiem:	jrenginiai atitinka visas susijusias šių	poniżej urządzenie spełnia wszystkie
	 EK Direktīva Nr. 2006/42/EK par mašīnām; 	teisės aktų nuostatas:	 stosowne wymogi: Dyrektywy maszynowej 2006/42/WE
	atsauces uz saskaņotajiem	 EB direktyva 2006/42/EB dėl mašinų 8. Nuorodos i harmonizuotus standartus 	 Odniesienia do norm zharmonizowanych
9	standartiem; citi standarti vai specifikācijas.	9. Kiti standartai arba specifikacijos	 Inne normy lub specyfikacje
10.	Datums	10. Data	10. Data
11.	Paraksts	11. Parašas 12. Vardas, pavardė	11. Podpis 12. Imię i nazwisko
	Vārds Amats : Prezidents	13. Pareigos : prezidentas	13. Stanowisko : Prezes
Ror	tuguês (Portuguese)	Română (Romanian)	Slovensky (Slovak)
FOI	Certificado de Conformidade	Declarație de conformitate	Vyhlásenie o zhode
		1. Fabricant/Fabricanti	1. Výrobca/Výrobcovia:
	Fabricante/s a) Modelo/s b) Modelo/s	a) Model/e b) Model/e	a) Model/Modely b) Model/Modely
	Pessoa legalmente autorizada a	Persoana juridică autorizată să	 Právnická osoba oprávnená vypracovať súbor technickej
	redigir a ficha técnica	redacteze dosarul tehnic 3 Produs : Cric manual	dokumentácie
	Produto : Macaco Pantográfico	 Produs : Cric manual Funcţie : Ridicarea vehiculului 	Výrobok : Pantografický zdvihák
4.	Função : elevar veículos a motor Modelo	motorizat	 Funkcia : Zdvíhanie motorového vozidla
6.	Tipo	5. Model	5. Model
7.	Tipo O representante dos fabricantes, Sr.	 Tip Subsemnatul, dl. Shuzo Osawa, 	6. Typ
	Shuzo Osawa, certifica pela presente gue o equipamento agui identificado	reprezentant al fabricanților, declar	 Dolu podpísaný zástupca výrobcov, pán Shuzo Osawa, týmto prehlasuje,
	está conforme e satisfaz todos os	prin prezenta faptul că echipamentul	že toto popísané strojné zariadenie
	requisitos de acordo com:	tehnic descris mai jos respectă cerințele esențiale din:	spĺňa všetky príslušné ustanovenia: • smernice o strojoch a strojných
	A Diretiva CE 2006/42/CE no âmbito	Directiva CE 2006/42/CE privind	 smemice o strojoch a strojnych zariadeniach č. 2006/42/ES.
	dos Equipamentos Mecânicos	echipamentele tehnice	 Odkazy na harmonizované normy
	Referências de normas aplicáveis Outras normas ou especificações	8. Trimiteri la standardele armonizate	 Ďalšie technické normy alebo ěposifikácio
		 Alte standarde sau specificații 	špecifikácie 10. Dátum
9.	Data		
9. 10. 11.	Assinatura	10. Data 11. Semnătura	11. Podpis
9. 10. 11. 12.			

Slovensko (Slovene)	Es	pañol (Spanish)	Svenska (Swedish)
Izjava o skla		Declaración de conformidad	Konformitetsförklaring
 Proizvajaleci a) Modeli sestavijanje tehnične satavijanje tehnične 3. izdelek. Pantografsk 4. Namen. Svojevanje 5. Model 5. Model 7. Spodaj podpisani g. kot predstavnik proiz izjavlja, da spodaj or izpolnjuje vse zahtev - Direktivo 52 2006/ 8. Sklicevanje na uskaj 0. Drugi standardi in sp 10. Potupan 12. Ime 13. Položaj : Predsadnik 	b) Model/i asčena za d okloteko ka dvigalka 4. Shuzo Osawa, vajalca stem isana naprava ane prodpise d/ES o strojih jene standarde eoffikacije 8. 	motor Tipo to post firmante, Sr. Shuzo Cawa, en representación de los fabricantes, declara por la presente que la máquina que se describe a continuación cumple todas liss disposiciones portinentes de: disposiciones portinentes de: aposiciones portinentes de: aposiciones portinentes de: portina se a las normas armonizadas Ortars normas o especificaciones Finda	1. Tillvarkare a) Modell/er b) Modell/er
Türkçe (Turkish)	13.	. Cargo : Presidente	13. Titel : VD
Ugunluk B . Ovsticiae . a) Modelier . Takink kössyy diza Uzał kiej . Oran: : Kinko . Biese : Motałi uara k . Biese: Motałi uara k . Biese: Motałi uara k . Motali uara k . Usałi inzas bulunan Bayt bunula yukarda tan makinenin, . *AT 2004/2/EC Mat tangati ani kasyb tangati ani kasyb . Ugunlandriming star referansia . Bigar standart veya k 1. Tana soyadi . Konumu : Başkan	b) Modeller nlemeye yetkili aldırma n ve aşağıda Shuzo Osawa iş imilanan kine direktifinin adığını beyan ıdartlara olan		

Declaration of Conformity



1. Manufacturer/s : a) Model/s : 81A

RIKENKAKI CO., LTD. 5-6-12 Chiyoda, Sakado-shi, Saitama 350-0214 JAPAN

b) Model/s : 55L, 81A

CHANGZHOU RIKENSEIKO MACHINERY CO., LTD. No. 5 Xinlin Road. Zhonglou Changzhou, Jiangsu CHINA

2. Legal person authorised to compile the technical file : • Suzuki GB PLC Steinbeck Crescent, Snelshall West, Milton Keynes, MK4 4AE, England, UK

3. Product : Pantograph jack

4. Function : Lifting motor vehicle

5. Model	6. Type	
55L	Suzuki	Type- I
81A	Suzuki	Type-IV
81A	Suzuki	Type-VI


 The undersigned, Mr. Shuzo Osawa, representing the manufacturers, herewith declares that the machinery described below fulfils all the relevant provisions of : -Supply of Machinery(Safety)Regulations 2008

8. References to harmonized standards : BS EN 1494:2000+A1:2008

- 9. Other standards or specifications : ---
- 10. Date : 1 Jun, 2021
- 11. Signature : Shung Osamo
- 12. Name : Shuzo Osawa
- 13. Position : President

Note: This declaration becomes invalid, if technical or operational modifications are introduced without the manufacturers consent.

PANTOGRAPH JACK INSTRUCTION MANUAL

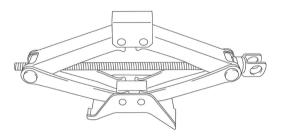

Manufacturers:

RIKENKAKI CO., LTD. 5-6-12 Chiyoda, Sakado-shi, Saitama, 350-0214 Japan Tel: 049-248-1661 Fax:049-248-4340

CHANGZHOU RIKENSEIKO MACHINERY CO., LTD. No.5 Xiniin Road. Zhonglou Changzhou, Jiangsu CHINA Tel: 0519-327-5284 Fax:0519-327-0811


Please read this INSTRUCTION MANUAL before operation!

Norm: EN 1494:2000+A1:2008 BS EN 1494:2000+A1:2008

Attention and warning

- The JACK may be used only for replacing tyres, not for any other purpose.
- Use the JACK no more than 50 times.
- No-loading person.
- Never get under vehicle raised by jack.
- Use of defective or inadequately maintained jacks is extremely dangerous.

Meaning of pictogram on caution label

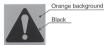


This symbol indicates a potential hazard that could result in death or serious injury.




This symbol indicates you never get under the vehicle when it is supported by the jack.

Parts name of Pantograph Jack

84

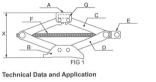

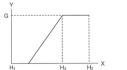

т

A : 7	: TOPHOLDER			
3 : E	: BASE			
C : L	: UPPER ARM			
) : L	: LOWER ARM			
E : H	HANDLE JO	INT		
Ē L.	- : JACK SCREW			
1: E	NOMINAL L	OAD (t)		
H1: 1	MINIMUM H	EIGHT (mm	i)	
H2: MAXIMUM HEIGHT (mm)				
H₃: PERFORMANCE				
ASSURANCE HEIGHT (mm)				
K : JACK HEIGHT (mm)				
Y : LOAD (t)				
M : MODEL				
F : TYPE				
	H ₂	H ₃		
	007	000		

IVI	1	9	m	112	113
55L	Suzuki Type- I	0.95	89	327	208
72K	Suzuki Type- II	0.95	70	281	175.5
54L	Suzuki Type-III	0.95	80	318	199
81A	Suzuki Type-IV	1.0	85.5	344	214.75
77K	Suzuki Type-V	1.25	100.8	436.3	268.55
81A	Suzuki Type-VI	1.0	85.5	344	214.75

H

G

No-Using Conditions

- When temperature under -40°C.
- On miring or sand ground.
- On big gradient road.
- In extreme nature condition: rainstorm, typhoon, cyclone, snowstorm, thunder-storm, etc.
- Loading dangerous heavy, for instance: melted metal, acidity substance, radioactivity substance or specially crisp goods.
- Contact with hood directly.
- Using on boat.
- The ground with difference in level.

Operation instructions

Whenever a wheel is changed, always remove any corrosion that may be present on inside of wheel and wheel mounting surface on vehicle.

Details:

Please operate according to the "operation instructions".


Operate the jack on the level ground while checking the jack and the load.

Mustn't operate under raising load, unless the load is fastened surely.

- Park the car on the flat, level ground and apply the brake firmly.
- Set transmission in "reverse"(automatic transmission in "park").
- Turn on the hazard warning flasher.
- Remove jacking tools and spare tire from stowage area.
- Block front and rear of wheel diagonally opposite wheel being removed before operating jack.
- Loosen, but do not remove wheel nuts by turning wrench counter clockwise.
- Raise jack until jack-head groove fits boss of frame see illustrations.
- Operate jack with slow, smooth motion, using jack handle.
- Raise vehicle so an inflated tire will just clear surface, remove nuts and wheel.
- Install wheel, then slightly tighten each nut, wheel must be seated on hub.
- Lower vehicle, and fully tighten wheel nuts in across-cross sequence by turning wrench clockwise.

Maintenance

- Please prevent the JACK SCREW from accretion of dirt.
- Check the nameplate, keep the shape same as original.
- No-rejigger the jack's construction privately.
- After any use, consult immediately your Suzuki Dealer or Service Partner for inspection and maintenance of the jack.
- If the label (sticker) is damaged, please consult your Suzuki Dealer or Service Partner.

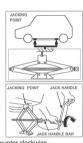

Български (Bulgarian)

ПАНТОГРАФЕН КРИК РЪКОВОДСТВО ЗА ЕКСПЛОАТАЦИЯ

CE

Производител:

RIKENKAKI CO., LTD. 5-6-12 Chiyoda, Sakado-shi, Saitama, 350-0214 Япония Тел: 049-248-1661 Факс: 049-284-4340

CHANGZHOU RIKENSEIKO MACHINERY CO., LTD. No.5 Xinlin Road, Zhonglou Changzhou, Jiangsu K//TAЙ

тел: 0519-327-5284 Факс:0519-327-0811

Моля, прочетете това РЪКОВОДСТВО ЗА ЕКСПЛОАТАЦИЯ преди работа!

Стандарт: EN 1494:2000+A1:2008

Обозначения за повишено внимание и предупреждения

- КРИКЪТ може да се използва само за смяна на гуми, а не за други цели.
- Използвайте КРИКА не повече от 50 пъти.
- Не повдигайте автомобил, в който се намират хора
- Никога не влизайте под автомобил, повдигнат на крик.
- Използването на повредени или неправилно поддържани крикове е изключително опасно.

Значение на пиктограмите на предупредителните етикети



Този символ означава потенциална опасност, която може да доведе до смърт или сериозно нараняване.



Този символ показва, че никога не трябва да влизате под автомобил, повдигнат на крик. Наименования на частите на пантографен крик Виж FIG. 1. на страницата на английски език

Технически характеристики и приложение

Виж FIG. 2. на страницата на английски език.

А	: ГОРЕН ДЪРЖАЧ	F : ВИНТ НА КРИКА	Х : ВИСОЧИНА НА КРИКА (мм)
в	: OCHOBA	G : НОМИНАЛЕН ПОДЕМЕН КАПАЦИТЕТ (т)	Y : ПОДЕМЕН КАПАЦИТЕТ (т)
С	: FOPHO PAMO	H1 : МИНИМАЛНА ВИСОЧИНА (MM)	М : МОДЕЛ
D	: ДОЛНО РАМО	H2 : МАКСИМАЛНА ВИСОЧИНА (MM)	т : тип
Е	: РЪКОХВАТКА	Н3 : РАБОТНА ВИСОЧИНА НА КРИКА (ММ)	

Условия, в които не трябва да се използва

- При температури под -40°С.
- Ввърху неустойчив или песъчлив терен.
- Ввърху наклонен път.
- В екстремни природни условия: пороен дъжд, тайфуни, циклони, силен снеговалеж, гръмотевична буря и др.
- Опасен товар, например: стопен метал, разяждащи киселинни или радиоактивни вещества или особено крехки товари.
- В пряк контактс купето.
- Използване на лодка.
- Върху наклонен терен с разлика в нивата.

Инструкции за работа

При смяна на колело винаги отстранявайте следите от корозия, натрупали се от вътрешната страна на джантата и монтажната повърхност на главината на колелото. Информация:

Моля, работете в съответствие с "Инструкции за експлоатация". Поставете крика върху равна повърхност и следете както крика,

така и товара.

Не работете под повдигания товар, освен ако товарът не е устойчиво закрепен.

- Паркирайте автомобила на равна, хоризонтална повърхност и изтеглете докрай ръчната спирачка.
- Включете на "задна" предавка (при автоматични трансмисии,
- поставете в положение "Park"). - Включете предупредителните сигнални светлини.
- Извадете крика и принадлежностите му и резервната гума отмястото за съхоанение.
- Отмястото за съхранение.
 Преди да работите с крика, блокирайте предното и задно колело по диагонал и от противоположната страна на колелото, което ще
- сваляте. - Разхлабете, без да развивате докрай, колесните гайки със
- завъртане на ключа обратно на часовника.
- Повдигнете крика, докато канала върху главата на крика обхване изпъкналата част на рамата – виж илюстрацията.
- Работете с крика с бавни, плавни движения, като използвате ръкохватката.
- Повдигнете автомобила, така че надутата гума едва да се отлепи от повърхността, след което развийте гайките и свалете колелото.
- Поставете колелото и леко завийте всяка от гайките, колелото трябва добре да легне върху главината.
- Спуснете автомобила и затегнете докрай колесните гайки в последователност на кръст, като въртите ключа по часовника.

Поддръжка

- Не допускайте натрупване на замърсявания върху ВИНТА НА КРИКА.
- Проверете данните върху табелката с технически характеристики, поддържайте крика в изправно състояние.
- Не предприемайте опити сами да преправяте конструкцията на крика.
- След всяко използване незабавно се свържете с Вашия Suzuki дилър или сервизен партньор за преглед и поддръжка на крика.
- Ако етикетът (стикерът) е повреден, моля свържете се с Вашия Suzuki дилър или сервизен партньор.





Hrvatski (Croatian)

Pantografska dizalica UPUTE ZA UPORABU

CE

Proizvođači:

RIKENKAKI CO., LTD. 5-6-12 Chiyoda, Sakado-shi, Saitama, 350-0214 Japan Tel: 049-248-1661 Faks:049-284-4340

CHANGZHOU RIKENSEIKO MACHINERY CO., LTD. No.5 Xinlin Road. Zhonglou Changzhou, Jiangsu KINA Tel: 0519-327-5284 Faks:0519-327-0811


Prije uporabe pročitati UPUTE ZA UPORABU!

Norma: EN 1494:2000+A1:2008


Obavijesti i upozorenja

- DIZALICA se može koristiti samo za zamjenu guma, ne u bilo koju drugu svrhu.
- DIZALICU je dozvoljeno upotrijebiti najviše 50 puta.
- U vozilu se ne smiju nalaziti putnici.
- Nikada ne zalazite ispod vozila podignutog dizalicom.
- Korištenje neispravnih ili nepravilno održavanih dizalica je izuzetno opasno.

Značenje piktograma na naljepnici upozorenja

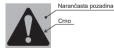

Ovaj simbol označava potencijalnu opasnost od ozbiljnih ozljeda i smrti.

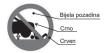

Ovaj simbol označava zabranu zalaženja ispod vozila podignutog dizalicom.

Nazivi dijelova pantografske dizalice Vidi FIG. 1. na stranici na engleskom jeziku.

5....

Tehnički podaci i primjena

Vidi FIG. 2. na stranici na engleskom jeziku.

A : NOSAČ	F : OPRUGA DIZALICE	X : VISINA DIZALICE (mm)
B : BAZA	G : NAZIVNA NOSIVOST (t)	Y : NOSIVOST (t)
C : GORNJI KRAK	H1 : MINIMALNA VISINA (mm)	M : MODEL
D : DONJI KRAK	H ₂ : MAKSIMALNA VISINA (mm)	T : TIP
E : ZGLOB ZA POLUGU	H ₃ : OPTIMALNA VISINA (mm)	

Uvjeti u kojima je zabranjena uporaba dizalice

- Temperatura niža od -40°C.
- Klizavo i pieskovito tlo.
- Cesta s velikim nagibom.
- Ekstremni vremenski uvjeti: pljusak, tajfun, ciklon, snježna mećava, grmljavinsko nevrijeme i sl.
- Vozila s opasnim i teškim teretom, primjerice: rastaljeni metal, kiseline, radioaktivne tvari ili osobito lomljiv teret.
- Izravan kontakt s poklopcem motora vozila.
- Na brodu.
- Neravno tlo.

Upute za rad

Kod zamjene kotača uvijek provjerite ima li na unutrašnjem dijelu kotača ili površini za postavljanje kotača ostataka korozije.

Dodatne upute: Molimo vas da se pridržavate uputa za rad.

Nakon provjere dizalice i opterećenja dizalicu upotrijebite na ravnoj podlozi. Vozilo ne smijete podizati ako je pod opterećenjem, osim ako teret nije stabiliziran.

- Vozilo parkirajte na ravnoj površini i čvrsto pritegnite ručnu kočnicu.
- Mjenjač postavite u vožnju unatrag (vozila s automatskim prijenosom postavite u položaj za parkiranje).
- Upalite sva četiri pokazivača smjera.
- Iz prtljažnika izvadite alat za dizalicu i rezervni kotač.
- Prije uporabe dizalice blokirajte prednji i stražnji dio kotača koji se nalazi dijagonalno u odnosu na kotač koji mijenjate.
- Okretanjem francuskog ključa suprotno od kazaljke na satu olabavite vijke na kotaču, ali ih nemojte ukloniti.
- Podižite dizalicu dok udubina na nosaču ne legne u izbočinu podvozja, kako je prikazano na ilustraciji.
- Dizalicom upravljajte polaganim, ravnomjernim pokretima polugom.
- Vozilo podignite od tla tek toliko da probušena guma malo odstoji od tla pa uklonite vijke i kotač.
- Postavite kotač, a potom lagano pričvrstite vijke, kotač mora sjesti na glavčinu.
- Spustite vozilo pa do kraja zategnite vijke okretanjem francuskog ključa u smjeru kazaljke na satu.

Održavanje

- Spriječite nakupljanje prljavštine na OPRUZI DIZALICE.
- Provjerite nazivnu pločicu, mora zadržati svoj izvorni oblik.
- Nemojte samostalno obavljati promjene na dizalici.
- Nakon svake uporabe, odmah kontaktirajte vašeg Suzuki dobavljača ili servisnog partnera za pregled i održavanje dizalice.
- Ako je oznaka (naljepnica) oštećena, molimo kontaktirajte svog Suzuki dobavljača ili servisnog partnera.



PODIZNA



Česky (Czech)

NŮŽKOVÝ ZVEDÁK NÁVOD K POUŽITÍ

CE

Výrobce:

RIKENKAKI CO., LTD. 5-6-12 Chiyoda, Sakado-shi, Saitama, 350-0214 Japonsko Tel: 049-248-1661 Fax:049-284-4340

CHANGZHOU RIKENSEIKO MACHINERY CO., LTD. No.5 Xinlin Road. Zhonglou Changzhou, Jiangsu ČINA Tel: 0519-327-5284 Fax:0519-327-0811

Před zahájením činnosti si tento NÁVOD K POUŽITÍ pečlivě přečtěte!

Norma: EN 1494:2000+A1:2008

Upozornění a varování

- ZVEDÁK se smí používat pouze k výměně pneumatik a k žádným jiným účelům.
- ZVEDÁK nepoužívejte více než padesátkrát.
- Nezvedejte osoby.
- Nikdy nevstupujte pod vozidlo zvednuté pouze zvedákem.
- Používání vadných či nedostatečně udržovaných zvedáků je nesmírně nebezpečné.

Významy symbolů na štítku pro upozornění



Tento symbol označuje možné riziko, které by mohlo vést k úmrtí nebo vážnému zranění.

Bilé pozadí Černý Červe

Tento symbol označuje zákaz vstupování pod vozidlo podepřené zvedákem.

Názvy součástí zvedáku Pantograph

Viz FIG. 1 na anglické stránce

Technické údaje a použití

Viz FIG. 2 na anglické stránce.

A : HORNÍ DRŽÁK	F : ŠROUB ZVEDÁKU	X : VÝŠKA ZVEDÁKU (mm)
B : ZÁKLADNA	G : NOMINÁLNÍ ZATÍŽENÍ (t)	Y : ZATÍŽENÍ (t)
C : HORNÍ RAMENO	H1 : MINIMÁLNÍ VÝŠKA (mm)	M : MODEL
D : DOLNÍ RAMENO	H ₂ : MAXIMÁLNÍ VÝŠKA (mm)	T : TYP
E : DRŽADLO	H3 : VÝŠKA PRO ZAJIŠTĚNÍ VÝKONN	OSTI (mm)

Podmínky, při nichž se výrobek nemá používat

- Při teplotě pod -40°C.
- Na štěrku nebo na písku.
- Na silnici s velkým sklonem.
- V extrémních přírodních podmínkách: bouře, tajfun, cyklon, sněhová bouře, bouře s deštěm atd.
- Zvedání nebezpečných nákladů, například: svařovaný kov, kyseliny, radioaktivní látky nebo speciální křehké zboží.
- Přímý kontakt s kapotou.
- Používání na lodi.
- Země s odlišnou výškou.

Provozní pokyny

Při výměně kol vždy odstraňte korozi, která může být na vnitřku kola a povrchu pro upevnění kola na vozidle. Podrobnosti:

Používejte podle "pokynů k použití".

Zvedák používejte na rovné zemi a kontrolujte zvedák i náklad. Nevstupujte pod zvednutý náklad, pokud náklad není bezpečně upevněn.

- Zaparkujte vůz na rovné ploché zemi a zatáhněte parkovací brzdu.
- Zařaďte zpátečku (automatickou převodovku do stupně "park").
- Zapněte výstražná světla.
- Vyjměte zvedák a náhradní pneumatiku.
- Zajistěte přední a zadní kola úhlopříčně proti demontovanému kolu, než zvedák použijete.
- Matice kola povolte, ale nevyndávejte je otočte klíčem doleva.
- Zvedněte zvedá, dokud se drážka nedostane do styku s rámem, viz obrázky.
- Používejte zvedák pomalu, plynule pomocí držadla.
- Zvedněte vozidlo tak, aby nahuštěná pneumatika byla těsně nad zemí, demontujte matice a kolo.
- Nainstalujte kolo, pak mírně utáhněte každou matici, kolo musí být nasazeno na náboji.
- Spusťte vozidlo a utáhněte matice křížem proti sobě, otáčejte klíčem doprava.

Údržba

- Zabraňte tomu, aby se na ŠROUBU ZVEDÁKU usadily nečistoty.
- Zkontrolujte jmenný štítek a tvar udržujte stejný jako původně.
- Neupravujte konstrukci zvedáku sami.
- Po jakémkoli použití se obraťte na prodejce Suzuki či na servisního partnera, aby provedl prohlídku a údržbu zvedáku.
- Pokud se štítek (nálepka) poškodí, obraťte se prosím na svého prodejce Suzuki nebo servisního partnera.





Dansk (Danish)

DONKRAFT BRUGSANVISNING

CE

Fabrikanter:

RIKENKAKI CO., LTD.

5-6-12 Chiyoda, Sakado-shi, Saitama, 350-0214 Japan Tel: 049-248-1661 Fax:049-284-4340

CHANGZHOU RIKENSEIKO MACHINERY CO., LTD. No.5 Sinlin Road. Zhonglou Changzhou, Jiangsu CHINA Tel: 0519-327-5284 Fax:0519-327-0811


Læs denne BRUGSANVISNING før brug!

Standard: EN 1494:2000+A1:2008


Advarsel

- DONKRAFTEN må kun anvendes til udskiftning af dæk, ikke til andre formål.
- Brug ikke DONKRAFTEN flere end 50 gange.
- Løft aldrig mennesker.
- Kravl aldrig ind under et køretøj, der er løftet med en donkraft.
- Brug af defekte eller utilstrækkeligt vedligeholdte donkrafte, er ekstremt farligt.

Betydning af piktogrammet på advarselsmærket

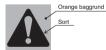

Dette symbol angiver en mulig fare, der kan medføre dødsfald eller alvorlig skade.

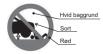

Dette symbol betyder, at du aldrig må kravle ind under et køretøj, der er løftet med donkraften.

Delenes betegnelse for Saksedonkraft

Se FIG 1 på den engelsksprogede side.

Tekniske data og anvendelse

Se FIG 2 på den engelsksprogede side.

А	: LØFTEBAKKE	F	: DONKRAFTENS SKRUE	х	: LØFTEHØJDE (mm)
в	: BASE	G	: NOMINEL LØFTEKAPACITET (t)	Υ	: BELASTNING (t)
С	: ØVRE ARM	H1	: MINIMUMSHØJDE (mm)	Μ	: MODEL
D	: NEDRE ARM	H_2	: MAKSIMUMSHØJDE (mm)	Т	: TYPE
Е	: HÅNDTAGETS LED	H_3	: HØJDE FOR SIKKER BETJENING (mm)		

Betingelser, hvor donkraften ikke må bruges

- Temperatur under -40 °C.
- På mudret eller sandet underlag.
- På stærkt hældende veje.
- Under ekstreme vejrforhold: kraftigt regnvejr, tyfon, cyklon, snestorm, tordenvejr mv.
- Tungt eller farligt gods, fx: smeltet metal, syrer, radioaktive stoffer eller særligt skrøbelige varer.
- Direkte kontakt med køretøjets understel.
- På et skib.
- På underlag med niveauforskelle.

Brugsanvisning

Når du skifter hjul, skal du altid fjerne eventuel rust, der måtte findes inde i hjulet eller på køretøjets hjulmonteringsoverflade. Nærmere anvisninger:

Gå frem ifølge brugervejledningen.

Brug donkraften på et jævnt underlag, og hold øje med både donkraften og lasten.

Du må ikke foretage indgreb under en løftet last, med mindre lasten er gjort sikkert fast.

- Parker køretøjet på et fladt, jævnt underlag, og træk bremsen godt.
- Sæt gearkassen i bakgear (en automatisk gearkasse sættes på "parkering").
- Tænd katastrofeblinket.
- Taenu katastroiebiirike
- Tag donkraftens redskaber og reservehjulet ud af deres opbevaringsrum.
- Bloker foran og bag på det hjul, der sidder diagonalt i forhold til det hjul, der fjernes, inden donkraften bruges.
- Løsn hjulmøtrikkerne uden at fjerne dem ved at dreje skruenøglen mod uret.
- Løft donkraften, indtil rillerne i donkraftens løftebakke passer til rammen se illustrationerne.
- Betjen donkraften ved hjælp af donkraftens håndtag med langsomme, jævne bevægelser.
- Løft køretøjet, så et oppustet dæk netop vil være frit af underlaget. Fjern møtrikkerne, og tag hjulet af.
- Sæt det nye hjul på plads, og stram hver møtrik lidt. Hjulet skal sidde på et nav.
- Sænk køretøjet ned, og stram hjulmøtrikkerne fuldstændigt skiftevis i en overfor/diagonalt-sekvens ved at dreje skruenøglen med uret.

Vedligeholdelse

- Pas på at undgå, at DONKRAFTENS SKRUE samler snavs.
- Tjek typeskiltet. Bevar den originale form.
- Det er forbudt selv at foretage ændringer på donkraftens konstruktion.
- Efter ethvert brug, skal du øjeblikkeligt konsultere din Suzuki-forhandler eller servicepartner, for eftersyn og vedligeholdelse af donkraften.
- Hvis mærkaten (etiketten) er beskadiget, skal du rådføre dig med din Suzuki-forhandler eller servicepartner.





Nederlands (Dutch)

SCHAARKRIK GEBRUIKERSHANDLEIDING

CE

Fabrikanten:

RIKENKAKI CO., LTD. 5-6-12 Chiyoda, Sakado-shi, Saitama, 350-0214 Japan Tel: 049-248-1661 Fax:049-284-4340

CHANGZHOU RIKENSEIKO MACHINERY CO., LTD. No.5 Xinlin Road. Zhonglou Changzhou, Jiangsu CHINA Tei: 0519-327-5284 Fax:0519-327-0811


Lees deze GEBRUIKERSHANDLEIDING voor gebruik!

Norm: EN 1494:2000+A1:2008


Let op en waarschuwing

- De krik mag alleen worden gebruikt voor het vervangen van banden, niet voor andere doeleinden.
- Niet meer dan 50 maal gebruiken.
- Er mag niemand in de auto zitten.
- Ga nooit onder een voertuig dat door een krik is opgetild.
- Gebruik van defecte of onvoldoende onderhouden krikken is zeer gevaarlijk.

Betekenis van het pictogram op het waarschuwingslabel

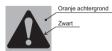

Dit symbool geeft potentieel gevaar aan dat tot ernstig letsel of de dood kan leiden.

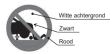

Dit symbool geeft aan dat u nooit onder een apparaat moet gaan dat door de krik opgetild is. Naam van de onderdelen van de Schaarkrik Zie FIG 1 op de Engelse pagina.

Technische gegevens en toepassing

Zie FIG 2 op de Engelse pagina.

A : BOVENKANT	F	: KRIKSCHROEF	х	: HOOGTE KRIK(mm)
B : BASIS	G	: NOMINALE LADING (t)	Y	: LADING (t)
C : BOVENARM	H1	: MINIMUMHOOGTE (mm)	M	: MODEL
D : ONDERARM	H ₂	: MAXIMUMHOOGTE (mm)	т	: TYPE
E : SCHARNIER VAN DE HENDEL	H ₃	: WERKHOOGTE (mm)		

Niet gebruiken in de volgende gevallen

- Wanneer de temperatuur lager is dan -40°C.
- Op een gladde of zanderige ondergrond.
- Op een sterk hellende weg.
- Bij extreme weersomstandigheden: regen en storm, tyfoon, tornado, sneeuwstorm, onweer, etc.
- Voor het laden van gevaarlijke stoffen, bijv.: gesmolten metaal, zure stoffen, radioactieve stoffen en fragiele goederen.
- In direct contact met de motorkap.
- Op een boot.
- Op een onregelmatige ondergrond.

Gebruiksaanwijzing

Als een wiel wordt gewisseld, verwijder dan altijd eerst corrosie die op de wiel of de wielas van het voertuig aanwezig is. Details:

/otanio. /ele de "eeb

Volg de "gebruiksaanwijzing" nauwkeurig op. Zet de krik op een stabiele ondergrond, controleer hem en controleer de

lading.

Mag niet onder een stijgende lading worden gebruikt, tenzij de lading bevestigd is

- Parkeer de wagen op een vlakke, egale ondergrond en trek de handrem stevig aan.
- Zet de versnelling in de "achteruit" (automatische versnellingsbak in "parkeerstand").
- Zet het alarmknipperlicht aan.
- Neem het gereedschap en het reservewiel uit de daarvoor bestemde ruimte.
- Blokkeer de voor- en achterkant van het wiel dat tegenover het te verwijderen wiel ligt voordat u de krik gebruikt.
- Draai de moeren tegen de klok in los.
- Schroef de krik omhoog totdat de uitsparing in het kriksteunpunt past, zie illustraties.
- Bedien de krik met langzame, vloeiende bewegingen, met behulp van de hendel.
- Krik de auto zover op dat de opgeblazen band niet de ondergrond zal raken, verwijder de moeren en het wiel.
- Breng het andere wiel aan, schroef de moeren licht vast, het wiel moet op de wielas vastzitten.
- Laat de wagen zakken en draai de moeren kruiselings en klokgewijs geheel aan. .

Onderhoud

- Zorg ervoor dat de krik niet vuil wordt.
- Check het naamplaatje, sla de krik in de oorspronkelijke vorm op.
- Demonteer de krik niet zelf.
- Na ieder gebruik dient u onmiddellijk uw Suzuki-dealer of Servicepartner te raadplegen voor de inspectie en het onderhoud van de krik.
- Als het label (de sticker) beschadigd is, neemt u contact op met uw Suzuki-dealer of Servicepartner.





Eesti (Estonian)

PANTOGRAPH-TUNGRAUD KASUTUSJUHEND

CE

Tootjad:

RIKENKAKI CO., LTD.

5-6-12 Chiyoda, Sakado-shi, Saitama, 350-0214 Jaapan Tel: 049-248-1661 Faks: 049-284-4340

CHANGZHOU RIKENSEIKO MACHINERY CO., LTD. No.5 Xinlin Road. Zhonglou Changzhou, Jiangsu HIINA Tel: 0519-327-5284 Faks: 0519-327-0811

Palun lugege seda KASUTUSJUHENDIT enne kasutamist!

Norm: EN 1494:2000+A1:2008

Tähelepanu ja hoiatus

- Antud TUNGRAUD on kasutamiseks ainult rehvivahetuseks ja mitte mistahes muul eesmärgil.
- Ärge kasutage TUNGRAUDA rohkem kui 50 korda.
- Sõidukis ei tohi viibida inimesi.
- Ärge kunagi ronige tungrauaga tõstetud sõiduki alla.
- Vigaste või korralikult hooldamata tungraudade kasutamine on äärmiselt ohtlik.

Piktogrammi tähendus hoiataval sildil.



See märk viitab võimalikule ohule, mis võib lõppeda tõsise vigastuse või surmaga.

Valge taust Must Punane

See märk hoiatab, et tungraua kasutamise ajal ei tohi ronida sõiduki alla. Pantograaf tungraua detailid Vaadake ingliskeelselt lehelt FIG. 1

Tehniline info ja rakendamine

Vaadake ingliskeelselt lehelt FIG. 2

A : ÜLEMINE KINNITI	F : JÕUKRUVI	Х	: KRUVI KÕRGUS (mm)	
B : ALUS	G : NOMINAALKOORMUS (t)	Υ	: KOORMUS (t)	
C : ÜLEMINE ÕLG	H1 : MINIMAALNE KÕRGUS (mm)	Μ	: MUDEL	
D : ALUMINE ÕLG	H2 : MAKSIMAALNE KÕRGUS (mm)	Т	: TÜÜP	
E : SANGA LIIGEND	H ₃ : JÕUDLUSE TAGATUD KÕRGUS (mm)			

Kasutada ei tohi alljärgnevatel tingimustel:

- kui temperatuur on alla -40°C
- mudasel või liivasel pinnal
- kallakul
- äärmuslikes loodustingimustes: vihmasadu, taifuun, tsüklon, lumetorm, äikesetorm, jne
- ohtliku koorma korral, näiteks: sulatatud metall, happeline aine, radioaktiivne aine või kergesti purunevad kaubad
- otsene kontakt lükanduksega
- kasutamine paadis
- erineva kõrgusega põrandad.

Kasutamise juhised

Igakordsel ratta vahetamisel tuleb alati eemaldada korrosioon, mida võib leiduda ratta siseküljel või sõidukil rattapaigalduse kohal. Detailid.

Palun kasutage seadet vastavalt "kasutamise juhistele".

Kasutage tungrauda horisontaalsel pinnal, kontrollides sõidukit ja tungrauda.

Kasutamine ei ole lubatud koorma tõstmisel, enne kui koorem ei ole kindlalt kinnitatud.

- Parkige sõiduk tasasel horisontaalsel pinnal ning tõmmake käsipidur kindlalt peale.
- Jätke sisse "tagurdamise käik" (automaatkäigukasti korral "parkimine")
- Lülitage sisse ohutuled.
- Võtke hoiupaigast tungraud ja selle juurde kuuluvad tööriistad ning tagavararatas.
- Vahetatava ratta suhtes diagonaalselt paiknevad esimene ja tagumine ratas tuleb tõkestada enne tungraua kasutamist.
- Keerates mutrivõtmega vastupäeva, lõdvestage, kuid ärge eemaldage ratta mutreid.
- Tõstke tungrauda kõrguseni, kus tungrauapea renn sobitub juhtraamiga, vaata jooniseid.
- Kasutage tungrauda aeglaste, ühtlaste liigutustega, kasutades tungraua käepidet.
- Tõstke sõidukit kuni vahetatav ratas on maast lahti, eemaldage mutrid ja ratas.
- Paigaldage ratas, siis pingutage kergelt iga mutrit, ratas peab sobituma rattarummule.
- Laske sõiduk alla ja pingutage mutrid tugevalt risti üle ühe, keerates mutrivõtit päripäeva.

Hooldus

- Palun vältige TUNGRAUA KRUVI määrdumist.
- Kontrollige andmeplaati, säilitage originaalvorm.
- Mitte muuta iseseisvalt tungraua konstruktsiooni.
- Pärast iga kasutamist pöörduge tungraua ülevaatuses ja hoolduseks viivitamatult oma Suzuki edasimüüja või teenindusesindaja poole.
- Kahjustatud sildi (kleebise) korral pöörduge oma Suzuki edasimüüja või teenindusesindaja poole.





Suomi (Finnish)

SAKSITUNKKI KÄYTTÖOHJE

CE

Valmistajat:

RIKENKAKI CO., LTD.

5-6-12 Chiyoda, Sakado-shi, Saitama, 350-0214 Japan Puh.: 049-248-1661 Faksi: 049-284-4340

CHANGZHOU RIKENSEIKO MACHINERY CO., LTD. No.5 Xinlin Road. Zhonglou Changzhou, Jiangsu CHINA Puh.: 0519-327-5284 Faksi: 0519-327-0811

Lue tämä KÄYTTÖOHJE ennen käyttöä!

Standardi: EN 1494:2000+A1:2008

Huomautukset ja varoitukset

- TUNKKIA voi käyttää ainoastaan renkaiden vaihtoon, ei mihinkään muuhun tarkoitukseen.
- Käytä TUNKKIA alle 50 kertaa.
- Ei saa käyttää henkilöiden nostoon.
- Älä koskaan mene pelkän tunkin varassa olevan auton alle.
- Viallisten tai puutteellisesti ylläpidettyjen tunkkien käyttö on erittäin vaarallista.

Varotuskuvakkeiden merkitys



Osoittaa mahdollista vaaratilannetta, joka voi johtaa kuolemaan tai vakavaan loukkaantumiseen.

Valkoinen pohjaväri Musta Punaine

Osoittaa kieltoa mennä auton alle, kun se on pelkän tunkin varassa.

Saksitunkin osat Katso FIG. 1 englanninkieliseltä sivulta.

Katso FIG. 1 englanninkleliselta sivulta

Tekniset tiedot ja käyttö

N KORKEUS (mm)
OVOIMA (t)
기

Ei saa käyttää seuraavissa tapauksissa

- Kun lämpötila on alle -40 °C.
- Lieju- tai hiekkamaastossa.
- Jyrkällä mäellä.
- Äärimmäisissä ilmasto-olosuhteissa: sademyrsky, pyörremyrsky (sykloni, taifuuni), lumimyrsky, ukonilma ine.
- Vaarallisten raskaiden lastien kuljetuksessa, kuten: sulametalli, happamat aineet, radioaktiiviset aineet tai eritoten irtotavarat.
- Suorassa kosketuksessa koriin.
- Laivalla, veneellä jne.
- Epätasaisella maaperällä.

Käyttöohjeet

Kun pyörä vaihdetaan, puhdista aina ruoste,

jota voi olla pyörän sisäpinnoilla ja pyörän asennuspinnalla autossa. Yksityiskohdat:

Toimi "käyttöohjeiden" mukaisesti.

Käsittele tunkkia tasaisella maaperällä, kun tarkistat sitä ja kuormaa. Älä työskentele ylös nostetun kuorman alla, ellei sitä ole tuettu varmalla tavalla.

- Pysäköi auto tasaiselle, vaakasuoralle pinnalle ja kiristä jarru.
- Kytke vaihteisto peruutusvaihteelle (automaattivaihteistossa
- pysäköintiasentoon).
- Sytytä varoitusvalot.
- Ota nostotyökalut ja varapyörä esille.
- Aseta kiilat vaihdettavaa pyörää vinosti vastapäätä olevan pyörän eteen ja taakse ennen kuin käytät tunkkia.
- Löysää pyöränmutterit (älä poista niitä) kääntämällä avainta vastapäivään.
- Nosta tunkkia, kunnes tunkin päässä oleva ura asettuu auton runkorakenteessa olevaan kohoumaan (katso kuvista).
- Nosta tunkkia hitaasti ja tasaisesti kampea käyttäen.
- Nosta autoa, kunnes rengas nousee irti maasta ja irrota mutterit ja pyörä.
- Asenna varapyörä ja kiristä mutterit kevyesti. Pyörän on oltava hyvin napakeskiöllä.
- Laske auto alas ja kiristä pyöränmutterit kunnolla ristiin, myötäpäivään.

Huolto

- Pidä TUNKIN SÄÄTÖRUUVI puhtaana.
- Tarkista nimikilpi, pidä se alkuperäisessä kunnossa.
- Tunkkiin ei saa tehdä rakennemuutoksia itse.
- Minkä tahansa käytön jälkeen kysy heti lisäohjeita Suzuki-jälleenmyyjältäsi tai huoltokumppaniltasi tunkin tarkastukseen ja huoltoon liittyvissä asioissa.
- Jos etiketti (tarra) on vahingoittunut, ota yhteys Suzuki-jälleenmyyjääsi tai huoltokumppaniin.





Français (French)

CRIC PANTOGRAPHE MANUEL D'UTILISATION

CE

Fabricants :

RIKENKAKI CO., LTD. 5-6-12 Chiyoda, Sakado-shi, Saitama, 350-0214 Japon Tél : 049-248-1661 Fax : 049-284-4340

CHANGZHOU RIKENSEIKO MACHINERY CO., LTD. No.5 Xinlin Road. Zhonglou Changzhou, Jiangsu CHINE Tél: 0519-327-5284 Fax: 0519-327-0811

Lire attentivement le présent MANUEL D'INSTRUCTION avant toute utilisation !

Norme : EN 1494:2000+A1:2008

Attention et avertissement

- Le CRIC ne doit être utilisé que pour remplacer les pneus, pas à d'autres fins.
- Ne pas utiliser le CRIC plus de 50 fois.
- Ne pas utiliser le cric lorsqu'une personne est dans le véhicule.
- Ne jamais se glisser sous le véhicule mis sur cric.
- L'utilisation de crics défectueux ou mal entretenus peut se révéler extrêmement dangereuse.

Signification des pictogrammes sur l'étiquette d'avertissement



Ce symbole indique un danger potentiel pouvant causer des blessures ou un décès.



Ce symbole indique de ne jamais se glisser sous le véhicule lorsqu'il est monté sur cric. Désignation des pièces du cric à parallélogramme Voir FIG 1. du document anglais.

Données techniques et application

Voir FIG 2. du document anglais.

A : PLATEFORME DE SUPPORT CHARGE	F : CRIC À VIS	X : HAUTEUR CRIC (mm)
B : EMBASE C : BRAS SUPÉRIEUR D : BRAS INFÉRIEUR E : LEVIER D'ARTICULATION	G : CHARGE NOMINALE (tonne) H1 : HAUTEUR MINIMALE (mm) H2 : HAUTEUR MAXIMALE (mm) H3 : HAUTEUR OPTIMALE (mm)	Y : CHARGE (tonne) M : MODÈLE T : TYPE

Utilisation interdite dans les conditions suivantes

- Lorsque la température est inférieure à -40° C.
- Sur sol boueux ou sablonneux.
- Sur une forte pente.
- Dans des conditions naturelles extrêmes : tempête, typhon, cyclone, tempête de neige, orage, etc.
- En cas de chargement lourd ou dangereux, par exemple : métal en fusion, substance acide, substance radioactive ou marchandises particulièrement friables.
- Contact direct avec le capot.
- Utilisation sur un bateau.
- Sur un sol irrégulier.

Instructions d'utilisation

Lors du remplacement d'une roue, toujours éliminer toute corrosion détectée à l'intérieur de la roue et sur la surface d'installation de la roue sur le véhicule.

Remarques :

Respecter les "instructions d'utilisation".

Utiliser le cric sur un sol plat sans oublier de contrôler le cric et la charge. Ne pas utiliser le cric en cas de charge supplémentaire, sauf si la charge est correctement fixée.

- Garer la voiture sur un sol plat et mettre correctement le frein à main.
 Mettre la boîte de vitesses sur marche arrière (sur "parking" sur une boîte automatique).
- Allumer les feux de détresse.
- Sortir les outils du cric et la roue de rechange du compartiment de stockage.
- Mettre des cales à l'avant et à l'arrière de la roue opposée en diagonale à la roue à changer avant d'utiliser le cric.
- Desserrer, mais ne pas retirer les écrous en tournant la clé dans le sens antihoraire.
- Monter le cric jusqu'à ce que la tête dentelée du cric entre en contact avec la partie du châssis prévue à cet effet. Voir illustrations.
- Actionner le cric avec des mouvements lents et fluides, à l'aide du levier.
- Soulever le véhicule de sorte qu'un pneu gonflé frôle juste le sol, déposer les écrous et la roue.
- Installer la roue, puis resserrer légèrement chaque écrou, la roue doit reposer sur l'essieu.
- Descendre le véhicule et serrer complètement les écrous en étoile (en serrant un à un les écrous opposés) en tournant la clé dans le sens horaire.

Maintenance

- Éviter toute accumulation de saleté sur le CRIC À VIS.
- Vérifier la plaque signalétique, s'assurer que la forme est restée inchangée.
- Ne pas modifier la structure du cric.
- Après toute utilisation, consultez immédiatement votre concessionnaire ou le service après-vente partenaire Suzuki pour procéder au contrôle et à l'entretien du cric.
- Si l'étiquette (autocollant) est endommagée, veuillez consulter votre concessionnaire ou le service après-vente partenaire Suzuki.





Deutsch (German)

SCHERENWAGENHEBER BEDIENUNGSANLEITUNG

(6

Hersteller:

RIKENKAKI CO., LTD. 5-6-12 Chiyoda, Sakado-shi, Saitama, 350-0214 Japan

Tel: 049-248-1661 Fax:049-284-4340

CHANGZHOU RIKENSEIKO MACHINERY CO., LTD. No.5 Xinlin Road. Zhonglou Changzhou, Jiangsu CHINA Tel: 0519-327-5284 Fax:0519-327-0811


Bitte lesen Sie diese BEDIENUNGSANLEITUNG vor Gebrauch!

Norm: EN 1494:2000+A1:2008


Achtung und Warnung

- Der WAGENHEBER darf nur für den Reifenwechsel verwendet werden, nicht für andere Zwecke.
- Verwenden Sie den WAGENHEBER nicht öfter als 50-mal.
- Keine Personen befördern.
- Begeben Sie sich niemals unter ein Fahrzeug in angehobener Position.
- Die Verwendung von beschädigten oder nicht ausreichend gewarteten Wagenhebern ist extrem gefährlich.

Bedeutung der Piktogramme auf dem Warnschild

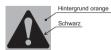

Dieses Symbol weist auf eine mögliche Gefahr hin, die zum Tode oder schweren Verletzungen führen kann.

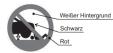

Dieses Symbol weist darauf hin, dass Sie sich niemals unter das Fahrzeug begeben dürfen, wenn es angehoben ist. Teilename Scherenwagenheber Siehe FIG. 1 auf der englischen Seite.

Technische Daten und Anwendung

Siehe EIG 2 auf der englischen Seite

0.0								
	A : OBENHALTERUNG	F : HUBSPINDEL	X : HUBHÖHE (mm)					
	B : BASIS	G : NENNLAST (t)	Y : LAST (t)					
	C : OBERER ARM	H1 : MINDESTHÖHE (mm)	M : MODELL					
	D : UNTERER ARM	H ₂ : MAXIMALE HÖHE (mm)	T : TYP					
	E : GRIFFGELENK	H ₃ : LEISTUNGSGARANTIE HÖHE (mm)						

Nicht unter folgenden Bedingungen verwenden

- Bei Temperaturen unter -40°C.
- Auf Schmutz oder Sandboden.
- Straßen mit starker Neigung.
- Extreme Wetterbedingungen: Regensturm, Taifun, Zyklon, Schneesturm, Gewitter, usw.
- Direkter Kontakt mit der Motorhaube.
- Verwendung auf einem Boot.
- Unebener Boden.

Bedienungsanleitung

Wenn ein Reifen gewechselt wird, entfernen Sie immer den Rost, der sich innen am Rad und an der Montagefläche am Fahrzeug befinden kann. Details:

Bitte gemäß "Bedienungsanleitung" verwenden.

Verwenden Sie den Wagenheber auf ebenem Boden und prüfen den Hub und die Last.

Nicht unter angehobener Last verwenden, es sei denn die Last Ist sicher befestigt.

- Parken Sie das Auto auf einem flachen, ebenen Boden und ziehen die Bremse fest an.
- Legen Sie den Rückwärtsgang ein (Automatikgetriebe in "Park" Stellung).
- Stellen sie die Warnblinkanlage ein.
- Holen Sie den Wagenheber und den Ersatzreifen aus dem Stauraum.
- Blockieren Sie vor Verwendung des Wagenhebers die Vorder- und
- Hinterräder, die sich diagonal gegenüberliegen.
- Lösen Sie die Radmuttern durch Drehen des Schraubschlüssels gegen den Uhrzeigersinn, aber entfernen Sie die Muttern nicht.
- Heben Sie den Wagenheber, bis die Nut des Wagenheberkopfs in den Bolzenrahmen passt, s. Abb.
- Bedienen Sie den Wagenheber mit langsamer, ruhiger Bewegung mit dem Hebel.
- Heben Sie das Fahrzeug so an, dass ein aufgepumpter Reifen sich soeben vom Boden abhebt, entfernen Sie Muttern und Rad.
- Installieren Sie das Rad, ziehen leicht jede Mutter fest, das Rad muss auf der Nabe sitzen.
- Senken Sie das Fahrzeug und ziehen die Radmuttern in kreuzweiser Reihenfolge durch Drehen des Schraubenschlüssels im Uhrzeigersinn fest.

Wartung

- Bitte schützen Sie die HUBSPINDEL vor Schmutzansammlung.
- Prüfen Sie das Typenschild, Originalformat bewahren.
- Die Konstruktion des Wagenhebers nicht selbst verändern.
- Wenden Sie sich nach jeglichem Gebrauch umgehend an Ihren Suzuki-Vertragshändler oder Servicepartner f
 ür die Inspektion und Wartung des Wagenhebers.
- Wenn das Etikett (der Aufkleber) beschädigt ist, wenden Sie sich bitte an Ihren Suzuki-Vertragshändler oder Servicepartner.





Ελληνικά (Greek)

ΓΡΥΛΟΣ ΠΑΝΤΟΓΡΑΦΟΥ **ΕΓΧΕΙΡΙΛΙΟ ΟΛΗΓΙΟΝ ΧΡΗΣΗΣ**

Κατασκευαστές:

RIKENKAKI CO., LTD. 5-6-12 Chiyoda, Sakado-shi, Saitama, 350-0214 Ιαπωνία Tnλ: 049-248-1661 Φαξ: 049-284-4340

CHANGZHOU RIKENSEIKO MACHINERY CO., LTD. No.5 Xinlin Road, Zhonglou Changzhou, Jiangsu KINA Τηλ.: 0519-327-5284 Φαξ: 0519-327-0811

Διαβάστε αυτό το ΕΓΧΕΙΡΙΔΙΟ ΧΡΗΣΗΣ προσεκτικά πριν από τη χρήση.

Πρότυπο: ΕΝ 1494:2000+Α1:2008

Προσοχή και προειδοποίηση

- Ο ΓΡΥΛΟΣ μπορεί να χρησιμοποιείται μόνο για αντικατάσταση ελαστικών, όχι για οποιονδήποτε άλλο σκοπό
- Μην χρησιμοποιείτε τον ΓΡΥΛΟ παραπάνω από 50 φορές.
- Μην ανυψώνετε το όχημα με άτομο μέσα σε αυτό.
- Δεν πρέπει ποτέ να βρίσκεστε κάτω από το όχημα που έχει ανυψωθεί με γρύλο.
- Η χρήση ελαττωματικών ή ανεπαρκώς συντηρημένων γρύλων είναι εξαιρετικά επικίνδυνη.

Σημασία εικονογράμματος σε ετικέτα προφύλαξης



Το σύμβολο υποδεικνύει ότι πρόκειται για δυνητικό κίνδυνο, ο οποίος θα μπορούσε να προκαλέσει θάνατο ή σοβαρό τραυματισμό.

Το σύμβολο υποδεικνύει ότι δεν πρέπει ποτέ να βρίσκεστε κάτω από το όχημα όταν αυτό στηρίζεται στον γρύλο.

Ονόματα εξαρτημάτων του νρύλου παντονράφου Ανατρέξτε στο FIG. 1 στην αννλική σελίδα.

Τεχνικά δεδομένα και εφαρμονή

Ανατρέξτε στο FIG. 2 στην αννλική σελίδα.

HΣ F	- 1	ΚΟΧΛΙΑΣ ΓΡΥΛΟΥ	х	: ΥΨΟΣ ΑΠΟ ΤΟ ΕΔΑΦΟΣ (mm)
G		ΟΝΟΜΑΣΤΙΚΟ ΦΟΡΤΙΟ (t)	Υ	: OPTIO (t)
AΣ H ₁		ΕΛΑΧΙΣΤΟ ΥΨΟΣ (mm)	М	: MONTEAO
NAΣ H ₂		ΜΕΓΙΣΤΟ ΥΨΟΣ (mm)	Т	: ΤΥΠΟΣ
ΚΕΙΡΟΛΑΒΗΣ Η3	:	ΥΨΟΣ ΔΙΑΣΦΑΛΙΣΗΣ ΑΠΟΔΟΣΗΣ	E (mr	m)
	ΑΣ Η ₁ ΝΑΣ Η ₂	G : ΑΣ Η ₁ : ΝΑΣ Η ₂ :	G : ΟΝΟΜΑΣΤΙΚΟ ΦΟΡΤΙΟ (t) ΑΣ Η ₁ : ΕΛΑΧΙΣΤΟ ΥΨΟΣ (mm) ΝΑΣ Η ₂ : ΜΕΓΙΣΤΟ ΥΨΟΣ (mm)	G : ΟΝΟΜΑΣΤΙΚΟ ΦΟΡΤΙΟ (t) Y ΑΣ H1 : ΕΛΑΧΙΣΤΟ ΥΨΟΣ (mm) M ΝΑΣ H2 : ΜΕΓΙΣΤΟ ΥΨΟΣ (mm) T

Συνθήκες απαγόρευσης χρήσης

- Όταν η θερμοκρασία είναι χαμηλότερη από -40°C.
- Σε λασπωμένο ή αμμώδες έδαφος.
- Σε δρόμο με μενάλη κλίση.
- Σε ακραίες καιρικές συνθήκες: καταινίδα, τυφώνας, κυκλώνας, γιονοθύελλα, καταινίδα με κεραυνούς, κ.λπ.
- Όταν το φορτίο περιλαμβάνει επικίνδυνα αντικείμενα ή ουσίες, για παράδειγμα: λιωμένο μέταλλο, όξινη ουσία, ραδιενεργή ουσία ή ιδιαίτερα κοφτερά αντικείμενα.
- Όταν βρίσκεται σε άμεση επαφή με το καπό.
- Όταν χρησιμοποιείται σε βάρκα.
- Σε έδαφος που παρουσιάζει διαφορές στο ύψος.

Οδηγίες χρήσης

Όποτε αλλάζετε τροχό, απομακρύνετε πάντα οποιαδήποτε διάβρωση υπάρχει στο εσωτερικό του τροχού και στην επιφάνεια σκελετού του τροχού του οχήματος.

Λεπτομέρειες:

Να χρησιμοποιείτε τον γρύλο σύμφωνα με τις «Οδηγίες χρήσης».

Να χρησιμοποιείτε τον γρύλο σε επίπεδο έδαφος κατά τον έλεγχο του

νρύλου και του φορτίου.

Απαγορεύεται η χρήση του κάτω από ανυψωμένο φορτίο, το οποίο δεν έχει δεθεί ασφαλώς.

- Σταθμεύστε το αυτοκίνητο σε ίσιο, επίπεδο έδαφος και τραβήξτε το χειρόφρενο γερά.
- Ρυθμίστε το κιβώτιο ταχυτήτων στην «όπισθεν» (σε αυτόματο κιβώτιο ταχυτήτων στη «στάθμευση»).
- Ανάψτε τα φώτα κινδύνου.
- Απομακρύνετε τα εργαλεία ανύψωσης και τον επιπλέον τροχό από την περιοχή αποθήκευσης.
- Πριν τη χρήση του τροχού, κλείστε το μπροστινό και οπίσθιο μέρος του τροχού διαγωνίως απέναντι από τον τροχό που θα αλλαχθεί.
- Χαλαρώστε, αλλά μην απομακρύνετε τα περικόχλια γυρίζοντας το κλειδί αριστερόστροφα.
- Σηκώστε τον γρύλο μέχρι η εσοχή της κεφαλής του γρύλου να εφαρμόσει με την εγκοπή του σκελετού (δείτε εικόνες).
- Χρησιμοποιήστε τον γρύλο με αργή, απαλή κίνηση με τη βοήθεια της χειρολαβής.
- Ανυψώστε το όχημα ώστε να υπάρχει χώρος για την τοποθέτηση του φουσκωμένου ελαστικού, αφαιρέστε τα περικόχλια και τον τροχό.
- Εγκαταστήστε τον τροχό και μετά σφίξτε ελαφρά κάθε περικόχλιο έτσι ώστε κάθε τροχός να τοποθετηθεί στην πλήμνη.
- Χαμηλώστε το όχημα και σφίξτε πλήρως τα περικόχλια σε κατά μήκος διασταυρούμενη ακολουθία γυρίζοντας το κλειδί δεξιόστροφα.

Συντήρηση

- Προφυλάξτε τον κοχλία του γρύλου από συγκέντρωση ακαθαρσιών.
- Να ελέγχετε την πινακίδα και να διατηρείτε το σχήμα στην αρχική του μορφή.
- Απαγορεύεται η επαναρρύθμιση της κατασκευής του γρύλου από την πλευρά σας.
- Μετά από κάθε Χρήση, συμβουλευτείτε άμεσα τον Αντιπρόσωπο της Suzuki ή τον Συνεργάτη Service για τον έλενχο και τη συντήρηση του νρύλου.
- Εάν η Ετικέτα (αυτοκόλλητο) έχει υποστεί ζημιά, παρακαλούμε συμβουλευτείτε τον Αντιπρόσωπο της Suzuki ή τον Συνεργάτη Service.





Άσπρο φόντο Κόκκινο

Magyar (Hungarian)

PANTOGRÁF EMELŐ HASZNÁLATI ÚTMUTATÓ

CE

Gyártók:

RIKENKAKI CO., LTD. 5-6-12 Chiyoda, Sakado-shi, Saitama, 350-0214 Japán Tel.: 049-248-1661 Fax: 049-284-4340

CHANGZHOU RIKENSEIKO MACHINERY CO., LTD. No.5 Xinlin Road. Zhonglou Changzhou, Jiangsu KĺNA Tel.: 0519-327-5284 Fax: 0519-327-0811

Kérjük, a működtetés előtt olvassa el ezt a HASZNÁLATI ÚTMUTATÓT!

Szabvány: EN 1494:2000+A1:2008

Figyelemfelhívás és figyelmeztetés

- Az EMELŐ csak kerékcseréhez használható, egyéb műveletre nem.
- Az EMELŐT ne használja több mint 50 alkalommal.
- Ne emelje meg személlyel együtt.
- Soha ne másszon az emelővel megemelt jármű alá.
- A hibás vagy nem megfelelően karbantartott emelő használata rendkívül veszélyes.

A figyelmeztető címkén lévő piktogram jelentése



Ez a szimbólum olyan lehetséges veszélyt jelez, amely halálhoz vagy súlyos sérüléshez vezethet.



Ez a szimbólum azt jelzi, hogy soha ne másszon be a jármű alá, amikor azt az emelő tartja meg. A pantográfos emelő alkatrészeinek neve Lásd az FIG 1 az angol nyelyű oldalon.

Műszaki adatok és alkalmazás

l ásd az EIG 1 az angol nyelvű oldalon.

A : FELSŐ TARTÓ	F : EMELŐCSAVAR	X : EMELÉSI MAGASSÁG (mm)
B : ALAP	G : NÉVLEGES TERHELÉS (t)	Y : TERHELÉS (t)
C : FELSŐ KAR	H1 : MINIMUM MAGASSÁG (mm)	M : MODELL
D : ALSÓ KAR	H ₂ : MAXIMUM MAGASSÁG (mm)	T : TÍPUS
E : FOGANTYÚ CSUKLÓ	H ₃ : A TELJESÍTŐKÉPESSÉGET BIZT	FOSÍTÓ MAGASSÁG (mm)

A használatot kizáró körülmények

- -40°C alatti hőmérséklet.
- Ingoványos vagy homokos talaj.
- Erősen emelkedő út.
- Szélsőséges természeti körülmények: vihar, tájfun, ciklon, hóvihar, villámlásal járó vihar stb.
- Veszélyes, nehéz rakomány, például: olvasztott fém, savas anyag, radioaktív anyag vagy határozottan törékeny termékek.
- Közvetlen érintkezés a motorháztetővel.
- Hajón való használat.
- Egyenetlen talaj.

Használati utasítások

Valahányszor kereket cserél, mindig távolítsa el a korróziót, ami a kerék belsejében és a kerék járműre szerelendő felületén található. Részletek:

Kérjük, a "használati utasításoknak" megfelelően működtesse. Az emelőt egyenes talajon működtesse, ellenőrizve az emelőt és a terhelést.

Ne működtesse rakománnyal együtt, hacsak a rakomány nincs biztonságosan rögzítve.

- Parkolja az autót sima, egyenes talajra, és húzza be a féket szorosan.
- Állítsa a váltót "hátramenetbe" (az automata váltót "parkoló" állásba).
- Kapcsolja be a vészvillogót.
- Vegye elő az emelőszerszámokat és a pótkereket a rakodótérből.
- Az emelő működtetése előtt blokkolja elölről és hátulról az eltávolítandó kerékkel átellenes kereket.
- A kulcsot az óramutató járásával ellentétes irányba fordítva lazítsa ki, de ne távolítsa el a kerékanyákat.
- Emelje meg az emelőt, amíg az emelőfej vájatai el nem érik a váz munkalécét, lásd ábrák.
- Az emelőt lassú, sima mozdulatokkal működtesse, az emelő fogantyú segítségével.
- Emelje fel a járművet éppen annyira, hogy egy felfújt abroncs épp csak a talaj fölé emelkedjen, távolítsa el az anyákat és a kereket.
- Szerelje fel a kereket, utána enyhén szorítsa meg az összes anyát; a keréknek az agyra kell illeszkednie.
- Eressze le a járművet, majd teljesen szorítsa meg a kerékanyákat keresztirányban haladva, a kulcs óramutató járása szerinti irányba fordításával.

Karbantartás

- Kérjük, akadályozza meg, hogy az EMELŐCSAVARBAN kosz halmozódjon fel.
- Ellenőrizze az adattáblát, őrizze meg az eredeti alakját.
- Ne szerelje szét az emelő szerkezetét.
- Minden használat után azonnal vegye fel a kapcsolatot egy Suzuki-értékesítővel vagy szervizpartnerrel az emelő bevizsgálásához és karbantartásához.
- Amennyiben a címke (matrica) sérült, kérjük forduljon a Suzuki forgalmazójához vagy szervizpartneréhez.





Italiano (Italian)

CRIC A PANTOGRAFO MANUALE D'ISTRUZIONI

CE

Fabbricanti:

RIKENKAKI CO., LTD.

5-6-12 Chiyoda, Sakado-shi, Saitama, 350-0214 Giappone Tel: 049-248-1661 Fax:049-284-4340

CHANGZHOU RIKENSEIKO MACHINERY CO., LTD. No.5 Sinlin Road. Zhonglou Changzhou, Jiangsu CINA Tel: 0519-327-5284 Fax:0519-327-0811

Leggere il presente MANUALE D'ISTRUZIONI prima di utilizzare il prodotto!

Norma: EN 1494:2000+A1:2008

Avvertenze di sicurezza

- Il CRIC può essere utilizzato solo per la sostituzione di pneumatici, non per qualsiasi altro scopo.
- Utilizzare il CRIC non più di 50 volte.
- Non sollevare persone.
- Non infilarsi mai sotto un veicolo sollevato con il crick.
- L'uso di cric difettosi o non adeguatamente tenuti in efficienza è estremamente pericoloso.

Significato del pittogramml delle etichette di avvertenza



Questo simbolo indica un potenziale pericolo che può causare la morte o gravi lesioni.



Questo simbolo indica che non si deve mai infilarsi sotto il veicolo quando è sollevato con il cric.

Nome dei componenti del Cric a pantografo Vedi FIG 1 pagina in inglese.

Dati tecnici e applicazione

Vedi FIG 2 pagina in inglese.

110 0 0000		
A : SUPPORTO	F : VITE CRIC X : ALTEZZA CRIC (mm)	
B : BASE	G : PORTATA NOMINALE (t) Y : PORTATA (t)	
C : BRACCIO SUP.	H1 : ALTEZZA MIN (mm) M : MODELLO	
D : BRACCIO INF.	H ₂ : ALTEZZA MAX (mm) T : TIPO	
E : GIUNTO MANOVELLA	H ₃ : ALTEZZA DI PRESTAZIONE GARANTITA (mm)	

Condizioni di non utilizzo

- Temperature inferiori a -40 °C.
- Su terreno sabbioso o fangoso.
- Su strada con elevata pendenza.
- In condizioni climatiche estreme: temporali, tifoni, cicloni, bufere di neve, tempeste, etc.
- Sollevamento di oggetti molto pericolosi, ad esempio: metallo fuso, sostanze acide, sostanze radioattive o
 merci particolarmente fredde.
- A diretto contatto col vano motore.
- Su un'imbarcazione.
- Su terreno con dislivelli.

Istruzioni di funzionamento

Ogni volta che si cambia una ruota, togliere sempre tutte le tracce di corrosione eventualmente presenti all'interno della ruota e sulla superficie di montaggio della ruota sul veicolo.

Particolari:

Effettuare le operazioni seguendo le "istruzioni di funzionamento".

Usare il cric su un terreno livellato controllando sia il cric che il carico. Non operare al di sotto di un carico sollevato, a meno che il carico non sia stato fissato saldamente.

- Parcheggiare il veicolo su un terreno livellato e in piano; azionare il freno a fondo.
- Mettere il cambio in "retromarcia" (cambio automatico in posizione "parcheggio").
- Accendere le luci di emergenza.
- Tirare fuori gli attrezzi di sollevamento e la ruota di scorta dall'alloggiamento.
- Prima di inserire il cric, bloccare anteriormente e posteriormente la ruota diagonalmente opposta a quella da togliere.
- Allentare ma non togliere i bulloni ruota con una chiave girandola in senso antiorario.
- Sollevare il cric finché la scanalatura della sua parte superiore si inserisce nell'incavo del telaio, vedi figure.
- Azionare il cric con movimenti lenti e uniformi, utilizzando la manovella del cric.
- Sollevare il veicolo in modo che uno pneumatico gonfiato si stacchi appena da terra; togliere i bulloni e la ruota.
- Installare la ruota e poi serrare un po' ciascun bullone in modo che la ruota resti in sede sul mozzo.
- Abbassare il veicolo e serrare a fondo i bulloni in ordine incrociato girando la chiave in senso orario.

Manutenzione

- Evitare che sulla VITE DEL CRIC si formino accumuli di sporcizia.
- Controllare la targhetta identificativa, mantenere la stessa forma dell'originale.
- Non riconvertire la costruzione del cric da soli.
- Dopo ogni utilizzo, consultare immediatamente il proprio rivenditore Suzuki o un partner di assistenza per l'ispezione e la manutenzione del cric.
- Se l'etichetta (adesivo) è danneggiata, consultare un rivenditore Suzuki o un partner di assistenza.





Latviešu valoda (Latvian)

DOMKRATS-PANTOGRĀFS LIETOŠANAS ROKASGRĀMATA

CE

Ražotāji:

"RIKENKAKI CO., LTD."

5-6-12 Chiyoda, Sakado-shi, Saitama, 350-0214, Japāna Tālr.: 049-248-1661 Fakss: 049-284-4340

"CHANGZHOU RIKENSEIKO MACHINERY CO., LTD." No.5 Xinlin Road. Zhonglou Changzhou, Jiangsu, KĪNA

No.5 Xiniin Road. Znongiou Changzhou, Jiangsu, K Tālr.: 0519-327-5284 Fakss: 0519-327-0811

Lūdzam pirms darbību uzsākšanas izlasīt šo LIETOŠANAS ROKASGRĀMATU!

Standarts: EN 1494:2000+A1:2008

Brīdinājumi!

- DOMKRATU drīkst izmantot vienīgi riepu nomaiņai, nevis jebkādiem citiem nolūkiem.
- Neizmantojiet DOMKRATU vairāk par 50 reizēm.
- Nav paredzēts cilvēku pacelšanai.
- Nekad nelieniet zem transportlīdzekļa, kas pacelts ar domkratu.
- Defektīvu domkratu vai domkratu, kuriem nav veikta atbilstoša tehniskā apkope, izmantošana ir ārkārtīgi bīstama.

Brīdinājuma uzlīmes piktogrammas nozīme



Šis simbols apzīmē potenciālu bīstamību, kas var izraisīt nāvi vai radīt smagus ievainojumus.

Balts fons Meins Sarkans Pantogrāfa domkrata detaļas nosaukums Skat FIG. 1 attēlu lapā angļu valodā.

Tehniskie dati un izmantoiums

Skat FIG. 2 attēlu lapā angļu valodā.

A: AUGŠĒJAIS TURĒTĀJS	F: DOMKRATA SKRŪVE	X: DOMKRATA AUGSTUMS (mm)
B: PAMATNE	G: NOMINĂLĂ SLODZE (t)	Y: SLODZE (t)
C: AUGŠĒJĀ SVIRA	H1: MINIMĂLAIS AUGSTUMS (mm)	M: MODELIS
D: APAKŠĒJĀ SVIRA	H2: MAKSIMÄLAIS AUGSTUMS (mm)	T: TIPS
E: ROKTURA SAVIENOJUMS	H3: IZPILDĪJUMA NODROŠINĀJUMA AU	JGSTUMS (mm)

Apstākļi, kādos izmantošana ir aizliegta

- Ja temperatūra ir zemāka par -40°C.
- Uz dubļainas vai smilšainas virsmas.
- Stāvā nogāzē.
- Ekstremālos laikapstākļos: lietusgāzes, taifūna, ciklona, sniegputeņa, pērkona negaisa utt. laikā.
- Nedrīkst celt bīstamas kravas, piemēram: izkausētu metālu, skābas vielas, radioaktīvas vielas vai īpaši trauslas preces.
- Nedrīkst tieši saskarties ar pārsegu.
- Nedrīkst lietot uz kuģa.
- Nedrīkst izmantot uz nelīdzenas virsmas.

Lietošanas instrukcija

Ik reizi mainot riteni, notīriet koroziju riteņa iekšpusē un uz transportlīdzekļa riteņa montēšanas virsmas.

Papildu informācija:

Lūdzu, rīkojieties tā, kā norādīts "Lietošanas instrukcijā".

Pārbaudot domkratu un paceļamo kravu, novietojiet domkratu uz līdzenas virsmas.

Papildu kravu drīkst pacelt vienīgi tad, ja tā ir droši nostiprināta.

- Novietojiet automobili uz gludas, līdzenas virsmas un iedarbiniet stāvbremzi.
- Pārnesumkārbas sviru novietojiet pozīcijā "atpakaļgaita" (automātiskās pārnesumkārbas sviru pozīcijā "park").
- leslēdziet avārijas gaismas.
- No glabāšanas nodalījuma izņemiet domkrata aprīkojumu un rezerves riteni.
- Pirms domkrata izmantošanas, no priekšas un aizmugures nobloķējiet riteni, kas atrodas pa diagonāli no maināmā riteņa.
- Atbrīvojiet, bet nenoskrūvējiet uzgriežņus, atslēgu pagriežot pretēji pulksteņrādītāja virzienam.
- Paceliet domkratu līdz domkrata galviņas rieva ietilpst rāmī, skat. attēlu.
- Darbiniet domkratu l

 eni un piesardz

 g

 am kust

 b

 am, izmantojot domkrata rokturi.
- Paceliet transportlīdzekli tā, lai tukšā riepa nedaudz atrautos no zemes, noņemiet uzgriežņus un riteni.
- Uzstādiet riteni un viegli piegrieziet katru uzgriezni, ritenim ir jānostiprinās uz rumbas.
- Nolaidiet transportlīdzekli un pievelciet uzgriežņus krusteniskā secībā, atslēgu griežot pulksteņrādītāja virzienā.

Apkope

- Raugieties, lai uz DOMKRATA SKRŪVES nekrātos netīrumi.
- Pārbaudiet nosaukuma plāksni, jo tai ir jāsaglabājas sākotnējā formā.
- Nedrīkst patstāvīgi veikt domkrata izjaukšanu.
- Pēc jebkuras izmantošanas nekavējoties sazinieties ar Suzuki dīleri vai servisa partneri, lai veiktu domkrata apskati un tehnisko apkopi.
- Ja etiķete (uzlīme) ir bojāta, lūdzu, sazinieties ar Suzuki dīleri vai servisa partneri.





Šis simbols nozīmē, ka Jūs nekādā gadījumā nedrīkstat līst zem transportlīdzekļa, ja tas ir pacelts ar domkratu. lietuviškai (Lithuanian)

TRAPECINIS DOMKRATAS INSTRUKCIJŲ VADOVAS

(6

Gamintojai:

RIKENKAKI CO., LTD. 5-6-12 Chiyoda, Sakado-shi, Saitama, 350-0214 Japonija Tel.: 049-248-1661 Faks.:049-284-4340

CHANGZHOU RIKENSEIKO MACHINERY CO., LTD. No.5 Xinlin Road. Zhonglou Changzhou, Jiangsu KINIJA Tel: 0519-327-5284 Faks.:0519-327-0811


Perskaitykite šį INSTRUKCIJŲ VADOVĄ prieš naudodami gaminį!

Norma: EN 1494:2000+A1:2008

Perspėjimas ir įspėjimas

- DOMKRATAS naudojamas tik padangų keitimui, jis netinka naudoti kitais tikslais.
- DOMKRATĄ naudokite ne daugiau kaip 50 kartų.
- Keliamame automobilyje neturi būti žmonių.
- Niekada nelįskite po domkratu pakeltu automobiliu.
- Ypač pavojinga naudoti sugedusį ar netinkamai prižiūrimą domkratą.

Perspėjimo etiketės piktogramų reikšmė

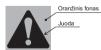

Šis simbolis nurodo galimą pavojų, kuris gali būti mirtinas arba sukelti sunkius sužalojimus.



Šis simbolis rodo, kad niekada neturėtumėte lįsti po automobiliu, kai jį laiko domkratas.

Trapecinio domkrato daliu pavadinimas

Žr. 1 FIG. angliškame puslapyje.

Techniniai duomenys ir naudojimas

Žr. 2 FIG. angliškame puslapyje.

A : VIR	ŠUTINIS LAIKIKLIS	F	: DOMKRATO SRAIGTAS	х	: DOMKRATO AUKŠTIS (mm)
B : PAG	RINDAS	G	: VARDINÉ APKROVA (t)	Υ	: APKROVA (t)
C : VIR	ŠUTINIS PETYS	H1	: MAŽIAUSIAS AUKŠTIS (mm)	М	: MODELIS
D : APA	TINIS PETYS	H2	: DIDŽIAUSIAS AUKŠTIS (mm)	Т	: TIPAS
E : RAN	IKENOS JUNGTIS	Hз	: EKSPLOATACINIŲ SAVYBIŲ UŽTIKR	ININ	IO AUKŠTIS (mm)

Netinkamos naudojimo sąlygos

- Kai temperatūra žemesnė kaip -40°C.
- Ant purvo ar smėlėto grindinio.
- Ant kelio su dideliu nuolydžiu.
- Sudėtingomis gamtinėmis sąlygomis: liūtis su audra, taifūnas, ciklonas, pūga, audra ir t. t.
- Kelti pavojingą krovinį, pvz.: lydytą metalą, rūgštines, radioaktyvias medžiagas ar itin birias medžiagas.
- Tiesioginis kontaktas su gaubtu.
- Naudoti laive.
- Ant skirtingų lygių paviršiaus.

Eksploatavimo instrukcijos

Keičiant ratą visuomet pašalinkite koroziją, kuri gali būti ratų viduje ir ant rato tvirtinimo paviršiaus.

Detali informacija:

Dirbkite laikydamiesi "eksploatavimo instrukcijų".

Naudokite domkratą ant lygaus paviršiaus, patikrindami domkratą ir keliamą krovinj.

- Negalima dirbti po pakeltu kroviniu, nebent krovinys yra saugiai pritvirtintas. - Pastatykite automobilj ant lygaus, horizontalaus paviršiaus ir jjunkite
- Pastatykite at stabdj.
- ljunkite atbulinę pavarą ("stovėjimo" padėtį, jei automobilis yra su automatine pavarų dėže).
- Jjunkite įspėjamąsias mirksinčias šviesas.
- Junkte įspejangsias minisincias sviesas.
 Išimkite kėlimo įrankius ir atsarginę padangą iš saugojimo vietos.
- Prieš naudodami domkratą užblokuokite įstrižai priešais nuimamą ratą esančio rato prieki ir gala.
- Atlaisvinkite rato veržles, bet jų neišimkite, sukdami raktą prieš laikrodžio rodvkle.
- Kelkite domkratą, kol jo galvutės griovelis įsistatys į iškilimą rėme, žr. iliustracijas.
- Rankena sukite domkratą lėtais, sklandžiais judesiais.
- Kelkite automobilį tiek, kad pripūsta padanga šiek tiek pakiltų nuo paviršiaus, ištraukite veržles ir nuimkite ratą.
- Uždėkite ratą, po to šiek tiek priveržkite kiekvieną veržlę, ratas turi prisispausti ant stebulės.
- Nuleiskite automobilį ir iki galo kryžmiškai priveržkite rato veržles, sukdami raktą pagal laikrodžio rodyklę.

Priežiūra

- Saugokite DOMKRATO SRAIGTA, kad ant jo nesusikauptų nešvarumai.
- Patikrinkite duomenų lentelę, išsaugokite originalią formą.
- Nekeiskite domkrato konstrukcijos patys.
- Jei taip atsitiktų, iš karto kreipkitės į "Suzuki" pardavimo atstovą ar Techninės priežiūros partnerį, kad apžiūrėtų ir pataisytų domkratą.
- Jei etiketė (lipdukas) pažeistas, kreipkitės į "Suzuki" pardavimo atstovą ar Techninės priežiūros partnerį.





Polski (Polish)

PODNOŚNIK TRAPEZOWY INSTRUKCJA OBSŁUGI

CE

Producenci:

RIKENKAKI CO., LTD. 5-6-12 Chiyoda, Sakado-shi, Saitama, 350-0214 Japonia Tel.: 049-248-1661 Faks: 049-284-4340

CHANGZHOU RIKENSEIKO MACHINERY CO., LTD. No.5 Xinlin Road. Zhonglou Changzhou, Jiangsu, CHINY Tel.: 0519-327-5284 Faks: 0519-327-0811

Przed użyciem produktu przeczytaj tę INSTRUKCJĘ OBSŁUGI!

Norma: EN 1494:2000+A1:2008

Ważne informacje i ostrzeżenia

- PODNOŚNIK może być używany wyłącznie w celu wymiany opon, w żadnych innych celach.
- Nie używaj PODNOŚNIKA więcej niż 50 razy.
- Zabrania się podnoszenia samochodów z ludźmi w środku.
- Nigdy nie wchodź pod pojazd podniesiony podnośnikiem.
- Używanie uszkodzonych lub niewłaściwie konserwowanych podnośników jest bardzo niebezpieczne.

Znaczenie piktogramu na naklejce ostrzegawczej



Ten symbol oznacza potencjalne zagrożenie, które może skutkować śmiercią lub poważnymi urazami.



Ten symbol oznacza, że nie należy nigdy wchodzić pod pojazd podniesiony podnośnikiem. Nazwy części podnośnika trapezowego Patrz FIG. 1 na stronie w jezyku angielskim.

Dane techniczne i zastosowanie

Patrz FIG. 1 na stronie w języku angielskim.

A : GŁOWICA	F : ŚRUBA PODNOŚNIKA	X : WYSOKOŚĆ PODNOSZENIA (mm)
B : PODSTAWA	G : OBCIĄŻENIE NOMINALNE (t)	Y : OBCIĄŻENIE (t)
C : GÓRNE RAMIĘ	H1 : MINIMALNA WYSOKOŚĆ (mm)	M : MODEL
D : DOLNE RAMIĘ	H2 : MAKSYMALNA WYSOKOŚĆ (mm)	T : TYP
E : UCHWYT KORBY	H ₃ : WYSOKOŚĆ SKUTECZNA PODNOS	SZENIA (mm)

Kiedy nie wolno używać podnośnika

- Jeśli temperatura jest niższa niż -40°C.
- Na mokrym podłożu lub piachu.
- Na bardzo nachylonych drogach.
- W skrajnych warunkach pogodowych: burze z deszczem, tajfuny, cyklony, burze śnieżne, burze z piorunami itp.
- Do podnoszenia niebezpiecznych, ciężkich obiektów, np.: roztopiony metal, kwasy, substancje radioaktywne lub wyjątkowo kruche przedmioty.
- W przypadku bezpośredniego kontaktu z maską samochodu.
- Na łodziach.
- Jeśli podłoże jest nierówne.

Instrukcja obsługi

Zawsze przed wymianą koła usuwaj wszelkie ślady korozji obecne po wewnętrznej stronie koła lub na powierzchni montażowej pojazdu. Szczegóły:

Obsługuj podnośnik zgodnie z instrukcją obsługi.

Używaj podnośnika na płaskim podłożu i monitoruj podnośnik oraz obciążenie.

Nie wchodź pod podnoszone obciążenie, chyba że obciążenie zostało odpowiednio zabezpieczone.

- Zaparkuj samochód na płaskiej, równej powierzchni i mocno zaciągnij hamulec.
- Ustaw bieg na "wsteczny" (w przypadku skrzyni automatycznej na "parkowanie").
- Włącz światła awaryjne.
- Wvimii podnośnik i zapasowe koło z bagażnika.
- Przed użyciem podnośnika zablokuj przód i tył koła po przekątnej od wymienianego koła.
- Poluzuj (ale nie usuwaj) nakrętki koła, obracając klucz w kierunku przeciwnym do ruchu wskazówek zegara.
- Podnieś podnośnik, tak aby rowek w głowicy objął występ ramy, jak pokazano na rysunkach.
- Obsługuj podnośnik powolnymi i płynnymi uchami za pomocą korby.
- Podnieś pojazd na taką wysokość, aby napompowana opona nieznacznie odstawała od podłoża. Zdejmij nakrętki i koło.
- Załóż koło, następnie delikatnie dokręć każdą nakrętkę. Koło musi spoczywać na piaście.
- Opuść pojazd i całkowicie dokręć nakrętki w kolejności po przekątnej, obracając klucz w kierunku zgodnym z ruchem wskazówek zegara.

Konserwacja

- Usuwaj ze ŚRUBY PODNOŚNIKA wszelki nagromadzony brud.
- Sprawdzaj tabliczkę znamionową. Zachowaj oryginalny kształt.
- Nie modyfikuj samodzielnie konstrukcji podnośnika.
- Po każdym Użyciu, należy natychmiast skontaktować się ze sprzedawcą Suzuki lub partnerem serwisowym w celu kontroli lub konserwacji podnośnika.
- Jeśli etykieta (naklejka) jest uszkodzona, należy skontaktować się ze sprzedawcą Suzuki lub Partnerem serwisowym.





Português (Portuguese)

MACACO PANTOGRÁFICO MANUAL DE INSTRUÇÕES

CE

Fabricantes:

RIKENKAKI CO., LTD.

5-6-12 Chiyoda, Sakado-shi, Saitama, 350-0214 Japão Tel.: 049-248-1661 Fax: 049-284-4340

CHANGZHOU RIKENSEIKO MACHINERY CO., LTD. No.5 Xinlin Road. Zhonglou Changzhou, Jiangsu CHINA Tel.: 0519-327-5284 Fax: 0519-327-0811

Por favor leia o manual de instruções antes da utilização!

Norma: EN 1494:2000+A1:2008

Cuidado e perigo

- O macaco apenas pode ser usado para substituir pneus e nunca para qualquer outro propósito.
- Não utilize o macaco mais de 50 vezes.
- Não utilizar para elevar pessoas.
- Nunca fique debaixo de um veículo elevado por um macaco.
- O uso de macacos defeituosos ou com manutenção inadequada é extremamente perigoso.

Significado do pictograma na etiqueta de perigo



Este símbolo assinala um perigo potencial que pode resultar em morte ou ferimentos graves.



Este símbolo assinala a interdição de se colocar debaixo de um veículo quando este está a ser elevado por um macaco.

Designação das peças do macaco pantográfico Ver FIG. 1 nas instrucões em inglês.

Dados Técnicos e Utilização

Ver FIG. 2 nas instruções em inglês.

A : PLATAFORMA SUPERIOR	F : EIXO DO MACACO	X : ALTURA DO MACACO (mm)
B : BASE	G : CARGA NOMINAL (tonelada)	Y : CARGA (tonelada)
C : BRAÇO SUPERIOR	H1: ALTURA MÍNIMA (mm)	M : MODELO
D : BRAÇO INFERIOR	H2: ALTURA MÁXIMA (mm)	T : TIPO
E : JUNTA DE ARTICULAÇÃO	H₃:ALTURA DE UTILIZAÇÃO SEGU	RA (mm)

Não usar nas seguintes condições

- Temperaturas abaixo dos -40°C.
- Chão instável ou de areia.
- Estradas muito inclinadas
- Condições meteorológicas extremas: tempestade, furação, ciclone, nevão, trovoadas, etc.
- Cargas perigosas e pesadas tais como: metal fundido, substâncias ácidas, substâncias radioativas ou materiais frágeis.
- Em contacto direto com a carroçaria.
- Dentro de um barco.
- Chão desnivelado.

Instruções de utilização

Ao trocar uma roda, remova qualquer vestígio de ferrugem presente no interior da roda ou na superfície de montagem da roda do veículo. Descrição:

Por favor siga as instruções de acordo com as "instruções de utilização". Utilize o macaco num chão nivelado enquanto o instala e verifique a carga. Não deve utilizar o macaco com cargas muito pesadas salvo se estas estiverem amarradas de forma segura.

- Estacione o carro num local plano, chão nivelado e trave o carro de forma segura.
- Coloque a transmissão em "marcha-atrás" (transmissão
- automática em "estacionar (P)").
- Ligue os quatro piscas.
- Retire as peças do macaco e a roda suplente da mala.
 Trave a roda da frente e de trás diagonalmente opostas à roda
- que vai trocar antes de colocar o macaco.
- Solte, mas não retire completamente as porcas parafusos da roda no sentido dos ponteiros do relógio.
- Eleve o macaco até chegar à altura necessária de acordo com o indicado na tabela da figura acima.
- Manuseie o macaco com precaução, movimentos lentos, ao utilizar a manivela do macaco.
- Eleve o veículo até conseguir retirar a roda de forma a não raspar o chão, retire as porcas parafusos e a roda.
- Instale a roda, aperte levemente cada porca parafuso, a roda deve ficar bem centrada.
- Depois de descer o veículo, aperte firmemente as porcas parafusos uma por uma no sentido contrário aos ponteiros do relógio.

Manutenção

- Por favor mantenha o EIXO DO MACACO limpo e sem sujidade acumulada.
- Verifique a placa de identificação, mantenha a forma original.
- Não altere por sua iniciativa a estrutura do macaco.
- Depois de qualquer Utilização, consulte imediatamente o seu Concessionário Suzuki ou Parceiro de Assistência para inspeção ou manutenção do Macaco.
- Se a Etiqueta (autocolante) estiver danificada, por favor, consulte o seu Concessionário Suzuki ou Parceiro de Assistência.





Română (Romanian)

CRIC PANTOGRAF MANUAL DE INSTRUCȚIUNI

CE

Fabricanți:

RIKENKAKI CO., LTD. 5-6-12 Chiyoda, Sakado-shi, Saitama, 350-0214 Japonia Tel.: 049-248-1661 Fax: 049-284-4340

CHANGZHOU RIKENSEIKO MACHINERY CO., LTD. No.5 Xinlin Road. Zhonglou Changzhou, Jiangsu CHINA Tei: 0519-327-5284 Fax: 0519-327-0811


Citiți acest MANUAL DE INSTRUCȚIUNI înainte de utilizare!

Norma: EN 1494:2000+A1:2008

Atenționări și avertismente

- CRICUL poate fi folosit doar pentru înlocuirea anvelopelor, nu în alte scopuri.
- Utilizați CRICUL de cel mult 50 de ori.
- În vehicul nu trebuie să se afle nicio persoană.
- Nu intrați niciodată sub vehiculul ridicat pe cric.
- Utilizarea cricurilor defecte sau întreținute necorespunzător este extrem de periculoasă.

Semnificația pictogramelor de pe eticheta de atenționare

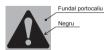

Acest simbol indică un pericol potențial care ar putea duce la moarte sau la accidentare gravă.



Acest simbol vă interzice să intrați sub vehicul când vehiculul este ridicat pe cric. Denumirea pieselor cricului manual Consultați FIG 1 pe pagina în engleză.

Date tehnice și utilizare

Consultați FIG 2 pe pagina în engleză.

A: PLATFORMA	F: ŞURUBUL CRICULUI	X: ÎNĂLŢIMEA CRICULUI (mm)
B: TALPA	G: SARCINA NOMINALĂ (t)	Y: SARCINA (t)
C: BRATUL SUPERIOR	H1: ÎNĂLŢIMEA MINIMĂ (mm)	M: MODELUL
D: BRATUL INFERIOR	H2: ÎNĂLŢIMEA MAXIMĂ (mm)	T: TIPUL
E: ARTICULAŢIA PT. LEVIER	H3: ÎNĂLŢIMEA PENTRU ATINGER	EA PERFORMANŢEI (mm)

Condiții în care este interzisă utilizarea

- Când temperatura este sub -40°C.
- Pe teren noroios sau nisipos.
- Pe o pantă abruptă.
- În condiţii meteorologice extreme: furtună cu ploaie, taifun, ciclon, furtună de zăpadă, furtună cu descărcări electrice etc.
- Dacă vehiculul este încărcat cu produse grele sau periculoase, cum ar fi: metal topit, acid, substanţe radioactive sau produse fragile.
- Contact direct cu capota.
- Utilizarea pe o ambarcatiune.
- Teren denivelat.

Instructiuni de utilizare

Când înlocuiți o roată, îndepărtați întotdeauna rugina care poate fi prezentă pe interiorul roții și pe suprafața de montare a roții pe vehicul. Detalii:

Utilizați cricul conform instrucțiunilor de utilizare.

Utilizați cricul pe un teren plan, verificând cricul și sarcina. Nu utilizați cricul dacă vehiculul este încărcat, decât dacă încărcătura este bine fixată.

- Parcaţi maşina pe un teren orizontal şi plan şi acţionaţi ferm frâna de mână.
- Aduceți transmisia în marşarier (transmisia automată în poziția de parcare).
- Porniți luminile de avarie.
- Scoateți instrumentele pentru cric şi roata de rezervă din compartimentul acestora.
- Înainte de a utiliza cricul, blocaţi partea din faţă şi din spate a roţii care este diagonal opusă faţă de roata care urmează a fi desfăcută.
- Destrângeți, dar nu înlăturați prizoanele rotind cheia în sens antiorar.
- Ridicați cricul până când adâncitura de pe capul cricului se potriveşte pe partea în relief a pragului, ca în ilustratii
- Acționați cricul cu o mișcare lentă și lină, folosind maneta cricului.
- Ridicaţi vehiculul astfel încât anvelopa umflată să fie doar puţin ridicată de la sol, iar apoi îndepărtaţi prizoanele şi roata.
- Montați roata, iar apoi strângeți ușor fiecare prizon; roata trebuie să se afle pe butuc.
- Coborâți vehiculul și strângeți complet prizoanele în cruce, rotind cheia în sens orar.

Întreținerea

- Nu lăsați să se adune murdărie pe ŞURUBUL CRICULUI.
- Verificați plăcuța cu denumirea și păstrați forma inițială.
- Nu dezasamblaţi şi nu reasamblaţi cricul.
- După fiecare utilizare, consultați imediat dealerul Suzuki sau partenerul de service pentru verificarea şi întreţinerea cricului.
- Dacă eticheta (autocolantul) este deteriorată, vă rugăm să consultați dealerul Suzuki sau partenerul de service.



PUNCTU



Slovensky (Slovak)

PANTOGRAFICKÝ ZVIHÁK NÁVOD NA POUŽITIE

CE

Výrobcovia:

RIKENKAKI CO., LTD. 5-6-12 Chiyoda, Sakado-shi, Saitama, 350-0214 Japonsko Tel.: 049-248-1661 Fax:049-244-4340

CHANGZHOU RIKENSEIKO MACHINERY CO., LTD. No.5 Xinlin Road. Zhonglou Changzhou, Jiangsu, ĆİNA Tel.: 0519-327-5284 Fax:0519-327-0811


Pred používaním si prečítajte tento NÁVOD NA OBSLUHU!

Technická norma: EN 1494:2000+A1:2008


Upozornenia a výstrahy

- Zdvihák je nie je možné použiť na žiadne iné účely okrem výmeny pneumatík.
- Tento zdvihák nepoužívajte viac ako 50-krát.
- Nesmie sa používať na zdvíhanie osôb.
- Nikdy nepracujte pod vozidlom, keď je zdvihnuté pomocou zdviháka.
- Používanie vadných alebo nedostatočne udržiavaných zdvihákov je veľmi nebezpečné.

Význam piktogramov a výstražných štítkov

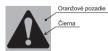

Tento symbol označuje potenciálne nebezpečenstvo, ktoré by mohlo mať za následok smrť alebo vážne zranenie.

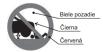

Tento symbol znamená zákaz pracovať pod vozidlom, keď je zdvihnuté pomocou zdviháka. Názvy dielov pantografického zdviháka Pozri FIG. 1 v anglickom texte.

Technické parametre a použitie

Pozri FIG. 2 v anglickom texte.

A : HORNÁ PODPERA	F	: SKRUTKA ZDVIHÁKA	Х	: VÝŠKA ZDVIHÁKA (mm)
B : ZÁKLADNÁ DOSKA	G	: MENOVITÉ ZAŤAŽENIE (v tonách)	Y	: ZAŤAŽENIE (v tonách)
C : HORNÉ RAMENO	V1	: MINIMÁLNA VÝŠKA (mm)	M	: MODEL
D : SPODNÉ RAMENO		: MAXIMÁLNA VÝŠKA (mm)	Т	: TYP
E : KÉB KĽUKY	V ₃	: PREVÁDZKOVÁ VÝŠKA (mm)		

Podmienky, za ktorých sa zdvihák nesmie používať

- Pri teplote pod -40°C.
- Na rozbahnenej alebo piesčitej pôde.
- Na ceste s veľkým sklonom.
- Pri extrémnych klimatických podmienkach: búrka, tajfún, cyklón, snehová búrka, búrka s prítomnosťou bleskov, atď.
- Zdvíhanie veľmi ťažkých predmetov, napríklad: roztavený kov, kyselinové látky, rádioaktívne látky alebo mimoriadne krehké predmety.
- Priamy kontakt s kapotou.
- Používanie na lodi.
- Nerovný povrch.

Návod na používanie

Pri výmene kolesa vždy odstráňte koróziu, ktorá môže byť prítomná na vnútornej strane kolesa a na náboji kolesa.

Podrobnosti:

Pri práci postupujte podľa "návodu na obsluhu".

Funkčnosť zdviháka a bremeno kontrolujte na rovnom povrchu. Pri používaní sa záťaž nesmie zvyšovať, ak bremeno nie je riadne upevnené.

- Vozidlo zaparkujte na rovnom a pevnom povrchu a zatiahnite parkovaciu brzdu.
- V prípade ručnej prevodovky zaraďte "spiatočku"
- (v prípade automatickej prevodovky páku prepnite do polohy "Park").
 Zapnite výstražné svetlá.
- Z batožinového priestoru vyberte nástroje na zdvíhanie a rezervné koleso.
- Pred zdvíhaním zaistite koleso nachádzajúce sa uhlopriečne od kolesa, ktoré sa bude zdvíhať tak, že spredu a zozadu vložíte kliny.
- Matice uvoľnite otáčaním kľúča na matice doľava, ale neodstraňujte ich.
- Zdvihák zdvíhajte, kým zúbkovaná podpera ložnej plochy zapadne do rámu (pozri obrázok).
- Zdvihák zdvíhajte pomalým a plynulým otáčaním kľuky zdviháka.
- Vozidlo zdvihnite do takej výšky, aby koleso s nahustenou pneumatikou bolo mierne nad povrchom, odstráňte matice a koleso.
- Založte koleso, potom mierne utiahnite každú maticu tak, aby koleso pevne dosadalo na náboj kolesa.
- Vozidlo spustite a matice úplne dotiahnite nakríž otáčaním kľúča doprava.

Údržba

- Na SKRUTKE ZDVIHÁKA nesmú byť žiadne nečistoty.
- Zdvihák uchovávajte v pôvodnom tvare. Pozrite si typový štítok.
- Používateľ nesmie upravovať konštrukciu zdviháka.
- Po každom použití sa okamžite obrátů na vášho dodávateľa alebo servisného partnera Suzuki kvôli kontrole a údržbe zdviháka.
- V prípade poškodenia štítka (nálepky) sa obráťte na svojho dodávateľa alebo servisného partnera Suzuki.





Slovensko (Slovene)

DVIGALKA S PANTOGRAFSKIM SISTEMOM NAVODII A 7A UPORABO

Proizvaialca:

RIKENKAKI CO., LTD. 5-6-12 Chiyoda, Sakado-shi, Saitama, 350-0214 Japonska Tel.: 049-248-1661 Faks: 049-284-4340

CHANGZHOU RIKENSEIKO MACHINERY CO., LTD. No.5 Xinlin Road. Zhonglou Changzhou, Jiangsu KITAJSKA Tel.: 0519-327-5284 Faks: 0519-327-0811


Prosimo preberite pred uporabo ta NAVODILA ZA UPORABO!

Standard: EN 1494:2000+A1:2008

Obvestilo in opozorilo

- DVIGALKO lahko uporabljate le za menjavo pnevmatik in ne za druge namene.
- DVIGALKO lahko uporabite največ 50-krat.
- Ne dviguite, kadar so v vozilu osebe,
- Nikoli se ne zadržuite pod vozilom, dvignienim z dvigalko.
- Uporaba okvarjenih ali neustrezno vzdrževanih dvigalk je zelo nevarna.

Pomen znakov na opozorilnih etiketah

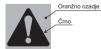

Ta simbol opozarja na morebitni nevarnost, ki lahko povzroči resne ali smrtno nevarne poškodbe.



Ta simbol opozarja, da ne smete biti nikoli pod vozilom, ki je dvignjeno z dvigalko.

Nazivi delov dvigalke Gleite FIG. 1 v angleškem delu navodil.

Tehnični podatki in lastnosti Cloito EIG. 2 v angločkom dolu povodil

Jieji	.01	o. 2 v angleskem deld nav	Juli.		
		: ZGORNJI NOSILEC	F	: VIJAK DVIGALKE	X: VIŠINA DVIGALKE (mm)
		: PODNOŽJE	G	: NAZIVNA OBREMENITEV (t)	Y: OBREMENITEV (t)
		: ZGORNJA ROČICA		: MINIMALNA VIŠINA (mm)	M : MODEL
		: SPODNJA ROČICA	H_2	: NAJVEČJA VIŠINA (mm)	T : TIP
	Е	: ZGLOB ROČICE	H_3	: VIŠINA Z ZAGOTOVLJENO ZMOGLJI	VOSTJO (mm)

Pogoji, pri katerih uporaba ni dovoljena

- Ko ie temperatura nižia od -40°C
- Na blatni ali peščeni podlagi
- Na cesti z velikim naklonom.
- V izrednih vremenskih razmerah: neurje, tajfun, tornado, snežni vihar, nevihta itd.
- Dvigovanje nevarnih bremen, na primer stopljene kovine, kislin, radioaktivnih snovi ali posebno krhkih snovi
- Neposreden stik z motornim pokrovom
- Uporaba na plovilih
- Uporaba na terenu z različnimi nivoji

Navodila za uporabo

Kadarkoli zamenjate kolo, vedno odstranite rjo, ki se nahaja na površini platišča ali pesta vozila

Podrobnosti:

Prosimo uporabliaite napravo kot ie navedeno v navodilih za uporabo. Dvigalko uporabljajte na ravni površini, preverite dvigalko in breme. Ne upravljajte pod dvignjenim bremenom, razen če je slednji varno pritrjen.

- Parkirajte vozilo na ravni površini in dobro pritegnite ročno zavoro.
- Prestavite menjalnih v vzvratno prestavo (položaj "park" pri
- avtomatskih menjalnikih)
- Vklopite varnostne utripalke.
- Vzemite orodje za dviganje in rezervno kolo iz njegovega ležišča.
- Še preden uporabite dvigalko, blokirajte prednji in zadnji del kolesa, ki je diagonalno nasproti kolesa, ki ga nameravate menjati.
- Z vrtenjem ključa v nasprotni smeri urnih kazalcev razrahljajte, vendar ne odstranite kolesnih vijakov.
- Dvigaite dvigalko, dokler niena glava ne doseže šasije gleite slike.
- Dvigajte z enakomernimi, počasnimi gibi ročice dvigalke.
- Dvignite vozilo toliko, da se pnevmatika malo dvigne od površine, odstranite matice in kolo.
- Zamenjajte kolo in nato rahlo privijte vsako matico, pri čemer mora kolo nasesti na pesto.
- Spustite vozilo, z vrtenjem ključa v smeri urnih kazalcev do konca privijte matice po navzkrižnem zaporedju

Vzdrževanje

- Prosimo preprečite kopičenje nečistoč na DVIGALKI
- Preverite ploščico s podatki, ohranite prvotno obliko.
- Prepovedano je spreminjanje konstrukcije dvigalke.
- Po vsaki uporabi se takoj obrnite na prodajalca opreme Suzuki ali servisnega partnerja za pregled in vzdrževanje dvigalke.
- Če je etiketa (nalepka) poškodovana, se obrnite na prodajalca opreme Suzuki ali servisnega partnerja.





Español (Spanish)

GATO PANTÓGRAFO MANUAL DE INSTRUCCIONES

CE

Fabricantes:

Fax:049-284-4340

RIKENKAKI CO. 5-6-12 Chiyoda, Sakado-shi, Saitama, 350-0214 Japón Tel.: 049-248-1661

CHANGZHOU RIKENSEIKO Machinery Co., LTD. No.5 Xinlin Road. Zhonglou Changzhou, Jiangsu CHINA Tel.: 0519-327-5284 Earufb10-327-0811

Por favor, ¡lea este MANUAL DE INSTRUCCIONES antes de usar el equipo!

Norma: EN 1494:2000 + A1: 2008


Atención y advertencias

- El GATO debe usarse exclusivamente para cambiar neumáticos, no para ningún otro propósito.
- No utilice el GATO más de 50 veces.
- Ninguna persona a bordo.
- Nunca se meta debajo del vehículo elevado con el gato.
- Usar gatos averiados o inapropiadamente mantenidos es extremadamente peligroso.

Significado del pictograma en la etiqueta de precaución



Este símbolo indica un peligro potencial que puede causar la muerte o lesiones graves.

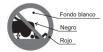

Este símbolo indica que nunca se meta debajo del vehículo cuando esté sostenido por el gato Nombre de las piezas del gato elevador de tijera Consulte FIG 1 en la página en inglés.

Datos técnicos y aplicación

Consulte FIG 2 en la página en inglés.

A: SOPORTE SUPERIOR	F: TORNILLO DEL GATO	X: ALTURA DEL GATO (mm)
B: BASE	G: CARGA NOMINAL (ton)	Y: CARGA (ton)
C: BRAZO SUPERIOR	H1: ALTURA MÍNIMA (mm)	M: MODELO
D: BRAZO INFERIOR	H2: ALTURA MÁXIMA (mm)	T: TIPO
E: MANIVELA	H ₃ : ALTURA DE GARANTÍA DE RENDI	IMIENTO (mm)

No utilizar en estas condiciones:

- Cuando la temperatura sea inferior a -40°C.
- En un terreno con barro o de arena.
- En una carretera con mucha pendiente.
- En condiciones meteorológicas extremas: tormenta, tifón, ciclón, tormenta de nieve, tormenta eléctrica, etc.
- Carga peligrosa, pesada, por ejemplo: metal fundido, sustancia ácida, sustancia radiactiva o mercancía especialmente frágil.
- Contacto con el capó directamente.
- Uso en un barco.
- Terreno con desnivel

Instrucciones de uso

Cada vez que se cambia una rueda, elimine siempre la corrosión que pueda presentar en su interior y en la superficie de montaje de la rueda en el vehículo. Detalles:

Detailes:

Por favor, siga las "Instrucciones de uso".

Utilice el gato sobre un terreno llano, mientras hace las comprobaciones del mismo y de la carga.

No debe utilizarse añadiendo una carga, a menos que la carga se sujete de forma segura

- Aparque el coche en un terreno plano y llano y eche el freno de mano con firmeza.
- Ponga la marcha en "marcha atrás" (cambio automático en "aparcar").
- Encienda las luces de emergencia.
- Retire las herramientas del gato y la rueda de repuesto de la zona de
- colocación. - Antes de utilizar el gato, bloquee la parte delantera y trasera de la
- rueda situada en diagonal con la rueda que se ha de retirar. - Afloie, pero sin retirar las tuercas de las ruedas, girando la llave en
- Atioje, pero sin retirar las tuercas de las ruedas, girando la llave sentido contrario a las agujas de un reloj.
- Eleve el gato hasta que la ranura de la cabeza del gato encaje en el reborde del bastidor, vea las ilustraciones.
- Utilice el gato con un movimiento lento y suave, usando el mango del gato.
- Eleve el vehículo de tal manera que un neumático inflado justo quede por encima de la superficie, retire las tuercas y la rueda.
- Instale la rueda y apriete ligeramente cada tuerca, la rueda debe estar apoyada en el cubo central de la misma.
- Baje el vehículo y apriete completamente las tuercas de la rueda en una secuencia lineal de cruz girando la llave en el sentido de las agujas de un reloj.

Mantenimiento

- Por favor, evite que se acumule suciedad en el TORNILLO DEL GATO.
- Compruebe la placa de características, mantenga la misma forma que tenía en origen.
- No haga cambios en la construcción del gato si es usted un particular.
- Después de cualquier uso, póngase en contacto inmediatamente con su concesionario Suzuki o con un servicio técnico asociado para que realicen las tareas de inspección y mantenimiento del gato.
- Si la etiqueta (pegatina) está dañada, consulte con su concesionario Suzuki o con un servicio técnico asociado.





Svenska (Swedish)

DOMKRAFT BRUKSANVISNING

CE

Tillverkare:

RIKENKAKI CO., LTD.

5-6-12 Chiyoda, Sakado-shi, Saitama, 350-0214 Japan Tel: 049-248-1661 Fax: 049-284-4340

CHANGZHOU RIKENSEIKO MACHINERY CO., LTD. No. 5 Xinlin Road. Zhonglou Changzhou, Jiangsu KINA Tel: 0519-327-5284 Fax: 0519-327-0811


Läs denna BRUKSANVISNING före användning!

Norm: EN 1494:2000+A1:2008

Säkerhetsnormer och varningar

- DOMKRAFTEN får endast användas till att byta däck, inget annat.
- Använd DOMKRAFTEN högst 50 gånger.
- Lyft aldrig upp personer med den.
- Stå aldrig under ett fordon som lyfts upp med domkraft.
- Användning av en defekt eller bristfälligt underhållen domkraft är extremt farligt.

Betydelse v symbolen på varningsetiketten

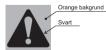

Denna symbol indikerar en potentiell risk som kan leda till livsfara eller allvarliga skador.



Denna symbol betyder att du aldrig ska stå under fordonet när det är upplyft av domkraften. Nomenklatur för pantografdomkraften

Se FIG 1 på den engelska sidan.

Tekniska data och tillämpning

Se FIG 2 på den engelska sidan.

А	: TOPPHÅLLARE	F	: DOMKRAFTSSKRUV	Х	: DOMKRAFTSHÖJD (mm)
В	: BAS	G	: NOMINELL BELASTNING (t)	Υ	: LAST (t)
		Hı	:MIN: HÖJD (mm)	М	: MODELL
D	: UNDRE ARM	H_2	: MAX. HÖJD (mm)	т	: TYP
Е	: HANDTAGSFOG	H_3	: HÖJD SOM GARANTERAR PRESTAN	NDAI	N (mm)

Förhållanden då domkraften inte får användas

- Då temperaturen understiger -40°C.
- På lerig eller sandig mark.
- På vägar som lutar mycket.
- I extrema naturförhållanden: regnstorm, tyfon, cyklon, snöstorm, åskstorm osv.
- Last av farliga eller tunga ämnen som: smält metall, syror, radioaktiva substanser eller mycket sköra föremål.
- Direktkontakt med huven.
- Användning på båtar.
- Mark med olika nivåer.

Användningsinstruktioner

När du byter ett hjul, ska du alltid avlägsna eventuell rost som kan finnas på insidan av hjulet och hjulets monteringsyta. Detaljer:

Utför åtgärderna i "användningsinstruktioner".

Använd domkraften på jämn mark så att du kan kontrollera domkraften och lasten.

Arbeta inte under upplyft last om inte lasten är fäst ordentligt.

- Parkera bilen på platt, jämn mark och dra åt bromsen ordentligt.
- Ställ växelspaken på "backväxeln" (automatisk växellåda på "parkering").
- Sätt på varningslampan.
- Ta bort domkraftsverktygen och reservdäcket från förvaringsutrymmet.
- Blockera hjulet diagonal motsatt hjulet som ska tas bort bade framtill och baktill innan du använder domkraften.
- Lossa men ta inte bort hjulmuttrarna genom att vrida nyckeln medurs.
- Lyft upp domkraften till dess skåra passar in i ramens utrymme som i illustrationerna.
- Använd domkraften med långsamma, mjuka rörelser genom att veva.
- Lyft fordonet så att ett pumpat däck är precis ovanför marken. Ta bort muttrarna och hjulet.
- Installera hjulet och dra sedan åt varje mutter något. Hjulet ska sitta på navet.
- Sänk ner fordonet och dra åt hjulmuttrarna ordentligt i en korssekvens genom att vrida nyckeln medurs.

Underhåll

- Se till att DOMKRAFTSSKRUVEN inte blir smutsig.
- Kontrollera märkplåten och se till att formen förblir som den var ursprungligen.
- Ändra inte på domkraftens konstruktion själv.
- Efter varje användning, kontakta omedelbart din Suzuki-återförsäljare eller servicepartner för inspektion och underhåll av domkraften.
- Om etiketten (dekalen) är skadad, kontakta din Suzuki-återförsäljare eller servicepartner.





Türkçe (Turkish)

PANTOGRAF KRİKO KULLANIM KILAVUZU

İmalatcılar:

RIKENKAKI CO., LTD. 5-6-12 Chiyoda, Sakado-shi, Saitama, 350-0214 Japonya Tel: 049-248-1661 Faks:049-284-4340

CHANGZHOU RIKENSEIKO MACHINERY CO., LTD. No.5 Xinlin Road. Zhonglou Changzhou, Jiangsu ÇİN Tel: 0519-327-5284 Faks:0519-327-0811


Lütfen calıstırmadan önce bu KULLANIM KILAVUZUNU okuvun.

Standart: FN 1494:2000+A1:2008

Dikkat ve uyarı

- KRİKO yalnızca lastikleri değiştirmek için kullanılabilir, herhangi başka bir amaç için kullanılamaz.
- KRİKOYU 50 defadan fazla kullanmayın.
- Üzerinde insan tasınamaz.
- Asla kriko ile kaldırılan bir aracın altına girmevin.
- Kusurlu veya yetersiz bakım yapılan krikoların kullanılması son derece tehlikelidir.

Uvarı etiketlerinin üzerindeki resimlerin anlamları

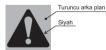

Bu simge, ölüm ya da ciddi yaralanmalara neden olabilecek olası bir tehlikeyi ifade etmektedir.



Bu simge, kriko ile desteklenen bir aracın altına girmemeniz gerektiğini ifade etmektedir.

Pantograf Krikonun Parcalarının Adları İngilizce savfadaki FIG. 1'e basvurun.

Teknik Veriler ve Uvgulamalar

İngilizce savfadaki FIG. 2've basvurun.

	A : ÜST DESTEK	F : KRİKO VİDASI	X : KRİKO YÜKSEKLİĞİ (mm)
	B : TABAN	G : NOMİNAL YÜK (t)	Y : YÜK (t)
	C : ÜST KOL	H1 : ASGARİ YÜKSEKLİK (mm)	M : MODEL
	D : ALT KOL	H2 : AZAMİ YÜKSEKLİK (mm)	T : TÜR
8	E : TUTACAK BİRLEŞME NOKTASI	H ₃ : PERFORMANS GÜVENCESİ V	ERİLEN YÜKSEKLİK (mm)

Ürünün Kullanılmaması Gereken Kosullar

- Sıcaklık -40°C'nin altında olduğunda.
- Camurlu va da kumlu zemin üzerinde.
- Yüksek eğimli yollarda.
- Fırtına, tayfun, kasırga, tipi, gök gürültülü fırtına gibi ağır doğal koşullarda.
- Erimis metal, asitli madde, radvoaktif madde gibi tehlikeli ağırlıklar va da kırılgan maddeler vüklenmesi,
- Doğrudan kaporta ile temas ettirilmesi.
- Tekne üzerinde kullanılması.
- Farklı seviyeli zeminlerde.

Calıstırma talimatları

Bir tekerleği değiştirirken, tekerlek içerisinde ya d araç üzerindeki tekerlek monte etme alanında oluşmuş olabilecek paslanma durumlarını ortadan kaldırın.

Avrintilar:

Lütfen "calıstırma talimatlarına" uvgun sekilde kullanın.

Krikoyu, kriko ve yükü kontrol ederek, düz zemin üzerinde çalıştırın. Yüklerin sağlam bir şekilde sabitlenmediği durumlarda, yük kaldırma amaçlı olarak kullanılmamalıdır.

- Arabavı düz bir zemine park edin ve el frenini sıkıca cekin.
- Aracı "geri vitese" alın (otomatik viteste "park" konumu).
- Tehlike ikaz flaşörlerini açın.
- Kaldırma araçları ile yedek lastiği bagaj alanından çıkarın.
- Krikoyu çalıştırmadan önce çıkarılacak lastiğin karşısındaki tekerleklerin önüne ve arkasına takoz yerleştirin.
- İngiliz anahtarını saat yönünün tersine çevirerek tekerlek somunlarını gevsetin, ancak çıkarmayın.
- Krikonun üst kısmı sasinin alt kalıbına gelecek sekilde krikovu kaldırın. Cizimlere göz atın.
- Krikoyu, tutacağı kullanarak yavaş ve yumuşak hareketlerle çalıştırın.
- Aracı, patlamış olan lastiğin çıkabileceği kadar kaldırın, somunları ve tekerleği çıkarın.
- Tekerleği takın ve somunları teker teker sıkıştırın, tekerleğin yuvaya tam olarak oturması gerekmektedir.
- Aracı indirin ve ingiliz anahtarını saat vönünde cevirerek tekerlek somunlarını capraz sıravla giderek tamamen sıkıstırın.

Bakım

- Lütfen KRİKO VİDASINDA kir birikmesini engellevin.
- İsimliği kontrol edin, ürünün orijinal seklini koruvun,
- Krikonun yapısını özel olarak değiştirmeyin.
- Herhangi bir Kullanımdan sonra, Krikonun kontrol ve bakım işlemleri için hemen Suzuki Satıcınıza veya Hizmet Ortağına danısın.
- Eğer etiket (çıkartma) hasar görürse, lütfen Suzuki Satıcınıza veya Hizmet Ortağına danışın.





Country	Importers name	Registered trade name or registered trade mark	TEL FAX	Postal address
AUSTRIA	SUZUKI AUSTRIA AUTOMOBIL HANDELS GESELLSCHAFT M.B.H.	SUZUKI AUSTRIA AUTOMOBIL HANDELS GESELLSCHAFT M.B.H.	43-662-2155-353 43-662-2155-900	MUNCHNER BUNDESSTRASSE 160 A-5020 SALZBURG, AUSTRIA
BELGIUM	N.V. SUZUKI BELGIUM S.A.	N.V. SUZUKI BELGIUM S.A.	32-3-4500400	SATENROZEN 8, B-2550 KONTICH, BELGIUM
BULGARIA	MIRKAT LTD.	MIRKAT LTD.	359-2-4390930	96 POP GRUYU STR., 1836 SOFIA, BULGARIA
CYPRUS	A.TRICOMITIS LTD	A.TRICOMITIS LTD	357-24-819700 357-24-63-7727	P.O.Box 40459, 6304 Larnaca, Cyprus. 35 Spyrou Kyprianou, 6013 Larnaca, Cyprus
DENMARK	SUZUKI BILIMPORT DANMARK A/S	SUZUKI BILIMPORT DANMARK A/S	45-56-656600	UNIONSVEJ 16, DK-4600, KOEGE, DENMARK
FINLAND	SUZUKI MOTOR FINLAND OY	SUZUKI MOTOR FINLAND OY	358-207-997-700 358-207-997-701	KAAKELIKAARI 4 B 01720 VANTAA, FINLAND
ESTONIA	SUZUKI MOTOR FINLAND OY	SUZUKI MOTOR FINLAND OY	358-207-997-700 358-207-997-701	KAAKELIKAARI 4 B 01720 VANTAA, FINLAND
LATVIA	SUZUKI MOTOR FINLAND OY	SUZUKI MOTOR FINLAND OY	358-207-997-700 358-207-997-701	KAAKELIKAARI 4 B 01720 VANTAA, FINLAND
LITHUANIA	SUZUKI MOTOR FINLAND OY	SUZUKI MOTOR FINLAND OY	358-207-997-700 358-207-997-701	KAAKELIKAARI 4 B 01720 VANTAA, FINLAND
FRANCE	SUZUKI FRANCE S.A.S.	SUZUKI FRANCE S.A.S.	33-825-004-063	8, AVENUE DES FRERES LUMIERE, 78190 TRAPPES, FRANCE
GERMANY	SUZUKI DEUTSCHLAND GMBH	SUZUKI DEUTSCHLAND GMBH	49-6251-57000	SUZUKI-ALLEE 7, 64625 BENSHEIM, GERMANY
GIBRALTAR	A BASSADONE (1904) LIMITED	A BASSADONE (1904) LIMITED	350-20079004 350-20078005	P.O. BOX 176, 42 DEVIL'S TOWER ROAD, GIBRALTAR
GREECE	SFAKIANAKIS S.A.	SFAKIANAKIS S.A.	30-210-349-9940	5-7, SIDIROKASTROU STR., 118 55 ATHENS, GREECE
HUNGARY	MAGYAR SUZUKI CORPORATION LTD.	MAGYAR SUZUKI CORPORATION LTD.	36-33-541-317 36-33-412014	2500 ESZTERGOM SCHWEIDEL JOZSEF U.52, HUNGARY
ICELAND	SUZUKI BILAR HF	SUZUKI BILAR HF	354-568-5100 354-588-8211	SKEIFAN 17, 108 REYKJAVIK, ICELAND
ITALY	SUZUKI ITALIA S.P.A.	SUZUKI ITALIA S.P.A.	39-011-9213713 39-011-9213748	C.SO FRATELLI KENNEDY 12 10070 ROBASSOMERO (TO) ITALY
MALTA	INDUSTRIAL MOTORS LIMITED	INDUSTRIAL MOTORS LIMITED	356-20-60000 356-21-234769	Antonio Bosio Street, Msida MSD1341
NETHERLANDS	B.V. NIMAG	B.V. NIMAG	31-0162-585-750	LANGE DREEF 12 4130 EB VIANEN THE NETHERLANDS
NORWAY	RUTEBILEIERNES STANDARDISERINGS AS	RUTEBILEIERNES STANDARDISERINGS AS	47-32-21-88-00 47-32-82-49-53	OVRE EIKERVEI 77, POSTBOX 4004 GULSKOGEN, N-3002, DRAMMEN, NORWAY
POLAND	SUZUKI MOTOR POLAND SP. Z 0.0.	SUZUKI MOTOR POLAND SP. Z 0.0.	48-22-3294100	UL. POLCZYNSKA 10, 01-378 WARSAW, POLAND
PORTUGAL	SUZUKI MOTOR IBERICA S.A.U	SUZUKI MOTOR IBERICA S.A.U	34-91-151-9500	CALLE CARLOS SAINZ 35-POLIGONO, CIUDAD DEL AUTOMOVIL, 28914, LEGANES, MADRID SPAIN
SPAIN	SUZUKI MOTOR IBERICA S.A.U	SUZUKI MOTOR IBERICA S.A.U	34-91-151-9500	CALLE CARLOS SAINZ 35-POLIGONO, CIUDAD DEL AUTOMOVIL, 28914, LEGANES, MADRID SPAIN
SWEDEN	LOUWMAN SVERIGE AB	LOUWMAN SVERIGE AB	46-8-517-32300	VRETENVAGEN 10, SOLNA, 17154, SWEDEN
SWITZERLAND	SUZUKI AUTOMOBILE SCHWEIZ AG	SUZUKI AUTOMOBILE SCHWEIZ AG	41-62-788-8790 41-62-788-8791	EMIL-FREY-STRASSE, 5745 SAFENWIL, SWITZERLAND
U.K.	SUZUKI GB PLC	SUZUKI GB PLC	44-1908-336600	STEINBECK CRESCENT, SNELSHALL WEST, MILTON KEYNES MK4 4AE, U.K.
IRELAND	SUZUKI GB PLC (IRELAND BRANCH)	SUZUKI GB PLC (IRELAND BRANCH)	353-1-619-3671 353-1-452-1796	57 BROOMHILL DRIVE, TALLAGHT INDUSTRIAL ESTATE, DUBLIN 24, IRELAND
LUXEMBOURG	N.V. SUZUKI BELGIUM S.A.	N.V. SUZUKI BELGIUM S.A.	32-3-4500400	SATENROZEN 8, B-2550 KONTICH, BELGIUM
SLOVAKIA	MAGYAR SUZUKI CORPORATION LTD.	MAGYAR SUZUKI CORPORATION LTD.	36-33-541-317 36-33-412014	2500 ESZTERGOM SCHWEIDEL JOZSEF U.52, HUNGARY
CZECH	MAGYAR SUZUKI CORPORATION LTD.	MAGYAR SUZUKI CORPORATION LTD.	36-33-541-317 36-33-412014	2500 ESZTERGOM SCHWEIDEL JOZSEF U.52, HUNGARY
ROMANIA	MAGYAR SUZUKI CORPORATION LTD.	MAGYAR SUZUKI CORPORATION LTD.	36-33-541-317 36-33-412014	2500 ESZTERGOM SCHWEIDEL JOZSEF U.52, HUNGARY
CROATIA	MAGYAR SUZUKI CORPORATION LTD.	MAGYAR SUZUKI CORPORATION LTD.	36-33-541-317 36-33-412014	2500 ESZTERGOM SCHWEIDEL JOZSEF U.52, HUNGARY
SLOVENIA	MAGYAR SUZUKI CORPORATION LTD.	MAGYAR SUZUKI CORPORATION LTD.	36-33-541-317 36-33-412014	2500 ESZTERGOM SCHWEIDEL JOZSEF U.52, HUNGARY

Information	Information of the radio device: Type TN0021A)21A
1. Name a	Name and postal address of the manufacturer	ufacturer
Name: Address:	DENSO TEN Limited s: 2-28, Gosho-dori 1-chome, Hyogo-ku, Kobe, 652-8510 Japan	, Hyogo-ku, Kobe,
2. Simplif	Simplified EU declaration of conformity	λ
С настоящото DE радиосьоръжение 2014/53/EC.	NSO TEN Limiteo TN0021A e B	а декларира, че този тип съответствие с Директива
Цялостният намери на с	Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес:	за съответствие може да се
https://www.	https://www.denso-ten.com/support/regulation/eu_	ion/eu_doc/
функция	Работна честотна лента	Максимална радиочестотна мощност
GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.
	880~915 MHz	25dBm e.i.r.p.
UMTS	1710~1785 MHz	25dBm e.i.r.p.
	1920~1980 MHz	25dBm e.i.r.p.
Ovim putem,	, DENSO TEN Limited izjavljuje da	uje da je vrsta radio opreme
LINU021A u Cijeli tekst	1N0021A u saglasnosti s Direktivom 2014/53/EU. Ciieli tekst EC deklaracije o usaglašenosti je	53/EU. isti ie dostupan na sliedećoj
internetskoj adresi:	adresi:	
https://www.	https://www.denso-ten.com/support/regulation/eu_doc/	ion/eu_doc/
Funkcija	Radni frekvencijski pojas	Maksimalna rediofrekvencijska snaga
GSM	880~915 MHz 1710~1785 MH~	35dBm e.i.r.p. 32dBm e.i.r.p.
UMTS	880~915 MHz 1710~1785 MHz	25dBm e.i.r.p.
		zodbm e.i.r.p.

Tímto DENS TN0021A je	Tímto DENSO TEN Limited prohlašuje, že TN0021A ie v souladu se směrnicí 2014/53/EU.	, že typ rádiového zařízení /EU.
Úplné znění adrese	EU prohlášení o shodě je k	Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese
https://www.c	https://www.denso-ten.com/support/regulation/eu_doc/	ion/eu_doc/
Funkce	Provozní frekvenční pásmu	Maximální radiofrekvenční výkon
GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.
UMTS	880~915 MHz 1710~1785 MHz 1920~1980 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.
Hermed erkl	ærer DENSO TEN Limited, at I	Hermed erklærer DENSO TEN Limited, at radioudstyrstypen TN0021A er
i overensster FI I-overenss	i overensstemmelse med direktiv 2014/53/EU. EII-overensstemmelseserklæringens fulde tek	i overensstemmelse med direktiv 2014/53/EU. EII-overensstemmelseserklæringens fulde tekst kan findes på følgende
internetadresse:	SSe:	
https://www.o	https://www.denso-ten.com/support/regulation/eu_doc/	ion/eu_doc/
Funktion	Driftsfrekvensbandet	Maksimal radio-frekvens effekt
GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.
UMTS	880~915 MHz 1710~1785 MHz 1920~1980 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.
Hiermit erklä	Hiermit erklärt DENSO TEN Limited, dass	der Funkanlagentyp TN0021A
der Richtlinie	der Richtlinie 2014/53/EU entspricht. Der vollständige Text der ELLKonformitätserkläring	itäteerklärnna iet unter der
folgenden In:	folgenden Internetadresse verfügbar:	
https://www.c	https://www.denso-ten.com/support/regulation/eu_doc/	ion/eu_doc/
Funktion	Betriebsfrequenzband	Maximale Hochfrequenzleistung
GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.
UMTS	880~915 MHz 1710~1785 MHz 1920~1980 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.

To many processing of the procesing of the processing of the processing of the processing	Ме тру т оделосботали	παρούσα ο/η DENSO TEN	Ι Limited, δηλώνει ότι ο νά 2014/53/ΕΕ
regulation/eu_doc/ w Mé¢yror podōlooru 35dBm e.i.r.p. 35dBm e.i.r.p. 35dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 35dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.	Το πλήρες κόλοιθη ισ	νους τηνούς το την μου την σοι κείμενο της δήλωσης συμμά τοσελίδα στο διαδίκτιω.	για συττρούμεται στην φφωσης ΕΕ διατίθεται στην
πήτων Μέγιστ ραδιοσυ 35dBm e.i.r.p. 1/63 35dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 1 declares that the radio 1 1 declares that the radio 1 1 declares that the radio 1 1 declares that the radio 1 1 declares that the radio 1 1 declares that the radio 1 1 declares that the radio 1 1 declares that the radio 1 1 declares that the radio 1 1 declares that the radio 1 1 declares that the radio 1 1 declares that the radio 1 1 declares that the radio 1 1 declares that the radio 1 1 declares that the radio 1 1 declares that the radio 1 1 declares that the radio 1 1 declare that the radio 1 1 forme con la Directiva 201 1 1 forme con la Directiva 201 1 1 forme con la Directiva 201 1 1 forme con la Directiva 201 1 1 forme 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p	https://www.u	denso-ten.com/support/regulat	on/eu_doc/
35dBm e.i.r.p. 32dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. abort/regulation of conformity is a abort/regulation/eu_doc/ 25dBm e.i.r.p.	Λειτουργία	Ζώνη συχνοτήτων λειτουργίας	Μέγιστη ισχύς ραδιοσυχνότητας
25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 35dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.	GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.
Z5dBm e.i.r.p. 1 declares that the radio 25dBm e.i.r.p. 25dBm e.i.r.p. 1 declares that the radio 1 declares that the radio 1 declares that the radio 1 declares that the radio 1 declares that the radio 1 declares that the radio 1 declares that the radio 1 declares that the radio 1 declared to conformity is a statementer to a point to the statementer to a point to the statementer to a statementer to		880~915 MHz	25dBm e.i.r.p.
a declares that the radio a Directive 2014/53/EU. laration of conformity is a pport/regulation/eu_doc/ a 35dBm e.i.r.p. 35dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. pport/regulation/eu_doc/ cuencia Potencia m va 35dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.	UMTS	1710~1785 MHz 1920~1980 MHz	25dBm e.i.r.p. 25dBm e.i.r.p.
n Directive 2014/53/EU. laration of conformity is available pport/regulation/eu_doc/ lency band Maximum radio-freque as5dBm e.i.r.p. 35dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.	Hereby, DEI	VSO TEN Limited declares t	hat the radio equipment type
pport/regulation/eu_doc/ ency band Maximum radio-freque iency band Maximum radio-freque 35dBm e.i.r.p. 35dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 33dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.	The full tex	in compliance with Directive 2(t_of_the_FU_declaration_of_c	
pport/regulation/eu_doc/ lency band Maximum radio-freque power 35dBm e.i.r.p. 35dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. N Limited declara que el tipo de iforne con la Directiva 2014/53/UE. 14/53/UE. oricón UE de conformidad está dispon con la Directiva 2014/53/UE. 32dBm e.i.r.p. pport/regulation/eu_doc/ 25dBm e.i.r.p. cuencia Potencia máxima de radiofrecuencia 32dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.	following inte	ernet address:	
Maximum radio-frequency band Maximum radio-frequency 35dBm e.i.r.p. 35dBm e.i.r.p. 32dBm e.i.r.p. 32dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. N Limited declara que el tipo de nforme con la Directiva 2014/53/UE. encion UE de conformidad está dispon port/regulation/eu_doc/ doc/ cuencia Potencia máxima de radiofrecuencia va 35dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.	https://www.	denso-ten.com/support/regulat	on/eu_doc/
35dBm e.i.r.p. 32dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. pport/regulation/eu_doc/ cuencia 73dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.	Function	Operating frequency band	Maximum radio-frequency power
25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. N Limited declara que el tipo de tricion UE de conformidad está dispon reción UE de conformidad está dispon pport/regulation/eu_doc/ cuencia 75dBm e.i.r.p. 32dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.	GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.
25dBm e.i.r.p. N Limited declara que el tipo de nforme con la Directiva 2014/53/UE. rción UE de conformidad está dispon oport/regulation/eu_doc/ pport/regulation/eu_doc/ cuencia Potencia máxima de radiofrecuencia 35dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.	UMTS	880~915 MHz 1710~1785 MHz	25dBm e.i.r.p. 25dBm e.i.r.p.
N Limited declara que el tipo de nforme con la Directiva 2014/53/UE. pport/regulation/eu_doc/ cuencia Potencia máxima de radiofrecuencia 35dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.		1920~1980 MHz	25dBm e.i.r.p.
El texto completo de la declaración UE de conformidad está disponible e la dirección Internet siguiente: https://www.denso-ten.com/support/regulation/eu_doc/ Función Banda de frecuencia Función Banda de frecuencia R80~915 MHz 35dBm e.i.r.p. B80~915 MHz 25dBm e.i.r.p. UMTS 1710~1785 MHz 25dBm e.i.r.p. 1920~1980 MHz 25dBm e.i.r.p.	Por la prese	ente, DENSO TEN Limited d	Binotico 2011/2011
Litexcoloring Banda de frecuencia Ittps://www.denso-ten.com/support/regulation/eu_doc/ https://www.denso-ten.com/support/regulation/eu_doc/ Función Banda de frecuencia Potencia máxima de la operativa Potencia máxima de la radiofrecuencia GSM 1710~1785 MHz 35dBm e.i.r.p. MTS 880~915 MHz 25dBm e.i.r.p. UMTS 1710~1785 MHz 25dBm e.i.r.p. 1920~1980 MHz 25dBm e.i.r.p.	El texto com	0 I NUUZTA es contorme con la bleto de la declaración LIE de c	Directiva 2014/53/UE.
https://www.denso-ten.com/support/regulation/eu_doc/FunciónBanda de frecuenciaFunciónBanda de frecuenciaRenciónPotencia máxima de laaperativaPotencia máxima de laGSM880~915 MHz35dBm e.i.r.p.1710~1785 MHz32dBm e.i.r.p.B80~915 MHz25dBm e.i.r.p.UMTS1710~1785 MHz25dBm e.i.r.p.1920~1980 MHz25dBm e.i.r.p.	la dirección l	prero de la decial actorit OL de c nternet siguiente:	
Banda de frecuencia operativa operativa 880~915 MHz 1710~1785 MHz 880~915 MHz 1710~1785 MHz 256 1710~1785 MHz 256 1710~1785 MHz 256 1720~1980 MHz	https://www.	denso-ten.com/support/regulat	on/eu_doc/
880~915 MHz 35dBm 1710~1785 MHz 32dBm 880~915 MHz 25dBm 1710~1785 MHz 25dBm 1920~1980 MHz 25dBm	Función	Banda de frecuencia operativa	Potencia máxima de la radiofrecuencia
1710~1785 MHz 880~915 MHz 1710~1785 MHz 1920~1980 MHz	MS.D	880~915 MHz	35dBm e.i.r.p.
880~915 MHz 1710~1785 MHz 1920~1980 MHz		1710~1785 MHz	32dBm e.i.r.p.
920~1980 MHz	UMTS	880~915 MHz 1710~1785 MHz	25dBm e.i.r.p. 25dBm e.i.r.p.
		1920~1980 MHz	25dBm e.i.r.p.

Käesolevaga	deklareerib a tiiiin TN0021A	DENSO TEN Limited, et käesolev vastah diraktiivi 2014/53/FI nõiuetele
ELi vastavi		on kättesaadav järgmisel
https://www.denso	internetiaadressil: https://www.denso-ten.com/support/regulation/eu doc/	ion/eu doc/
Funktsioon	Töösageduse laineala	Maksimaalne raadiosageduslik võimsus
GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.
UMTS	880~915 MHz 1710~1785 MHz 1920~1980 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.
DENSO TE direktiivin 20	DENSO TEN Limited vakuuttaa, että direktiivin 2014/53/EU mukainen.	radiolaitetyyppi TN0021A on
EU-vaatimus	tenmukaisuusvakuutuksen täy	EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla
seuraavasse https://www.c	seuraavassa internetosoitteessa: https://www.denso-ten.com/support/regulation/eu_doc/	ion/eu doc/
Toiminto	Toimintataajuuskaista	Maksimi radiotaajuusteho
GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.
UMTS	880~915 MHz 1710~1785 MHz	25dBm e.i.r.p. 25dBm e.i.r.p.
		zoubin e.i.r.p.
Le soussigné, radioélectrique (né, DENSO TEN Limited, ue du tvpe TN0021A est confoi	Le soussigné, DENSO TEN Limited, déclare que l'équipement radioélectrique du type TN0021A est conforme à la directive 2014/53/UE.
Le texte cor	Le texte complet de la déclaration UE de conformité est	e conformité est disponible à
I'adresse inte	l'adresse internet suivante: https://www.denso-ten.com/support/regulation/eu_doc/	ion/au doc/
Fonction	Bande de fréquence de fonctionnement	Puissance maximale de la radiofréquence
GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.
UMTS	880~915 MHz 1710~1785 MHz 1920~1980 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.

Leis seo, de trealaimh rai	Leis seo, dearbhaíonn DENSO TEN Limited go gcomhlíonann an cineál trealaimh raidió TN0021A Treoir 2014/53/EU.	id go gcomhlíonann an cineál J.
Tá an téacs	Tá an téacs iomlán den dearbhú comhréireachta AE ar fáil ag an seoladh	achta AE ar fáil ag an seoladh
Idirlin seo a leanas: https://www.denso-t	ldirlin seo a leanas: https://www.denso-ten.com/support/regulation/eu_	on/eu_doc/
Feidhm	Banda minicíochta oibriúcháin	Uaschumhacht radaimhinicíochta
GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.
UMTS	880~915 MHz 1710~1785 MHz 1920~1980 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.
DENSO TEN u skladu s D	DENSO TEN Limited ovime izjavljuje da je radijska oprema tipa TN0021A u skladu s Direktivom 2014/53/EU.	adijska oprema tipa TN0021A
Cjeloviti tekst EL	st EU izjave o sukladnosti adresi:	dostupan je na sljedećoj
https://www.o	https://www.denso-ten.com/support/regulation/eu_doc	on/eu doc/
Funkcija	Radni frekvencijski pojas	Maksimalna rediofrekvencijska snaga
GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.
UMTS	880~915 MHz 1710~1785 MHz 1920~1980 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.
DENSO TEN medfelel a 2	DENSO TEN Limited igazolja, hogy a TNC meofelel a 2014/53/FU iránvelvnek	TN0021A típusú rádióberendezés
Az EU-megfelelő internetes címen:	eljes	szövege elérhető a következő
https://www.u	https://www.denso-ten.com/support/regulation/eu_doc/	on/eu_doc/
Funkció	Üzemi frekvencia-tartomány	Maximális rádiófrekvenciás teljesítmény
GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.
UMTS	880~915 MHz 1710~1785 MHz 1920~1980 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.

Hér með, lýs TN0021A sai	Hér með, lýsir DENSO TEN Limited því y TN00214 samræmist tilskinun 2014/53/FLI	Hér með, lýsir DENSO TEN Limited því yfir að gerð útvarpsbúnaðarins TN0021A samræmist filskinun 2014/53/EU
Allur texti E	Allur texti ESB-samræmisyfirlýsingarinnar er	er aðgengilegur á eftirfarandi
veffangi: https://www.r	veffangi: https://www.denso-ten.com/support/regulation/eu_doc/	מח/פון למכן
Aðgerð	Notkunartíðni hliómsveit	Hámarks útvarp-tíðni vald
GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.
	880~915 MHz	25dBm e.i.r.p.
UMTS	1710~1785 MHz	25dBm e.i.r.p.
	1920~1980 MHz	25dBm e.i.r.p.
II fabbricante	, DENSO TEN Limited, dichiar	Il fabbricante, DENSO TEN Limited, dichiara che il tipo di apparecchiatura
radio TN002	radio TN0021A è conforme alla direttiva 2014/53/UE.	
II testo com secreta ind	II testo completo della dichiarazione di conformità UE securante indirizzo Internet:	onformità UE è disponibile al
https://www.o	https://www.denso-ten.com/support/regulation/eu_doc/	on/eu doc/
Funzione	Frequenza operativa	Massima potenza a radiofrequenza
MOC	880~915 MHz	35dBm e.i.r.p.
	1710~1785 MHz	32dBm e.i.r.p.
	880~915 MHz	25dBm e.i.r.p.
UMTS	1710~1785 MHz	25dBm e.i.r.p.
	1920~1980 MHz	25dBm e.i.r.p.
Aš, DENSO	TEN Limited, patvirtinu, kad r	Aš, DENSO TEN Limited, patvirtinu, kad radijo įrenginių tipas TN0021A
atitinka Direk	atitinka Direktyvą 2014/53/ES.	
Visas ES atit	Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu:	namas šiuo interneto adresu:
https://www.c	https://www.denso-ten.com/support/regulation/eu_	on/eu_doc/
Funkcija	Veikimo dažnių juosta	Maksimalus radijo dažnių galingumas
WS.U	880~915 MHz	35dBm e.i.r.p.
		32dBm e.i.r.p.
	880~915 MHz	25dBm e.i.r.p.
UMTS		25dBm e.i.r.p.
	1920~1980 MHz	25dBm e.i.r.p.

Ar šo DENSO TEN Direktīvai 2014/53/FS	DENSO TEN Limited deklarē, ka radioiekārta TN0021A vai 2014/53/FS	radioiekārta TN0021A atbilst
Pilns ES atbi	Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: https://www.denso-ten.com/support/regulation/eu_doc/	eejams šādā interneta vietnē: ion/eu_doc/
Funkcija	Darba frekvences josla	Maksimālā radiofrekvences jauda
GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.
UMTS	880~915 MHz 1710~1785 MHz	25dBm e.i.r.p. 25dBm e.i.r.p.
	1920~1980 MHz	25dBm e.i.r.p.
Co oba, DEN TN00214 a	Со ова, DENSO TEN Limited изјавува дека радио оп TN0021A е во согласност со Пилективата 2014/53/EI	Со ова, DENSO TEN Limited изјавува дека радио опремата од типот ТИЛЛ21A е во согласност со Лирективата 2014/53/EU
Целиот текс	т на ЕУ изјавата за сообрази	Целиот текст на ЕУ изјавата за сообразност е достапен на следната
интернет адреса:	peca:	
https://www.c	https://www.denso-ten.com/support/regulation/eu_doc/	ion/eu_doc/
функција	Работен фреквенциски	Максимална радио-фременниска мой
	010015 MH→	26dBm o i r o
GSM	000~91310HLZ 1710~1785 MHz	33dBm e.i.rp.
	880~915 MHz	25dBm e.i.r.p.
UMTS	1710~1785 MHz	25dBm e.i.r.p.
	1920~1980 MHz	25dBm e.i.r.p.
Ovim, DENS	O TEN Limited izjavljuje da je	Ovim, DENSO TEN Limited izjavljuje da je tip radio opreme TN0021A u
skladu sa Dii	skladu sa Direktivom 2014/53/EU.	
Cjelokupan t	ekst EU deklaracije o usklađe	Cjelokupan tekst EU deklaracije o usklađenosti dostupan je na sljedećoj
internet adresi:	si: ·	
https://www.c	nttps://www.denso-ten.com/support/regulation/eu_doc/	ion/eu_doc/
Funkcija	Operativni frekvencijski opseg	Maksimalna jačina radio frekvencije
MUU	880~915 MHz	35dBm e.i.r.p.
	1710~1785 MHz	32dBm e.i.r.p.
LIMTC	880~915 МНz 1710~1785 МН -	25dBm e.i.r.p. 25dBm e i r.p.
		25dBm e.i.r.p.

B'dan, DENS TN00210 hit	SO TEN Limited, niddikjara li wa konformi mad-Direttiva 201	B'dan, DENSO TEN Limited, niddikjara li dan it-tip ta' tagħmir tar-radju TN0021Δ huwa konformi mad-Direttiva 2014/53/LE
It-test kollu t	ad-dikjarazzjoni ta' konformità	it-test kollu taddikjani ta' konformità tal-UE huwa disponibbli fdan
https://www.o	-indirizz tal-internet II gej: https://www.denso-ten.com/support/regulation/eu_doc/	on/eu doc/
Funzjoni	Band tal-frekwenza operattiva	I-energija massima bi frekwenza tar-radiu
GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.
UMTS	880~915 MHz 1710~1785 MHz 1020~1080 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.
Hierbii verkla	Hierbii verklaar ik. DENSO TEN Limited, dat het type	dat het type radioapparatuur
TN0021A coi	TN0021A conform is met Richtlijn 2014/53/EU.	
De volledige	e tekst van de EU-conforr	EU-conformiteitsverklaring kan worden
geraadpleeg	geraadpleegd op het volgende internetadres:	s:
https://www.o	https://www.denso-ten.com/support/regulation/eu_doc/	on/eu_doc/
Functie	Actieve frequentieband	Maximale radiofrequentie
MS.C	880~915 MHz	35dBm e.i.r.p.
)	1710~1785 MHz	32dBm e.i.r.p.
	880~915 MHz	25dBm e.i.r.p.
UMTS	1710~1785 MHz	25dBm e.i.r.p.
	1920~1980 MHz	25dBm e.i.r.p.
DENSO TEN	rved	at radioutstyrstypen TN0021A er i
samsvar me	samsvar med direktiv 2014/53/EU.	
Den fullsten	dige teksten i EU-erklæringe	Den fullstendige teksten i EU-erklæringen er tilgjengelig på følgende
internettadresse:	SSe:	
https://www.c	nttps://www.denso-ten.com/support/regulation/eu_doc/	on/eu_doc/
Funksjon	Driftsfrekvensbånd	Maksimal radiofrekvent strøm
MUC	880~915 MHz	35dBm e.i.r.p.
		32dBm e.i.r.p.
UMTS	880~915 MHz 1710~1785 MHz 1020~1080 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm o.i.r.p.

DENSO TEN TN0021A jes	Limited niniejszym oświadcze t zgodny z dvrektywa 2014/53	DENSO TEN Limited niniejszym oświadcza, że typ urządzenia radiowego TN0021A jest zgodny z dvrektywa 2014/53/UE.
Pełny tekst deklaracji	deklaracji zgodności UE jest	Pełny tekst deklaracji zgodności UE jest dostępny pod następującym
https://www.c	https://www.denso-ten.com/support/regulation/eu_doc/	ion/eu_doc/
Funkcja	Pasmo częstotliwości pracy	Maksymalna moc częstotliwości radiowej
GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.
UMTS	880~915 MHz 1710~1785 MHz 1920~1980 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.
O(a) abaixo	assinado(a) DENSO TEN Li	assinado(a) DENSO TEN Limited declara que o presente
tipo de equipamento Diretiva 2014/53/UE.	vamento de rádio TN0021A (/53/UE.	tipo de equipamento de rádio TN0021A está em conformidade com a Diretiva 2014/53/UE.
O texto inte	ão de	conformidade está disponível no
seguinte end https://www.c	seguinte endereço de Internet: https://www.denso-ten.com/support/reguilation/eu	ion/eu doc/
	Faixa de freqüência	Potência máxima de
runyau	operacional	radiofreqüência
GSM	880~915 MHz	35dBm e.i.r.p.
	ZHM 6811~0111	32dBm e.i.r.p.
UMTS	880~915 MHz 1710~1785 MHz	25dBm e.i.r.p. 25dBm e.i.r.p.
	1920~1980 MHz	25dBm e.i.r.p.
Prin prezenta	Prin prezenta, DENSO TEN Limited dec	declară că tipul de echipamente
radio TN002	- Cu	. :
lextul integr	lextul integral al declarației UE de co următoarea adresă internet	conformitate este disponibil la
https://www.c	https://www.denso-ten.com/support/regulation/eu_doc/	ion/eu_doc/
Funcție	Bandă de frecvență activă	Puterea maximă a radio-frecventei
NO (880~915 MHz	35dBm e.i.r.p.
NIN COM	1710~1785 MHz	32dBm e.i.r.p.
UMTS	880~915 MHz 1710~1785 MHz 1920~1980 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.

DENSO TE	DENSO TEN Limited týmto vyhlasuje, že	že rádiové zariadenie typu
Úplné EÚ vy	Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: drav //www.donco.ton.com/eunoce//condiction/ou_doc/	ii na tejto internetovej adrese:
Funkcia	Prevádzkové frekvenčné pásmo	Maximálny rádiofrekvenčný výkon
GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.
UMTS	880~915 MHz 1710~1785 MHz 1920~1980 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.
DENSO TEN	I Limited potrjuje, da je tip radij	DENSO TEN Limited potrjuje, da je tip radijske opreme TN0021A skladen
z Ulrektivo zu 14/53/EU. Celotno besedilo izjav	z Urrektivo zu14/b3/EU. Celotno besedilo izjave EU o skladnosti	i je na voljo na naslednjem
spletnem naslovu:	slovu:	· · ·
https://www.c	https://www.denso-ten.com/support/regulation/eu_doc/	Ion/eu_doc/
Funkcija	Delovni frekvenčni pas	Maksimalna radiofrekvenčna moč
GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e i r n
	880~015 MH-	
UMTS	1710~1785 MHz	25dBm e.i.r.p.
	1920~1980 MHz	25dBm e.i.r.p.
Nëpërmjet ké	ësaj, DENSO TEN Limited dek	Nëpërmjet kësaj, DENSO TEN Limited deklaron se lloji i aparatit të radios
TN0021A ësi	TN0021A është në përputhje me Direktivën 2014/53/EU	:
Teksti i plo	Teksti i plotë i deklaratës së BE-së mbi përputhshmërinë	nbi përputhshmërinë është i
disponueshë	disponueshëm në adresën e mëposhtme të internetit: https://www.denso.ten.com/sumont/requilation/au_doc/	ë internetit: ion/eu-doc/
	Banda e frekuencës së	Fugia maksimale e
runksion	punës	frekuencave radio
GSM	880~915 MHz	35dBm e.i.r.p.
)	1710~1785 MHz	32dBm e.i.r.p.
UMTS	880~915 MHz 1710~1785 MHz 1020~1080 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm o.i.r.p.

Ovim, DENS	Ovim, DENSO TEN Limited izjavljuje da je ovaj tip radijske TN0021A u skladu sa odredbama Direktive 2014/53/FU	je ovaj tip radijske opreme 2014/53/FU
Kompletan tu	ekst EU deklaracije o konform	Kompletan tekst EU deklaracije o konformitetu je dostupan na sledećoj
https://www.dei	Internet auresi. https://www.denso-ten.com/support/regulation/eu_	on/eu_doc/
Funkcija	Radni frekvencijski pojas	Maksimalna rediofrekvencijska snaga
GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.
UMTS	880~915 MHz 1710~1785 MHz 1920~1980 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.
Härmed förs	N I imited	att denna tvn av radioutrustning
TN0021A öv	TN0021A överensstämmer med direktiv 2014/53/EU	14/53/EU.
Den fullständ	Den fullständiga texten till EU-försäkran om överensstämmelse finns på	n överensstämmelse finns på
följande webbadress:	badress:	
https://www.c	https://www.denso-ten.com/support/regulation/eu_doc/	on/eu_doc/
Funktion	Operationsfrekvensbandet	Maximal radiofrekvenseffekt
GSM	880~915 MHz	35dBm e.i.r.p.
	1/10~1/85 MHz	32dBm e.i.r.p.
	880~915 MHz	25dBm e.i.r.p.
	1/10~1/85 MHz 1020~1080 MH-	25dBm e.i.r.p.
DENSO TEI	DENSO TEN Limited, TN0021A türü te	telsiz ekipmanının 2014/53/EU
Direktifine uy	Direktifine uygun olduğunu beyan etmektedir.	lir.
AB uygunlu	k beyanının tam metnine a	AB uygunluk beyanının tam metnine aşağıdaki internet adresinden
ulaşılabılır: https://www.c	ulaşılabilir: https://www.denso-ten.com/support/regulation/eu_doc/	on/eu doc/
İşlev	Çalışma frekans bandı	Maksimum radyo-frekans gücü
WV U	880~915 MHz	35dBm e.i.r.p.
500	1710~1785 MHz	32dBm e.i.r.p.
UMTS	880~915 MHz 1710~1785 MHz 1920~1980 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.

Panasonic

Panasonic Corporation Automotive & Industrial Systems company

4261 Ikonobe-cho, Tsuzuki-ku, Yokohama-shi, Kanagawa-ken, 224-8520, Japan

	4261 Ikonobe-cho, Isuzuki-ku, Yokonama-shi, Kanagawa-ken, 224-8520, Japan				
	Tel:+81 50-3689-7126 Fax:+81 45-931-0806				
CE	frequency band(s) in which the radio equipment operates; 2402-2480MHz				
CC	nequerky dances in which die tadio equipment operates 2402-2400miz. maximum radio-frequency power transmitted in the frequency band(s) in which the radio equipment operates; 1.01 mW				
[English]	Hereby, Panasonic Corporation declares that the radio equipment type CQ-J206F0JT,CQ-J206F1JT,CQ-J246F1JT,CQ-C228E0JT,CQ-C228E1JT is in compliance with Directive 2014/53/EU.				
Lending	The full text of the EU declaration of conformity is available at the following internet address:http://www.ptc.panasonic.eu/				
	Hierbij verklaar ik, Panasonic Corporation, dat het type radioapparatuur CQ-JZ06F0JT,CQ-JZ06F1JT,CQ-JZ46F0JT,CQ-CZ28E0JT,CQ-CZ28E1JT conform is met Richtlijn 2014/53/EU.				
[Dutch]	De volledige tekst van de EU-conformiteitsverklaring kan worden geraadgleegd op het volgende internetadres:http://www.otc.ganasonic.eu/				
	Der volleutige tekst van de Ed-comminietisverkaamig kan worden genaduetige op inet volgende internationale inter// www.pcc.janiasonic.eu/				
[German]					
	Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:http://www.ptc.panasonic.eu/				
[French]	Le soussigné, Panasonic Corporation, déclare que l'équipement radioélectrique du type CQ-J206F0JT,CQ-J246F0JT,CQ-J246F1JT,CQ-CZ28E0JT,CQ-CZ28E				
[French]	Le texte complet de la déclaration UE de conformité est disconible à l'adresse internet suivante:http://www.ptc.panasonic.eu/				
	Por la presente, Panasonic Corporation declara que el tipo de equipo radioeléctrico CQ-JZ06F0JT,CQ-JZ46F0JT,CQ-JZ46F0JT,CQ-JZ46F1JT,CQ-CZ28E0JT,CQ-CZ28E1JT es conforme con la Directiva 2014/53/UE.				
[Spanish]	El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente:http://www.ptc.panasonic.eu/				
[Bulgarian]	С настоящото Panasonic Corporation декларира, че този тип радиосьоръжение CQ-JZ06F0JT,CQ-JZ06F1JT,CQ-JZ46F0JT,CQ-JZ46F1JT,CQ-CZ28E0JT,CQ-CZ28E1JT е в сьответствие с Директива 2014/53/EC.				
	Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет adpec:http://www.ptc.panasonic.eu/				
[Greek]	Me my napoùada o/n Panasonic Corporation, δηλώνει ότι ο ραδιαεξοπλισμός CQ-1206FDIT,CQ-1246FDIT,CQ-1246FDIT,CQ-228EDIT,CQ-CQUARAA				
[Greek]	Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο: http://www.ptc.panasonic.eu/				
[Czech]	Timto Panasonic Corporation prohlašuje, že typ rádlového zařízení CQ-JZ06F0JT,CQ-JZ46F0JT,CQ-JZ46F0JT,CQ-Z28E0JT,CQ-CZ28E1JT je v souladu se směrnicí 2014/53/EU.				
	Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:http://www.ptc.panasonic.eu/				
[Danish]	Upper Literative Concentration State (e.k. subpact in two mannetworks estimation), when exercise and an exercise in the concentration of the concentration o				
[Dunish]	nemed erkærer variasom. Curporatom, at radiodasytspen Op-zoeron (Op-zoeron) (O				
	EU-overensstemmelseserkäringens fulde tekst kan findes på følgende internetadresse:http://www.ptc.panasonic.eu/ II fabbricanter, Panasonic Compresidon, dichairar et det lib gol appagreschaturar radio COPEFITJCO-C226EDTJCO-C228EDT,CO-C228EDT,CO-C228EDT è conforme alla direttiva 2014/53/UE.				
[Italian]	II Tabtricante, Panasonic Corporation, dichara che il tipo di apparecchiatura raido cQ-1206HD1, CQ-120				
[Portuguese]	O(a) abaixo assinado(a) Panasonic Corporation declara que o presente tipo de equipamento de rádio CQ-JZ06FUT,CQ-JZ46FUT,CQ-JZ46FUT,CQ-ZZ8EUT,CQ-CZ28EUT, está em conformidade com a Diretiva 2014/53/UE.				
	0 texto integral da declaração de conformidade está disponível no seguitre endereço de Internet: http://www.tp.panasonic.eu/ 20azasonic Comparation xakuruta-a etita andibiationed DU 2012 de Carlo DU 2012 de Carlo DU 2012 de Carlo DU 2012				
[Finnish]	Panasonic Corporation vakuuttaa, että radiolaitetyyppi CQ-JZ06F0JT,CQ-JZ06F1JT,CQ-JZ46F0JT,CQ-JZ46F1JT,CQ-CZ28E0JT,CQ-CZ28E1JT on direktiivin 2014/53/EU mukainen.				
[[[I I I I I I I I I I I I I I I I I	EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:http://www.ptc.panasonic.eu/				
	Härmed försäkrar Panasonic Corporation att denna typ av radioutrustning CQ-J206F0JT,CQ-J246F0JT,CQ-J246F0JT,CQ-I246F0JT,CQ-CZ28E0J				
[Swedish]	Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress:http://www.ptc.panasonic.eu/				
	Dem naikkandiga texteri un Lo-Visikaan om overeinstaammetee innen på rolginder verualistas.ntdp://www.pcc.parasonic.com/ Panasonic.Corporation inniegram osiviadaca: je try urzadenia radiovergo co-J206FUT.co-J246FUT.co-Z246FUT.co-Z28EUT.co-Z28EUT jest zgodny z dyrektywa 2014/53/UE.				
[Polish]					
	Pelny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:http://www.ptc.panasonic.eu/				
[Hungarian]	Panasonic Corporation igazolja, hogy a CQ-JZ06F0JT,CQ-JZ06F1JT,CQ-JZ46F0JT,CQ-JZ46F0JT,CQ-CZ28E0JT,CQ-CZ28E1JT tipusú rádióberendezés megfelel a 2014/53/EU irányelvnek.				
[riungunun]	Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:http://www.ptc.panasonic.eu/				
101 13	Panasonic Corporation týmto vyhlasuje, že rádiové zariadenie typu CQ-JZ06F0JT,CQ-JZ46F0JT,CQ-JZ46F1JT,CQ-CZ28E0JT,CQ-CZ28E1JT je v súlade so smernicou 2014/53/EÚ.				
[Slovak]	Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: http://www.ptc.panasonic.eu/				
	panasonic Comportino portugi, da je tje pradjske opreme CQ-J206F017,CQ-J246F107,CQ-J246F117,CQ-C228E017,CQ-C228E117 skladen z Direktivo 2014/53/EU.				
[Slovenian]					
	Celotro besediio izjave EU o skladnosti je na voljo na našednjem spletnem naslovu:http://www.ptc.panasonic.eu/ Kasolevaga deklarentb Panasonic Corporation, et kasolev radiosaradim tubi QC-20260711,CQ-2246FU17,CQ-2246FU17,CQ-2228EUT vastab direktivi 2014/53/EL nõuetele.				
[Estonian]	Kaesolevaga deklareerib Panasonic Corporation, et kaesolev raadioseadme tuup CQ-JZ06F0JT,CQ-JZ46F0JT,CQ-JZ46F1JT,CQ-CZ28E0JT,CQ-CQ-CZ28E0JT,CQ-CZ28E0J				
[ELi vastavusdeklaratisoni tälelik tekst on kättesadav järgnisel internetiaadresii:http://www.ptc.panasonic.eu/				
1 1 1 1	Ar šo Panasonic Corporation deklarē, ka radioiekārta CQ-JZ06F0JT,CQ-JZ46F0JT,CQ-JZ46F0JT,CQ-Z28E0JT,CQ-CZ28E1JT atbilist Direktīvai 2014/53/ES.				
[Latvian]	Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:http://www.ptc.panasonic.eu/				
	Prints L3 attuistudas uebalitarijas (Exas) ju piecijanis sauda interi				
[Lithuanian]					
	Visas ES atitikties deklaracijos tekstas prieinamas ŝiuo interneto adresu:http://www.ptc.panasonic.eu/				
[Romanian]	Prin prezenta, Panasonic Corporation declară că tipul de echipamente radio CQ-1206F01T,CQ-1246F10T,CQ-1246F10T,CQ-CZ28E01T,CQ-CZ28E01T este în conformitate cu Directiva 2014/53/UE.				
[Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: http://www.ptc.panasonic.eu/				
10 11 3	Textu integral al cecararjeu U de conformitate este algonalità u urmatorna abresa internet: http://www.pce.panasonic.eu/ Panasonic Corporation ovime izjavijute da je radijska operna tita do Q-120/E017/LQ-2146F017.QQ-2426F17.QQ-2228E17.LQ-2228E017.LQ-228E0				
[Croatian]					
	Cjelovili tekst. El Ligare o sukladnosti dostupan je na sljedećoj internetskoj adresi http://www.gtc.panason.ceu/ H.k. mað. Nich Empsonic Americanston hul súci a di dovordbination CO 1736/EUT CO 1736/EUT CO 1736/EUT CO 1736/EUT				
[Icelandic]	Her með, lýsir Panasonic Corporation því yfir að gerð útvarpsbúnaðarins CQ-J206F0JT,CQ-J206F1JT,CQ-J246F1JT,CQ-C228E0JT,CQ-C28E0JT,CQ-C28E0JT,CQ-C28E0JT,CQ-C28E0JT,CQ-C28E0JT,CQ-C28E0JT,CQ-C28E0JT,CQ-C28E0JT,CQ-C28E0JT,CQ-C28E0JT,CQ-C28E0JT,CQ-C28E0JT,CQ-C28E0JT,CQ-C28E0JT,CQ-C28E0JT,CQ-C28E0J				
	Allur texti ESB-samræmisyfirlýsingarinnar er aðgengilegur á eftirfarandi veffangi:http://www.ptc.panasonic.eu/				
[Norwegian]	Panasonic Corporation erklærer herved at radioutstyrstypen CQ-J206F0JT,CQ-J206F1JT,CQ-J246F0JT,CQ-J246F0JT,CQ-C228E0JT,CQ-C228				
[[Den fullstendige teksten i EU-erklæringen er tilgjengelig på følgende internettadresse:http://www.ptc.panasonic.eu/				
	Со ова, Panasonic Corporation изјавува дека радио опремата од типот CQ-1206F0JT, CQ-1206F1JT, CQ-1246F0JT, CQ-1246F1JT, CQ-CZ28E0JT, CQ-CZ28E1JT е во согласност со Директивата 2014/53/EU.				
[Macedonian]	Llenixor текст на EV изјавата за сообразност е достален на следната интернет адреса:http://www.ptc.panasonic.eu/				
	Lleinkor TekCr Ha Ey kisjabata sa coolpashoct e Aoctanen Ha Cheghata Whtepher appecanto:///www.ncc.pg.panasonic.eu/ Panasonic Comporation, CQ-1206071,CQ-12660711,CQ-12660711,CQ-1266071,CQ-026208117,CU1246512;ekipmaninin 2014/53/EU Direktifine uygun olduğunu beyan etmektedir.				
[Turkish]					
	AB uygunluk beyanının tam metnine aşağıdaki internet adresinden ulaşılabilir:http://www.ptc.panasonic.eu/				
Crnogorski jezik	Ovim, Panasonic Corporation izjavljuje da je tip radio opreme CQ-JZ06F0JT,CQ-JZ06F0JT,CQ-JZ46F0JT,CQ-JZ46F1JT,CQ-Z28E0JT,CQ-CZ28E1JT u skladu sa Direktivom 2014/53/EU.				
Lan	² Cjelokupan tekst EU deklaracije o usklađenosti dostupan je na sljedećoj internet adresi:http://www.ptc.panasonic.eu/				
	[Cjelokupan tekst EU deklaracije o usklađenosti dostupan je na sijedecoj internet adresi:http://www.ptc.panasonic.eu/				



Panasonic Corporation

4261 Ikonobe-cho, Tsuzuki-ku, Yokohama-shi, Kanagawa-ken, 224-8520, Japan

Tel:+81 50-3689-7126 Fax:+81 45-931-0806 frequency band(s) in which the radio equipment operates; 2402-2480MHz

maximum radio-frequency power transmitted in the frequency band(s) in which the radio equipment operates; 1.01 mW

[English] Hereby, Panasonic Corporation declares that the radio equipment type QQ-1206FUT,QQ-1246FUT,QQ-1246FUT,QQ-1246FUT,QQ-228EUT is in compliance with The Radio Equipment Regulations 2017. The full text of the UK declaration of conformity is available at the following internet address:https://www.ptc.panasonic.eu/

Info	Information of the radio device: Type TN0021A					
1.	Name a	nd postal address of the manu	ufacturer			
	Name: Address	DENSO TEN Limited 3: 2-28, Gosho-dori 1-chome 652-8510 Japan	e, Hyogo-ku, Kobe,			
2. Simplified UK declaration of conformity		ty				
Hereby, DENSO TEN Limited declares that the radio equipment TN0021A is in compliance with Regulations 2017. The full text of the UK declaration of conformity is available at the follo internet address: https://www.denso-ten.com/support/regulation/uk_doc/						
	unction	Operating frequency band	Maximum radio-frequency power			
	GSM	880~915 MHz 1710~1785 MHz	35dBm e.i.r.p. 32dBm e.i.r.p.			
ι	JMTS	880~915 MHz 1710~1785 MHz 1920~1980 MHz	25dBm e.i.r.p. 25dBm e.i.r.p. 25dBm e.i.r.p.			

MEMO

MEMO

BATTERY LABEL SYMBOL MEANINGS

No smoking, no naked flames, no sparks		Battery acid
Shield eyes		Note operating instructions
Keep away from children		Explosive gas

Prepared by SUZUKI MOTOR CORPORATION			
April, 2022			
Part No. 99011-78RM5-01E Printed in Japan			
TRE20			

TP576